

Acer Smart Projector L811

Smart System User's Guide

Copyright © 2021. Acer Incorporated.
All Rights Reserved.
Acer Projector User's Guide
Original Issue: 08/2021

TABLE OF CONTENTS

SMART FUNCTIONS	3
<i>Acer Smart Projector</i>	<i>3</i>
<i>Remote control layout.....</i>	<i>5</i>
<i>Home page overview.....</i>	<i>7</i>
<i>Configure system settings.....</i>	<i>8</i>
<i>Firmware Update</i>	<i>12</i>
<i>Aptoide app</i>	<i>14</i>
<i>Accessing apps</i>	<i>15</i>
<i>Adding apps to favorites</i>	<i>16</i>
<i>Wireless display app.....</i>	<i>17</i>
<i>Wireless projection support</i>	<i>18</i>

SMART FUNCTIONS

Acer Smart Projector

The Acer Smart Projector comes with a powerful and easy-to-use media center where you can wirelessly project any content from your iOS, Android, or Windows based device, access and project various default apps that are installed to the projector, manage and organize the media center Home page according to your preferences, and more.

Getting started

To control the media center interface, use the supplied remote control or Bluetooth mouse (not supplied).

Initial setup

Note:

- The SMART mode is loaded by default after you start the projector. If you are using any other source and wish to switch to the SMART mode, press the **SOURCE** button on the projector keypad or on the remote control, and then select SMART option.
- If you plug in or unplug the Wi-Fi dongle, please restart the projector.

If you are using the projector for the first time, you will be prompted to select the following options during the initial setup:

1. Select your preferred language and click >.

Note: If your preferred language is not show, select **English** and go to **Setting > System > Languages & input** after initial setup is finished. More options are available.

 


2. Select your preferred Wi-Fi network and click > or set up the wireless connection later and click >.





SMART FUNCTIONS

Note: If the selected Wi-Fi network is secured, you are prompted to enter a password. Enter the password and then click **Connect** to continue.

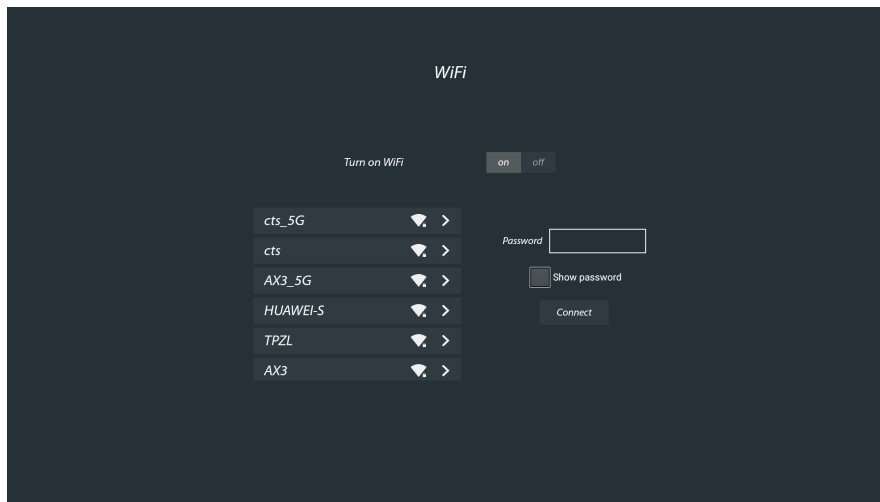


   3. Set **Date & Time** settings including **Automatic date&time**, **Timezone**, **Date**, **Use-24-hour format**. Then click **>** to go to home page to complete the initial setup.

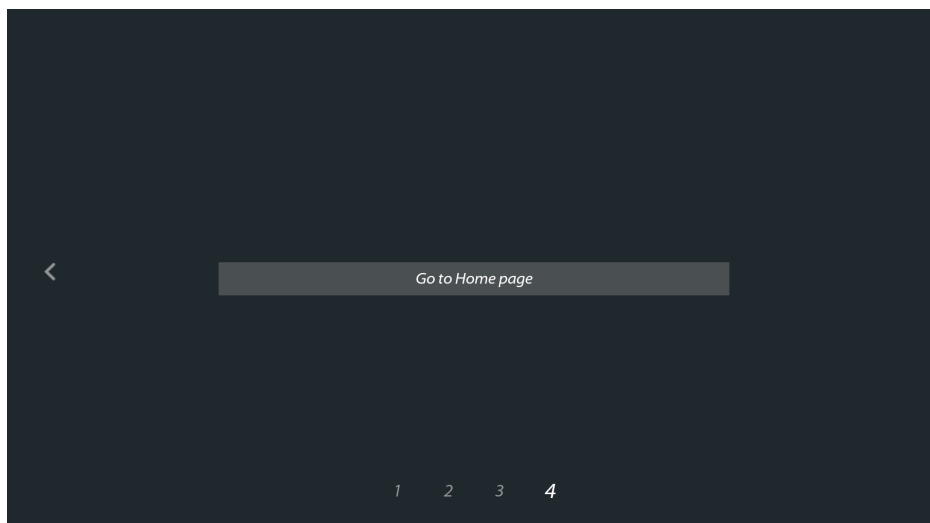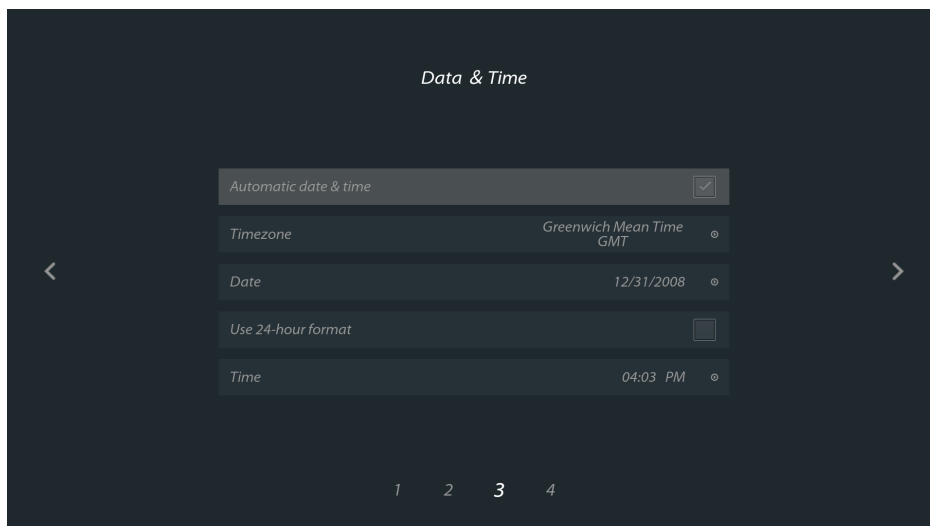





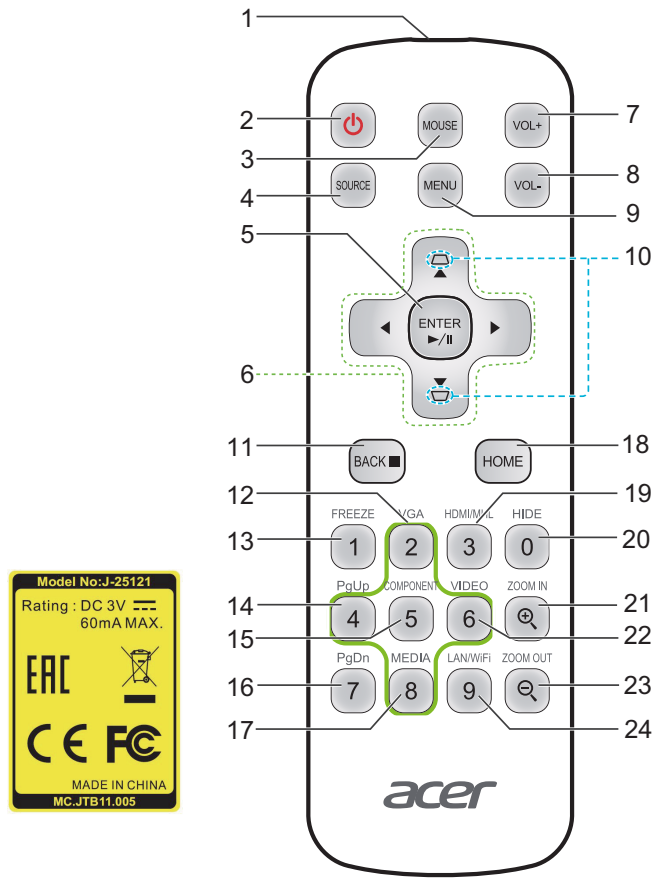










SMART FUNCTIONS

Remote control layout



#	Icon	Function	Description
1		Infrared transmitter	Sends signals to the projector.
2		POWER	Turns the projector on or off.
3		Mouse	Smart mode: Switch to mouse mode for Navigation key. Others: Forbidden function.
4		SOURCE	Changes the active source.
5		Select/Enter	Confirms your selection of items.
6		Four directional select keys	Use up, down, left, right buttons to select items or make adjustments to your selection.
7		Volume Up	
8		Volume Down	
9		MENU	Press MENU to launch the Onscreen display (OSD) menu or exit the OSD menu.

SMART FUNCTIONS

 
#	Icon	Function	Description
10		KEYSTONE	Adjusts the image to compensate for distortion caused by tilting the projector.
11		BACK	Returns to the previous operation.
12		VGA	Smart: Forbidden function. Others: change source to the VGA connector.
13		FREEZE	Forbidden function.
14		PgUp	Smart: Forbidden function. Others: Select the previous page under VGA or HDMI source.
15		COMPONENT	Smart: Forbidden function. Others: Forbidden function.
16		PgDn	Smart: Forbidden function. Others: Select the next page under VGA or HDMI source.
17		MEDIA	Forbidden function.
18		HOME	Smart: Back to Home page. Others: Switch to Smart mode.
19		HDMI™/MHL	Smart: Forbidden function. Others: Switch to HDMI source.
20		HIDE	Smart: Forbidden function. Other: Momentarily turns off the video. Press HIDE to hide the image, press again to display the image.
21		ZOOM IN	Smart: Forbidden function. Other: Zooms the projector display in.
22		VIDEO	Forbidden function.
23		ZOOM OUT	Smart: Forbidden function. Other: Zooms the projector display out.
24		LAN/WiFi	No function.

Note: Functions vary depending on model definition.

SMART FUNCTIONS

Home page overview

After the initial setup, the media center Home page will open:

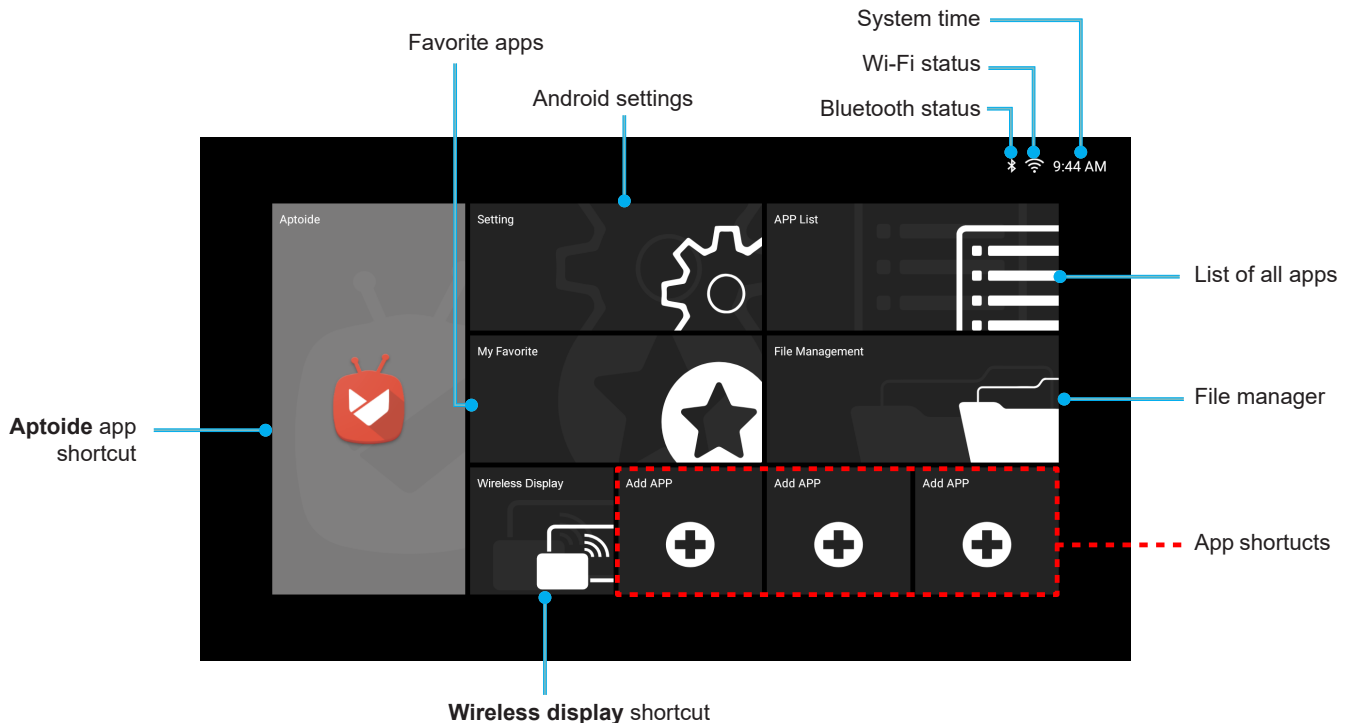

Navigating the Acer Smart Projector Home page

The items on the Home page can be accessed by using the remote control or Bluetooth mouse.

Note: *The media center does not support the projector keypad.*

- Remote control:

Press **HOME** to access the Home page from any other page.

Press the four-direction navigation buttons (◀/▶/▲/▼) to select items.

Press **ENTER** to confirm the selection, open an item, or play/pause media content.

Press **BACK** to move to the previous page or exit the app.

Press **MOUSE** to switch the remote control to the remote mouse mode.

- Bluetooth mouse:


Hover the cursor over the item you wish to open and left-click to open it.

 
Right-click to exit a menu or app.

Right-click repeatedly (if necessary) to access the Home page from any other page.

SMART FUNCTIONS

Configure system settings

To configure Android system settings, click  **Setting** on the Home page.

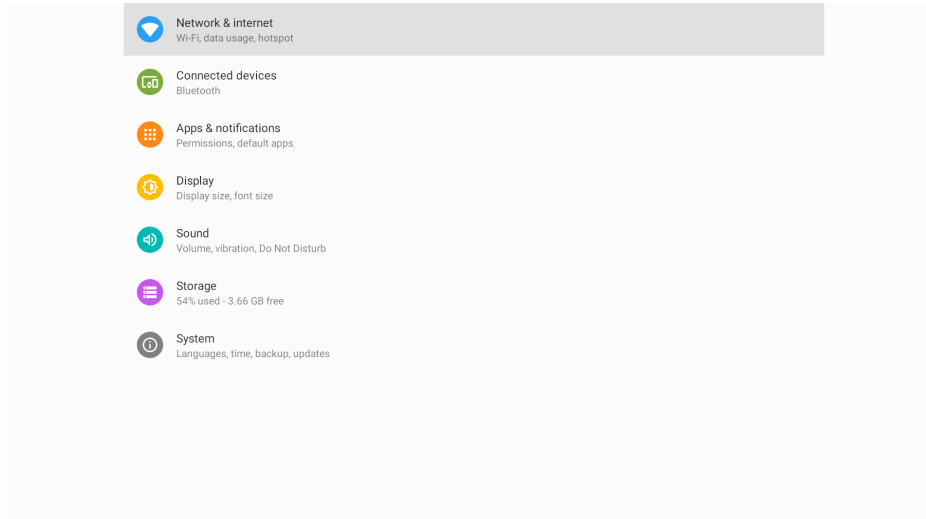


Select a menu item to configure its preferences.

Network & Internet & Bluetooth


Note: Before configuring the network settings, make sure the Wi-Fi dongle is connected to the USB port on the rear of the projector.

To connect the projector to an available Wi-Fi network, do the following:

 1. Slide the Wi-Fi switch from Off to On.
2. Select your preferred access point from the Wi-Fi list and click on it to make the connection.
3. If the selected Wi-Fi network is secured, you are prompted to enter a password. Enter the password and then click **Connect**.

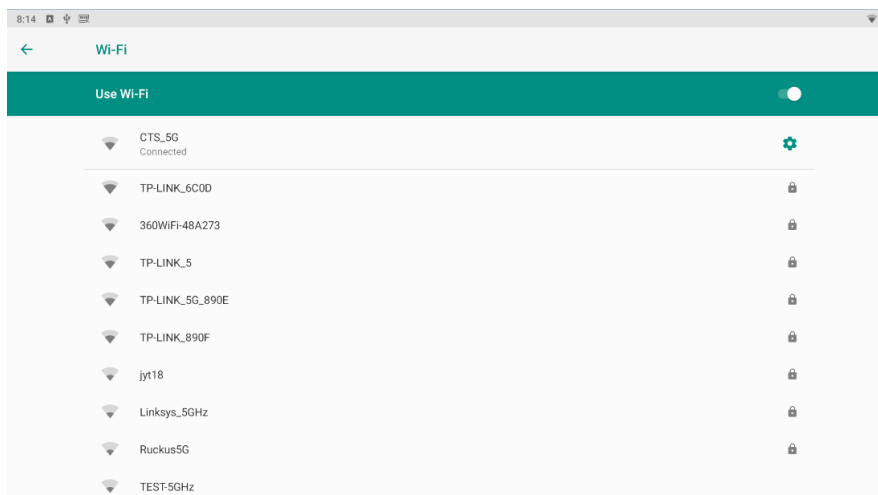


SMART FUNCTIONS

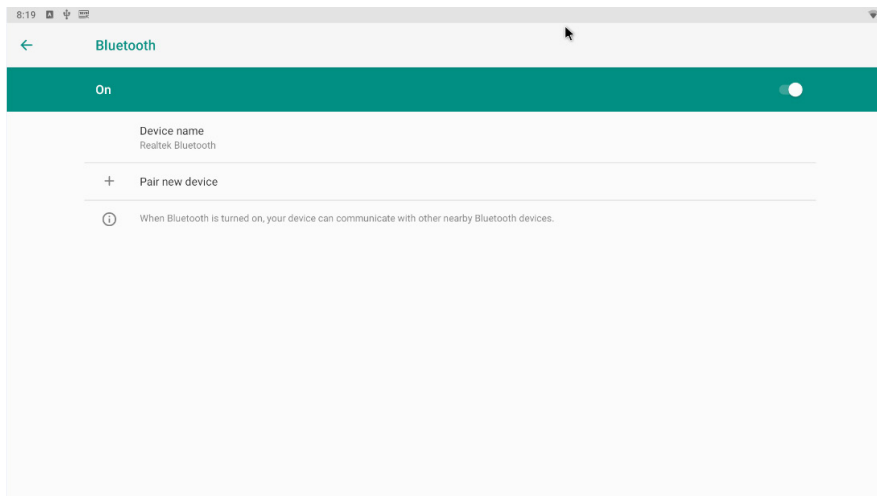 

System

 
Configure Android keyboard settings, system date and time settings, backup options, reset options, and advanced system settings.

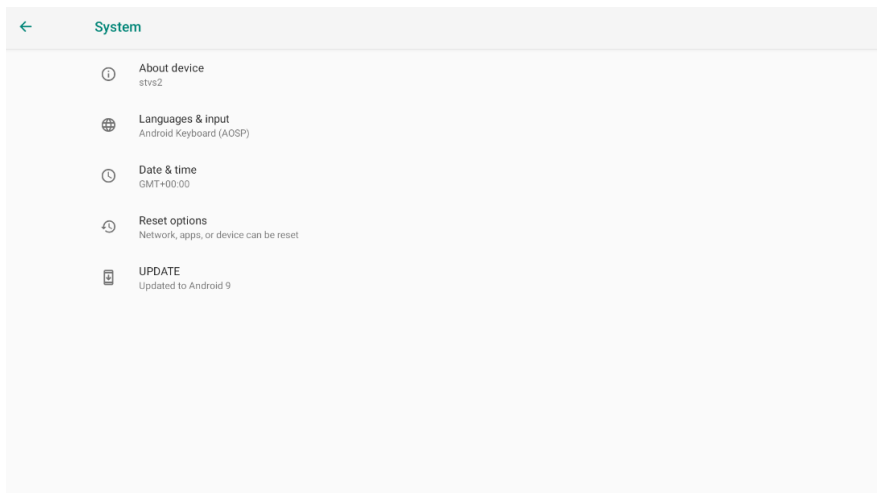

Sound


- **Volumes**
Increase or decrease the volume.
- **Touch Sounds**
If enable Touch sound, sound will be heard while move remote controller.
- **Sound Input Devices**
- **Sound Output Devices**

 SMART FUNCTIONS

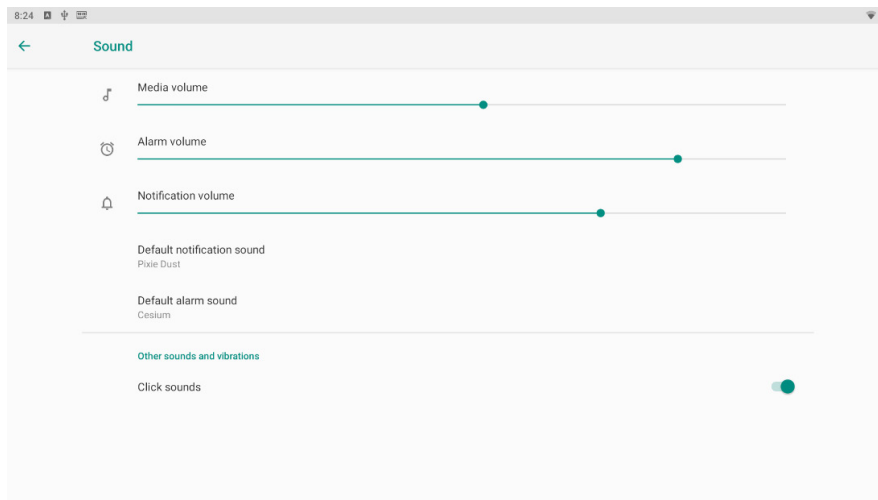


Storage

 Shows the storage used of the OS.

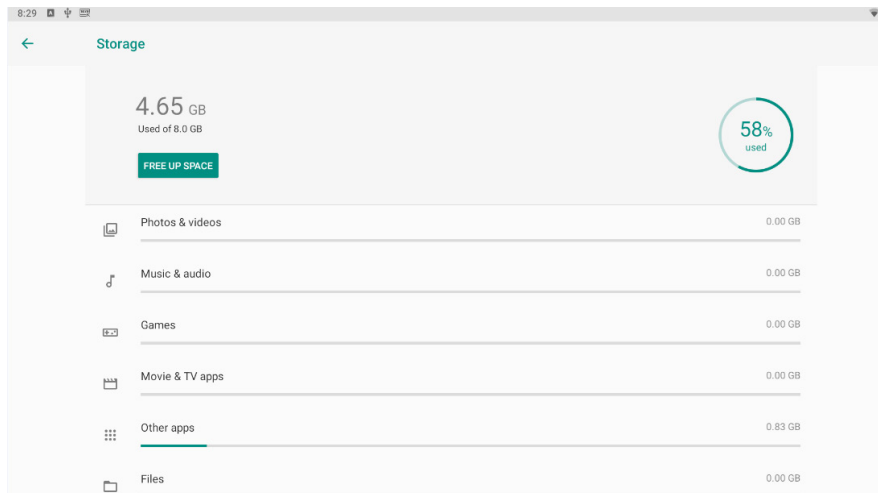

Apps

 List all apps installed. You can choose an application and force to shut down the app, uninstall the app, clear user data, move to SD card and clear cache data.

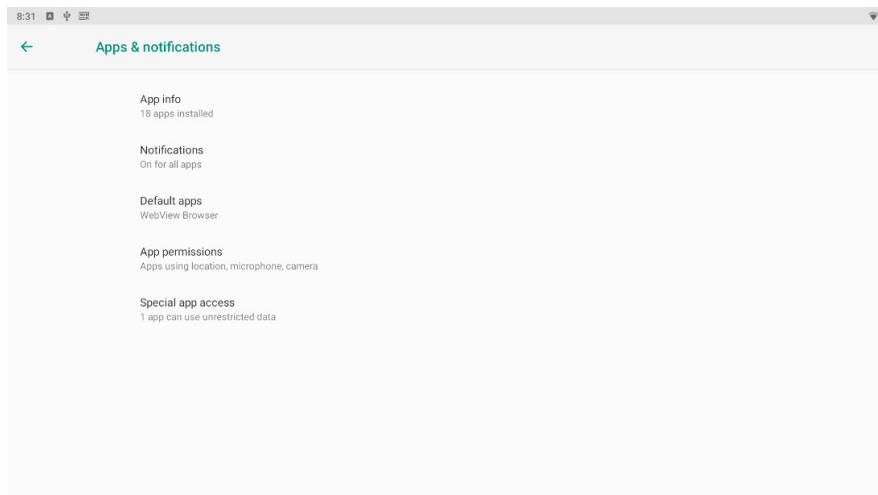


SMART FUNCTIONS

System - Language & input

Change OSD language and input method.

 
The default input method is android standard keyboard.

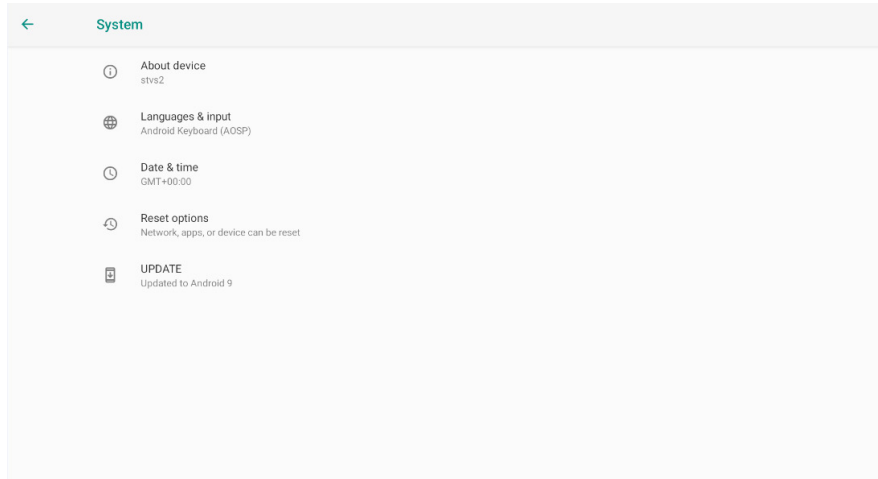

System---Reset

You can reset all the settings and apps to factory default.

 
Note: *You might want to backup important data before resetting the projector. Once you choose to rest to factory default, all data/apps will be deleted.*

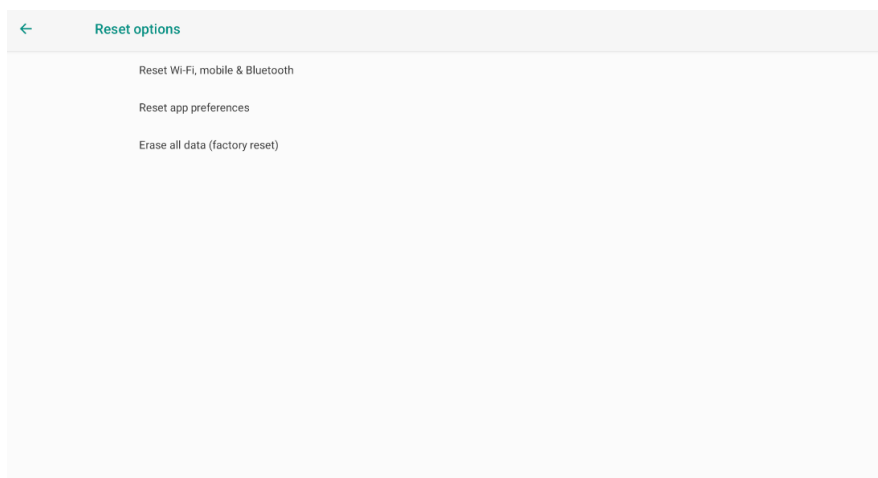


System - Date & time

Choose the right time zone to show the time on the bar accordingly.

 SMART FUNCTIONS

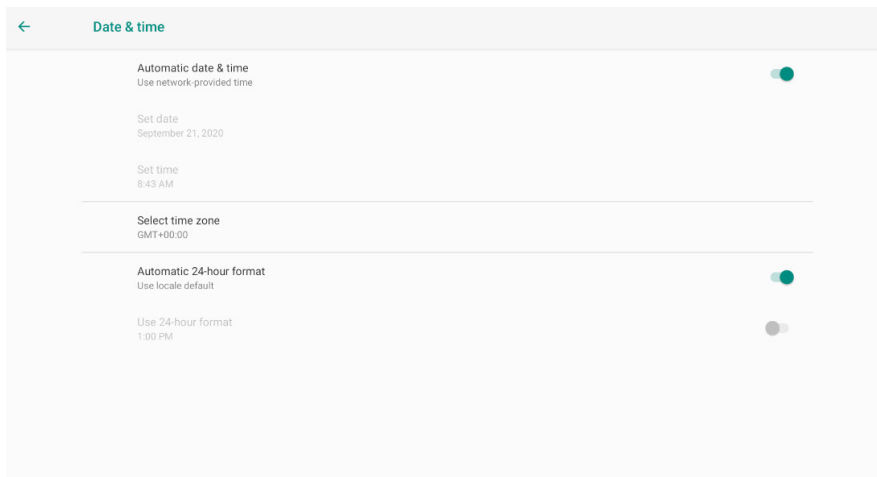


System - About device

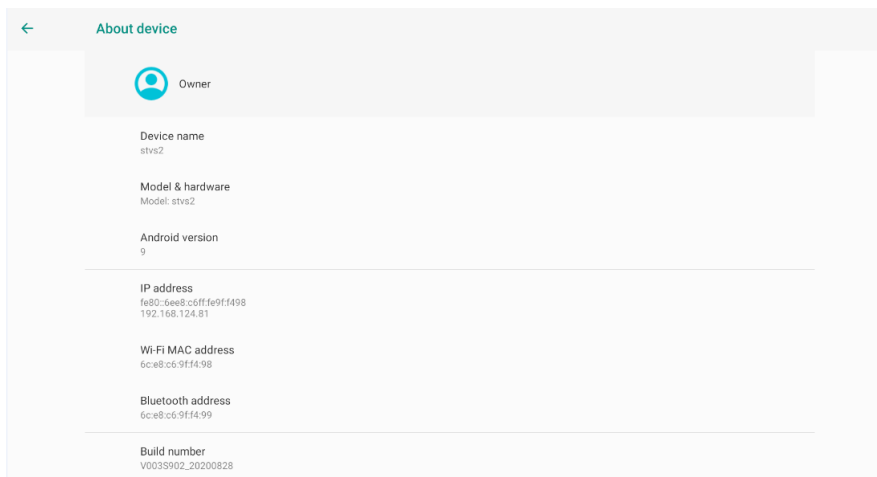 

Firmware Update

Note: Do the following steps if there is newer version or update.

 
1. Open the local update. apk. in the APP List.

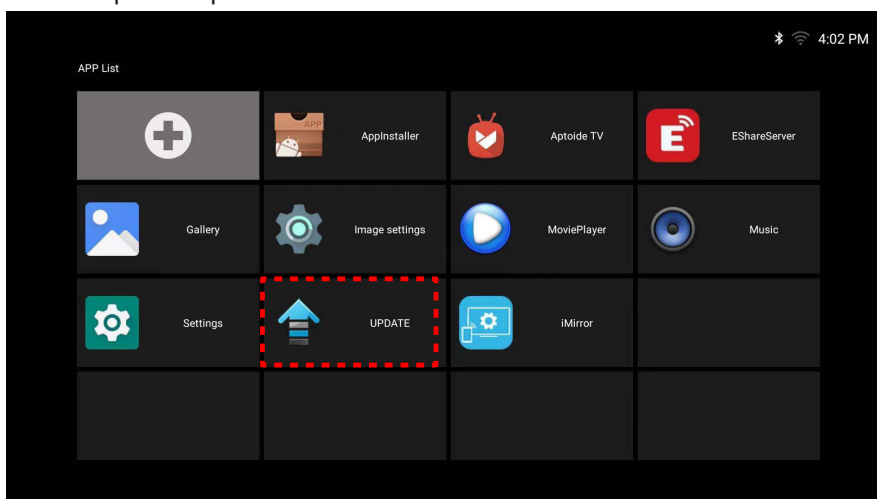


2. When **Auto Download** is **ON**, the APP can automatically detect the new version of firmware and

SMART FUNCTIONS

 
download the update package.

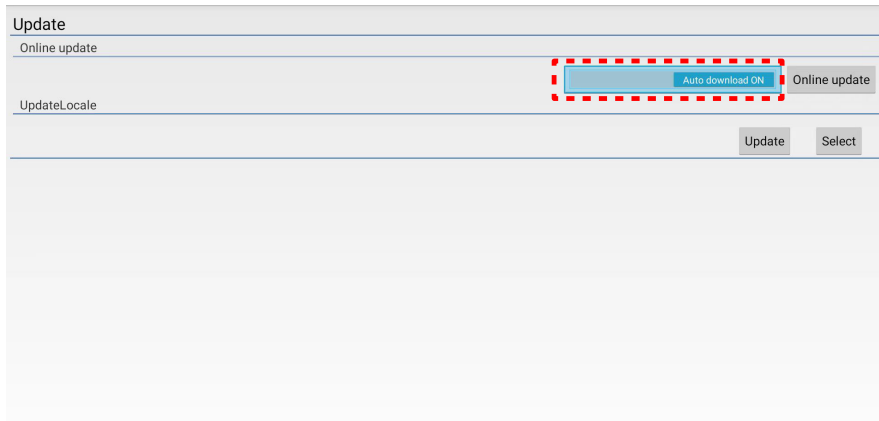

 
3. You can click **Online Update** to check if there is newer version or software update.

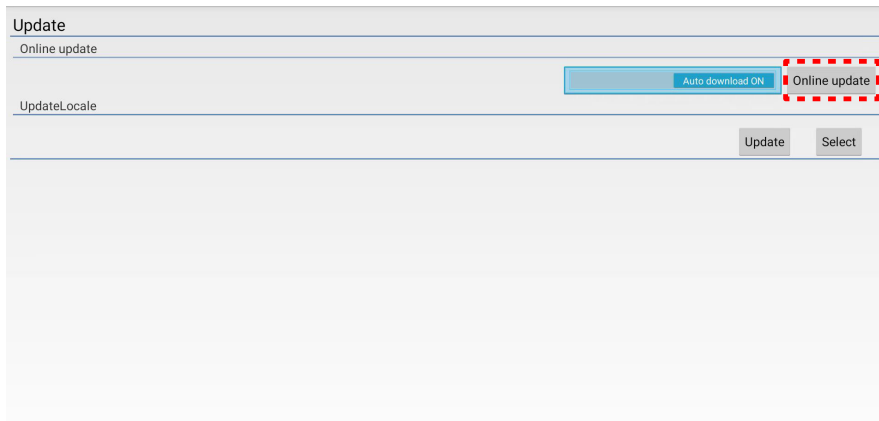

 4. After download completes, a message appears. If you choose **Upgrade Now**, the update process begins immediately. If you choose **Upgrade Next Time**, the update process will automatically begin when you turn on the projector next time. After firmware update completes, the system will automatically reboot.

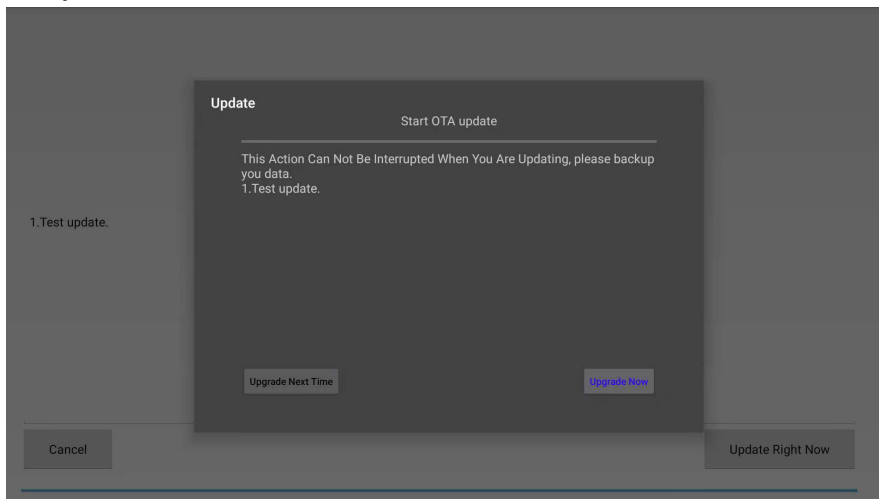

SMART FUNCTIONS

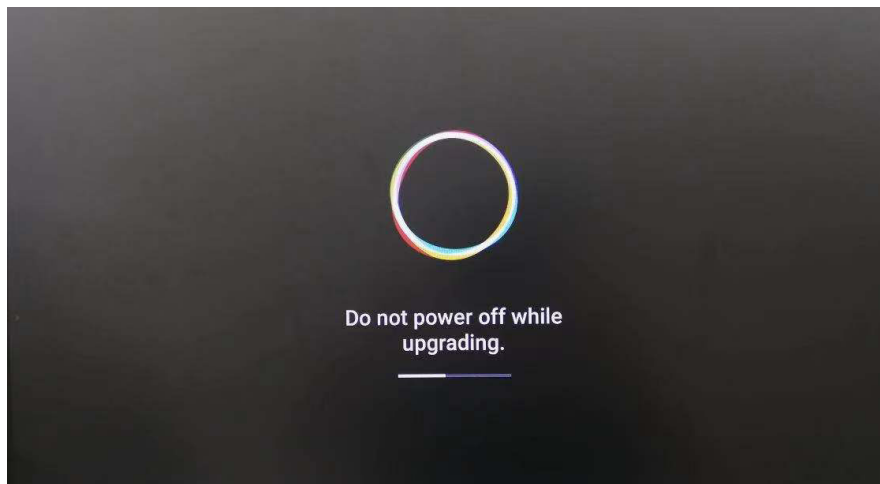 


Aptoide app

Aptoide app is pre-loaded app store that allows you to install and discover apps easily in a safe environment. Access games, streaming apps, configure **Aptoide** settings, and more.

Note:

 - To use **Aptoide** app, make sure the projector is connected to the Wi-Fi network.
- Apps that are not pre-loaded by Acer may not be compatible or work properly.
- Some apps may require a keyboard and mouse.
- Some apps may be region-specific.
- Users can install third-party apps by .apk file in the File Management or Web Browser. However, some third-party apps may have compatibility issues.
- For better compatibility with **Aptoide**, it is recommended **not to update the Aptoide app version at all**.
- This projector does not support office files. If needed, download the office reader application from **Aptoide**.

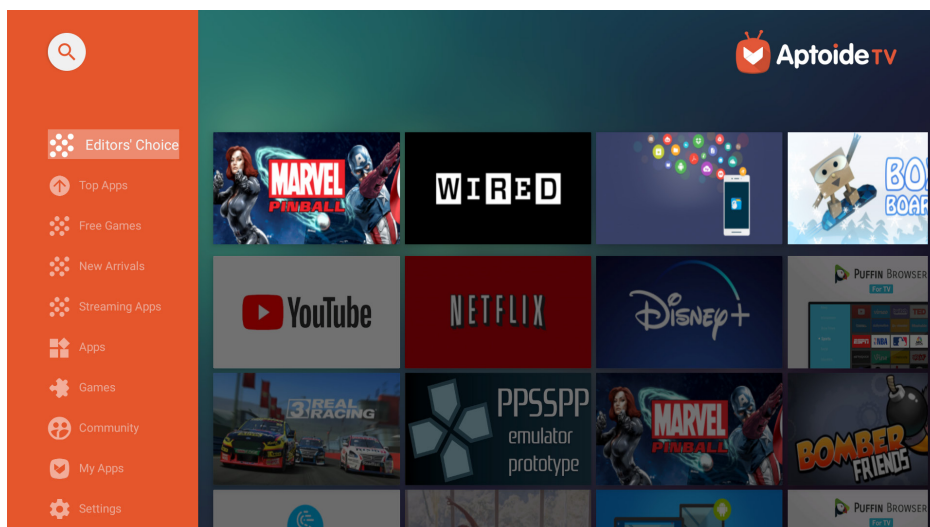


SMART FUNCTIONS

Accessing apps

You can access apps directly from the Home page or from the APP List.

 
To view and access all the default apps, click **APP List** on the Home page.

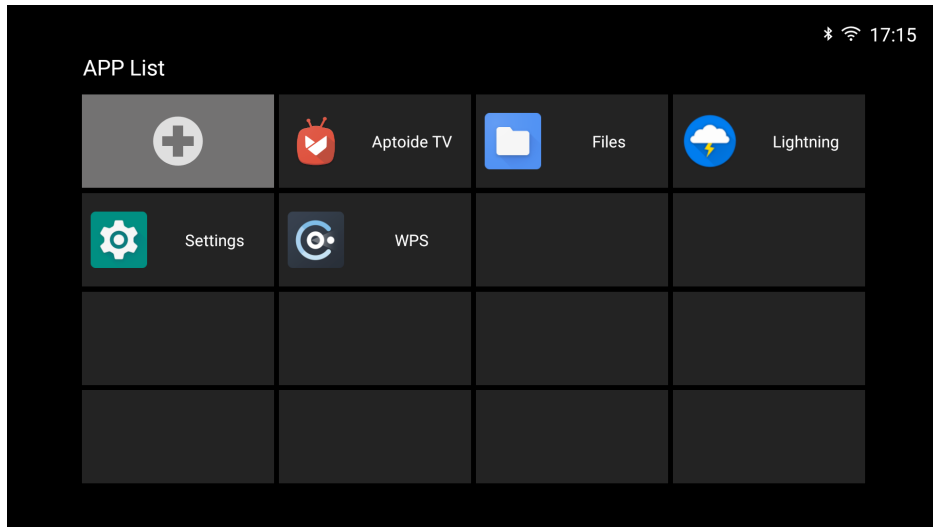


Click directly on the app icon to open the app.

To add the app shortcuts to the Home page for quick access, do either of the following:

 - Click **+** and check up to two apps.

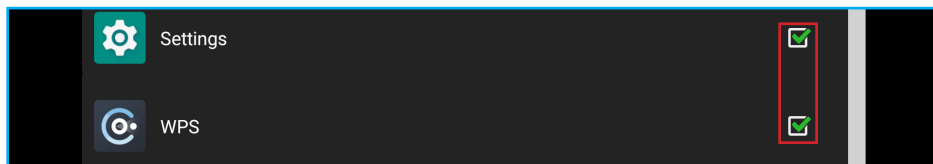

 - Click **Add APP +** on the Home page directly and check up to two apps.

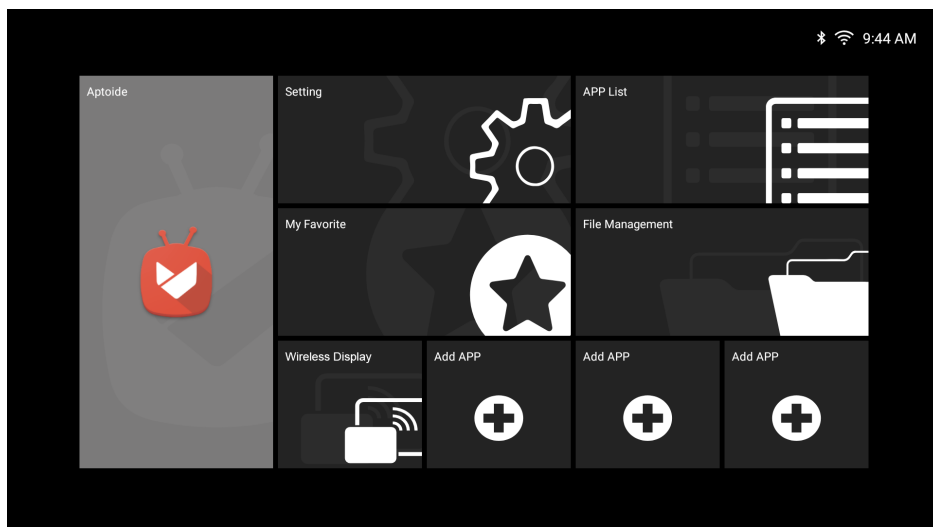


SMART FUNCTIONS

Adding apps to favorites


You can favorite apps for quick access.

To favorite apps, do the following:

 1. Click **My Favorite** on the Home page.

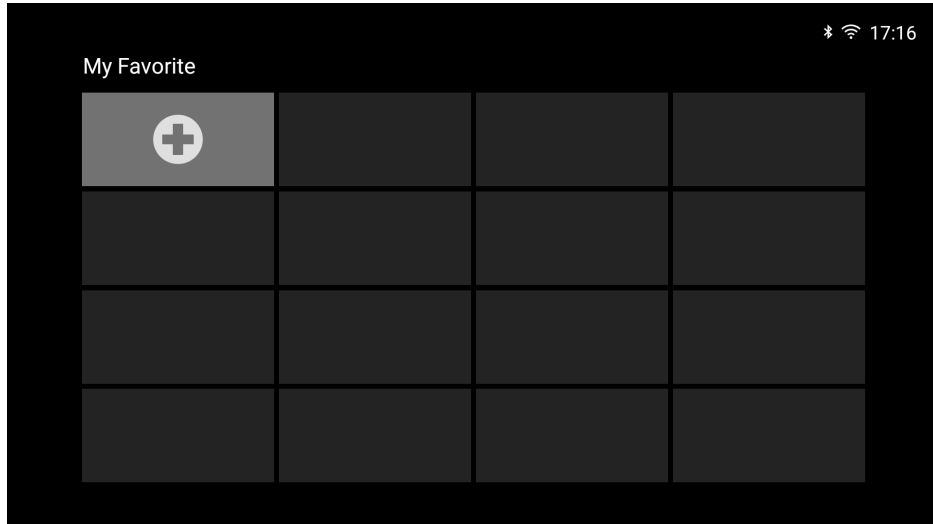

 2. Click + and check up to 12 apps to add them as favorite apps. When the app is selected as a favorite, the star next to it turns from gray to yellow (☐ > ★).

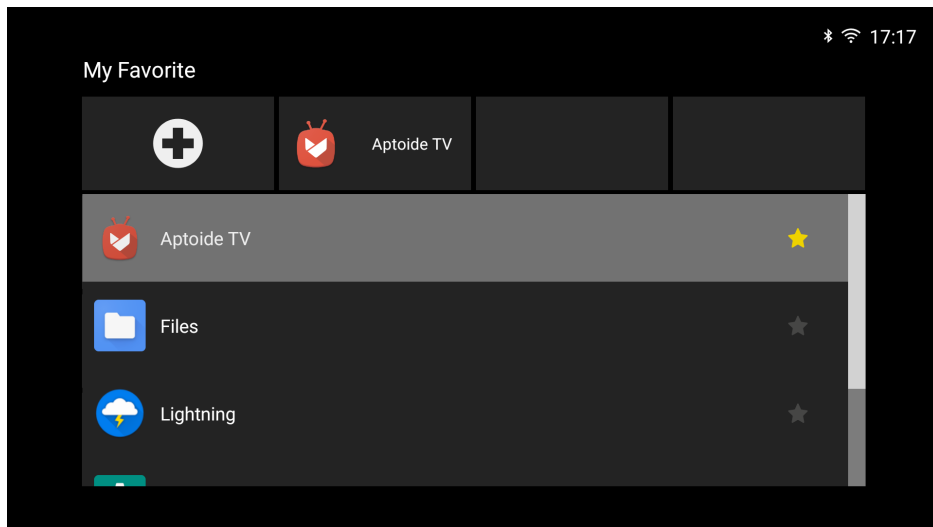

To remove the app from the My Favorite list, simply uncheck it.

 
SMART FUNCTIONS

Wireless display app

Via **Wireless display** app, you can wirelessly cast your Android or Windows device's screen to the projector. Click **Wireless display** on the Home page to start the wireless display service.


Note:

- The wireless display service requires Internet connection. Make sure the projector is connected to the Wi-Fi network. For more information, refer to "Network & Internet" on page 8.
- Wireless display does not support mirroring streaming app.
- If you want to use mirroring function, please refer to **Eshare & iMirror Projection Support** app that supports iOS and Android. Please find more information in **Eshare Projection Support User Manual**.
- The compatibility of the mobile device with the **Wireless display** app is not valid for all mobile device brands. If you encounter any compatibility issues, please contact the mobile device manufacturer.

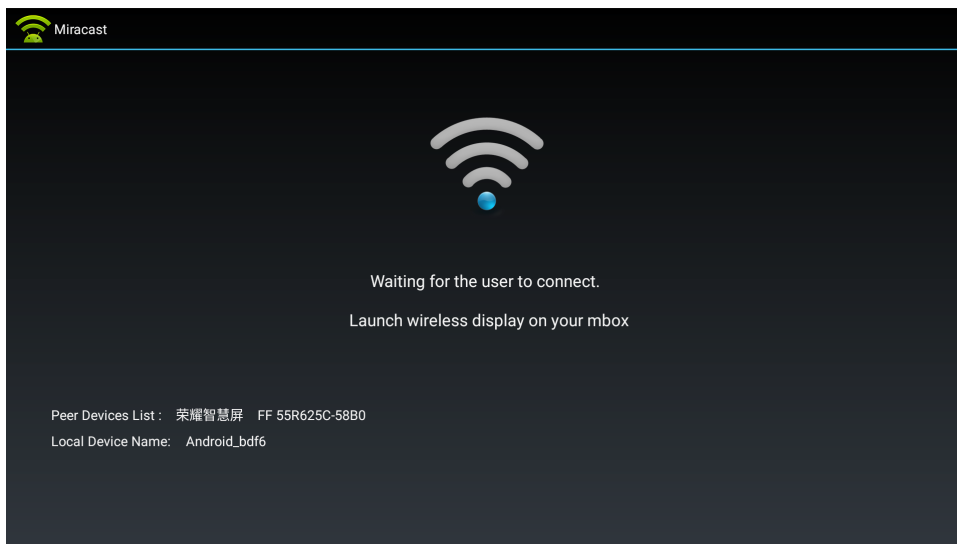


For Windows:

 
Step 1:

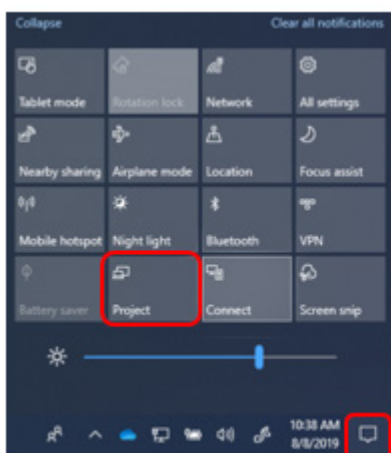

 Step 2:

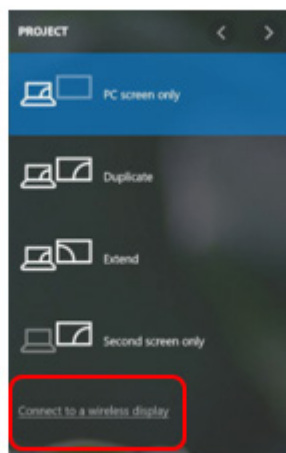

 Step 3:

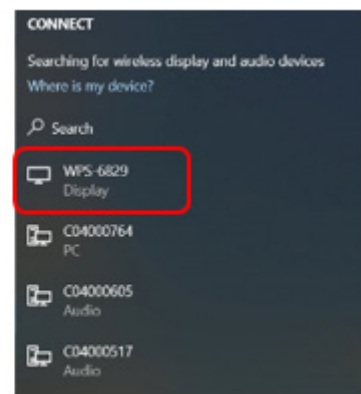


1. Open the **Action Center** and select **Project**.
2. Select **Connect to a wireless display**.
3. A scan for wireless display devices will start. Select your desired wireless display device.
4. Once connected, your Windows device should now be mirrored by the wireless display.

SMART FUNCTIONS

For Android:

 1. Open the **Settings** app.
2. Tap on **Connected Devices** to open the menu.
3. Select **Connection Preferences** from the list of options.
4. Tap on **Wireless Projection for Android**.
5. Select your desired wireless display device.
6. Tap on the device you want to pair with.

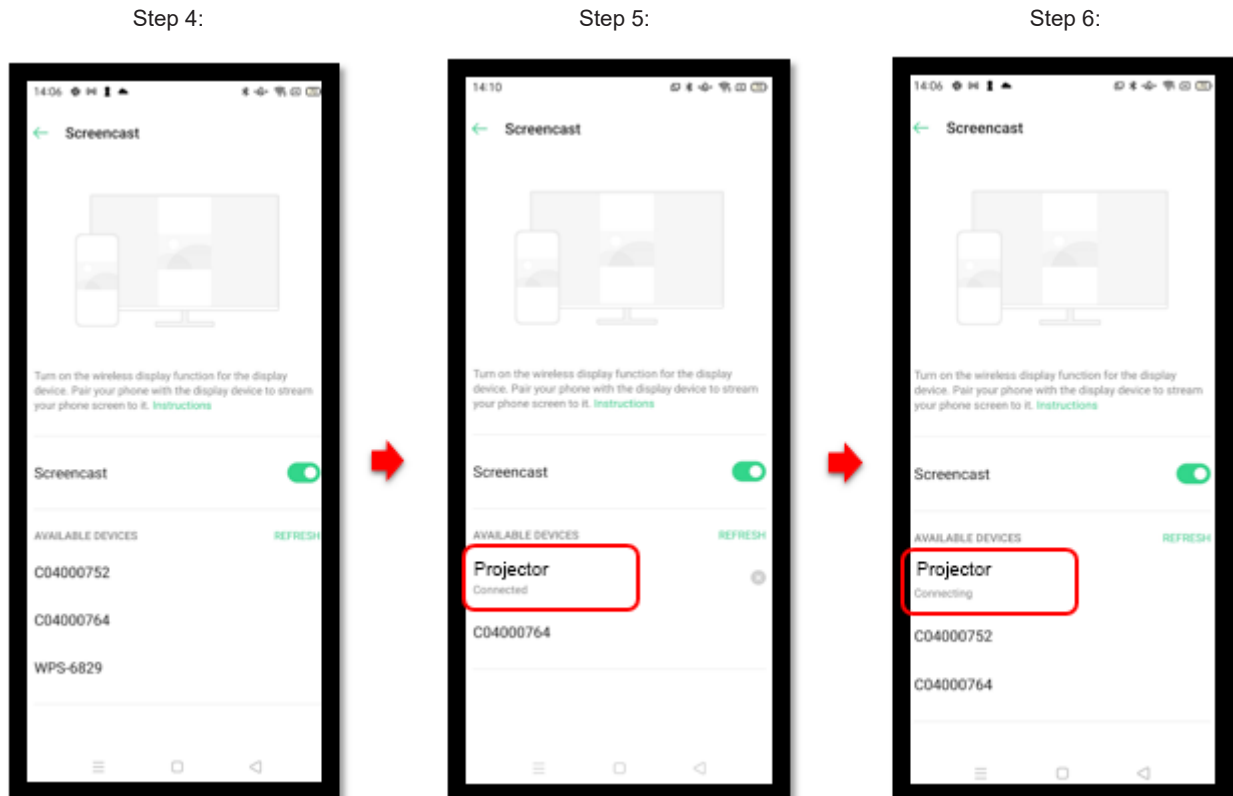

Wireless projection support

Via **Eshare** app, you can wirelessly cast your Android or iOS screen to the projector.

Note:

- Please find more information in *Eshare Projection Support User Manual*.
- **Eshare** is a third party app. The compatibility, service quality and technical support are subject to its respective app publishers. Currently document transfer and photo shooting is not supported.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>