

Use and Care Guide


Around-the-Neck Premium Bluetooth Stereo Earbuds

Product Specifications

- Corresponds with: Bluetooth V4.1
- Supports: HSP, HFP, A2DP, AVRCP
- Transmitting Power: Class 2
- Working Distance: ≤10m
- Frequency Range: 2.402GHz-2.480GHz
- Charging Time: ≤3.5 hours
- Talk Time: ≥18 hours
- Music Time: ≥16 hours
- Standby Time: ≥300 hours
- Weight: 67g

Product Description

Part	Description
1	On/Off button
2	LED indicator
3	Multifunctional button
4	Charging port
5	Volume -/Previous button
6	Volume +/Next button
7	Earbud
8	Retract button (left)
9	Microphone
10	Earbud
11	Retract button (right)

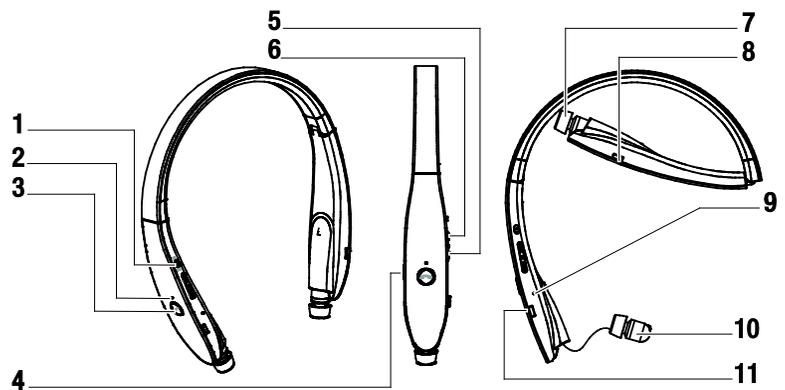

Turning the Headset On and Off

- Push the On/Off button (1) to turn the headset on. The headset vibrates and flashes a red and blue alternating light. This indicates the headset is ready to be paired with your device.
- Press the On/Off button (1) again to turn the headset off.

Restoring the Factory Settings

- Press and hold the Multifunctional button (3) until the blue light on the headset flashes 3 times.

Connecting to Bluetooth

1. Ensure the headset and your phone are within 1 meter of each other.
2. Turn the headset on. The headset is ready to be paired when it alternately flashes red and blue lights.
3. Turn Bluetooth on in your phone and select headset name "CE wrap earbuds" to automatically connect to the headset.
4. If a pass code is required to pair the headset, use pass code "0000".

Pairing the Headset with Two Mobile Phones

- To pair a second mobile phone with the headset, first turn off the Bluetooth functionality in the first mobile phone. Then repeat the steps in Connecting to Bluetooth.



NOTE: To reconnect your phone to the headset, ensure Bluetooth is on. The headset automatically reconnects. If the auto-reconnect does not work, navigate to the Bluetooth setting on your phone and ensure "CE wrap earbuds" is selected from your list of paired Bluetooth devices.

Operating the Headset

ANSWER A PHONE CALL

- When there is an incoming call, a voice prompt broadcasts the incoming phone number. Press the Multifunctional button (3) to answer the call or use your mobile phone device as normal.

END A CALL

- Either use the Multifunctional button (3) or your phone to end the call.

REJECT A CALL

- To reject an incoming call, either press and hold the Multifunctional button (3) or reject the call from your mobile phone.

REDIAL THE LAST NUMBER CALLED

- To redial the last phone number dialed, double-click the Multifunctional button (3).

TRANSFER A CALL

- Double-click the Volume -/Previous button (5) to transfer a call between the phone and headset.

SWITCH BETWEEN CHINESE AND ENGLISH

- Press and hold the Multifunctional (3) and Volume +/Next (6) buttons simultaneously for 2 seconds.

Operating the Headset (continued)

ADJUST THE EQ

- Double-click the Volume -/Previous button (5) when playing music to adjust the EQ (low bass, normal, less bass/higher pitch). The default setting is low bass.

POWER PROMPT

- Each time you connect the headset to your phone, the phone reports the battery power of the headset. Always pay attention to this reading to stay informed on when you need to charge the headset battery.

VOICE DIAL

- Unlock your phone, double-click the Volume +/Next button (6) and speak the name of the person you want to call. This function only works on mobile phones that support this functionality.

PLAY/PAUSE/TRACKS

- Click the Multifunctional button (3) to play and pause songs.
- Click the Volume -/Previous (5) and Volume +/Next (6) buttons to skip songs.
- Press and hold the Volume -/Previous (5) and Volume +/Next (6) buttons to decrease or increase the volume.



Out-of-Range Indication

- When the distance between the headset and your mobile device exceeds 10 m, the headphone indicates "Beyond the range of connections."
- If you move back within the 10 m range within 10 minutes, the headset will automatically reconnect. Otherwise, the headset will power off and you will need to switch the power from Off to On again to reset the connection to the mobile device.

Retracting the Earbuds


INCORRECT WAY TO RETRACT THE EARBUDS

- Do not simply press the Retract buttons (8 and 9). This causes the earbuds to snap back into place harshly, causing potential damage to the headset

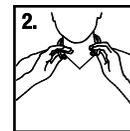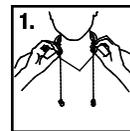

CORRECT WAY TO RETRACT THE EARBUDS

- In order to prolong the life of the headset and earbuds, gently hold the earbuds while pressing the Retract buttons (8 and 9) to allow the earbuds to gently retract back into the headset.

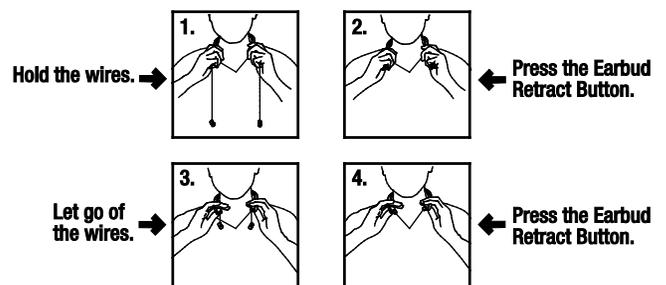

Package Contents

Part	Quantity
Headset	1
USB charging cable	1
Earbud	2
User manual	1

Safety Information

For user's safety, please read this manual before using the headset.



CAUTION: Please avoid using the highest volume setting when using this headset as it will lead to hearing loss caused by noise.



CAUTION: When playing music, ensure the volume is not too high as you will not be able to hear any potential voice indicators from the headset. Listening to music at high volumes causes ear damage.



CAUTION: Don't listen to music while driving.



CAUTION: Use a dry, soft cloth to clean the headset. Do not use water as water will damage the headset.



CAUTION: Stop use of this headset in adverse conditions.



CAUTION: The headphones should not be stored or used in temperature below 15°C (5°F) or higher than 55°C (131°F), otherwise it will reduce headphones or battery life.

Charging and Battery

Before charging this headset with charging cable, please check whether the charging cable is the original.



WARNING: This headset contains built-in rechargeable batteries. These batteries are NOT replaceable. Do not remove them.



WARNING: Only use the charging cable that comes with this headset to charge the headset. Other cables may damage the battery.

1. Turn off the headset before charging.
2. Insert the USB charging cable to earpiece jack, the other end of the USB port into the USB charger or any other devices to start charging. The flashing red light on the headset indicates that it is charging.
3. After 2 hours of charging time, the red light turns off, indicating that the headset is fully charged.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>