 


Gevi

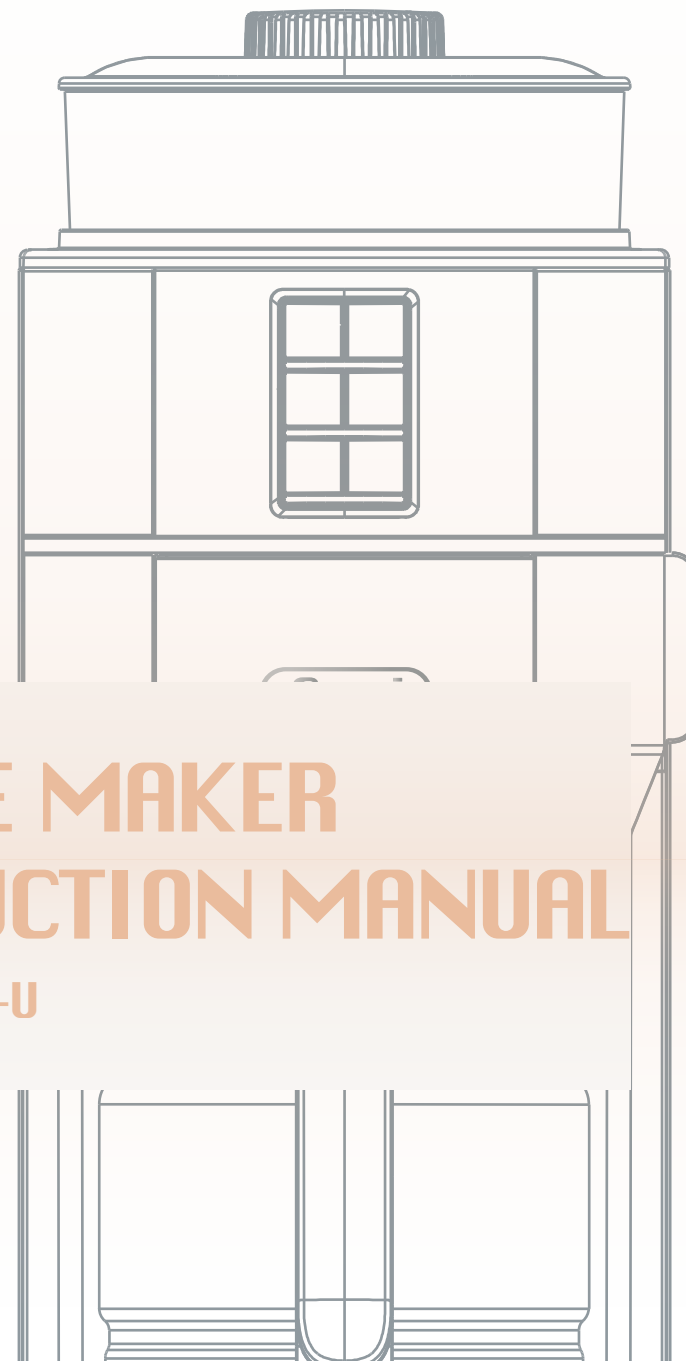

COFFEE MAKER INSTRUCTION MANUAL

GECMA121B-U

—

Dear Gevi customer

Gevi has focused on creating perfect home appliance for our customer. In the past years, it took us time, lots of research and many prototypes to achieve our goal. We would like to give you a different using experience.

Thanks for purchasing our Gevi products. If have any questions for our products, please kindly contact our Gevi service team via email: geviservice@163.com.

IMPORTANT SAFEGUARDS

 
When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions.
2. Check voltage to be sure that the voltage indicated on the name plate agrees with your voltage.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or in water or other liquid.
5. Not allow children to use without supervision.
6. Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.


8. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
9. Overfilling can also cause scalding.
10. Only ever use the coffee mill for grinding roasted coffee beans. Never use it for other granular foods.
11. Do not let cord hang over edge of table or counter, or touch hot surface.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Do not use a cracked container or a container having a loose or weakened handle.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. Do not use appliance for other than intended use.
17. Avoid contacting moving parts, as the blade is sharp.

18. Never use warm or hot water to fill the water tank. Use cold water only.
19. Do not use outdoors.
20. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
21. Save these instructions.

KNOW YOUR COFFEE MAKER

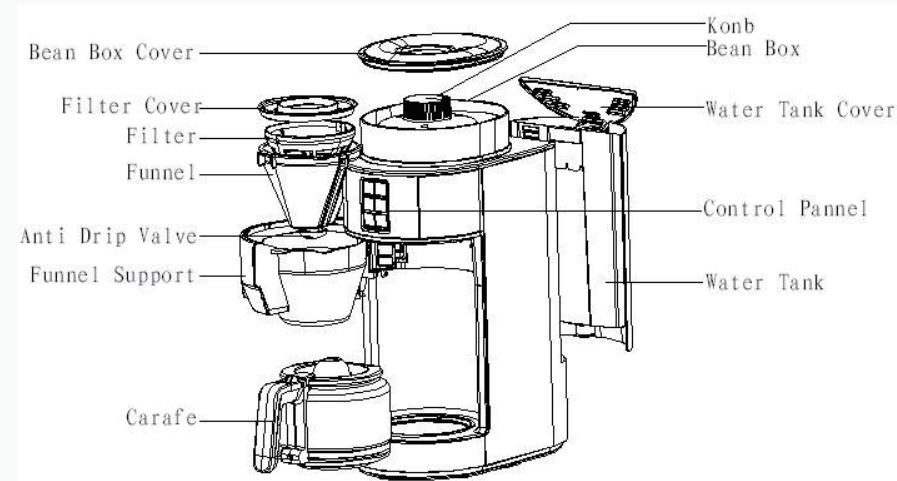

CONTROL PANEL

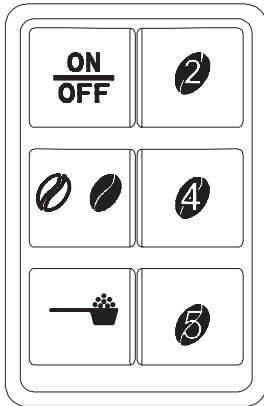 

BEFORE THE FIRST USE

Inspect whether all the accessories are complete and the product is damaged. Ensure that the unit is at the OFF position. Rotate the funnel support to the left, remove the funnel and other detachable parts, clean them in warm water, if necessary you can add some detergents, then replace them. Pour cold drinking water into water tank until max water level, do not place coffee and filter paper. Plug the power outlet, boil water directly through press 'ON/OFF' button until no water is left. You can repeat 2-3 times to ensure the coffee maker is clean.

OPERATION INSTRUCTION MAKE DRIP COFFEE WITH COFFEE BEANS

1. Open the water tank cover, pour clean cold water into water tank as needed.

Note: 1) The coffee you get would less than the water you pour in as some water had been absorbed with coffee powder.

2)Never pour hot water, milk, coffee powder or tea into water tank.

3)Please don' t fill the water tank exceed 5 mark indicated on water gauge.

2. Rotate the funnel support to the left, ensure the filter,the filter cover and funnel is inside of the Funnel Support.

3. Turn the funnel support to the right until it is locked.

4. Put proper coffee beans (not more than 90g) into Coffee Bean Box, then cover its lid. To avoid the coffee beans turn moist, we suggest not placing too much coffee bean in Coffee Bean Box.

Warning: To prevent the unit blocked, please don' t use unroasted or damped coffee bean. It may damage the unit.

5. Plug in the power cord into the outlet. The control pannel “ ☉☉ ” and “ 5 ” icons are illuminated.

When the process is finished, if you do not want to serve

6. Set the cups (2,4,5) through press “ 2、4、5 ” button (see “control panel”), if you do not press the “ 2、4、5 ” button to set the cups, the default cups is 5 cups. Then you can turn the Knob to set the thickness of coffee powder.

Note: 1) Please ensure the cup size is the same as the water amount filled in water tank, when brewing the unit will finish boiling all of the water in water tank.

2) You can adjust the coffee powder coarseness by turning the knob, we recommend you turn the knob to the middle position.

7. Press “ ☉、☉ ” to select coffee strength,if you do not press the “ ☉☉ ” button to set the strength, the default strength of coffee powder is strong.

8. Press the “ON/OFF” button one time, waiting for about 3 seconds, the grinder will start grinding, after grinding, wait for about 3 seconds, the brewing process begins.

9. After brewing, the buzzer will sound 3 times.

10. When finish brewing, if you do not unplug the power cord from the power outlet, the coffee can be warmed in the carafe for some time, after some time, the appliance will cut off power automatically. The whole process Of warming lasts for 60 minutes.

11. If no any operation within 1 minute, the control pannel “ ☉☉ ” and “ 5 ” icons are extinguished. If you want to re-activate unit, press any button on control panel, the control pannel “ ☉☉ ” and “ 5 ” icons are illuminated again.










MAKE DRIP COFFEE WITH COFFEE POWDER DIRECTLY

1. Open the water tank cover, pour clean cold water into water tank as needed.



Note: 1) The coffee you get would less than the water you pour in as some water had been absorbed with coffee powder.

2) Never pour hot water, milk, coffee powder or tea into water tank.

3) Please don’ t fill the water tank exceed 5 mark indicated on water gauge.

2. Press Funnel Press Key once and rotate the funnel support to the left, ensure the filter is inside of the Funnel Support. Add desired coffee powder into the filter according to your experience, then turn the Funnel Support to the right until it is locked.
3. Plug in the power cord into the outlet. The control pannel “  ” and “ ” icons are illuminated.
4. Set the cups (2,4,5) through press “、、 ” button (see “control panel”), if you do not press the “、、 ” button to set the cups, the default cups is 5 cups.

Note: Please ensure the cup size is the same as the water amount filled in water tank, when brewing, the unit will finish boiling all of the water in water tank.



5. Press the “ ” button once, the blue “ ” indicator will be illuminated, then press the “ON/OFF ” button
6. After brewing, the buzzer will sound 3 times.
7. When finish brewing, if you do not unplug the power cord from the power outlet, the coffee can be warmed in the carafe for some time, after some time, the appliance will cut off power automatically. The whole process Of warming lasts for 60 minutes.

CLEANING AND MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid.

- 1) Clean the funnel, filter, filter cover and coffee carafe after each use in hot, sudsy water.
- 2) Wipe the ground container and the product’s exterior surface with a soft, damp cloth to remove stains.
- 3) Use a damp cloth to gently wipe the keeping warm plate. Never use abrasive cleaner to clean it.

CLEANING MINERAL DEPOSITS

1. Fill the tank with water and descaler to the MAX level (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use “household descaler”, you can use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. Press “ ” button, the blue “ ” indicator will be illuminated, then press the “ON/OFF ” button once, the appliance will start to brew directly.
3. Rinse by operating the appliance with clean water at least 3 times.

HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee grounds in a cool, dry place. After opening a package of coffee grounds, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee grounds since this will greatly reduce the coffee's flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee grounds.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>