

## OPERATING INSTRUCTIONS

Kettle

### HEK-E60

Thank you for purchasing Hitachi kettle. Please read this operating instruction manual carefully before using your kettle.

After reading, please keep this manual and read again when necessary.

#### CONTENTS

■ Cautions on Operation.....	2
■ Name of Parts.....	3
■ How to Use.....	3
■ How to Care and Cleaning.....	4
■ Specification.....	4



- The kettle is for household use only. Please do not use for other purposes. Improper usage may cause serious accidents.
- In case of emergency such as fire or earthquake, please stop using and unplug immediately.

# Cautions on Operation

Before using this Kettle, please read those cautions on safety and operation carefully for proper use and prevent any injury to yourself or others:

1. Please read all the instructions before using the kettle **and save this manual for future need.**
2. Do not modify the Kettle.
3. Do not repair the Kettle by yourself. Repair or disassembly must be carried out by an authorized repair person(s) only.
4. Before connecting the kettle to the power supply, check that the voltage indicated on the Kettle corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
5. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
6. Do not spill water on the power base stand.
7. Do not touch the electrical contacts on the power base.
8. Do not place the kettle on or near a hot gas or electric burner or in a heated oven.
9. Do not operate the kettle when it is empty, to avoid damaging the heating element.
10. Use the kettle on a firm, flat surface that is out of the reach of children.
11. Do not use the kettle to heat anything other than water.
12. Avoid contact with steam from the spout when water is boiling or just after the kettle has **been** switched off.
13. Check the Kettle **regularly** for damage. If there is damage of any kind, the Kettle should not be used.
14. Do not use the Kettle if the power cord and/or plug are damaged or if the power socket is loose. If the cord or plug is damaged, it must be replaced by a qualified technician or service agent.
15. Always pour boiling water slowly and carefully without tipping the kettle too fast.
16. Be careful when opening the lid when the kettle is hot.
17. **This Kettle is not intended for use by the following people ;( including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning usage of the Kettle by a person responsible for their safety.**
18. **Do not allow children to play with the Kettle.**
19. Do not touch the hot surfaces. Use the handle only.
20. Insert the plug firmly, clean dirt and dust on the plug regularly.
21. Do not damage, modify, forcibly bend, pull hard, twist, or bind the power cord. Do not place heavy objects on the cord or pinch the cord, or heating the cord.
22. When removing the plug, do not **pull** the cord, make sure to take hold of the plug to pull out.
23. Do not use the kettle or **power base** for other than intended use. The kettle must only be used with the power base provided.
24. Keep the exposed power cord as short as possible. Wind excess cord into the base.
25. Use extreme caution when **using** the Kettle containing hot water.
26. The kettle is for household use only. Do not use outdoors.
27. **Do not use accessory attachments that are not recommended by the Kettle manufacturer.**
28. Unplug the kettle when not in use and before cleaning. Allow the kettle to cool before cleaning.
29. Do not overfill the kettle.

30. Do not use the Kettle for other purposes such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments.

31. If power cord is damaged, please replaced by the service center or designated by the manufacturer or a qualified person to avoid electric shock.

32. Children should be supervised to ensure that they do not play with the Kettle.

33. Keep the Kettle out of reach of children and pets.

## Name of Parts



## How to Use

### For the first Use

If you are using the kettle for the first time, clean your kettle by boiling a full kettle of water twice and then discarding the water. Wipe the exterior of the kettle with a soft damp cloth.

### Use your kettle

1. To fill the kettle, remove it from the power base and open the lid by pressing the lid button. Fill with the desired amount of water. The water level should be between the MAX and MIN marks. Too little water will result in the kettle switching off before the water has boiled then close the lid.  
**CAUTION:** If the kettle is overfilled, boiling water may be spilled.
2. Place the kettle on the power base.
3. Connect the plug to a power outlet. Move the On/Off switch to the ON position (indicated by the symbol "I"). The indicator will light up. The kettle will switch off automatically once the water has boiled.

**NOTE:** Ensure that the switch is not obstructed and the lid is firmly closed. The kettle will not turn off if the switch cannot move or if the lid is open.

4. Lift the kettle from the power base and then pour the water. Be careful when pouring water as boiling water will scald.

**NOTE:** After removing the kettle, there may be some water on the surface of the **power base**. This is condensation from the steam that causes the kettle to automatically switch off after boiling. This is normal and should not be a cause for alarm.

### **BOIL-DRY PROTECT**

If you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool for ten minutes before refilling with cold water and re-boiling.

## **How to Care and Cleaning**

### **CLEANING THE KETTLE**

Clean the kettle's exterior with a soft damp cloth. Do not use abrasive cleaners or scouring pads, which may damage the finish of the kettle. Never immerse the kettle or the **power base** in water and always keep the electrical contacts dry. Disconnect from the **power base** before cleaning the kettle stand.

### **CLEANING THE REMOVABLE SCALE FILTER**

To prevent loose particles of limescale being poured into your beverage, your kettle is fitted with a scale filter. To fit the filter, place the tab at the bottom end of the filter inside the bracket, then press down the top edge of the filter and push the filter into the spout until it clicks into place.

To remove the filter, press down on the top of the filter to release it from the spout.

### **DESCALING THE KETTLE**

After some time, limescale may be deposited on the inside of the kettle. This normal build-up is not harmful to health but an excessive amount of scale may affect the operation of the kettle. If this happens use a descaling solution, following the manufacturers' instructions. Never attempt to descale the kettle by chipping or scraping with a sharp **object**.

**Note: If trouble occurs, take the unit to the retailer from which you bought, without trying to repair it yourself.**

## **Specification**

Rated Voltage	220V-240V~
Rated Frequency	50/60Hz
Rated Power Consumption	1850-2200W
Max Capacity	1.7L
Dimensions (L × W × H)	225 × 256 × 248 mm
Weight	1Kg

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>