

User Manual



Domonial



Congratulations on the purchase of your DOMONIAL security system.

This system is designed to operate on an authorised radio frequency and will in no way endanger the user.

To make the best out of your system we advise you to read this manual carefully. This manual has been written for your special attention and integrates remarks and suggestions of existing users.


-  *Full set*
-  *Part set*
-  *Annex*

Zone 1 :	Zone 11 :
Zone 2 :	Zone 12 :
Zone 3 :	Zone 13 :
Zone 4 :	Zone 14 :
Zone 5 :	Zone 15 :
Zone 6 :	Zone 16 :
Zone 7 :	Zone 17 :
Zone 8 :	Zone 18 :
Zone 9 :	Zone 19 :
Zone 10 :	Zone 20 :

INDEX



 ① Introduction to your security system 4




② Understanding the audible acknowledgements 6



③ How to use your wireless keypad 8



④ How to use your keyfob (if purchased) 12

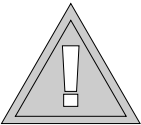

⑤ Maintenance and recommendations 15




The Domonial control panel/communicator unit is the brain of your security system. It exchanges information with the associated wireless peripherals. The control panel centralises the data sent by the detectors, records the arming and disarming operations and communicates with the Alarm Receiving Centre.

CHARACTERISTICS

Radio

- Narrow band frequency modulation
- Identification code specific to each component (no possible interference between neighbouring systems)
- Protection against attempted jamming
- Radio monitoring of the system detectors and sounders

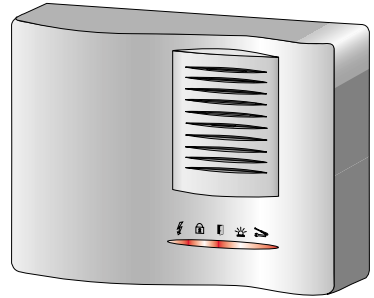

Electrical

- 240V mains with battery backup
- Built-in voltage surge protection
- System supply monitoring

Transmission


 
- Built-in telephone transmission
- Telephone line loss detection
- Transmission monitoring by periodical tests (as programmed)

Operational

- 3 protected area groups - 20 detection points
- Alert functions, with sounder or silent
- All door and window contacts, closed position checked upon arming
- Control panel tamper protection against opening

Indicator lights

The front cover of the control panel features LED indicators which show the status of your security system.

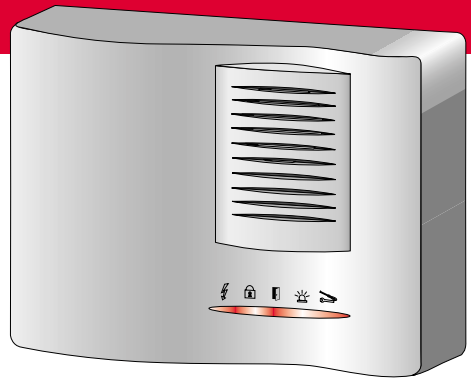

1- LED INDICATOR “AC MAINS POWER”.....



ON : The Control Panel is supplied by the Mains power

OFF : There is a Mains Power Failure – The Control Panel is supplied by its built – in battery

2- LED INDICATOR “SYSTEM ARMED”.....



ON : The system is totally armed

OFF : The system is disarmed

BLINKING : The system is Part Armed

3- LED INDICATOR “OPEN ZONE”.....



BLINKING : It means that one of the windows or doors protected by a magnetic contact is opened. It blinks until the window or door has been closed

4- LED INDICATOR “ALARM MEMORY”.....



ON : It means that an alarm occurred during the ARMING mode

BLINKING : It means that an alarm occurred during the Part arm mode

The indicator remains ON until the next arming

5- LED INDICATOR “SERVICE REQUIRED”.....




PLEASE CALL SERVICE DEPT.

ON : It indicates a fault on a technical channel or a remote reset is required

BLINKING : It indicates a fault on the system (Battery fault, Supervision, Tamper, Phone line failure or Radio Jamming)

The indicator will remain ON or BLINKING until the condition has been cleared.

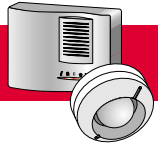



② Understanding the audible acknowledgements

SOUNDERS








The sounder, whether it is built in the control panel ① or mounted in the house (optional) ② is an effective deterrent due to its power and very irritating tone.

Both these components emit an audible confirmation of your arming and disarming the security system. The volume levels can be adjusted by the installer.

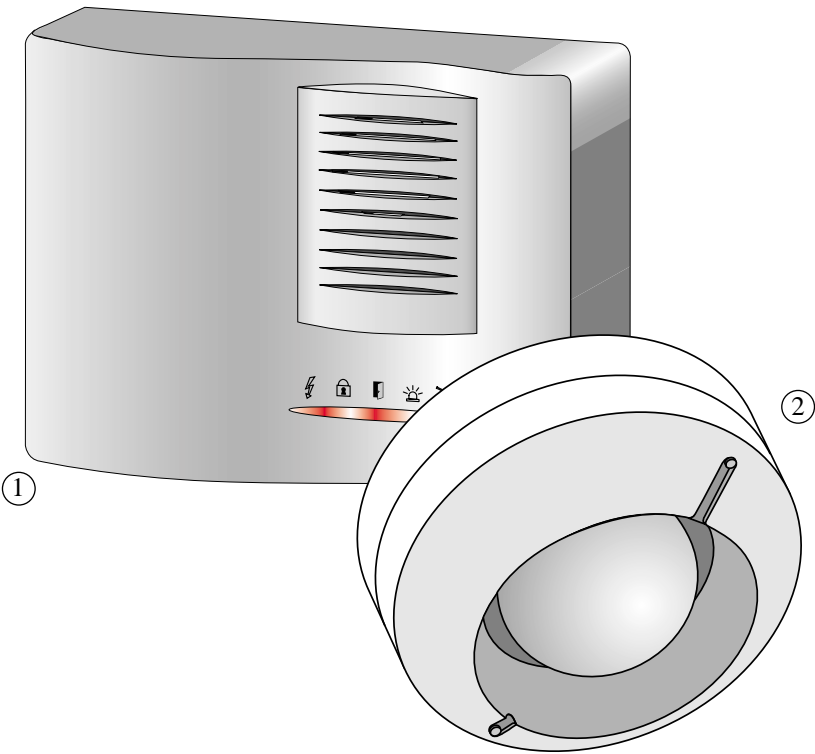

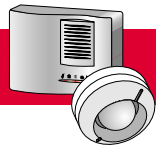

AUDIBLE CONFIRMATIONS OF THE SYSTEM
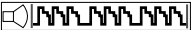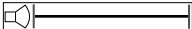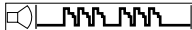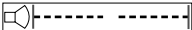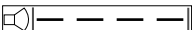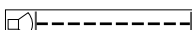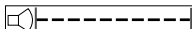
<p>ARMING configuration</p>	<p>Sequence of 3 modulated sounds</p>  <p>Duration : 4 seconds</p>	<p>When Arming, confirms that the control panel has received the information.</p>
<p>DISARMING configuration</p>	<p>Long and continuous beep</p>  <p>Duration : 2,5 seconds</p>	<p>When Disarming, confirms that the control panel has received the information.</p>
<p>PART SET arming confirmation</p>	<p>Sequence of 2 modulated sounds</p>  <p>Duration : 2,5 seconds</p>	<p>This confirmation indicates Part arming of the security system</p>
<p>FAULT signal</p>	<p>2 times 7 fast beeps</p> 	<p>This signal indicates a fault in the system</p>
<p>ALERT confirmation</p>	<p>4 beeps in case of alert... sent via the keypad</p> 	<p>Confirms the transmission of an alert to the Alarm Receiving Centre</p>
<p>Exit delay confirmation</p>	<p>Upon arming...</p>  <p>one beep every second</p>	<p>This will sound until five second after the exit door is closed</p>
<p>Entry delay</p>	<p>Upon entry...</p>  <p>one beep every second</p>	<p>This entry tone sounds for 30 seconds after you open the entry door. You should disarm your system within this time.</p>





The keypad is used to arm and to disarm your security system by means of an access code chosen at the installation stage.


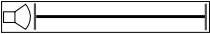
To use all the functions of the keypad you must have the master code chosen at the installation stage or have the master key tag.



● ARMING USING THE KEYPAD




- ✓ Present and hold the TAG on the keypad  symbol until the red light flashes and audible confirmation tone  is heard.

● DISARMING USING THE KEYPAD

- ✓ Present the TAG on the keypad  symbol.
A green light on the keypad confirms that the TAG has been accepted.
- ✓ The audible confirmation tone  is simultaneously emitted by the sounder at this moment remove your key TAG

● ARMING USING YOUR CODE

- ✓ Press an arming key on the keypad and enter your access code.


-  4 Digit Code → Arms the system
-  4 Digit Code → Arms the system in part set mode (See description p.13)
-  4 Digit Code → Arms the annex

- ✓ A high-pitch beep confirms the entry of each digit,



- ✓ The keypad confirms the code with a flashing red light,



- The audible confirmation  is simultaneously emitted by the sounder.

Always make sure that when arming the system it is followed by the audible confirmation. Premises will be armed after you have closed the exit door (full set) or after 30 seconds (part set).



- ✓ Your system is equipped with a TAG Reader, presenting the TAG in front of the keypad can take the place of entering your code.


- ✓ Presenting the TAG for more than 2 seconds will arm your system.

● DISARMING VIA THE CODE KEYPAD

To enable you to get to the keypad without triggering an alarm, your installer has programmed an entry delay of 30 seconds.


- ✓ Enter your code or present the TAG for less than 1,5 seconds
- ✓ A high-pitch beep confirms the entry of each digit,
- ✓ The keypad confirms the validity of the code by a green light,



- The audible confirmation  is simultaneously emitted by the signaling equipment.

● DISARMING THE SYSTEM AFTER AN ACTIVATION





If the  red LED is illuminated on your alarm panel, this indicates an alarm has occurred in one zone only and the system will not operate until it has been reset.



To reset the system follow the disarming procedures using either your code or keytag four times consecutively. Ensure the audible disarm tone sounds after each disarming procedure.






If the two red LEDs   are illuminated on your alarm panel, this indicates a confirmed alarm has occurred and a remote reset is required and the system will not operate. To remotely reset your system call your Service Department :



● CHANGING OR SETTING ADDITIONAL CODES

To change or set additional user codes firstly enter programming mode



- ✓ Press key :  +  simultaneously
- ✓ The red light will flash slowly
- ✓ Enter the 4 digit master code (user 1)
- ✓ Select and enter an existing or new single digit user ID (0-9)
(N.B. : User 1 is always the master)
- ✓ Enter the new 4 digit code for this user
- ✓ A double beep on the keypad will confirm acceptance of the new code.
- ✓ You must confirm the new code by re entering the 4 digits numbers.
- ✓ A double beep on the keypad will confirm acceptance of the new code.

Exit programming mode by pressing  key.

● CHANGING OR SETTING ADDITIONAL KEY TAG


A key TAG can only be programmed to an existing user's 4 digits code.

To change or set additional key TAG firstly enter programming mode

- ✓ Press key :  +  simultaneously
- ✓ The red light will flash slowly





- ✓ Enter the 4 digit master code (user 1)
- ✓ Select and enter an existing digit user ID (0-9)
- ✓ Present the new key TAG
- ✓ A double beep on the keypad will confirm acceptance of the new TAG.

Exit programming mode by pressing  key.


WARNING : The system will automatically exit programming mode after 15 seconds if no keys have been pressed and the red light will be timed off. If this occurs you must start this process again from the beginning.

● SENDING A PANIC SIGNAL

You can send an instant panic alarm whenever you feel threatened whilst at home:

- ✓ Press and hold the “SOS” key simultaneously :  + 
- ✓ The sounder is triggered (as programmed),
- ✓ The ARC is informed.

The “PANIC” function is operative even when your system is not armed.

You can stop the sounder manually by pressing key  of the keyfob or by entering code, on the keypad.

Stopping the sounder does not interrupt the transmission to the ARC.

● ENTRY DELAY

The entry delay gives you the time necessary to enter your access code or use your key TAG on the keypad to disarm your security system.


● WRONG CODE PROTECTION

If your enter 5 successive wrong codes, the keypad is blocked for 5 minutes.




The keyfob is an optional extra. This can be used to arm or disarm your security system as well as to trigger an audible or silent alert.

● ARMING

✓ Press key : 

✓ The indicator light on the keyfob comes on briefly when you release the button




- An audible confirmation  is simultaneously emitted by the signaling equipments.



Always make sure that your arming the system is followed by the audible confirmation. N.B. Arming and disarming can only be operated whilst inside the premises.


If, upon arming, a door or window contact is in the "open" position (e.g. window not properly shut), a FAULT signal will inform you. Disarm the system, shut the corresponding window and repeat arming.

● DISARMING AFTER ENTRY

✓ Press key : 

✓ The indicator light on the keyfob comes on briefly when you release the button.

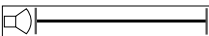


- The audible confirmation  is emitted by the signaling equipment.

N.B. This function can only be used when the entry route delay has been triggered.


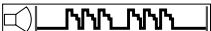



● PART SET ARMING

Provided that this function has been programmed by the installer, you can choose to protect only a part of your premises whilst you are in the other part. For instance, you can protect the ground floor while you are sleeping upstairs.

✓ Press key 

✓ The indicator light on the keyfob comes on when you release the button.

 - The audible confirmation  is simultaneously emitted by the signaling equipment.

Part protection becomes effective 30 seconds after you have armed it. Any intruder in the protected zone will trigger an alarm. Part set is disarmed by pressing the  key.

● PANIC ALARM

These keys enable you to send an instant alarm if you need urgent assistance at home.

✓ Press and hold the two “SOS” keys simultaneously for two seconds.




✓ The indicator light comes on.

✓ The sounder is triggered

✓ The ARC is alerted.




The “PANIC” function is operative even when your system is not armed. The sounder stops by itself after 30 second but you can stop it manually by pressing 

Stopping the sounder does not interrupt the transmission to the ARC station.


● ASSISTANCE ALERT KEY

This key enables you to call for assistance from one of your keyholders.

✓ Press key : 

✓ The indicator light comes on when you release the button.

✓The ARC is alerted.

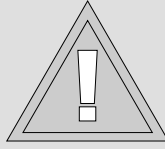

- Check regularly your system (once a month or follow your operator's specifications)
- Avoid shocks for all the components and more especially avoid dropping the remote keyfob.
- Do not immerse.
- To clean the components use a damp rag only (no detergent).
- Keep in a clean, dry place at the ambient temperature.
- Dispose of old batteries in containers for this purpose.
- Avoid exposing yourself to prolonged sounder emission.
- Do not hide motion detectors behind curtains, furniture, etc.
- Do not paint or paper the components
- Do not try to open or move the components.
They are tamper-protected and some of them can present electric shock hazards.



Honeywell

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>