

OPERATORS GUIDE

# 1742A OSCILLOSCOPE

RSE GROUP  
(MASTER)





## **SAFETY SUMMARY**

*The following general safety precautions must be observed during operation of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.*

### **GROUND THE INSTRUMENT.**

*To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.*

### **DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.**

*Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.*

### **DO NOT REMOVE INSTRUMENT COVERS.**

*Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Service instructions for this instrument are provided in a separate Operating and Service Manual.*

### **DANGEROUS PROCEDURE WARNINGS.**

*Warnings such as the example below, precede potentially dangerous procedures throughout this manual! Instructions contained in the warnings must be followed.*

**WARNING**

*Dangerous voltages, capable of causing death, are present in this instrument.  
Use extreme caution when handling, installing or operating.*



copy 2

achs



# OPERATORS GUIDE

## MODEL 1742A OSCILLOSCOPE

© COPYRIGHT HEWLETT-PACKARD COMPANY/COLORADO SPRINGS DIVISION 1978  
1900 GARDEN OF THE GODS ROAD, COLORADO SPRINGS, COLORADO, U.S.A.

ALL RIGHTS RESERVED

Manual Part Number 01742-90904  
Microfiche Part Number 01742-90804

PRINTED: JULY 1978

**TABLE OF CONTENTS**

	Page		Page
General Information .....	1	Use of Option 034 DMM .....	28
Description .....	1	Pulse Period and Pulse Width Measurements .....	28
Accessories Furnished .....	2	Transition Measurements .....	30
Accessories Available .....	2	Duty Cycle Measurements .....	32
Options .....	2	Signal Frequency or Pulse Repetition Rate .....	32
Preparation for Use .....	10	Propagation Delay Measurements .....	32
Power Cord .....	10	Adjusting Desirable Time Interval	
Power Requirements .....	10	Between Pulses .....	34
Controls and Connectors .....	11	Pulse Jitter Measurements .....	35
Turn-on Procedure .....	17	Phase Difference Measurements Using	
Operator's Adjustments .....	18	Time Delay .....	37
Trace Align .....	18	Conventional Measurements Using DMM Only .	38
Astigmatism and Focus .....	18	Voltage Measurement Applications .....	39
Probe Compensation .....	19	DC and Absolute Voltage Measurements .....	40
Display/Readout Zero .....	19	Peak-to-peak Voltage Measurements .....	41
Operator's Functional Check .....	20	Average Voltage Measurements	
Obtaining Basic Displays .....	22	Using Oscilloscope .....	42
Normal Sweep Display .....	23	Average and RMS Voltage Measurements	
Magnified Sweep Display .....	23	Using Option 034 DVM .....	43
Delayed Sweep Display .....	24	Amplitude Comparison Measurements .....	43
A vs B Display .....	24	Common-mode Rejection .....	44
Time-interval Measurement ( $\Delta T$ ) Applications .....	25	Option 101 - Logic State Display .....	46
Time-interval Mode Switches .....	25		
Time-interval Readouts .....	28		

## MODEL 1742A OPERATORS GUIDE

### OPERATING INSTRUCTIONS

#### GENERAL INFORMATION.

This Operators Guide will acquaint you with the Model 1742A features, capabilities, accessories, power requirements, and controls. To aid in operating the oscilloscope, initial turn-on procedures, adjustments, and a functional check are provided. Detailed explanations in the Applications Section of this manual show how you can use varied capabilities of the 1742A to best advantage in a variety of electrical measurements. Model 1742A specifications and general characteristics are listed in tables 1 and 2. Service information is available in a separate service manual.

#### DESCRIPTION.

The Hewlett-Packard Model 1742A is a dual-channel, 100-MHz, delayed-sweep oscilloscope designed for general-purpose bench or field use. The dual-channel dc to 100 MHz vertical deflection system has 12 calibrated deflection factors from 5 mV/div to 20 V/div. A maximum sensitivity of 1 mV/div to 40 MHz is provided on both channels by means of a 5X

vertical magnification. Selectable input impedance of either 50 ohms or 1 megohm permits impedance selection that best meets measurement application.

The 1742A provides the two-marker, time-interval measurement feature in addition to the traditional delayed sweep mode. When using the two-marker  $\Delta T$  mode, the time interval is scaled and the output (as a voltage) is applied to rear-panel connectors for readout on a 3 1/2-digit DVM. With Option 034 the time interval voltage is internally connected and read out on a built-in DMM on the top of the oscilloscope.

The horizontal deflection system has calibrated sweep rates from 2 s/div to 0.05  $\mu$ s/div and delayed-sweep rates from 20 ms/div to 0.05  $\mu$ s/div. A 10X magnifier expands all sweeps by a factor of 10 and extends the fastest sweep to 5 ns/div. In alternate or chop modes, a trigger-view control will display three signals: the channel A signal, the channel B signal, and the trigger signal. When using trigger view in the alternate mode along with the  $\Delta T$  sweep mode, the time interval start marker appears on the trigger waveform and the stop

marker appears coincident in time on the channel A and channel B waveforms. This allows you to correlate the time between the trigger signal and the channel A and channel B signals. In trigger-view operation, center screen represents the trigger threshold point, allowing you to see the triggering level location. With the A VS B control, an X-Y mode of operation is possible. The channel A input (Y-axis) is plotted versus the channel B input (X-axis). The CRT has 8- by 10-cm major divisions on an internal graticule.

#### ACCESSORIES FURNISHED.

One Blue Light Filter, HP Part No. 01740-02701  
 One Front-panel Cover, HP Part No. 5040-0516  
 One Vinyl Storage Pouch, HP Part No. 1540-0292  
 One 7.5-ft Power Cord, HP Part No. 8120-1521  
 Two 2-meter 10:1 Divider Probes, HP Model 10041A  
 One 0.5 A Slow-Blow Fuse for 220/240-V operation, HP Part No. 2110-0202

#### ACCESSORIES AVAILABLE.

The following accessories are available for the 1742A:  
 Models 1007A and 1114A - Testmobiles  
 Model 1120A - 500 MHz Active Probe  
 Model 1125A - Impedance Converter Probe  
 Model 10002A - 50:1 Divider Probe, 1.5 m (5 ft) long

Model 10020A - Resistive Divider Probe Kit  
 Model 10021A - 1:1 Divider Probe, 1 m (3.3 ft) long  
 Model 10040A - 10:1 Divider Probe, 1 m (3.3 ft) long  
 Model 10042A - 10:1 Divider Probe; 3 m (9.8 ft) long  
 Model 10140A - Collapsible Viewing Hood  
 Model 10491B - Rack Mount Adapter  
 Model 10173A - RFI Filter and Contrast Screen  
 HP Part No. 01715-69501 - Kit for installing Option 034

#### OPTIONS.

The following standard options extend the usefulness of 1742A:

**OPTION 001:** Supplies a fixed ac power cord in place of the normal detachable power cord.

**OPTION 034:** Provides a built-in Digital Multimeter that can be used for time interval measurements or as a separate digital multimeter.

**OPTION 090:** Deletes the two Model 10041A divider probes normally supplied. You may specify other probes listed that are more suited to your requirements.

**OPTION 101:** Single pushbutton interface option for operation with the HP Model 1607A Logic State Analyzer. The A vs B mode of operation is deleted.



**OPTION 102:** Option 102 is the Option 101 with an additional special adapter plate (HP Part No. 5061-1213). The adapter plate is used to attach the 1742A and the 1607A instruments together as a single unit.

**OPTION 580:** This option provides the instrument with a special bottom cover to meet Canadian Fire Safety Codes.

**OPTION 900:** Power cord option for use in Great Britain and Singapore. 2.3 m (7.5 ft), removable, 240 V max, 3-conductor 90° IEC.

**OPTION 901:** Power cord option for use in Australia and New Zealand. 2.3 m (7.5 ft), removable, 240 V max, 3-conductor IEC.

**OPTION 902:** Power cord option for use in East and West Europe. 2.3 m (7.5 ft), removable, 240 V max, 3-conductor 90° IEC.

**OPTION 906:** Power cord option for use in Switzerland only. 2.0 m (6.5 ft), removable, 240 V max, 3-conductor 90° CEE22/V.

*Table 1. Specifications*

<p><b>VERTICAL DEFLECTION (TWO CHANNELS)</b></p> <p><b>RISE TIME:</b> <math>\leq 3.5</math> ns (measured from 10% to 90% points of 6-division input step).</p> <p><b>BANDWIDTH:</b> dc to 100 MHz measured 3-dB down from 8-div reference. Bandwidth may be limited to approximately 20 MHz by BW LIMIT switch.</p> <p>Lower 3-dB Limit, ac Coupling: <math>\sim 10</math> Hz (<math>\sim 1</math> Hz with 10:1 probe).</p>	<p><b>DEFLECTION FACTOR</b></p> <p><b>Ranges:</b> 5 mV/div to 20 V/div in 12 calibrated position in 1, 2, 5 sequence, accurate within 3%. With vernier uncalibrated, continuously variable between ranges and to at least 50 V/div on 20 V/div range.</p> <p><b>INPUT RC (SELECTABLE)</b></p> <p><b>AC and DC:</b> 1 megohm <math>\pm 2\%</math> shunted by approximately 20 pF.</p> <p><b>50 Ohm:</b> 50 ohms <math>\pm 3\%</math>.</p>
---	--

Table 1. Specifications (Cont'd)

**MAXIMUM INPUT VOLTAGE**

**AC and DC:** 250 V (dc + peak ac) or 500 V p-p ac at 1 kHz or less.

**50 Ohm:** 5 Vrms

**A+B OPERATION**

**Differential (A - B) Common Mode:** CMRR is at least 20 dB from dc to 20 MHz. Common mode signal amplitude equivalent to 8 div with one vernier adjusted for optimum rejection.

**VERTICAL MAGNIFICATION (X5)**

**BANDWIDTH:** 3 dB down from 8-division reference signal.

**DC-COUPLED:** dc to ~40 MHz (ac-coupled; ~10 Hz to 40 MHz).

**RISE TIME:**  $\leq 9$  ns (measured from 10% to 90% points of 8-division input step).

**DEFLECTION FACTOR:** increases sensitivity of each deflection factor setting by a factor of five with a maximum sensitivity of 1 mV on channels A and B. (Recommended only for use on .005 V and .01 V ranges.)

**MAIN AND DELAYED SWEEPS****RANGES**

**Main:** 50 ns/div to 2 s/div (24 ranges) in 1, 2, 5 sequence.

**Delayed:** 50 ns/div to 20 ms/div (18 ranges) in 1, 2, 5 sequence.

**ACCURACY**

Sweep Time/Div	*Accuracy		Temp Range
	X1	X10	
50 ns to 20 ms	$\pm 3\%$	$\pm 4\%$	0°C to +15°C
	$\pm 2\%$	$\pm 3\%$	+15°C to +35°C
	$\pm 3\%$	$\pm 4\%$	+35°C to +55°C

\*50 ms to 2s add 1%

**Sweep Vernier (Main Only):** continuously variable between all ranges and extends slowest sweep to at least 5 s/div. Front-panel UNCAL light indicates when vernier is not in CAL position.

**X10 Magnifier:** expands all sweeps by a factor of 10 and extends fastest sweep to 5 ns/div.

**CALIBRATED SWEEP DELAY**

**DELAY TIME RANGE:** 0.5 to 10 x MAIN TIME/DIV setting; 100 ns to 2s (minimum delay 150 ns).

Table 1. Specifications (Cont'd)

<b>DIFFERENTIAL TIME MEASUREMENT ACCURACY (OVER FIRST 10CM OF SWEEP):</b>			
<b>Main Time Base Setting</b>	<b>Option 034</b>	<b>**External DVM</b>	<b>Dial</b>
*100 ns/div to 20 ms/div	$\pm(.5 + .05\%$ of full scale)	$\pm(.5 + .05\%$ of full scale)	$\pm(.5 + .1\%$ of full scale)
50 ms/div to 2 s/div	$\pm(1 + .1\%$ of full scale)	$\pm(1 + .1\%$ of full scale)	$\pm(1 + .1\%$ of full scale)
* On 100 ns/div range, specification applies after 1 cm of sweep.			
** Plus accuracy of the external DVM.			
<b>Delay Jitter:</b> <0.002% (1 part in 50 000) of maximum delay in each step from +15°C to +35°C; <0.005% (1 part in 20 000) from 0°C to +15°C and +35°C to +55°C.			
<b>TIME INTERVAL (<math>\Delta</math> TIME MODE)</b>			
<b>TIME INTERVAL OUTPUT VOLTAGE:</b> varies from 50 V to 100 mV full scale. Full scale output voltage can be			

determined by multiplying the number on the TIME/DIV dial by 10 V(e.g., 0.05 s, 0.05 ms, or 0.05  $\mu$ s per division gives 0.5V output full scale).

**ACCURACY:** measurement accuracy is the Time Interval Accuracy plus the external DVM accuracy.

**TRIGGERING**

**INTERNAL:** dc to 25 MHz on signals causing 0.3 division or more vertical deflection, increasing to 1 division of vertical deflection at 100 MHz in all display modes. Increase signal level by 2 when in CHOP and by 5 when MAG X5 is used.

**EXTERNAL:** dc to 50 MHz on signals of 50 mV p-p or more increasing to 100 mV p-p at 100 MHz. Increase signal level by 2 when in CHOP.

**LEVEL AND SLOPE**

**Internal:** at any point on the positive or negative slope of the displayed waveform.

**External:** continuously variable through  $\pm 1$ V on either slope of the trigger signal;  $\pm 10$  V in  $\div 10$ .

**MAXIMUM INPUT VOLTAGE**

**AC and DC:** 250 V (dc + peak ac) or 500 V p-p ac at 1 kHz or less.

Table 1. Specifications (Cont'd)

**TRIGGER VIEW**

Displays the internal or external trigger signal. In alternate or chop mode (dual channel) channel A, channel B, and the trigger signal are displayed. In channel A or B mode (single channel), trigger view overrides that channel and displays the trigger signal. Displayed amplitude of the internal trigger signal is approximately the same as the on-screen vertical signal. Deflection factor of the external trigger signal is 100 mV/div or 1V/div in EXT ÷ mode. Trigger point of the main sweep is approximately at the point that the displayed trigger signal crosses center screen. With identically timed signals applied to a vertical channel and the external trigger input, the trigger signal is delayed by 2.5 ns  $\pm$  1 ns.

**A VS B OPERATION****BANDWIDTH**

**A (Y-axis):** same as channel A.

**B (X-axis):** dc to 5 MHz.

**DEFLECTION FACTOR:** 5 mV/div to 20 V/div (12 calibrated positions) in 1, 2, 5 sequence.

**PHASE DIFFERENCE BETWEEN CHANNELS:**  $<3^\circ$ , dc to 100 kHz.

**CATHODE-RAY TUBE AND CONTROLS**

**Z-AXIS INPUT:** +4 V,  $>50$ -ns width pulse blanks trace of any intensity, usable to 10 MHz for normal intensity. Input R, 1 kilohm  $\pm$ 10%. Maximum input  $\pm$ 20 V (dc + peak ac).

**GENERAL****CALIBRATOR**

**Type:** approximately 1.4-kHz square wave,  $<0.1$   $\mu$ s rise time.

**Voltage:** 1 V p-p into  $>1$  megohm; 0.1 V p-p into 50 ohms.

Accuracy:  $\pm$ 1%.

**REAR PANEL OUTPUTS:** Main and delayed gates, 0 V to  $>+2.5$  V;  $\Delta$  Time out.

Table 2. General Characteristics

<p><b>VERTICAL DEFLECTION (TWO CHANNELS)</b>  <b>DISPLAY MODES:</b> channel A; channel B (Normal or Invert); Alternate; chopped (approximately 250 kHz rate); A+B; and Trigger View.  <b>INPUT COUPLING:</b> selectable for AC or DC, 50 ohms (dc), or ground. Ground position disconnects input connector and grounds amplifier input.  <b>SIGNAL DELAY:</b> input signals are delayed sufficiently to view leading edge of input pulse without advanced trigger.</p>	<p><b>DELAYED SWEEP</b>  <b>Auto:</b> delayed sweep automatically starts at end of delay period.  <b>Trig'd:</b> delayed sweep is armed and triggerable at end of delay period from selected sources.</p>
<p><b>HORIZONTAL DEFLECTION</b>  <b>DISPLAY MODES:</b> main, delayed, A start/B start, MAG X10, and A vs B.</p>	<p><b>TRIGGER SOURCE</b>            Selectable from channel A, channel B, composite, or line frequency (composite triggering on displayed signal except in chop; in chop, channel A is trigger source).  <b>External Input RC:</b> approximately 1 megohm shunted by approximately 20 pF.  <b>Coupling:</b> AC, DC, LF REJ, or HF REJ.  <b>AC:</b> attenuates signals below approximately 20 Hz.  <b>LF Rej:</b> (main sweep only) attenuates signals below approximately 4 kHz.  <b>HF Rej:</b> (main sweep only) attenuates signals above approximately 4 kHz.  <b>Trigger Holdoff:</b> (main sweep only) increases sweep holdoff time in all ranges.</p>
<p><b>TRIGGERING</b>  <b>MAIN SWEEP</b>  <b>Normal:</b> sweep is triggered by internal or external signal.  <b>Automatic:</b> bright baseline displayed in absence of input signal. Triggering is same as normal above 45 Hz.  <b>Single:</b> sweep occurs once with same triggering as normal; reset pushbutton arms sweep and lights indicator.</p>	<p><b>MAIN INTENSIFIED</b>  <b>DELAYED SWEEP:</b> intensifies that part of main time base to be expanded to full screen in delayed time base mode. Stop control adjusts position of intensified portion of sweep.</p>

Table 2. General Characteristics (Cont'd)

**ΔTIME MODE:** intensifies two parts of main time base to be expanded to full screen in delayed time base mode. START control positions the first intensified portion of the sweep and the STOP control positions the second intensified portion of the sweep.

#### TIME INTERVAL (Δ TIME MODE)

**FUNCTION:** measures time interval between two events on channel A (channel A display); between two events on channel B (channel B display); or between two events starting from an event on either channel A or B and ending with an event on either channel A or B (alternate display).

#### CATHODE-RAY TUBE AND CONTROLS

**TYPE:** post accelerator, approximately 15 kV accelerating potential; aluminized P31 phosphor.

**GRATICULE:** 8- by 10-div internal graticule; 0.2-div subdivisions on major horizontal and vertical axes. 1 div = 1 cm. Internal flood gun graticule illumination.

**BEAM FINDER:** returns trace to CRT screen regardless of setting on horizontal, vertical, or intensity controls.

**REAR-PANEL CONTROLS:** astigmatism and trace align.

#### GENERAL

**POWER:** 100, 120, 220, 240 Vac, ±10%, 48 to 440 Hz, 100 VA maximum.

**WEIGHT:** (with accessories) net, 13 kg (28.6 lb).

**DIMENSIONS:** see outline drawing.

#### OPERATING ENVIRONMENT


**Temperature:** 0°C to 55°C.

**Humidity:** up to 95% relative humidity at 40°C.

**Altitude:** to 4600 m (15 000 feet).

**Vibration:** vibrated in three planes for 15 minutes each with 0.254 mm (0.010 in.) excursion 10 to 55 Hz.

Table 2. General Characteristics (Cont'd)

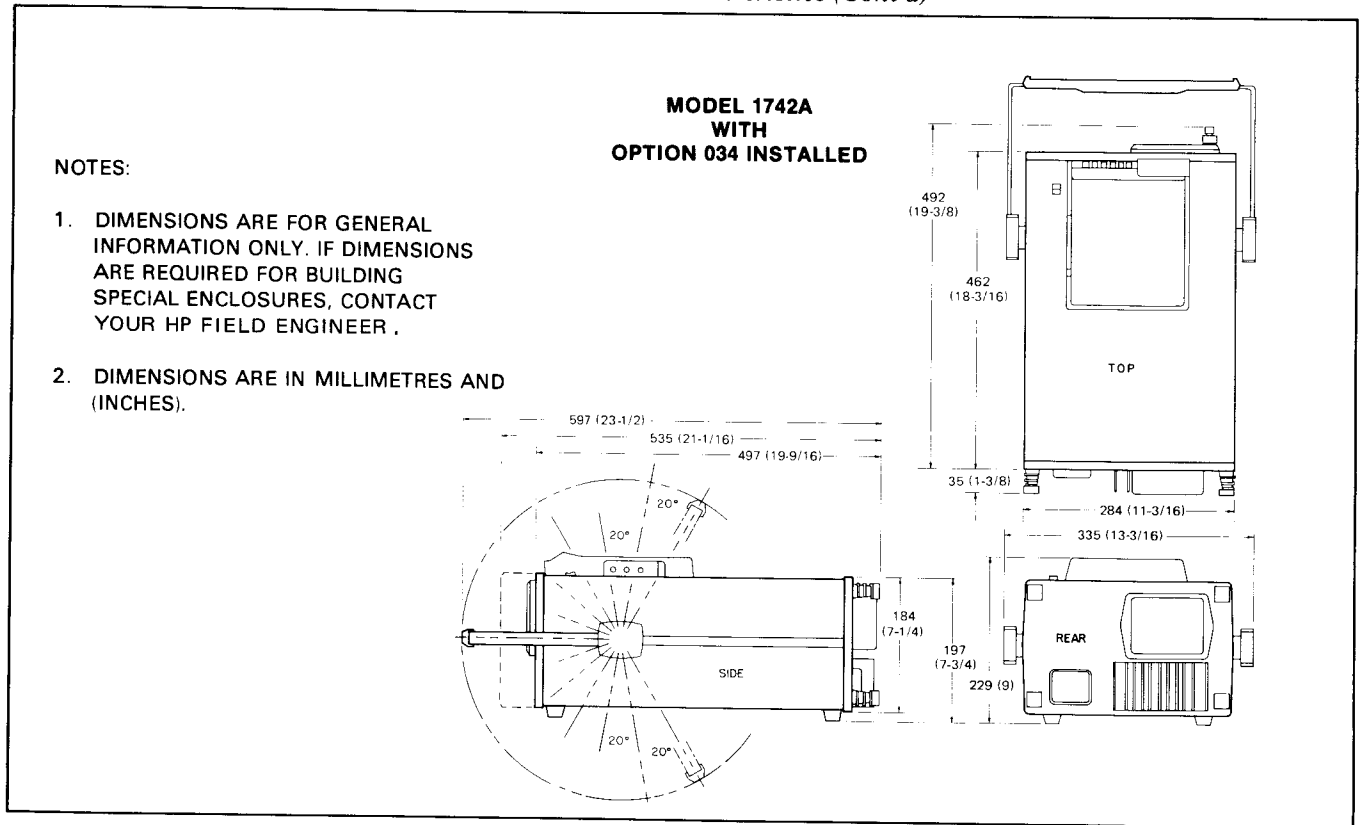

**PREPARATION FOR USE.**

**WARNING**

Read the Safety Summary at the front of this guide before installing or operating the instrument.






HP POWER CABLE PART NUMBERS		
8120 - 1692 OPTION 902	8120 - 0696 OPTION 901	
		
8120 - 1703 OPTION 900	8120 - 2296 OPTION 906	8120 - 1521 STD
		
INPUT POWER RECEPTACLE TYPES		

Figure 1. Power Cables Available

**POWER CORD.** The power cord required depends on the ac input voltage and the country in which the instrument is to be used. Figure 1 illustrates standard power receptacle (wall outlet) configurations. The HP part number shown above each receptacle drawing specifies the power cord equipped with the appropriate power cord is not included with your instrument, notify the nearest HP Sales/Service Office and a replacement cord will be provided.

**POWER REQUIREMENTS.** Model 1742A can be operated from any power source supplying 100 V, 120 V, 220 V, or 240 V ac  $\pm 10\%$ , single-phase, 48 to 440 Hz. Power dissipation is 100 VA (maximum). The instrument is normally set at the factory for 120-volt operation.


**CAUTION**

Instrument damage may result if the line voltage selection switch is not set correctly for the proper input power source.

To change the instrument from one voltage to another, proceed as follows:

1. Verify that the 1742A power cord is not connected to any input power source.



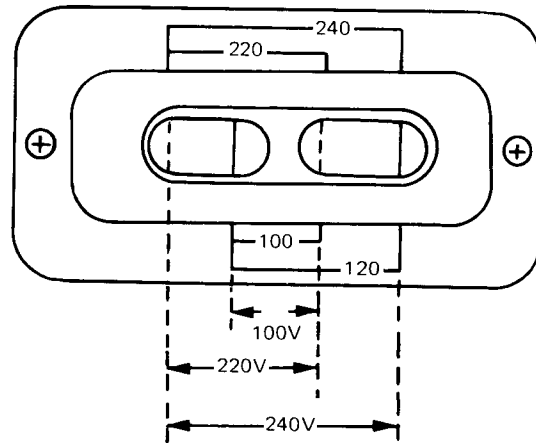

*Figure 2. Line Voltage Selection Switch Settings*

2. Stand instrument on rear-panel legs and use a blade-type screwdriver to position power selector switches through opening in bottom cover. Figure 2 shows switches set for 120-V operation.
3. Move LINE VOLTAGE SELECT switches to appropriate position.
4. Replace line fuse (rear-panel) with 0.5-ampere fuse for 220/240 V (HP Part No. 2110-0202) or 1-ampere

fuse for 100/120 V (HP Part No. 2110-0007). Both fuses are Slow-blow/time delay type fuses.


5. Connect input power cord to selected power source.


### CONTROLS AND CONNECTORS.

The front- and rear-panel photograph (figure 21) is located at the rear of this guide on a foldout page for easy reference while reading any part of this guide. The following paragraphs describe each control and connector. The descriptions have index numbers that are keyed to the illustration. Refer to the Applications Section for information about using the 1742A for making measurements.

- ❶ **SCALE ILLUM.** Adjusts CRT background illumination for good contrast between background and graticule. Useful to illuminate graticule when viewing in dark area, photographing - if camera has no light source, or for prefogging film.
- ❷ **LINE.** Switch turns instrument power on and off.
- ❸ **LINE INDICATOR.** Indicator lights when instrument power is on.

 - 4 BEAM FIND.** Returns display to viewing area relative to its off-screen position.
- 5 BEAM INTENSITY.** Controls brightness of CRT display.
- 6 FOCUS.** Adjusts writing beam for sharpest trace. Always keep display focused to prevent damaging CRT internally.
- 7 Main TRIGGER LEVEL.** Selects amplitude point on trigger signal that starts main sweep.
- 8 MAG X10.** Magnifies horizontal display 10 times and expands fastest sweep time to 5 ns/div.
- 9 SINGLE.** Sweep occurs once with same triggering as in NORM. After each sweep, trigger circuit must be manually RESET **10**.
- 10 RESET.** Momentary pushbutton that arms trigger circuit in single-sweep mode. After RESET **10**, sweep can be triggered by internal or external trigger signal or by rotating TRIGGER LEVEL control **7** through zero.
- 11 Reset Lamp.** When lit, indicates trigger circuit is armed. Lamp goes off at end of sweep and remains off until trigger circuit is again armed by pressing RESET **10**.
- 12 AUTO/NORM.** AUTO sweep mode (pushbutton out). Free running sweep provides bright display in absence of trigger signal. Trigger signal input (internal or external) of 45 Hz or more overrides AUTO operation and sweep triggering is same as in NORM mode. NORM sweep mode (pushbutton in) requires internal or external signal to generate sweep and must be used if input frequency is less than 45 Hz.
- 13 & 14 POSITION.** Coarse **13** and FINE **14** adjustments position display horizontally.
- 15 SIGNAL OVERLAY ( $\Delta T=0$ ).** Screwdriver adjustment to overlap displays in  $\Delta t$  mode with STOP **13** control set to 0.00.
- 16  $\Delta$ TIME ON/OFF.** In OFF position, switch turns off second delayed sweep marker, providing conventional delayed sweep operation.
- 17 START.** Selects delay time between start of main sweep and start of time interval measurement.


- 18 STOP.** Selects end point of time interval measurement.
- 19 A START/B START.** A START position sets first delayed sweep marker on channel A and second delayed sweep marker on channel B. This allows time interval measurement from reference point on Channel A to ending point on channel B. B START position sets first delayed sweep marker on channel B and second delayed sweep marker on channel A. This allows time interval measurements from reference point on channel B to ending point on channel A.
- 20 DLYD.** Selects delayed sweep mode of display.
- 21 MAIN.** Selects main sweep mode for display.
- 22 A VS B.** Selects X-Y mode of operation with channel A input (Y-axis) plotted versus channel B input (X-axis).
- OPTION 101.** Deletes A VS B function and adds logic state display. When the 1742A is connected to an HP Model 1607A Logic State Analyzer, pressing STATE DSPL **22** displays 16-word table of 16-bit words. See Applications Section for details.
- 23 Delayed TRIGGER LEVEL.** Selects amplitude point of trigger signal that starts delayed sweep.
- 24 Main TIME/DIV.** Inner knob controls main sweep rate. Rate indicated by numbers displayed in knob skirt opening.
- 25 Delayed TIME/DIV.** Outer rotating section selects delayed sweep rate. Rate indicated by marker on outer knob. An interlock is incorporated so delayed sweep is always faster than main sweep. When rotated out of OFF position in MAIN mode of operation, portion of main sweep is intensified, indicating STOP **18** position of delayed sweep with respect to main sweep.
- 26 & 27 AUTO/TRIG'D.** In AUTO **26**, delayed sweep starts immediately after delay interval which is product of either START **17** control setting or STOP **18** control setting and main TIME/DIV **24** setting. In TRIG'D **27** delayed trigger circuit is armed after delay interval and delayed sweep must be triggered internally or externally by trigger signal. (NOTE: the two marker  $\Delta$ Time System is active only in the AUTO mode of operation.)
- 28** . Two position switch that selects slope of event that triggers delayed sweep when in TRIG'D mode.

- 29 Delayed AC/DC.** Selects delayed sweep trigger coupling.
- 30 Delayed INT/EXT.** Selects internal or external delayed sweep triggering.
- 31 Delayed EXT ÷ 10.** Attenuates external trigger signal by factor of 10.
- 32 Delayed EXT TRIG INPUT.** BNC connector for delayed external trigger signal.
- 33 TIME/DIV VERNIER.** Provides continuous adjustment of main TIME/DIV between calibrated positions, extending slowest sweep to 5 s/div.
- 34 UNCAL.** Lights when TIME/DIV VERNIER **33** is out of CAL detent position, and indicates that sweep is not calibrated.
- 35 TRIGGER HOLDOFF.** Increase time between sweeps and aids triggering on complex displays such as digital words.
- 36** . Two position switch that selects slope of internal or external trigger signal used to start main sweep.
- 37 LF REJ.** Attenuates internal or external trigger signals below 4 kHz. This is useful to condition high-frequency signals for best synchronization by eliminating unwanted low-frequency signals such as power line interference.
- 38 HF REJ.** Attenuates internal or external trigger signals above 4 kHz. This is useful to condition low-frequency signals for best synchronization by eliminating unwanted high-frequency signals such as RF.
- LINE.** Selecting both LF REJ **37** and HF REJ **38** removes all internal and external trigger signals and applies input ac power frequency for triggering.
- 39 Main AC/DC.** Selects main sweep trigger coupling.
- 40 Main INT/EXT.** Selects internal or external main sweep triggering.
- 41 Main EXT ÷ 10.** Attenuates external trigger signal by factor of 10.
- 42 Main EXT TRIG INPUT.** BNC connector for main external trigger signal.

- 43 ALT.** Channel A and B signals are displayed alternately on consecutive sweeps.
- 44 Channel A.** Displays channel A input signal.
- 45 Channel B.** Displays channel B input signal.
- A + B.** Pressing both channel A **44** and channel B **45** displays the algebraic sum of channel A and channel B input signals. If channel B display is inverted (press CH B INVT **52**), A minus B display results.
- 46 CHOP.** Channel A and B signals are displayed simultaneously by switching between channels at a 250-kHz rate.
- 47 TRIGGER A.** Selects sample of channel A signal as a trigger signal when INT/EXT **40** is in INT.
- 48 TRIGGER B.** When in INT **40**, sample of channel B signal is selected as trigger signal.
- COMP.** Engaging both trigger A **47** and trigger B **48** selects composite trigger. When display mode is set to channel A, channel B, ALT, or A + B, sweep is triggered by displayed signal. When in CHOP, sweep is triggered by channel A signal only.
- 49 TRIG VIEW.** Displays main sweep trigger signal. A fixed sensitivity of 100 mV/div or 1 V/div with EXT ÷ 10 **41** can be selected in external trigger. TRIGGER LEVEL **7** positions display vertically. Center screen indicates trigger threshold level with respect to trigger signal. If ALT **43** or CHOP **46** is selected, three signals are displayed: channel A, selected trigger signal (at center screen), and channel B. If external trigger signal is selected, you can correlate time between trigger signal and channel A and channel B signals. If you select single channel, trigger view overrides that channel to display selected trigger signal.
- 50 MAG X5.** Magnifies vertical presentation five times, and increases maximum sensitivity to 1 mV/div. Bandwidth is decreased to 40 MHz. Recommended on 5 mV/div and 10 mV/div ranges only.
- 51 BW LIMIT.** Reduces bandwidth of channel A and channel B to 20 MHz.
- 52 CH B INVT.** Inverts polarity of channel B signal. In A + B **44** & **45** mode, pressing CH B INVT **52** results in A minus B display.

**NOTE**

 In the following descriptions for controls **53** through **58**, only channel A controls and connectors are discussed. Channel B controls and connectors are identical in function.

- 53 POSN.** Varies vertical position of channel A display.
- 54 Coupling.** Selects capacitive (AC), direct (DC), or 50-ohm coupling of input signal. GND position disconnects input signal and grounds input to vertical preamplifier.
- 55 VOLTS/DIV.** Selects vertical deflection factor in 1, 2, 5 sequence from 0.005 V/div to 20 V/div, accurate within 3% with vernier **56** in CAL position.
- 56 Vernier.** Provides continuous control of deflection factor between calibrated VOLTS/DIV ranges. Vernier range is at least 2.5 to 1.
- 57 UNCAL.** Lights when vernier control is out of detent position to indicate VOLTS/DIV is uncalibrated.
- 58 INPUT.** BNC connector to apply signals to channel A vertical amplifier. Impedance and coupling are selected by **54**.
- 59 GROUND POST** . Convenient ground connector. Useful to ensure common ground with equipment under test.
- 60 CAL 1V.** Provides 1-V peak-to-peak (within 1%) square-wave voltage signal recurring at a rate of 1.4 kHz (100 mV peak-to-peak when terminated in 50Ω).
- 61 Z-AXIS INPUT.** BNC connector for intensity modulation of CRT display. +4-volt, >50-ns width pulse blanks trace of any intensity. Do not apply more than ±20 V (dc + peak ac).
- 62 TRACE ALIGN.** Screwdriver adjustment to align horizontal trace with graticule.
- 63 ASTIGMATISM.** Screwdriver adjustment used in conjunction with FOCUS **6** to achieve clean sharp spot or trace. Adjustment is easier with stationary spot.
- 64 MAIN GATE OUTPUT.** Provides rectangular output of +2.5 V coincident with main sweep.

- 65 DLY'D GATE OUTPUT.** Provides rectangular output of +2.5 V coincident with the delayed sweep.
- 66 - 68 1607A INPUTS - Option 101 only.**
- 66 Z-AXIS.** Intensity input from HP Model 1607A.
- 67 VERT.** Y-axis input from HP Model 1607A.
- 68 HORIZ.** X-axis input from HP Model 1607A.
- 69 LINE INPUT.** Connector for ac power cord.
- 70 FUSE.** 1A 250 V slow-blow for 100-V or 120-V operation 0.5A 250 V slow-blow for 220-V or 240-V operation.
- 71 Δ TIME OUT.** Banana-jack connectors for time-interval measurement. Voltage output and position of main TIME/DIV control **24** indicates time interval in s, ms, or  $\mu$ s.

### TURN-ON PROCEDURE.

Before turning on the oscilloscope, please read the instructions in the Safety Summary (at the front of this

guide) and in the power cord and power requirements paragraphs. You should also become familiar with the controls and their functions by reading the Controls and Connectors Section and by referring to figure 21 at the back of this guide. To turn on the Model 1742A perform the following steps:

1. Set BEAM INTENSITY **5** fully counterclockwise.
2. Set vertical DISPLAY to ALT **43**.
3. Set internal TRIGGER to A **47**.
4. Set vertical verniers **56** for channel A and Channel B to CAL detent.
5. Set CH B INVT switch **52** to out position.
6. Set vertical coupling control **54** for channel A and channel B to GND.
7. Set vertical POSN control **53** to midrange.
8. Set horizontal POSITION control **13** to midrange.
9. Set main TIME/DIV control **24** to 1 mSEC.

10. Set delayed TIME/DIV control **25** to OFF.
11. Set TIME/DIV VERNIER **33** to CAL detent.
12. Set AUTO/NORM switch **12** to AUTO.
13. Set main INT/EXT trigger switch **40** to INT.
14. Set LINE switch **2** to ON position and allow 15-minute warm-up period.
15. Adjust BEAM INTENSITY **5** for barely visible trace.

### OPERATOR'S ADJUSTMENTS.

Perform the following checks and adjustments to verify that the 1742A is operating properly:

**TRACE ALIGN:** If the oscilloscope is moved from one magnetic environment to another, the trace align coil may need adjustment to align the horizontal trace with the graticule. To align the trace properly, proceed as follows:

1. Obtain basic display as described in TURN-ON procedure.

2. Using channel A POSN control **53**, set trace to center horizontal graticule line.

3. Using nonmetallic alignment tool, adjust TRACE ALIGN **62** (rear panel) for best alignment of trace with horizontal graticule line.

**ASTIGMATISM AND FOCUS.** Astigmatism and focus controls may need adjustment to obtain a sharp display. If so, proceed as follows:

1. Obtain basic display as described in TURN-ON procedure.
2. Set BEAM INTENSITY control **5** fully counterclockwise.
3. Select A VS B **22** horizontal mode of operation.
4. Adjust BEAM INTENSITY control **5** to observe spot.
5. Position spot near center of CRT using vertical POSN **53** and horizontal POSITION **13** controls.
6. Adjust FOCUS control **6** (front panel) and ASTIGMATISM control **63** (rear panel) for best defined spot.



**PROBE COMPENSATION.** Probe compensation may be required because of variations in total input resistance and capacitance from one oscilloscope to another. To accomplish probe compensation, proceed as follows:

1. Obtain basic display as described in TURN-ON procedure.
2. Connect divider probe cable to channel A INPUT connector **58**.
3. Connect divider probe tip to CAL 1 V terminal **60**.
4. Set channel A input coupling **54** to DC.
5. Set channel A VOLTS/DIV control **55** for square-wave display with two to three divisions of vertical deflection.
6. Set main TIME/DIV control **24** for horizontal display of at least two full square waves (0.2 mSEC range).
7. Adjust divider probe compensation for correct display (see figure 3).

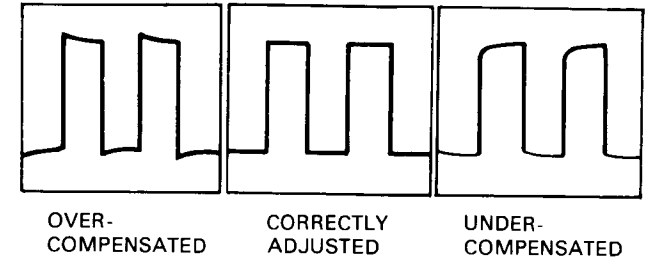


Figure 3. Divider Probe Adjustment Display

**DISPLAY/READOUT ZERO.** This adjustment compensates for differential delays in the input amplifier and probes of both oscilloscope channels. It calibrates the 0.00 setting of the time interval STOP dial **18** or the 0.000 indication of the LED on the digital multimeter. Perform this adjustment whenever the test setup is changed. Proceed as follows:

1. Apply input signal to channel A or B INPUT **58**.
2. Select channel A or B vertical DISPLAY **44** or **45** and internal trigger **47** or **48**.
3. Adjust appropriate VOLTS/DIV **55** and vernier **56** for full five-division display of signal.

4. Select main TIME/DIV **24** sensitivity that displays at least one full signal cycle.

5. Set delayed TIME/DIV **25** to sweep speed approximately five times faster than main TIME/DIV **24** sweep speed (if possible).

6. Set  $\Delta$ TIME ON/OFF **16** switch to ON position.

7. Adjust time interval START **17** to place first intensified marker on point of interest on displayed trace.

8. Set time interval STOP **18** dial to 0.00. If using Option 034 Digital Multimeter (or external multimeter), readjust time interval STOP **18** to obtain indication as close as possible to 0.000 on multimeter LEDs.

9. Engage DLYD **20** pushbutton switch. Two intensified portions of waveform are now expanded on screen.

10. With indication of 0.000 on multimeter, or 0.00 on time interval STOP **18** dial, two display segments should be perfectly overlapped. If not, adjust front-panel SIGNAL OVERLAY  $\Delta T=0$  **15** to overlay two signal segments displayed.

11. If using only one signal channel, this completes adjustment. If using two signal channels, connect probe from other channel to same signal source as first channel (same signal applied to both channels simultaneously).

12. Select ALT **43** display and internal triggering **47** or **48**.

13. Set time interval mode **19** to CH A START or CH B START, as desired.

14. Press the MAG X10 **8** display pushbutton.

15. With indication of 0.000 on multimeter or 0.00 on the time interval STOP **18** dial, two display segments should be perfectly overlapped. If not, readjust front-panel SIGNAL OVERLAY ( $\Delta T=0$ ) **15** to overlay two signal segments displayed.

### OPERATOR'S FUNCTIONAL CHECK.

The 1742A operation can be checked without additional test equipment by using the CAL 1 V output as a signal source. These tests functionally check each display mode and front-panel controls. To check the instrument specifications, refer to the operating and service manual.

The operator's check must be performed in the sequence given. Do not attempt to start a procedure in mid-sequence because succeeding steps may depend on previous control settings and correct results may be unobtainable.

1. Set 1742A controls as follows:

CHANNEL A

VOLTS/DIV **55** ..... 2  
 Coupling **54** ..... DC  
 Vernier **56** ..... CAL detent  
 POSN **53** ..... as required  
 DISPLAY **44** ..... A  
 CH B INVT **52** ..... out

TIME BASE

POSITION **13** ..... as required  
 TIME/DIV VERNIER **33** ..... CAL detent  
 Horizontal Display **21** ..... MAIN  
 Main TIME/DIV **24** ..... 0.5 mSEC  
 Delayed TIME/DIV **25** ..... OFF  
 AUTO/NORM **12** ..... AUTO  
 Main INT/EXT **40** ..... INT  
 Main Trigger Slope **36** .....  $\lrcorner$   
 Main TRIGGER LEVEL **7** ..... as required  
 Delayed TRIGGER LEVEL **23** ..... ccw  
 TRIGGER HOLDOFF **35** ..... MIN  
 MAG X10 **8** ..... OUT

$\Delta$  TIME ON/OFF **16** ..... ON  
 A START/B START **19** ..... A START  
 START **17** ..... fully ccw  
 STOP **18** ..... fully ccw

2. Set INTENSITY **5**, FOCUS **6**, and POSN **53** controls for desired baseline display.
3. Apply CAL 1 V **60** output directly to channel A INPUT **53**.
4. Adjust main TRIGGER LEVEL **7** for stable display. Observe approximately seven positive-going pulses.
5. Set delayed TIME/DIV **25** to 0.1 mSEC. Observe intensified portion of sweep.
6. Adjust time interval START control **17** until intensified portion of trace is centered on CRT.
7. Set horizontal display for DLYD **20** operation. Observe that intensified portion is expanded to 10 divisions.
8. Set horizontal display for MAIN **21** operation.
9. Vary time interval START control **17**. Observe that intensified portion moves smoothly along display.

10. Set time interval START control **17** fully counterclockwise.
11. Vary time interval STOP control **18**. Observe that second intensified segment moves smoothly along display.
12. Set delayed TIME/DIV **25** of OFF position.
13. Rotate TIME/DIV VERNIER **33** fully counterclockwise. Observe 18 or more pulses between first and eleventh graticule lines.
14. Disconnect CAL 1V **60** from channel A INPUT **59**.
15. Set main TIME/DIV **24** to .1 SEC.
16. Set main TRIGGER LEVEL **7** fully clockwise.
17. Set AUTO/NORM switch **12** to NORM.
18. Select SINGLE **9** operation.
19. Press RESET pushbutton **10**. Observe RESET indicator **11** is on.

20. Rotate main TRIGGER LEVEL **7** fully counterclockwise. Observe one sweep; RESET indicator **11** extinguishes after sweep.

21. Set AUTO/NORM switch **12** to AUTO.
22. Select MAIN **21** operation.
23. Set vertical display for ALT **43** mode.
24. Set main TIME/DIV **24** to 5  $\mu$ SEC.
25. Vary time interval STOP control **18**. Only marker on channel B should move.
26. Vary time interval START **17**. Both markers should move together.
27. Set A START/B START **19** to B START.
28. Repeat steps 25 and 26. Now, time interval STOP control **18** affects marker on channel A.

#### **OBTAINING BASIC DISPLAYS.**

The following procedures will help you in obtaining commonly used displays. Before performing the procedures, complete the TURN ON procedure and adjust the following controls:

Channel A coupling **54** ..... DC  
 Channel A VOLTS/DIV **55** ..... .02  
 Main TIME/DIV **24** ..... .5 mSEC  
 START **17** ..... fully ccw  
 STOP **13** ..... fully ccw

**NORMAL SWEEP DISPLAY**

1. Connect Model 10041A (10:1 divider probe) to channel A INPUT connector **58** and CAL 1 V terminal **60**.


2. Adjust channel A POSN **53** to align base of square-wave display on second graticule line from bottom, and adjust main TRIGGER LEVEL **7** for stable display. Observe square-wave display with amplitude of 5 divisions and approximately seven positive going pulses.

**MAGNIFIED SWEEP DISPLAY**


1. Accomplish NORMAL SWEEP DISPLAY.

2. Adjust horizontal POSITION **13** to place portion of waveform to be magnified on center graticule of CRT (figure 4a).

3. Press MAG X10 **8** and adjust horizontal fine POSITION **12** for precise placement of magnified display (figure 4b).

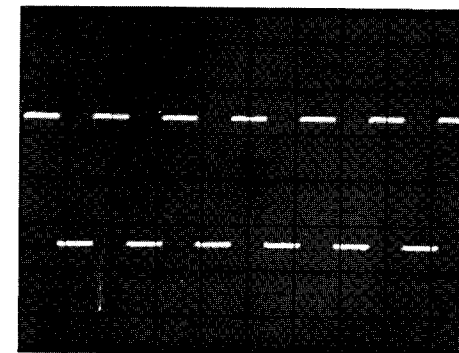

*Figure 4a. Normal Display*

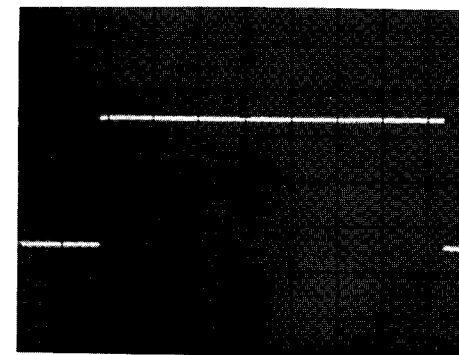

*Figure 4b. Magnified Display*

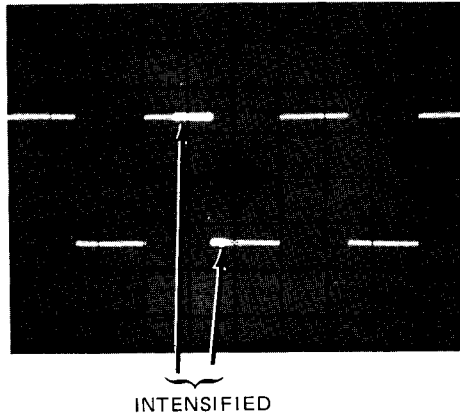


Figure 5a. Normal Display with Intensified Area

#### DELAYED SWEEP DISPLAY

1. Accomplish NORMAL SWEEP DISPLAY.
2. Set  $\Delta$ TIME ON/OFF **16** to OFF position.
3. Set delayed TIME/DIV **25** to 0.1 mSECS. Observe intensified portion of square wave. Adjust BEAM INTENSITY **5** for comfortable viewing level.
4. Adjust time interval STOP **13** until intensified portion of trace is over display segment you wish to investigate (figure 5a).

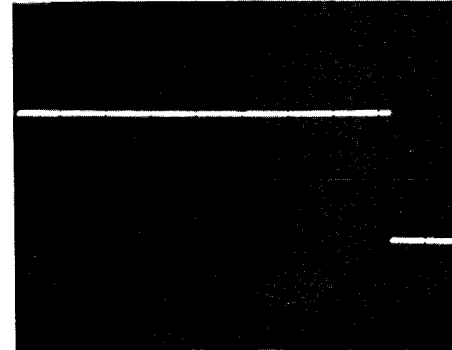


Figure 5b. Delayed Sweep Display

5. Press DLYD pushbutton **20** and note intensified portion of trace is now displayed across entire CRT (figure 5b).
6. Readjust time interval STOP **13** to observe other pulses in pulse train.

For a more complete description of delayed sweep, refer to the Timer Interval Measurement Application in this operators guide.

#### A VS B DISPLAY

1. Apply vertical (Y-axis) signal to channel A INPUT connector **53**. Apply horizontal (X-axis) signal to channel B INPUT connector.

2. Engage A VS B pushbutton **22**.
3. Adjust channel A and channel B VOLTS/DIV controls **53** for desired vertical and horizontal scale factors.
4. Channel A POSN **53** will adjust vertical positioning of display. Horizontal POSITION **13** will adjust horizontal positioning of display.
5. If display is not visible, press BEAM FIND **4** and adjust channel A and channel B VOLTS/DIV controls **53** until display is compressed. Next, center display with channel A POSN **53** and horizontal POSITION **13**. Release BEAM FIND **4** and adjust FOCUS **6** for sharp display.

### TIME-INTERVAL MEASUREMENT ( $\Delta T$ ) APPLICATIONS.

Time-interval measurements are made between any two points on the same or different waveforms. In time-interval measurements, both channels of the oscilloscope may be used. The horizontal distance is measured from a reference point on one waveform to another reference point on either the same or a different waveform.

The  $\Delta T$  measurement technique offered by this instrument eliminates the need to count divisions and interpolate between divisions which can introduce errors, increase measurement times, and reduce repeatability. The controls and indicators dedicated to the  $\Delta T$  measurement technique are discussed in the following subparagraphs. Applications for the technique follow these discussions.

**TIME-INTERVAL MODE SWITCHES.** The time-interval mode switches consist of  $\Delta$ TIME ON/OFF **16**, A START/B START **19**, and DLYD **20**. Time-interval measurements can be made between any two points on a single trace, from any point beginning on the channel A trace to any point ending on the channel B trace or from any point beginning on the channel B trace to any point ending on the channel A trace. Time-interval mode switch A START/B START **19** simplifies measurement selections. This switch eliminates the need to disconnect input signals and reconnect them to opposite channels whenever exact delayed sweep measurements are made from an occurrence on one channel to an occurrence on the other channel.

**Single Channel Displays.** The A START/B START switch **19** can be set to either position during single-channel displays. Regardless of which setting is selected, the start marker will always appear ahead of the stop marker on a single trace.

When  $\Delta$ TIME ON/OFF switch **16** is set to OFF, the second marker is turned off, and time-interval measurements are made in the conventional manner. With delayed sweep (DLYD **20**) selected, the time-interval STOP control is adjusted to place the first point of interest on some reference line on the CRT. The number on the multimeter LED display or time-interval STOP dial **18** is recorded. Then the time-interval STOP control is readjusted to bring the second point of interest to the same reference line on the CRT. Again, the number on the multimeter display or the time-interval STOP dial is recorded. Finally, the number obtained at the first point of interest is subtracted from the number obtained at the second point of interest. The result is the measurement of horizontal separation between the two points. If the DMM display was used for the calculation, the result is the time interval in the units indicated on the main TIME/DIV control **24**. If the STOP dial **18** was used for the calculation, then the result of the subtraction must be multiplied by the main TIME/DIV **24** setting.

#### NOTE

When delayed AUTO/TRIG'D switch is in the TRIG'D **27** position, the time-interval feature ( $\Delta$ TIME) is disabled. Output from  $\Delta$ TIME OUT connectors (or DMM on Option 034) will indicate the position of the STOP control **18**, not the time interval being displayed.

By setting A START/B START switch **19** to either the A START or B START position, time-interval measurements can be made between any two signal points using the DLYD mode. In this mode, the two points of interest are overlapped on the screen. The multimeter (if used) will indicate the exact time interval between the two points overlapped. If no multimeter is used, the dial of the time-interval STOP control **18** will indicate the exact spacing (in graticule divisions of the main sweep) between the two points overlapped.

**Dual-Channel Display.** The A START/B START switch **19** eliminates the requirement of always applying the start event to channel A. To make a measurement from some point on the channel A trace to a point on the channel B trace, the time-interval mode switch is set to A START. The START marker will appear on the channel A trace and the STOP marker will appear on the channel B trace. When the two points are adjusted to overlap, the time-interval STOP dial **18** and DMM will indicate the space between the two markers. Then to make a corresponding measurement from some point on the channel B trace back to some later point on channel A, the A START/B START switch **19** is set to B START. The signals and channels are undisturbed. Only the two markers change places. (See figure 6.)



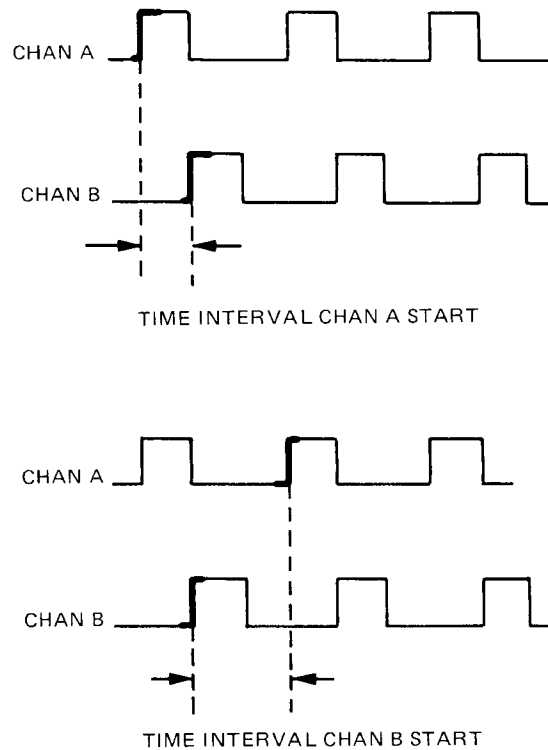


Figure 6. Time Interval Start Selection

**Three-Channel Display.** The trigger-view feature of the 1742A allows the user to compare two separate events which have a common occurrence (such as a clock signal, reset signal, etc.). When using trigger view in the ALT 43 or CHOP 46 mode of operation along with the  $\Delta T$  sweep mode, the time-interval start marker appears on the trigger waveform and the stop marker appears coincident in time on the channel A and channel B waveforms. To accomplish three-channel measurements, the common occurrence signal is applied as an external trigger signal to the main EXT TRIG INPUT connector 42 and EXT 40 triggering is selected. The two time-related signals are applied to the channel A and channel B INPUT connectors 53. ALT 43 and TRIG VIEW 49 operations are then selected. Other front-panel controls are set so that a good view of the entire time interval to be measured is presented on the CRT. The START control 17 places the intensified segment on the trigger signal over the start event. The channel A and channel B signals will each display an intensified segment associated with the STOP control 13. As the STOP control 13 is varied, the intensified segments on channel A and channel B will move in unison. The time interval between the trigger signal event and the event on either channel A or channel B selected by the STOP control 13 will be indicated on the Option 034 Digital Multimeter LEDs (or computed from the STOP 13 dial setting).

**TIME-INTERVAL READOUTS.** The Model 1742A provides for the use of a DMM (digital multimeter) to simplify time-interval measurements. A built-in DMM, Hewlett-Packard Option 034, is available for this instrument. It can easily be installed using the kit available (HP Part No. 01715-69501). It indicates exact time intervals between the start and stop markers directly in seconds, milliseconds, or microseconds.

The operator can also connect any digital multimeter of his choice to the  $\Delta$ TIME OUT **71** pair of connectors on the rear panel of the 1742A. To preserve accuracy of the 1742A, use a 3 1/2-digit (or greater) DMM for digital readout of time interval measurements.

The 1742A supplies an analog voltage to the Option 034 DMM and to the  $\Delta$ TIME OUT **71** rear-panel connections. The analog voltage is dc and is directly proportional to the position of the time-interval STOP dial **18**.

When no DMM is available to indicate time intervals measured, use the 10-turn dial of the time-interval STOP control **18**. This dial is calibrated in divisions of main sweep separation between the time-interval START and time-interval STOP markers.

**USE OF OPTION 034 DMM.** To use the Option 034 Digital Multimeter for time-interval measurements, the DMM POWER switch must be ON and the front-panel DC VOLTS pushbutton must be engaged (because the analog voltage applied is dc).

The two-position switch built into the Option 034 top cover must be in the forward position to obtain time-interval measurements of displayed waveforms. In the rear switch position, the analog dc voltage is disconnected from the meter and the multimeter connections at the side of the the unit are enabled for normal multimeter measurements.

**PULSE PERIOD AND PULSE WIDTH MEASUREMENTS.** Pulse period is usually measured from the 50% amplitude point of one pulse leading edge to the 50% amplitude point on the next leading edge. Pulse width is normally measured between the 50% amplitude points on the leading and trailing edges of the pulse. The  $\Delta$ TIME technique improves accuracy of pulse period and pulse width measurements by allowing you to overlap the points of interest on the display. To measure pulse period or pulse width, proceed as follows:

1. Apply signal to channel A or channel B INPUT connector **58**.
2. Select channel A **44** or channel B **45** DISPLAY and channel A **47** or channel B **43** TRIGGER (whichever is appropriate).
3. Set A START/B START switch **19** to A START or B START, as applicable.
4. Adjust VOLTS/DIV switch **55** for convenient display of pulse amplitude.
5. Select main TIME/DIV **24** sensitivity that places second occurrence of measurement as far as possible toward right-hand edge of CRT.
6. Set delayed TIME/DIV control **25** to sweep speed approximately five times faster (if possible) than main TIME/DIV **24** setting.
7. Set  $\Delta$ TIME ON/OFF switch **16** to ON position.
8. Adjust time-interval START **17** to place first intensified marker at beginning of time interval to be measured.

9. Adjust time-interval STOP **18** to place second intensified marker at end point of time interval to be measured.

10. Engage DLYD pushbutton **20**. Both the beginning and ending segments of time interval to be measured should appear on screen.

11. Adjust time-interval START **18** to place 50% point of first leading edge at center vertical graticule line.

12. Adjust time-interval STOP **18** to overlap 50% point of next pulse leading edge (for pulse period measurements) or to overlap 50% point of pulse trailing edge (for pulse width measurements) at center vertical line. (See figure 7 or 8 as applicable.)

13. Using Option 034 Digital Multimeter (or external DVM) read actual pulse width or pulse period directly from multimeter. Refer to main TIME/DIV **24** setting to determine whether output is in s, ms, or  $\mu$ s.

14. If not using Option 034 or external DVM, read interval measured in divisions from time-interval STOP control **18**. Then multiply number of divisions by main TIME/DIV control **24** setting to determine actual pulse width or pulse period.

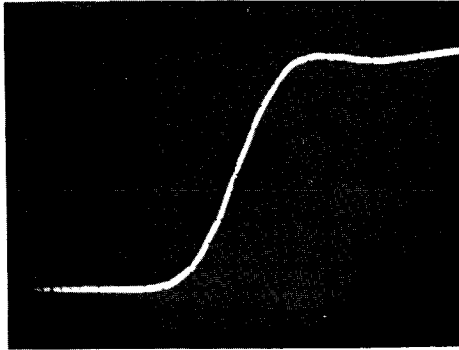


Figure 7. Pulse Period Measurement

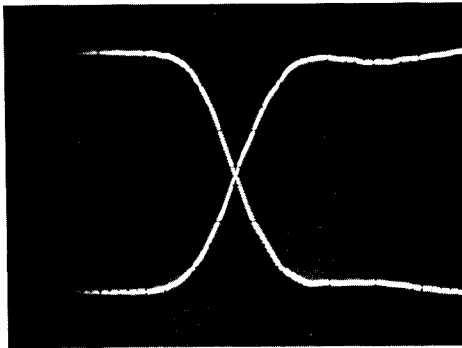


Figure 8. Pulse Width Measurements

**TRANSITION MEASUREMENTS.** Transition measurements are normally made between the 10% and 90% points on a pulse with the vernier adjusted for a full 5-division vertical display. Calibrated 20% and 80% points are provided. Maximum resolution for this measurement is achieved when the main TIME/DIV sweep speed is set as fast as possible while still being able to accurately position the waveform at the 10% and 90% points. The 10% and 90% points are conveniently marked on the CRT graticule.

To measure signal transition time, proceed as follows:

1. Apply signal to channel A or channel B INPUT connector **53**.
2. Select channel A **44** or channel B **45** DISPLAY and channel A **47** or channel B **48** TRIGGER (whichever is appropriate).
3. Set A START/B START switch **19** to A START or B START, as applicable.
4. Adjust appropriate VOLTS/DIV switch **55** and vernier **56** for full five-division display of signal.
5. Select main TIME/DIV **24** sensitivity that places second occurrence of transition as far as possible toward right-hand edge of CRT.

6. Set delayed TIME/DIV control **25** to sweep speed approximately five times faster (if possible) than main TIME/DIV **24** setting.
7. Set  $\Delta$  TIME ON/OFF switch **16** to ON position.
8. Adjust time-interval START control **17** to place first intensified marker on 10% point of waveform leading edge.
9. Adjust time-interval STOP control **18** to place second intensified marker on 90% point of waveform leading edge.
10. Engage DLYD pushbutton **20**. Both intensified portions of waveforms are expanded on screen.
11. Adjust time-interval START **17** to place 10% point on convenient vertical graticule line.
12. Adjust time-interval STOP **18** to place 90% point on same vertical graticule line. (See figure 9.)

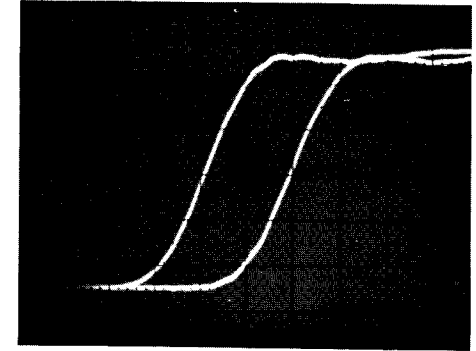


Figure 9. Transition Time Measurement

13. Using Option 034 Digital Multimeter (or external DVM), read actual pulse transition time directly from multimeter. Refer to main TIME/DIV **24** setting to determine whether output is in s, ms, or  $\mu$ s.
14. If not using Option 034 or external DVM, read interval between the 10% and 90% points as measure of CRT divisions on time-interval STOP **18** dial. Multiply number of divisions by main TIME/DIV dial **24** setting to determine signal transition time.

**DUTY CYCLE MEASUREMENTS.** The duty cycle is expressed as the ratio of pulse width to pulse period (width/period = duty cycle). Duty cycle measurements are important in systems where a pulse must remain within certain limitations to allow for pulse recognition.

$$\frac{1}{\text{time (in seconds) of period}}$$

**Example:** If a period of 0.8 ms is measured, then:

$$\frac{1}{0.8 \text{ ms}} = \frac{1}{8 \times 10^{-4} \text{ Sec}} = 0.125 \times 10^4 \text{ Hz} = 1.25 \text{ kHz}$$

The accuracy of duty cycle measurements depends upon the length of the time interval over which the pulse width and period are measured. To increase measurement accuracy for low duty cycle signals, increase the main time base sweep speed when measuring the pulse width. Use the preceding pulse width and pulse period measurement technique.

**SIGNAL FREQUENCY OR PULSE REPETITION RATE.**

The repetition rate or frequency of a signal is the reciprocal of the period. Use the pulse period measurement application procedure to determine the period of a signal. Then take the reciprocal of the period to determine repetition rate or frequency. Use the following formula:

**PROPAGATION DELAY MEASUREMENTS.** By selecting ALT or CHOP mode of operation,  $\Delta$ TIME measurements can be made between an event on channel A and event on channel B. The A START/B START switch **19** on the 1742A permits measuring from an event on channel A to an event on channel B, or from an event on channel B to an event on channel A. To measure propagation delay between signals in the two channels, proceed as follows:

1. Apply one signal to channel A and other signal to channel B INPUT connectors **58**.
2. Select either ALT **43** or CHOP **46** DISPLAY and internal TRIGGER to A **47**.

**NOTE**

External triggering may be used if the external trigger is from the same channel where the start event occurs. When using external triggering, time-interval readings must be adjusted to compensate for the difference between the external trigger and the two inputs channels.

3. Adjust each VOLTS/DIV switch **55** to obtain usable display on each channel.
4. Set A START/B START switch **19** to select channel where measurement will begin. If measurement will start from point on channel A, set A START/B START **19** to A START. If measurement will start from point on channel B, set A START/B START **19** to B START.
5. Select main TIME/DIV **24** sensitivity that places second occurrence in the measurement as far as possible toward right-hand edge of CRT.
6. Set delayed TIME/DIV control **25** to sweep speed approximately five time faster (if possible) than main TIME/DIV **24** setting.
7. Set  $\Delta$ TIME ON/OFF switch **16** to ON position.
8. Adjust time-interval START **17** to position first intensified marker at beginning of desired time interval (one channel). (See figure 10.)
9. Adjust time-interval STOP **18** to position second intensified marker at end of desired time interval (other channel).
10. Engage DLYD pushbutton switch **20**. Intensified portion of both waveforms should be present on screen.
11. Adjust time-interval START **17** and associated vertical POSN control **53** to place 50% amplitude point of beginning trace at center vertical graticule line. (see figure 11.)
12. Adjust time-interval STOP **18** and the associated vertical POSN control **53** to superimpose ending trace over beginning trace.
13. Using Option 034 DMM (or external DVM), read actual propagation delay directly from multimeter LED display. Refer to setting of main TIME/DIV **24** to determine whether output is in s, ms or  $\mu$ s. When using cables of unequal length, remember to consider cable delays in this measurement.

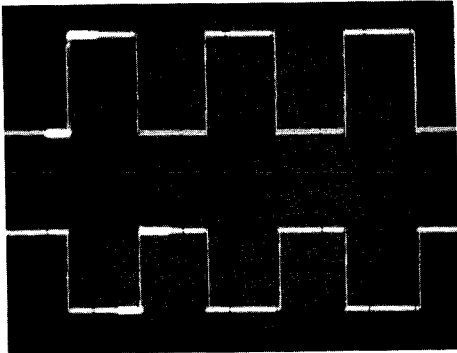


Figure 10. Adjustment of Start and Stop

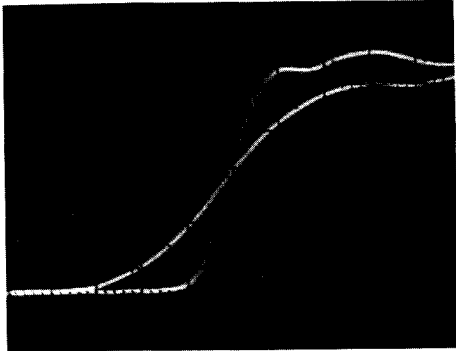


Figure 11. Propagation Delay Measurement

14. If not using DMM or DVM, read divisions and subdivisions of delay directly from dial of time-interval STOP control **13**. Multiply this number by main TIME/DIV **24** dial setting. When using cables of unequal length, remember to consider cable delays in this measurement.

**ADJUSTING DESIRABLE TIME INTERVAL BETWEEN PULSES.** The  $\Delta$ TIME feature of the 1742A provides ease and accuracy when adjusting for a particular time interval between pulses, such as dual-clock phasing or dual-trigger circuitry. With  $\Delta$ TIME technique, the two signals are applied to the two oscilloscope channels, and the time-interval controls are adjusted to indicate the desired time interval between pulses. Then the signal source is adjusted until the two signals are superimposed on the CRT. To make this adjustment, proceed as follows:

1. Apply one signal to channel A and other signal to channel B INPUT connectors **53**.
2. Select either ALT **43** or CHOP **46** DISPLAY and internal TRIGGER to A **47**.
3. Adjust each VOLTS/DIV switch **55** to obtain equal amplitude displays on both channels.



4. Adjust both vertical POSN controls **53** to center traces on CRT.
5. Select main TIME/DIV **24** sensitivity that permits good view of entire time interval to be established.
6. Set delayed TIME/DIV control **25** to sweep speed approximately five times faster (if possible) than main TIME/DIV **25** setting.
7. Set A START/B START switch **19** to select channel which has beginning event, normally reference pulse or waveform. Set to A START if reference signal is on channel A and to B START if reference signal is on channel B.
8. Set  $\Delta$ TIME ON/OFF switch **16** to ON position.
9. Adjust time-interval STOP control **18** to select desired time interval between pulses. When using Option 034 DMM (or external DVM), multimeter display will indicate time interval adjusted. If not using DMM or DVM, determine **24** horizontal scale factor selected on main TIME/DIV switch **24** and adjust time-interval STOP **18** for number of divisions and subdivision of display equal to desired time interval.

10. Adjust time-interval START **17** to position first intensified marker on pulse which represents beginning of desired time interval.

11. Engage DLYD pushbutton switch **20**. Intensified portions of both waveforms should appear on screen.

12. Adjust time-interval START **17** to place first pulse (reference pulse) at center of CRT.

13. Adjust source of signal under test to superimpose two traces. When traces are superimposed, pulses will be separated by time interval selected.

**PULSE JITTER MEASUREMENTS.** Jitter is a time uncertainty in a waveform caused by random noise or spurious or periodic signals. The  $\Delta$ TIME technique in the 1742A makes jitter measurements which are both accurate and easy. To measure jitter, proceed as follows:


1. Apply signal to channel A or channel B INPUT connector **58**.
2. Select channel A **44** or channel B **45** DISPLAY and channel A **47** or channel B **48** TRIGGER (whichever is appropriate).

3. Set A START/B START **19** as applicable.
4. Adjust appropriate VOLTS/DIV switch **55** and vernier **53** for full six-division display of signal.
5. Adjust main TRIGGER LEVEL **7** until display is as stable as possible.
6. Select main TIME/DIV **24** sensitivity that places next occurrence of transition as far as possible toward right hand edge of CRT.
7. Set delayed TIME/DIV control **25** to sweep speed approximately five times faster (if possible) than main TIME/DIV **24** setting.
8. Set  $\Delta$ TIME ON/OFF switch **16** to ON position.
9. Adjust time-interval START **17** to place first intensified marker on signal leading edge.
10. Set time-interval STOP **18** to 0.00.
11. Engage DLYD pushbutton **20**.
12. Adjust time-interval START **17** to place trace at center of CRT.


13. Adjust time-interval STOP **18** to separate second trace and then return it to point where it just contacts first trace. (See figure 12.)

14. Using Option 034 DMM (or external DVM), read actual pulse jitter from multimeter display. Refer to setting of main TIME/DIV switch **24** to determine whether value displayed is in s, ms, or  $\mu$ s.


15. If not using DMM or DVM, read number of CRT divisions and subdivisions directly from display. Multiply this number by sensitivity selected on main TIME/DIV **24** to determine exact time duration of jitter.

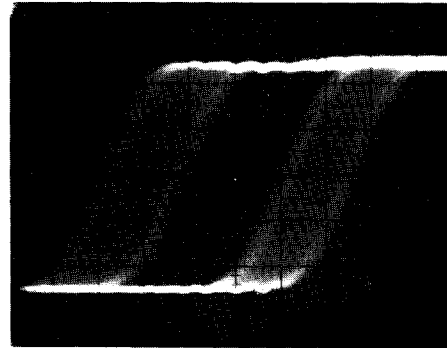

*Figure 12a. No AC Touch*

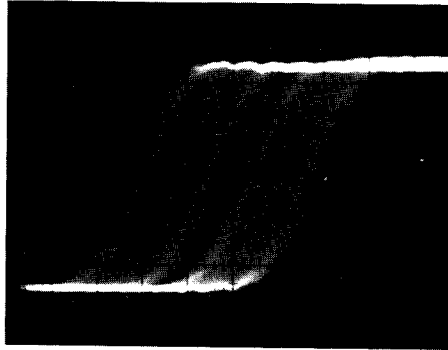

*Figure 12b. Random Peaks Contact*

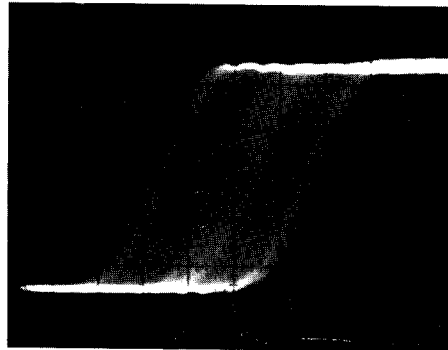

*Figure 12c. Correct Jitter Display - Even Density*

**PHASE DIFFERENCE MEASUREMENTS USING TIME DELAY.** The phase difference between two signals of the same frequency can be determined up to the frequency limit of the vertical amplifier by using  $\Delta$ TIME techniques. Use the following procedure:

1. Apply reference signal to channel A INPUT **53**.
2. Select channel A DISPLAY **44** and internal TRIGGER to A **47**.
3. Select main TIME/DIV switch **24** sensitivity which provides display of one complete signal cycle.
4. Set  $\Delta$ TIME ON/OFF **16** to ON position.
5. Adjust time-interval START **17** and STOP **18** until first marker on first leading edge and second marker on second leading edge).

**NOTE**

Delayed TIME/DIV **25** must be in some position other than OFF to observe intensified markers.

6. Engage DLYD pushbutton **20**.

7. Readjust time-interval STOP **13** to overlap both traces on CRT.

8. Using Option 034 DMM (or external DVM), record indication. If not using DMM or DVM, record setting of time-interval STOP **13** dial. Do not change main TIME/DIV **24** setting after this step.

9. Engage MAIN pushbutton **21**.

10. Connect other signal to channel B INPUT connector **53**.

11. Select either ALT **43** or CHOP **46** DISPLAY.

12. Select either A START or B START **19**. Channel carrying signal with advanced phase shift is start channel.

13. Adjust time-interval STOP **13** to place marker on stop channel trace at same relative position as marker on start channel trace (example: both markers on leading edges).

14. Engage DLYD pushbutton **20**.

15. Readjust time-interval STOP **13** to overlap both traces on CRT.

16. Using Option 034 DMM (or external DVM), record indication. If not using DMM or DVM, record setting of time-interval STOP dial **13**.

17. To determine phase difference between signals take ratio of number recorded in steps 15 and 8, subtract 1, and multiply by 360.

**Example:** If 5.26 was recorded in step 15 and 3.02 was recorded in step 8, then phase difference between signals is  $(5.26/3.02-1) 360 = 267^\circ$  degrees of phase difference.

#### CONVENTIONAL MEASUREMENTS USING DMM ONLY.

It may be convenient to use the Option 034 DMM (or external DVM) to make time-interval measurements in the conventional mode of operation ( $\Delta$ TIME ON/OFF in OFF position). To accomplish this method of time-interval measurement proceed as follows:

1. Apply signal to channel A or channel B INPUT connector **53**.

2. Select channel A **44** or channel B **45** DISPLAY and channel A **47** or channel B **48** TRIGGER (whichever is appropriate).

3. Adjust appropriate VOLTS/DIV switch **55** for proper display.

4. Select main TIME/DIV **24** sensitivity that places second occurrence of transition as far as possible toward right-hand edge of CRT.
5. Set delayed TIME/DIV **25** to sweep speed approximately five times faster (if possible) than main TIME/DIV **24** setting.
6. Set  $\Delta$ TIME ON/OFF **16** to OFF position.
7. Adjust time-interval STOP **18** to place intensified marker over starting point of event to be measured.
8. Engaged DLYD pushbutton **20**.

**NOTE**

Do not move horizontal POSITION controls **13** and **14** during these measurements.

9. Readjust time-interval STOP **18** to place starting event on center vertical graticule line of CRT.
10. Note indication on DMM (or external DVM).
11. Engage MAIN pushbutton **21**.

12. Adjust time-interval STOP control **18** to place intensified marker over stopping point of event to be measured.

13. Engaged DLYD pushbutton **20**.

14. Readjust time-interval STOP control **18** to place stopping event on center vertical graticule line of CRT.

15. Note indication on DMM (or external DVM).

16. Subtract indication noted in step 10 from indication noted in step 15. This is time interval of event being measured in s, ms or  $\mu$ s as determined by main TIME/DIV control **25** setting.

**VOLTAGE MEASUREMENT APPLICATIONS.**

Voltage measurements can be made between any point on a waveform and a 0-volt reference (absolute voltage) or between any two points on a waveform (voltage difference). (See figure 13.)

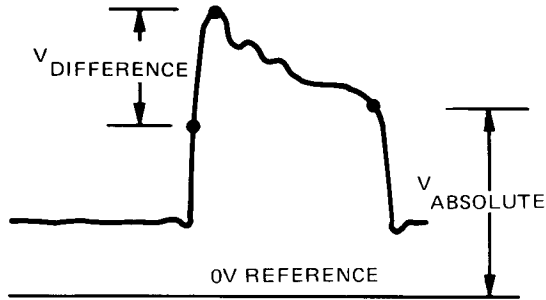


Figure 13. Types of Voltage Measurements

**DC AND ABSOLUTE VOLTAGE MEASUREMENTS.** The following procedure can be used to make absolute voltage measurements with respect to a 0-volt reference, and to determine the dc component of an input signal.

1. Connect signal to channel A or B INPUT connector **53**.
2. Set coupling **54** to DC and adjust main TRIGGER LEVEL **7** for stable display.
3. Adjust vertical POSN **53** VOLTS/DIV **55**, and main TIME/DIV **24** for well centered display. Make

sure that associated verniers **56** and **33** are in their CAL detent positions.

4. Set input coupling **54** to GND and AUTO/NORM **12** to AUTO. Trace defines level of zero volt. If level is below signal, signal is positive. If level is above signal, signal is negative.

5. Adjust vertical POSN control **53** to set trace on convenient graticule line to establish 0-volt reference level. Do not move vertical POSN control **53** after this step.

6. Return coupling **54** to DC.

7. Measure distance in divisions between reference line and any point of interest on signal.

8. Multiply number of divisions obtained in step 7 by VOLTS/DIV **55** setting to determine signal voltage. Include attenuation factor if using probe.

**Example:** Assume vertical deflection of 7 divisions, waveform above reference line, and VOLTS/DIV setting of 0.2 (figure 14). Absolute Voltage =  $7 \times 0.2 = 1.4$  volts. Waveform is above reference line so voltage is positive.

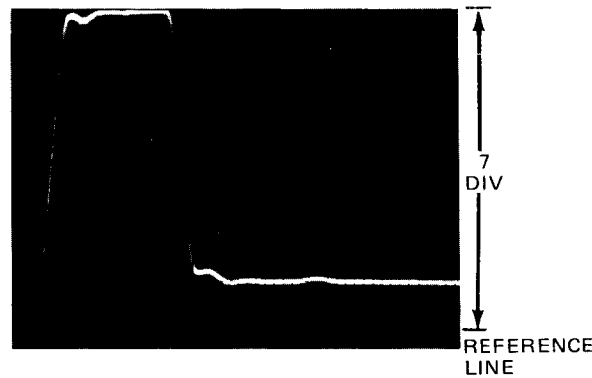


Figure 14. Absolute Voltage Measurements

**PEAK-TO-PEAK VOLTAGE MEASUREMENTS.** Displays of ac voltages contain amplitude errors due to frequency response of the instrument. With increasing signal frequencies, the amplitude of the errors increases. To obtain displays with less than 10% amplitude error the frequency of the signal being measured must be less than half the specified bandwidth of the oscilloscope. A frequency equal to the specified bandwidth of the oscilloscope will display a voltage amplitude on the CRT that is 3 dB down from the actual amplitude of the applied signal. Frequency rolloff of the instrument must be considered when making voltage measurements with

an oscilloscope. To measure peak-to-peak voltage of an input signal, proceed as follows:

1. Connect signal to channel A or B INPUT connector or 53.
2. Set coupling 54 to AC and adjust main TRIGGER LEVEL 7 for stable display.
3. Adjust vertical POSN 53 VOLTS/DIV 5, and main TIME/DIV 24 for well centered display of at least three cycles duration and at least three divisions of amplitude. Make sure that VOLTS/DIV vernier 55 is in CAL detent position.
4. Using vertical POSN control 53, place negative peaks of input signal on horizontal graticule line near bottom of CRT.
5. Using horizontal POSITION control 13, place one positive peak of signal on center vertical graticule line.
6. Count number of vertical divisions from most negative to most positive portions of waveform (estimate to nearest tenth of division; see figure 15).

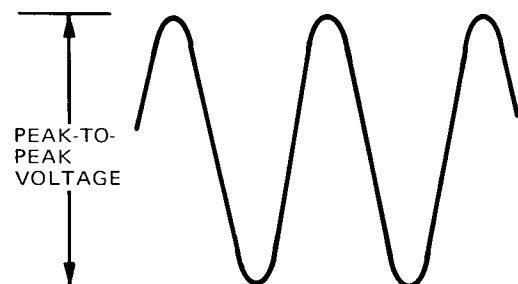


Figure 15. Peak-to-Peak Measurement


7. Multiply number of divisions noted in step 6 by setting of VOLTS/DIV switch **55**. If signal is derived through divider probe, multiply result of this step by attenuation factor of probe. Remember to consider amplitude attenuation caused by frequency roll off of oscilloscope.

**AVERAGE VOLTAGE MEASUREMENTS USING OSCILLOSCOPE.** To measure average voltage using the oscilloscope alone, proceed as follows:

1. Connect signal to channel A or B INPUT connector **53**.
2. Set coupling **54** to GND and AUTO/NORM **12** to AUTO. Trace level is zero volt.

3. Switch coupling **54** to DC and measure absolute voltage at point of interest on waveform. (See figure 16A.)

4. Switch coupling **54** to AC and measure absolute voltage to same point on waveform. (See figure 16B.)

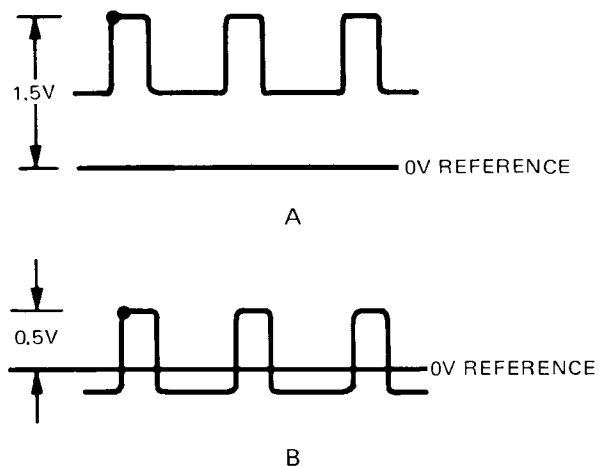

$$\text{AVERAGE VOLTAGE} = 1.5\text{V} - 0.5\text{V} = 1\text{V}$$

Figure 16. Average Voltage Measured with Oscilloscope



5. Difference between first and second voltage measurements is average voltage.

**AVERAGE AND RMS VOLTAGE MEASUREMENTS USING OPTION 034 DVM.** The Option 034 DMM is an average-responding meter calibrated in rms. To measure rms voltage using the DMM, proceed as follows:

1. Set two-position switch on 1742A top cover to rear position.
2. Set DMM controls as follows:

POWER ..... ON  
 DC/AC ( ~ ) ..... ~ (IN)  
 VOLTS (V) ..... (IN)  
 AUTO HOLD ..... AUTO (OUT)  
 AMPS (A) AND KΩ ..... (OUT)



Do not connect the leads to any ac voltages greater than 707 V rms.

3. Connect test leads from VΩ (HI) and COM (LOW) on DMM to signal under test. Digital Multimeter will automatically select best meter range for measure-

ment and display rms voltage with maximum resolution. To measure average voltage, set DC/AC for dc voltage (out).

**AMPLITUDE COMPARISON MEASUREMENTS.** When measuring the amplitude of a signal, it may be helpful to obtain a deflection factor not calibrated on the VOLTS/DIV switch. This can be done by using a signal of known amplitude (reference signal) and adjusting the VOLTS/DIV vernier to obtain the desired deflection factor. Amplitude comparison measurements may be desirable when calibrating an instrument. By using this method, the accuracy of your measurement depends upon the reference signal accuracy. To make measurements by amplitude comparison, proceed as follows:

1. Apply reference signal to channel A INPUT connector **53**, and set DISPLAY and internal TRIGGER **47** to A.
2. Adjust main TIME/DIV **24** to display several signal cycles.
3. Adjust VOLTS/DIV **55** and vernier **56** to obtain display with exact number of divisions of vertical deflection. Greater accuracy is obtained with greater vertical deflection. Do not readjust vernier **56** after this step.

4. Calculate scale factor (sf) by the following formula:

$$\text{sf} = \frac{\text{Reference signal amplitude (volts)}}{\text{Display amplitude in DIV}}$$

**Example:** Assume reference signal amplitude of 40 volts, VOLTS/DIV setting of 5, and display amplitude of six divisions.

$$\text{sf} = \frac{40}{6 \times 5} = 1.3$$

5. Disconnect reference signal and connect signal to be measured.
6. Set VOLTS/DIV **55** for measurable display amplitude. Do not readjust vernier **56**.
7. Use following formula to calculate amplitude of signal being measured:

Signal Amplitude = VOLTS/DIV setting multiplied by sf (step 4) multiplied by display amplitude (step 6).

**Example:** Assume signal amplitude of 5 divisions, VOLTS/DIV setting of 2, and scale factor of 1.3.  
Signal amplitude = 5 x 2 x 1.3 = 13 volts

8. You can also calculate value of unknown signal as percentage of reference signal.

**Example:** Assume reference signal has display amplitude of eight divisions. In this case, each division is equal to 12.5% of total reference signal amplitude. If unknown signal is applied and it has amplitude of 6.2 divisions, then amplitude of unknown signal is:

Unknown signal amplitude = 6.2 DIV x 12.5% = 77.5% of reference signal amplitude.

**COMMON-MODE REJECTION.** Frequently, signals of interest are offset by undesired dc or low frequency voltage ac components that prevent use of vertical ranges sensitive enough to make good measurements. Often a signal similar to the unwanted component can be connected to the opposite channel, inverted, and added algebraically to the signal of interest to cancel the unwanted component.

True dc components can usually be eliminated by selecting ac input coupling. The ability of an oscilloscope to cancel ac common-mode signals varies with amplitude and frequency of the signals. Very high common-mode amplitudes may not be completely cancelled. Good common-mode rejections should be achieved with common-mode signal amplitudes of up to two

screen diameters (16 CRT divisions). With high-frequency common-mode signals, minor components may be impossible to eliminate from the display. The lower the frequency of the common-mode signal, the better the common-mode rejection of the oscilloscope.

To use the common-mode rejection technique, proceed as follows:

1. Apply signal to be measured (with unwanted component) to channel A INPUT **53**.
2. Apply signal similar to unwanted component to channel B INPUT **53**. (See figure 17.)
3. Set coupling as required and select ALT **43** DISPLAY mode.
4. Adjust VOLTS/DIV **55** and vernier **56** so that display on channel B is approximately equal in amplitude to unwanted component on channel A.
5. Set the oscilloscope controls as follows:

TRIGGER ..... A **47**  
 CH B INPUT ..... INVT **52**  
 DISPLAY ..... A+B **44** and **45**

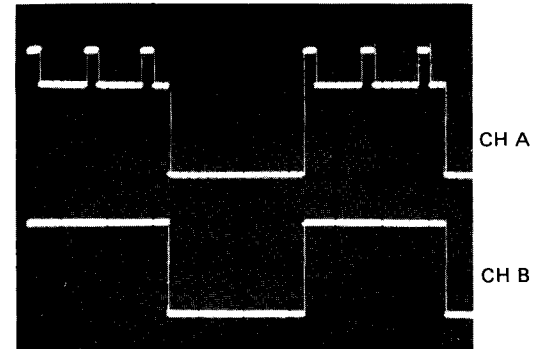


Figure 17. Common-Mode Signals

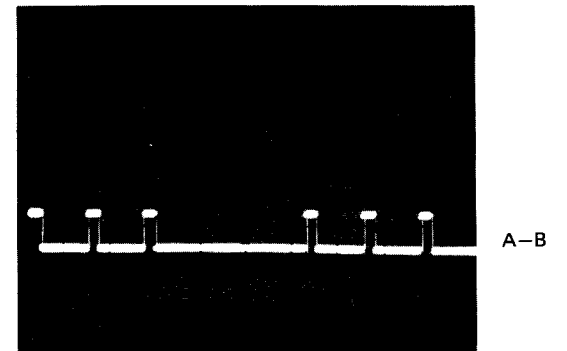


Figure 18. Resultant Display

6. With either channel A or B VOLTS/DIV vernier **55**, adjust for minimum deflection in common-mode signal. The resultant display will either subtract all of unwanted component or display desired signal larger than common-mode signal. (See figure 18.)

### OPTION 101 - LOGIC STATE DISPLAY.

This option allows you to use the 1742A with an HP Model 1607A Logic State Analyzer to aid in the analysis of digital systems that depend on sequences of logic states to control their operation.

Horizontal, vertical, and Z-axis signals from the Model 1607A convert the 1742A into a 16-channel logic state analyzer. You can switch from logical state to electrical analysis by pressing one pushbutton, a real convenience. To connect the 1742A to the 1607A, place the 1742A on top of the 1607A, and using three Model 10502A cables, connect 1607A rear-panel outputs HORIZ, VERT, and Z-AXIS to the corresponding oscilloscope rear-panel inputs. Check 1742A operation with the 1607A as follows:

#### NOTE

Clock and data probes do not have to be connected to the 1607A for this procedure.

1. Press STATE DSPL **22** on Model 1742A.
2. Set Model 1607A controls as follows:

POWER ..... OFF  
 OFF/WORD ..... WORD  
 Sample Mode ..... SINGLE  
 COLUMN BLANKING ..... fully ccw  
 Z-AXIS ..... ON  
 All other pushbuttons ..... disengaged

3. Apply power **2** to 1742A and 1607A. Adjust 1742A FOCUS control **6** for sharpest display; 16-word table of ones and zeros will be displayed. If table is not displayed, press 1607A power switch on and off until 1607A starts up in display mode.

#### NOTE

The following adjustments apply to the Model 1607A.

4. Adjust HORIZ SIZE control for six-division wide display and VERT SIZE control for eight-division high display. Adjust HORIZ and VERT POSN controls to center display.

5. Set BYTE to 3 BIT and notice that display format changes from four-bit bytes to three-bit bytes.
6. Set LOGIC to NEG and note that all zeros change to ones and all ones change to zeros.
7. Rotate COLUMN BLANKING control clockwise and observe that vertical columns are blanked, starting with most significant bit.
8. Rotate COLUMN BLANKING control fully clockwise and note that least significant bit column remains on CRT.
9. Rotate COLUMN BLANKING control fully counterclockwise.
10. Set trigger mode to START DSPL and observe that first word is intensified.
11. Set trigger mode to END DSPL and note that last word is intensified.
12. Set DELAY ON/OFF to ON. Setting DELAY thumbwheels from 0 to 15 will move intensified word on display. For delays greater than 15, intensified word will not be displayed.

The following example explains how you can use the Option 101 in logic state and electrical analysis to find the location of a fault in digital program flow.

Since a fault in an algorithmic state machine will cause an erroneous state to exist in the program flow, it is desirable to start troubleshooting using program flow. When you find the fault location, you can more easily find the specific cause using conventional time analysis techniques. With Option 101, the 1742A and 1607A provide logic state and timing analysis displays.

Assume our algorithmic state machine is a 60-second timer that is terminating its count prematurely. By observing the logic state flow with the 1742A and 1607A, the premature termination point can easily be found. In this example, the malfunction is at count 25 (see figure 19). In this case we triggered on word 20. Notice the timer proceeded normally until word 24, when it reset to zero.

The 1607A supplied an external trigger to the 1742A; triggering the time display on the word we selected (word 20). A probe was connected from channel A on the 1742A to the least significant bit channel on the timer. Another probe was connected from channel B to the reset line on the timer. By switching the 1742A STATE



Model 1742A

	Least Significant Bit	Word
0010	0000	20 ← TRIGGER WORD
0010	0001	21
0010	0010	22
0010	0011	23
0010	0100	24
0000	0000	0 ← ERROR
0000	0010	2
0000	0011	3
0000	0100	4
0000	0101	5
0000	0110	6
0000	0111	7
0000	1000	8
0000	1001	9
0001	0000	10

BCD "10's" Column      BDC "1's" Column

Figure 19. Logic State Display

DSPL pushbutton **22** to the off position, we obtained a time display starting with word 20 (see figure 20).

You will notice that channel A pulses are normal until after word 24. The pulse at word 25 started to go high, but was not completed. Instead, the timer reset and started again at zero. Looking at the reset line on channel B, we see a glitch at word 25.

In this example, you can see the advantage of being able to switch from logic state to electrical analysis and interrogate inputs, outputs, and control lines for transients and glitches.

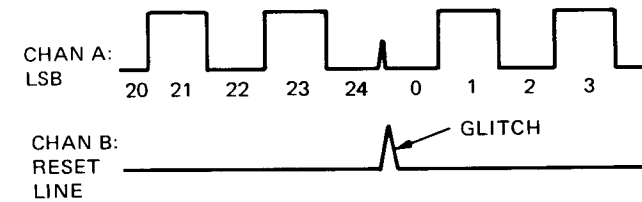


Figure 20. Glitch on Timer Reset Line Causing Timer to Reset Prematurely

D-7030 **Boblingen**, Wurttemberg  
Tel: (07031) 667-1  
Cable: HEPAK Boblingen  
Telex: 07265739 bbn

Hewlett-Packard GmbH  
Technisches Büro Dusseldorf  
Emanuel-Leutze-Str 1 (Seestern)  
D-4000 **Dusseldorf** 11  
Tel: (0211) 59711  
Telex: 085166 533 hppd d

Hewlett-Packard GmbH  
Technisches Büro Hamburg  
Wendenstrasse 23  
D-2000 **Hamburg** 1  
Tel: (040) 24 13 93  
Cable: HEWPACKSA Hamburg  
Telex: 21 63 032 hphd d

Hewlett-Packard GmbH  
Technisches Büro Hannover  
Am Grossmarkt 6  
D-3000 **Hannover** 91  
Tel: (0511) 46 60 01  
Telex: 092 2259

Hewlett-Packard GmbH  
Werk Groettingen  
Ohmstrasse 5  
D-7500 **Karlsruhe** 41  
Tel: (0721) 69 40 06  
Telex: 07-82507

Hewlett-Packard GmbH  
Technisches Büro Nuremberg  
Neumeyer Str. 90  
D-8500 **Nuremberg**  
Tel: (0911) 56 30 83/85  
Telex: 0623 860

Hewlett-Packard GmbH  
Technisches Büro München  
Unterhachinger Strasse 28  
ISAR Center  
D-8012 **Ottobrunn**  
Tel: (089) 501 30 61/7  
Cable: HEWPACKSA München  
Telex: 0524985

Hewlett-Packard GmbH  
Technisches Büro Berlin  
Keith Strasse 24  
D-1000 **Berlin** 30  
Tel: (030) 24 90 86  
Telex: 18 3405 hpbnd d

**GREECE**  
Kostas Karayannis  
08, Omirou Street  
GR-**Athens** 133  
Tel: 323 7731  
Cable: RAKAR Athens  
Telex: 21 59 82 rak ar

Analytical Only  
"INTECO" G Papathanassiou & Co  
Marm 17  
GR - **Athens** 103  
Tel: 522 1915  
Cable: INTEKNIKA Athens  
Telex: 21 5329 INTE GR

Medical Only  
Technomed Hellas Ltd  
52 Skoouta Street

GR - **Athens** 135  
Tel: 352 6972 363 3830  
Cable: ETALAK Athens  
Telex: 21-4693 ETAL GR

**HUNGARY**  
MTA  
Műszerügyi és Mérőtechnikai  
Szolgálat  
Lenin Krt. 67  
1391 Budapest VI  
Tel: 42 03 36  
Telex: 22 51 14

**ICELAND**  
Medical Only  
Elding Trading Company Inc  
Hafnarhvoli - Tryggvafotú  
IS-**Reykjavik**  
Tel: 1 58 20  
Cable: ELDING Reykjavik

**IRAN**  
Hewlett-Packard Iran Ltd  
No 13, Fourteenth St  
Meymand Avenue  
P O Box 41/2419  
IR-**Tehran**  
Tel: 851082-7  
Telex: 21 25 74 khrm ir

**IRAQ**  
Hewlett-Packard Trading Co  
4/1/8 Mansoor City  
**Baghdad**  
Tel: 5517827  
Telex: 2455 heparraq ix  
Cable: HEWPAQDAD  
Baghdad Iraq

**IRELAND**  
Hewlett-Packard Ltd  
King Street Lane  
GB-**Winnereah** Wokingham  
Berks, RG11 5AR  
Tel: (0734) 78 47 74  
Telex: 847178/848179

**ITALY**  
Hewlett-Packard Italiana S p A  
Via Amerigo Vespucci 2  
Casella postale 3645  
I-20100 **Milano**  
Tel: (2) 6251 (10 lines)  
Cable: HEWPACKIT Milano  
Telex: 32046  
Hewlett-Packard Italiana S p A  
Via Pietro Maroncelli 40  
Lang (Via Visentini)  
I-35100 **Padova**  
Tel: (49) 66 48 88  
Telex: 41612 Hewpacki

Medical only  
Hewlett-Packard Italiana S p A  
Via d'Aghardi, 7  
I-56100 **Pisa**  
Tel: (050) 2 32 04  
Telex: 32046 via Milano

Hewlett-Packard Italiana S p A  
Via G. Arminio 10  
I-00143 **Roma**

Tel: (06) 54 69 61  
Telex: 61514  
Cable: HEWPACKIT Roma

Hewlett-Packard Italiana S p A  
Corso Giovanni Lanza  
I-1031 **Torino**  
Tel: (011) 682245/659308  
00-800 **Warszawa**  
Tel: 36190  
Telex: 81 46 48  
Zaklady Naprawcze Sprzetu  
Medyczne  
Plac Komuny Paryskiej 6  
90-007 **Lodz**  
Tel: 334-41 337-83

Hewlett-Packard Italiana S p A  
Via Amerigo Vespucci, 9  
I-80142 **Napoli**  
Tel: (081) 33 77 11  
Hewlett-Packard Italiana S p A  
Via E. Maso, 9/B  
I-40137 **Bologna**  
Tel: (051) 30 78 87

**PORTUGAL**  
Teletra-Empresa Técnica de  
Equipamentos Eléctricos S a r l  
Rua Rodrigo da Fonseca 103  
P O Box 2531  
P-**Lisbon** 1  
Tel: (19) 58 60 72  
Cable: ELECTRA Lisbon  
Telex: 12598

Medical only  
Mundinter  
Intercambio Mundial de Comercio  
S a r l  
Av A A de Aguiar 138  
P O Box 2781  
P-**Lisbon**  
Tel: (19) 53 21 31/7  
Cable: INTERCAMBIO Lisbon

**LUXEMBURG**  
Hewlett-Packard Benelux  
S A N V  
Avenue du Col-Vert, 1,  
(Greenkraglaan)  
B-1170 **Brussels**  
Tel: (02) 672 22 40  
Cable: PALOBEN Brussels  
Telex: 23 494

**MOROCCO**  
Gerep  
190, Blvd. Brahim Roudani  
**Casablanca**  
Tel: 25-16-76/25-90-99  
Cable: Gerep-Casa  
Telex: 23739

**NETHERLANDS**  
Hewlett-Packard Benelux N V  
Van Heuven Goethestraat 121  
P O Box 667  
NL-1134 **Amstelveen**  
Tel: (020) 47 20 21  
Cable: PALOBEN Amsterdam  
Telex: 13 216 hepa nl

**NORWAY**  
Hewlett-Packard Norge A/S  
Nesveien 13  
Box 149  
N-1344 **Heslum**  
Tel: (02) 53 83 60  
Telex: 16621 hpnas n

**POLAND**  
Biuro Informatyki Technicznej  
Hewlett-Packard  
Ul. Stawki 2, 6F  
00-950 **Warszawa**

Tel: 396962/395187  
Telex: 81 24 53 hepa pl  
UNIFAN  
Zaklad Doswiadczalny  
Budowy Aparatury Naukowej  
Ul. Krajowej Rady Narodowej 51-55  
00-800 **Warszawa**  
Tel: 36190  
Telex: 81 46 48  
Zaklady Naprawcze Sprzetu  
Medyczne  
Plac Komuny Paryskiej 6  
90-007 **Lodz**  
Tel: 334-41 337-83

**PORTUGAL**  
Teletra-Empresa Técnica de  
Equipamentos Eléctricos S a r l  
Rua Rodrigo da Fonseca 103  
P O Box 2531  
P-**Lisbon** 1  
Tel: (19) 58 60 72  
Cable: ELECTRA Lisbon  
Telex: 12598

Medical only  
Mundinter  
Intercambio Mundial de Comercio  
S a r l  
Av A A de Aguiar 138  
P O Box 2781  
P-**Lisbon**  
Tel: (19) 53 21 31/7  
Cable: INTERCAMBIO Lisbon

**ROMANIA**  
Hewlett-Packard Reprezentanta  
Bd N. Balcescu 16  
**Bucharest**  
Tel: IS8023/138885  
Telex: 10440  
I I R U C  
Intreprinderia Pentru  
Intreneria  
Si Reparatara Utilajelor de Calcul  
B-dul prof. Dimitrie Pompei 6  
**Bucharest** Sectorul 2  
Tel: 12 64 30  
Telex: 11716

**SAUDI ARABIA**  
Modern Electronic Establishment  
King Abdul Aziz Str (Head office)  
P O Box 1228  
**Jeddah**  
Tel: (020) 47 20 21  
Cable: PALOBEN Amsterdam  
Telex: 13 216 hepa nl

**NORWAY**  
Hewlett-Packard Norge A/S  
Nesveien 13  
Box 149  
N-1344 **Heslum**  
Tel: (02) 53 83 60  
Telex: 16621 hpnas n

**POLAND**  
Biuro Informatyki Technicznej  
Hewlett-Packard  
Ul. Stawki 2, 6F  
00-950 **Warszawa**

**SAUDI ARABIA**  
Modern Electronic Establishment  
King Abdul Aziz Str (Head office)  
P O Box 1228  
**Jeddah**  
Tel: (020) 47 20 21  
Cable: PALOBEN Amsterdam  
Telex: 13 216 hepa nl

**NORWAY**  
Hewlett-Packard Norge A/S  
Nesveien 13  
Box 149  
N-1344 **Heslum**  
Tel: (02) 53 83 60  
Telex: 16621 hpnas n

**POLAND**  
Biuro Informatyki Technicznej  
Hewlett-Packard  
Ul. Stawki 2, 6F  
00-950 **Warszawa**

**E. Barcelona** 17  
Tel: (3) 203 6200 (5 lines)  
Telex: 52603 hpepe e  
Hewlett-Packard Española, S A  
Av. Ramón y Cajal 1  
Edificio Sevilla, planta 3<sup>a</sup>  
E-**Seville** 5  
Tel: 64 44 54 58  
Hewlett-Packard Española S A  
Edificio Albia II 7 B  
E-**Bilbao** 1  
Tel: 23 83 06/23 82 06  
Calculators Only  
Hewlett-Packard Española S A  
Gran Via Fernando El Catolico, 67  
E-**Valencia** 8  
Tel: 326 67 28/326 85 55

**SWEDEN**  
Hewlett-Packard Sverige AB  
Ernstshögagen 1-3  
Fack  
S-161 20 **Bromma** 20  
Tel: (08) 730 05 50  
Cable: MEASUREMENTS  
Stockholm  
Telex: 10721  
Hewlett-Packard Sverige AB  
Ostra Vintergatan 22  
S-702 40 **Örebro**  
Tel: (019) 14 07 20  
Hewlett-Packard Sverige AB  
Frotalsgatan 30  
S-421 32 **Vastra Frolunda**  
Tel: (031) 49 09 50  
Telex: 10721 Via Bromma Offtce

**SWITZERLAND**  
Hewlett-Packard (Schweiz) AG  
Zürcherstrasse 20  
P O Box 307  
CH-8952 **Schlieren-Zürich**  
Tel: (01) 730 52 40/730 18 21  
Cable: HPAG CH  
Telex: 53933 hpag ch  
Hewlett-Packard (schweiz) AG  
Château Bloc 19  
CH-1219 **Le Lignon-Geneva**  
Tel: (022) 96 03 22  
Cable: HEWPAKAG Geneva  
Telex: 27 333 hpag ch

**SYRIA**  
Medical/Calculator only  
Sawah & Co  
Place Azme  
B P 2308  
SYR-**Damascus**  
Tel: 16367 19697 14268  
Cable: SAWAH, Damascus

**TURKEY**  
Telekom Engineering Bureau  
P O Box 437  
Beşyüzyil  
TR-**Istanbul**  
Tel: 49 40 40  
Cable: TELEMATIOM Istanbul  
Telex: 23669

**UNITED KINGDOM**  
Hewlett-Packard Ltd  
King Street Lane  
GB-**Winnereah**, Wokingham  
Berks RG11 5AR  
Tel: (0734) 78 47 74  
Cable: Hewpac London  
Telex: 847178/9

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Medical only  
E M A  
Mühenessik Kallekten Sirketi  
Atakale Sokak 41/6  
TR-**Ankara**  
Tel: 175622  
Analytical only  
Yilmaz Özyurek  
Milli Müdafaa Cad No 16/6  
Kizilay  
TR-**Ankara**  
Tel: 25 03 09  
Telex: 42576 otek tr

**UNITED KINGDOM**  
Hewlett-Packard Ltd  
King Street Lane  
GB-**Winnereah**, Wokingham  
Berks RG11 5AR  
Tel: (0734) 78 47 74  
Cable: Hewpac London  
Telex: 847178/9

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
Lygon Court  
Hereward Rise  
Navigation Road  
**Atrincham**  
Cheshire WA14 1NU  
Tel: (061) 928 6422  
Telex: 668668

Hewlett-Packard Ltd  
2C Avonbeg Industrial Estate  
Long Mile Road  
DUBLIN 12  
Tel: 5.11.61m 509458  
Telex: 30439

**USSR**  
Hewlett-Packard  
Representative Office USSR  
Pokrovsky Boulevard 4-17-KW 12  
**Moscow** 101000  
Tel: 79-4-2024  
Telex: 7825 hewpak su

**YUGOSLAVIA**  
ISKRA's tandar  
Hewlett-Packard  
Mikes teva 38 VII  
61000 **Ljubljana**  
Tel: 31 58 79/32 16 74  
Telex: 31583

**SOCIALIST COUNTRIES**  
**NOT SHOWN PLEASE CONTACT:**  
Hewlett-Packard Ges m b H  
P O Box 7  
A-1025 **Vienna**, Austria  
Tel: 92221 35 16 21 to 27  
Cable: HEWPAK Vienna  
Telex: 75923 hewpak a

**MEDITERRANEAN AND MIDDLE EAST COUNTRIES**  
**NOT SHOWN PLEASE CONTACT:**  
Hewlett-Packard S A  
Mediterrenean and Middle East Operations  
35, 00akotom Street  
Plati Kefallariou  
GR-**Athens**  
Tel: 803337/359/429  
Telex: 21 6388  
Cable: HEWPACKSA Athens

**FOR OTHER AREAS**  
**NOT LISTED CONTACT:**  
Hewlett-Packard S A  
7, rue du Bois-du-Lan  
P O Box  
CH-1217 **Meyrin** 2 - **Geneva**  
Switzerland  
Tel: (09175) 82 70 00  
Cable: HEWPACKSA Geneva  
Telex: 22 24 86

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981

Hewlett-Packard Ltd  
1 Wallace Way  
GB-**Hitchin**  
Herts  
Tel: (04521) 52624 56704  
Telex: 825981



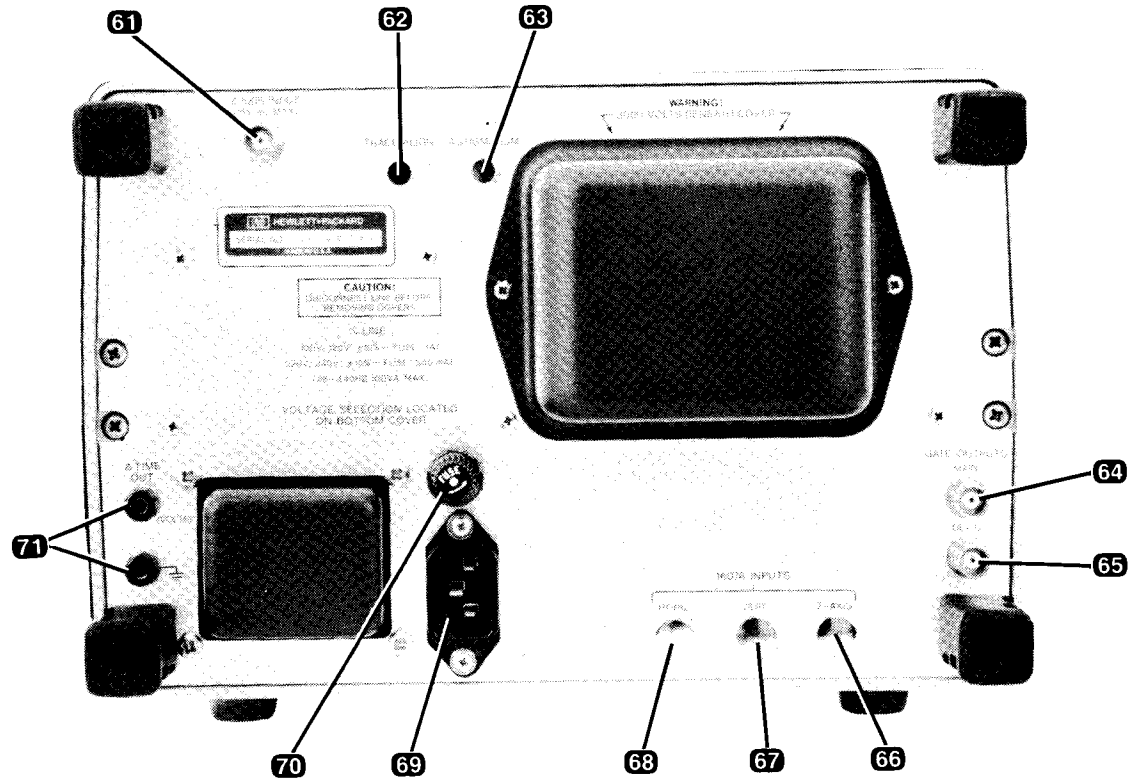


Figure 21.  
Front- and Rear-Panel Controls  
49

## AFRICA, ASIA, AUSTRALIA

### ANGOLA

Telectra  
Empresa Técnica de Equipamentos  
Eléctricos S A R L  
R Barbosa Rodrigues 42-1 DT  
Caza Postal 6487  
**Luanda**  
Tel: 35515.6  
Cable: TELECTRA Luanda

### AUSTRALIA

Hewlett-Packard Australia Pty Ltd  
31-41 Joseph Street  
**Blackburn** Victoria 3130  
P.O. Box 36  
**Doncaster East** Victoria 3109  
Tel: 89-6351  
Telex: 31-024  
Cable: HEWPARD Melbourne  
Hewlett-Packard Australia Pty Ltd  
31 Bridge Street  
**Pymble**

New South Wales 2073  
Tel: 449-6566  
Telex: 21561  
Cable: HEWPARD Sydney  
Hewlett-Packard Australia Pty Ltd  
153 Greenhill Road  
**Parkside** S.A. 5063  
Tel: 272-5911  
Telex: 82536 ADEL  
Cable: HEWPARD ADELAID

Hewlett-Packard Australia Pty Ltd  
141 Stirling Highway  
**Nedlands** W.A. 6009  
Tel: 86-5455  
Telex: 93859 PERTH  
Cable: HEWPARD PERTH  
Hewlett-Packard Australia Pty Ltd  
121 Wollongong Street  
**Fyshwick** A.C.T. 2609  
Tel: 95-2733  
Telex: 62650 Canberra  
Cable: HEWPARD CANBERRA  
Hewlett-Packard Australia Pty Ltd  
5th Floor  
Teachers Union Building  
495-499 Boundary Street

Spring Hill 4000 Queensland  
Tel: 229-1544  
Cable: HEWPARD Brisbane

### GUAM

Medical Pocket Calculators Only  
Gum Medical Supply, Inc  
Jay Ease Building, Room 210  
P.O. Box 8947  
**Tamuning** 96911  
Tel: 646-4513  
Cable: EARMED Guam

### HONG KONG

Schmidt & Co (Hong Kong) Ltd  
P.O. Box 297  
Connaught Centre  
39th Floor  
Connaught Road, Central  
**Hong Kong**  
Tel: H 255291-5  
Telex: 74766 SCHMC HX  
Cable: SCHMIDTCO Hong Kong

### INDIA

Blue Star Ltd  
Kasturi Buildings  
Jamshedji Tata Rd  
**Bombay** 400 020  
Tel: 29 50 21  
Telex: 001-2156  
Cable: BLUEFROST  
Blue Star Ltd  
Saras  
414 2 Vir Savarkar Marg  
Prabhadevi

**Bombay** 400 025  
Tel: 45 76 87  
Telex: 011-4093  
Cable: FROSTBLUE  
Blue Star Ltd  
Band Box House  
Prabhadevi

**Bombay** 400 025  
Tel: 45 73 01  
Telex: 011-3751  
Cable: BLUESTAR

Blue Star Ltd  
7 Hare Street  
P.O. Box 506  
**Calcutta** 700 001  
Tel: 23-0131  
Telex: 021-7655  
Cable: BLUESTAR

Blue Star Ltd  
7th & 8th Floor  
Bhandari House  
91 Nehru Place  
**New Delhi** 110024  
Tel: 634770 & 635166  
Telex: 031-2463  
Cable: BLUESTAR

Blue Star Ltd  
Blue Star House  
11 11A Magarath Road  
**Bangalore** 560 025  
Tel: 55668

Telex: 043-430  
Cable: BLUESTAR  
Blue Star Ltd  
**Meeakshi** Mandiran  
xxx-1678 Mahatma Gandhi Rd  
**Cochin** 682 016  
Tel: 32069 32161 32282  
Telex: 0885-514  
Cable: BLUESTAR

Blue Star Ltd  
1-1-117-1  
Sarojini Devi Road  
**Secunderabad** 500 003  
Tel: 70126 70127  
Cable: BLUEFROST  
Telex: 015-459

Blue Star Ltd  
2-34 Kodambakkam High Road  
**Madras** 600034  
Tel: 42056  
Telex: 041-379  
Cable: BLUESTAR

### INDONESIA

BERCA Indonesia P T  
P.O. Box 436 Jkt  
JLN.Abdul Muiz 62  
**Jakarta**  
Tel: 40369 49886 49255 356038  
JKT 42895  
Cable: BERCACON  
BERCA Indonesia P T  
63 JL Raya Gubeng  
**Surabaya**  
Tel: 44309

**ISRAEL**  
Electronics & Engineering Div  
of Motorola Israel Ltd  
17, Kremietzki Street  
P.O. Box 25016

### Tel-Aviv

Tel: 38973  
Telex: 33569  
Cable: BASTEL Tel-Aviv

### JAPAN

Yokogawa-Hewlett-Packard Ltd  
Onashi Building  
59-1 Yoyogi 1-Chome  
Shibuya-ku, **Tokyo** 151  
Tel: 03-370-2281/92  
Telex: 232-2024YHP MARKET  
TOX 23-724  
Cable: YHPMARKET

Yokogawa-Hewlett-Packard Ltd  
Chuo Bldg, 4th Floor  
4-20, Nishinakajima 5-chome  
Yodogawa-ku, **Osaka** 532  
Tel: 06-304 6021

Yokogawa-Hewlett-Packard Ltd  
Nakano Building  
24 Kam Sasayama-cho  
Nakamura-ku, **Nagoya** 450  
Tel: (052) 571-5171

Yokogawa-Hewlett-Packard Ltd  
Tanigawa Building  
2-24-1 Tsuriya-cho  
Kanagawa-ku  
**Yokohama** 221  
Tel: 045-312-1252  
Telex: 382-3204 YHP YOK

Yokogawa-Hewlett-Packard Ltd  
Mito Mitsu Building  
105, Chome-1 San-no-maru  
**Mito** Ibaragi 310  
Tel: 0292-25-7470

Yokogawa-Hewlett-Packard Ltd  
Inoue Building  
1349-3, Asahi-cho, 1-chome  
**Atsugi**, Kanagawa 243  
Tel: 0462-24-0452

Yokogawa-Hewlett-Packard Ltd  
Kumagaya Asahi  
Nagasaki Building  
4th Floor  
3-4 Tsukuba  
**Kumagaya**, Saitama 360  
Tel: 0485 24-6563

### KENYA

Technical Engineering  
Services/E A Ltd  
P.O. Box 18311

### Nairobi

Tel: 557726/556762  
Cable: PROTON  
Medical Only  
International Aeradio(E A) Ltd  
P.O. Box 19012  
Nairobi Airport  
**Nairobi**  
Tel: 336055/56  
Telex: 22201/22301  
Cable: INTAERIO Nairobi

### KOREA

Samsung Electronics Co. Ltd  
20th Fl. Dongang Bldg. 250, 2-KA  
C.P.O. Box 2775  
Taepyung-Ro, Chung-ku  
**Seoul**  
Tel: (23) 6811  
Telex: 22575

### MALAYSIA

Teknik Mutu Sdn Bhd  
2 Lorong 13/6A  
Section 13  
Petaling Jaya **Selangor**  
Tel: 5494-5496  
Telex: MA 37805  
Protel Engineering  
P.O. Box 197  
Lot 259, Salok Road  
Kuching, **Sarawak**  
Tel: 2400  
Cable: PROTEL ENG

### MOZAMBIQUE

A N Goncalves, Lta  
162, 1 Apt. 14 Av. D Lus  
Caza Postal 107  
**Lourenco Marques**  
Tel: 27091, 27114  
Telex: 6-203 NEGON Mo  
Cable: NEGON

### NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd  
P.O. Box 9443  
Courtenay Place  
**Wellington**  
Tel: 877-159  
Cable: HEWPACK Wellington  
Hewlett-Packard (N.Z.) Ltd  
Pakuranga Professional Centre  
267 Pakuranga Highway  
Box 51092

### Pakuranga

Tel: 569-651  
Cable: HEWPACK Auckland  
Analytical-Medical Only  
Medical Supplies N.Z. Ltd  
Scientific Division  
79 Carlton Gore Rd. Newmarket  
P.O. Box 1234

### Auckland

Tel: 75-289  
Cable: DENTAL Auckland  
Analytical-Medical Only  
Medical Supplies N.Z. Ltd  
P.O. Box 1994  
147-161 Tony St  
**Wellington**  
Tel: 850-799  
Telex: 3858  
Cable: DENTAL, Wellington

Analytical-Medical Only  
Medical Supplies N.Z. Ltd  
P.O. Box 309  
239 Stanmore Road  
**Christchurch**  
Tel: 892-019

Cable: DENTAL, Christchurch  
Analytical-Medical Only  
Medical Supplies N.Z. Ltd  
303 Great King Street  
P.O. Box 233  
**Dunedin**  
Tel: 88-817  
Cable: DENTAL, Dunedin

### NGERIA

The Electronics  
Instrumentations Ltd  
N6B/770 Oyo Road  
Oniseun House  
P.M.B. 5402  
**Ibadan**  
Tel: 61577  
Telex: 31231 TEIL Nigeria  
Cable: THEITEIL Ibadan  
The Electronics Instrumenta-  
tions Ltd  
144 Agege Motor Road, Mushin  
P.O. Box 6645

### Lagos

Cable: THEITEIL Lagos

### PAKISTAN

Mushko & Company, Ltd  
Oosman Chambers  
Abdullah Haroon Road

### Karachi-3

Tel: 511027 512927  
Telex: 2894  
Cable: COOPERATOR Karachi  
Mushko & Company, Ltd  
308, Satehite Town  
**Rawalpindi**  
Tel: 41924  
Cable: FEMUS Rawalpindi

### PHILIPPINES

The Online Advanced  
Systems Corporation  
Rico House  
Amorsolo cor. Herrera Str  
Legaspi Village, Makati  
Metro Manila  
Tel: 85-35-81 85-34-91  
Telex: 3274 ONLINE

### RHODESIA

Field Technical Sales  
45 Kelvin Road North  
P.O. Box 3458  
**Salisbury**  
Tel: 705251 (5 lines)  
Telex: RH 4122

### SINGAPORE

Hewlett-Packard Singapore  
(Pte.) Ltd  
1150 Depot Road  
Alexandra P.O. Box 58  
**Singapore 4**  
Tel: 270-2355  
Telex: HPSG RS 21486  
Cable: HEWPACK, Singapore

### SOUTH AFRICA

Hewlett-Packard South Africa  
(Pty.) Ltd  
Private Bag Wendywood  
Sandton, Transvaal 2144  
Hewlett-Packard Centre  
Daphne Street, Wendywood.  
**Sandton**, Transvaal 2144  
Tel: 802-10408  
Telex: 8-4782  
Cable: HEWPACK JOHANNESBURG  
Service Department  
Hewlett-Packard South Africa  
(Pty.) Ltd  
P.O. Box 39325  
Gramley, Sandton, 2018  
451 Wynberg Extension 3  
**Sandton**, 2001  
Tel: 636-8188/9  
Telex: 8-2391

Hewlett-Packard South Africa  
(Pty.) Ltd.  
P.O. Box 120  
Howard Place, Cape Province, 7450  
Pine Park Centre, Forest Drive  
Pinefields, Cape Province, 7405  
Tel: 53-7955 thru 9  
Telex: 57-0006

Service Department  
Hewlett-Packard South Africa  
(Pty.) Ltd.  
P.O. Box 37099  
Overport, Durban 4067  
Braby House  
641 Ridge Road  
Durban 4001  
Tel: 88-7476  
Telex: 6-7954

**TAIWAN**  
Hewlett-Packard Far East Ltd.  
Taiwan Branch  
39 Chung Hsiao West Road  
Sec. 1, 7th Floor

**Taipei**  
Tel: 89160-4  
Cable: HEWPACK TAIPEI  
Hewlett-Packard Far East Ltd.  
Taiwan Branch  
68-2, Chung Cheng 3rd Road  
**Kaohsiung**  
Tel: (07) 242318-Kaohsiung

Analytical Only  
San Kwang Instruments Co., Ltd.  
No. 20, Young Sui Road  
**Taipei**  
Tel: 3715171-4 (5 lines)  
Telex: 22894 SANKWANG  
Cable: SANKWANG TAIPEI

**TANZANIA**  
Medical Only  
International Aeradio (E.A.), Ltd.  
P.O. Box 86  
Dar es Salaam  
Tel: 21251 Ext. 265  
Telex: 41030

**THAILAND**  
UNIMESA Co., Ltd.  
Ficom Research Building  
2538 Sukhumvit Ave.  
**Bangkok**  
Tel: 3932387-3930338  
Cable: UNIMESA Bangkok

**UGANDA**  
Medical Only  
International Aeradio (E.A.), Ltd.  
P.O. Box 2577  
**Kampala**  
Tel: 54388  
Cable: INTAERIO Kampala

**ZAMBIA**  
R.J. Tilbury (Zambia) Ltd.  
P.O. Box 2792  
**Lusaka**  
Tel: 73793  
Cable: ARJAYTEE, Lusaka

#### OTHER AREAS NOT LISTED, CONTACT:

Hewlett-Packard Intercontinental  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1267  
Cable: HEWPACK Palo Alto

## CANADA

**ALBERTA**  
Hewlett-Packard (Canada) Ltd.  
11520A - 168th Street  
Edmonton T5M 3T9  
Tel: (403) 452-3670  
TWX: 610-831-2431

Hewlett-Packard (Canada) Ltd.  
210 72nd Street, S.E.  
Calgary T2H 2H8  
Tel: (403) 253-2713  
TWX: 680821-6141

**BRITISH COLUMBIA**  
Hewlett-Packard (Canada) Ltd.  
837 E. Cordova Street  
Vancouver V6A 3R2  
Tel: (604) 254-0531  
TWX: 610-922-5059

**MANITOBA**  
Hewlett-Packard (Canada) Ltd.  
513 Century St.  
St. James  
Winnipeg R3H 0L8  
Tel: (204) 786-7581  
TWX: 610-671-3531

**NOVASCOTIA**  
Hewlett-Packard (Canada) Ltd.  
800 Windmill Road  
Dartmouth B3B 1L1  
Tel: (902) 469-7820  
TWX: 460-271-4482 HFX

**ONTARIO**  
Hewlett-Packard (Canada) Ltd.  
1020 Morrison Dr.  
Ottawa K2H 6K7  
Tel: (613) 820-6483  
TWX: 610-563-1636

Hewlett-Packard (Canada) Ltd.  
6877 Goreway Drive  
Mississauga L4V 1M8  
Tel: (416) 678-9430  
TWX: 610-492-4246

**QUEBEC**  
Hewlett-Packard (Canada) Ltd.  
275 Hynes Blvd.  
Pointe Claire H9R 1G7  
Tel: (514) 697-4232  
TWX: 610-422-3022  
TLX: C1-821521 HPCL

**FOR CANADIAN AREAS NOT LISTED:**  
Contact Hewlett-Packard (Canada)  
Ltd. ■ Mississauga

## CENTRAL AND SOUTH AMERICA

**ARGENTINA**  
Hewlett-Packard Argentina  
S.A.  
Av. Leandro N. Alem 822 - 12  
1001 Buenos Aires  
Tel: 31-6963 4, 5, 6 and 7  
Telex: 122443 AR CIGY  
Cable: HEWPACK ARG

**BOLIVIA**  
Casa Kavlin S.A.  
Calle Potosí 1130  
P.O. Box 500  
**La Paz**  
Tel: 41530 53221  
Telex: CMC BX 5298 IIT 3560982  
Cable: KAVLIN

**BRAZIL**  
Hewlett-Packard do Brasil  
I. e. C. Ltda.  
Avenida Rio Negro 980  
AlphaVile  
06400 Barueri SP  
Tel: 429-3222

Hewlett-Packard do Brasil  
I. e. C. Ltda.  
Rua Padre Chagas 32  
90000 Porto Alegre-RS  
Tel: (051) 22-2998, 22-5621  
Cable: HEWPACK Porto Alegre  
Hewlett-Packard do Brasil  
I. e. C. Ltda.  
Rua Siqueira Campos 53  
Copacabana  
20000 Rio de Janeiro  
Tel: 257-80-94-DDD (021)  
Telex: 391-212-905 HEWP-BR  
Cable: HEWPACK

**CHILE**  
Calcagni y Metcalle Ltda.  
Alameda 580 Of. 807  
Casilla 2118  
**Santiago**  
Tel: 398613  
Telex: 3520001 CALMET  
Cable: CALMET Santiago

**COLOMBIA**  
Instrumentación  
Henrik A. Langebaek & Kier S.A.  
Carrera 7 No. 48-75  
Apartado Aéreo 6987  
**Bogotá, D.E.**  
Tel: 69-88-77  
Cable: AARIS Bogotá  
Telex: 044-400

**COSTA RICA**  
Centífica Costarricense S.A.  
Avenida 2 Calle 5  
San Pedro de Montes de Oca  
Apartado 10159  
**San José**  
Tel: 24-38-20, 24-08-19  
Telex: 2367 CALGUR CR  
Cable: CALGUR

**ECUADOR**  
Calculators Only  
Computadoras y Equipos  
Electrónicos  
P.O. Box 6423 CCI  
Eloy Alfaro #1824.3 Piso  
**Quito**  
Tel: 453482  
Telex: 02-2113 Sagita Ed  
Cable: Sagita-Quito

**EL SALVADOR**  
Instrumentación y Procesamiento  
Electrónico de el Salvador  
Bulevar de los Heroes 11-48  
**San Salvador**  
Tel: 252787

**GUATEMALA**  
IPESA  
Avenida La Reforma 3-48,  
Zona 9  
**Guatemala City**  
Tel: 63627, 64786  
Telex: 4192 Teletro Gu.

**MEXICO**  
Hewlett-Packard Mexicana,  
S.A. de C.V.  
Av. Periférico Sur No. 6501  
Tlaxpam, Xochmilco  
**México 23, D.F.**  
Tel: 905-676-4600  
Hewlett-Packard Mexicana,  
S.A. de C.V.  
Ave. Constitución No. 2184  
**Monterrey, N.L.**  
Tel: 48-71-32, 48-71-84  
Telex: 038-410

**NICARAGUA**  
Roberto Terán G.  
Apartado Postal 689  
Edificio Terán  
**Managua**  
Tel: 2514, 23412 23454  
Cable: ROTERAN Managua

**PANAMA**  
Electrónico Balboa, S.A.  
P.O. Box 4929  
Calle Samuel Lewis  
**Ciudad de Panamá**  
Tel: 64-2700

**PARAGUAY**  
Calculators Only  
Computadoras y Equipos  
Electrónicos  
P.O. Box 5423 CCI  
Eloy Alfaro #1824.3 Piso  
**Quito**  
Tel: 453482  
Telex: 02-2113 Sagita Ed  
Cable: Sagita-Quito

**PERU**  
Compañía Eléctrica Médica S.A.  
Los Flamencos 145  
San Andrés Casilla 1030  
**Lima 1**  
Tel: 41-4325  
Cable: ELMED Lima

**PUERTO RICO**  
Hewlett-Packard Inter-Américas  
Puerto Rico Branch Office  
Calle 272  
No. 203 Urb. Country Club  
Carolina 00924  
Tel: (809) 762-7255  
Telex: 345 0514

**URUGUAY**  
Pablo Ferrando S.A.  
Comercial e Industrial  
Avenida Italia 2877  
Casilla de Correo 370  
**Montevideo**  
Tel: 40-3102  
Cable: RADIUM Montevideo  
Tel: (809) 762-7255  
Telex: 345 0514

**VENEZUELA**  
Hewlett-Packard de Venezuela  
C.A.  
P.O. Box 50933  
Caracas 105  
Los Ruces Norte  
3a Transversal  
Edificio Segre  
**Caracas 107**  
Tel: 35-00-11 (20 lines)  
Telex: 25146 HEWPACK  
Cable: HEWPACK Caracas

**FOR AREAS NOT LISTED, CONTACT:**  
Hewlett-Packard  
Inter-Américas  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1260  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493

Telex: 3483103 Curunda,  
Canal Zone  
Cable: ELECTRON Panama

**PERU**  
Compañía Eléctrica Médica S.A.  
Los Flamencos 145  
San Andrés Casilla 1030  
**Lima 1**  
Tel: 41-4325  
Cable: ELMED Lima

**PUERTO RICO**  
Hewlett-Packard Inter-Américas  
Puerto Rico Branch Office  
Calle 272  
No. 203 Urb. Country Club  
Carolina 00924  
Tel: (809) 762-7255  
Telex: 345 0514

**URUGUAY**  
Pablo Ferrando S.A.  
Comercial e Industrial  
Avenida Italia 2877  
Casilla de Correo 370  
**Montevideo**  
Tel: 40-3102  
Cable: RADIUM Montevideo  
Tel: (809) 762-7255  
Telex: 345 0514

**VENEZUELA**  
Hewlett-Packard de Venezuela  
C.A.  
P.O. Box 50933  
Caracas 105  
Los Ruces Norte  
3a Transversal  
Edificio Segre  
**Caracas 107**  
Tel: 35-00-11 (20 lines)  
Telex: 25146 HEWPACK  
Cable: HEWPACK Caracas

**FOR AREAS NOT LISTED, CONTACT:**  
Hewlett-Packard  
Inter-Américas  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1260  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493

**FOR AREAS NOT LISTED, CONTACT:**  
Hewlett-Packard  
Inter-Américas  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1260  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493

**FOR AREAS NOT LISTED, CONTACT:**  
Hewlett-Packard  
Inter-Américas  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1260  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493

**FOR AREAS NOT LISTED, CONTACT:**  
Hewlett-Packard  
Inter-Américas  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1260  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493

**FOR AREAS NOT LISTED, CONTACT:**  
Hewlett-Packard  
Inter-Américas  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1260  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493

**FOR AREAS NOT LISTED, CONTACT:**  
Hewlett-Packard  
Inter-Américas  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1260  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493

**FOR AREAS NOT LISTED, CONTACT:**  
Hewlett-Packard  
Inter-Américas  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1260  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493

**CYPRUS**  
Kypricos  
19, Gregorios & Xenopoulos Rd.  
P.O. Box 1152  
CY-Nicosia  
Tel: 45628/29  
Cable: KYPRONICS PANDEHIS  
Telex: 3018

**CZECHOSLOVAKIA**  
Vývojova a Pívozoví Závadna  
Vysokumyřského Ústavu v Bechovicích  
ČSSR 25097  
**Bechovice u Prahy**  
Tel: 89 93 41  
Telex: 510957

**PUERTO RICO**  
Hewlett-Packard Inter-Américas  
Institute of Medical Biomics  
Vysokumyřského Ústavu v Bechovicích  
Jedlova 6  
CS-88346  
**Bratislava-Kramarec**  
Tel: 44-551/45-541

**DOR**  
Entwicklungsabteilung der TU Dresden  
Forschungsinstitut Menzberg  
DDR-7305  
**Waldheim/Meinsberg**  
Tel: 37 687  
Telex: 112145

Export Contact AG Zuerich  
Guenther Forgbler  
Schliengenstrasse 15  
1940 Berlin  
Tel: 42-74-12  
Telex: 111889

**DENMARK**  
Hewlett-Packard A/S  
Dalgavej 52  
DK-3460 Birkerød  
Tel: (02) 81 66 40  
Cable: HEWPACK AS  
Telex: 37409 hpas dk  
Hewlett-Packard A/S  
Navervej 1  
DK-8600 Silkeborg  
Tel: (06) 82 71 66  
Telex: 37409 hpas dk  
Cable: HEWPACK AS

**FINLAND**  
Hewlett-Packard OY  
Nahkahuusentie 2  
P.O. Box 6  
SF-00211 Helsinki 21  
Tel: (90) 6923031  
Cable: HEWPACKOY Helsinki  
Telex: 121563 HEWPA SF

**FRANCE**  
Hewlett-Packard France  
Quartier de Courtabouef  
Boite Postale No. 6  
F-91401 Orsay Cédex  
Tel: (1) 907 78 25  
Cable: HEWPACK Orsay  
Telex: 600048

Hewlett-Packard France  
Agence Regionale  
"Le Saquin"  
Chemin des Mouilles

B.P. 162  
F-69130 Ecullly  
Tel: (78) 33 81 25  
Cable: HEWPACK Ecullly  
Tel: 31 06 17

Hewlett-Packard France  
Agence Regionale  
Pérenne de la Cèpre  
Chemin de la Cèpre, 20  
F-31300 Toulouse-Le Mirail  
Tel: (61) 40 11 12  
Cable: HEWPACK 51957  
Telex: 510957

Hewlett-Packard France  
Agence Regionale  
Aéroport principal de  
Marseille-Margiane  
F-13721 Margiane  
Tel: (91) 89 12 36  
Cable: HEWPACK MARGN  
Telex: 410770

Hewlett-Packard France  
Agence Regionale  
63, Avenue de Rochester  
B.P. 1124  
F-35014 Rennes Cédex  
Tel: (93) 36 33 21  
Cable: HEWPACK 74912  
Telex: 740912


Hewlett-Packard France  
Agence Regionale  
F-67000 Strasbourg  
Tel: (88) 35 23 20/21  
Telex: 89014  
Cable: HEWPACK STRBG

Hewlett-Packard France  
Agence Regionale  
Centre Vauban  
201, rue Colbert  
Entrée A2  
F-59000 Lille  
Tel: (20) 51 44 14  
Telex: 820744

Hewlett-Packard France  
Centre d'Affaires Paris-Nord  
Bâtiment Ampère  
Rue de la Commune de Paris  
B.P. 300  
F-93153 Le Blanc Mesnil Cédex  
Tel: (01) 931 88 50

**GERMAN FEDERAL  
REPUBLIC**  
Hewlett-Packard GmbH  
Vertriebszentrale Frankfurt  
Bernerstrasse 117  
Postfach 560 140  
D-6000 Frankfurt 56  
Tel: (069) 50 04-1  
Cable: HEWPACKSA Frankfurt  
Tel: (069) 50 04-1  
Cable: HEWPACKSA Frankfurt  
Telex: 04 13249 hpfrfm

Hewlett-Packard GmbH  
Technisches Büro Bobbingen  
Herrenbergerstrasse 110

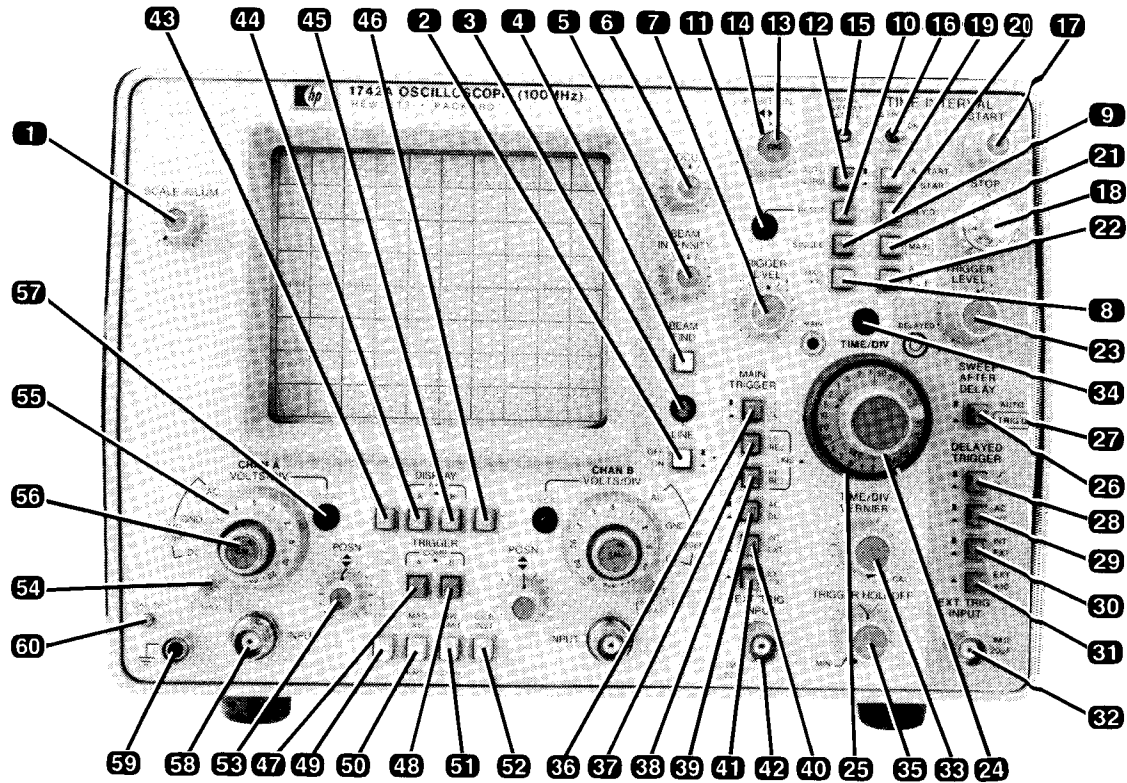

## UNITED STATES

**ALABAMA**  
8290 Whitesburg Dr., S.E.  
P.O. Box 4207  
Huntsville 35802  
Tel: (205) 881-4591  
Medical Only  
228 W. Valley Ave.  
Room 222  
Birmingham 35209  
Tel: (205) 942-2081/2

**ARIZONA**  
2336 E. Magnolia St.  
Phoenix 85034  
Tel: (602) 244-1361  
2424 East Aragon Rd.  
Tucson 85706  
Tel: (602) 294-3148

**ARKANSAS**  
Medical Service Only  
P.O. Box 5646  
Brady Station  
Little Rock 72215  
Tel: (501) 376-1844

**CALIFORNIA**  
1430 East Orangeflora Ave.  
Fullerton 92631  
Tel: (714) 870-1000  
3939 Lankershim Boulevard  
North Hollywood 91604  
Tel: (213) 877-1282  
TWX: 910-499-2671  
5400 West Rosecrans Blvd.  
P.O. Box 92105  
World Way Postal Center  
Los Angeles 90005  
Tel: (213) 970-7500

**Los Angeles**  
Tel: (213) 776-7500  
3003 Scott Boulevard  
Santa Clara 95050  
Tel: (408) 249-7000  
TWX: 910-338-0518

**Ridgecrest**  
Tel: (714) 446-6165

646 W. North Market Blvd  
Sacramento 95834  
Tel: (916) 929-7222  
9606 Aero Drive  
P.O. Box 23333  
San Diego 92123  
Tel: (714) 279-3200  
**COLORADO**  
5600 South Uteer Parkway  
Englewood 80110  
Tel: (303) 771-3455

**CONNECTICUT**  
12 Lunar Drive  
New Haven 06525  
Tel: (203) 389-6551  
TWX: 710-465-2029

**FLORIDA**  
P.O. Box 24210  
2806 W. Oakland Park Blvd.  
Ft. Lauderdale 33311  
Tel: (305) 731-2020

**Jacksonville**  
Medical Service Only  
Tel: (904) 396-0653  
P.O. Box 13810  
6177 Lake Ellenor Dr.  
Orlando 32809  
Tel: (305) 859-2900  
P.O. Box 12826  
Pensacola 32575  
Tel: (904) 476-8422

**GEORGIA**  
P.O. Box 105005  
Atlanta 30349  
Tel: (404) 955-1500  
TWX: 810-766-4890

Medical Service Only  
\*Augusta 30903  
Tel: (404) 736-0592  
P.O. Box 2103  
Warner Robins 31098  
Tel: (912) 922-0449

**HAWAII**  
2875 So. King Street  
Honolulu 96814  
Tel: (808) 955-4455  
Telex: 723-705

**ILLINOIS**  
5201 Tollview Dr.  
Rolling meadows 60008  
Tel: (312) 255-9890  
TWX: 910-687-2260

**INDIANA**  
7301 North Shadeland Ave.  
Indianapolis 46250  
Tel: (317) 842-1000  
TWX: 810-260-1797

**IOWA**  
2415 Heinz Road  
Iowa City 52240  
Tel: (319) 338-9466

**KENTUCKY**  
Medical Only  
Atkinson Square  
3901 Atkinson Dr.  
Suite 407 Atkinson Square  
Louisville 40218  
Tel: (502) 456-1573

**LOUISIANA**  
P.O. Box 840  
3229-39 Williams Boulevard  
Kenner 70063  
Tel: (504) 443-6201

**MARYLAND**  
6707 Whitestone Road  
Baltimore 21207  
Tel: (301) 944-5400  
TWX: 710-862-9157  
2 Choke Cherry Road  
Rockville 20850  
Tel: (301) 946-6370  
TWX: 710-828-9684

**MASSACHUSETTS**  
32 Hartwell Ave

Lexington 02173  
Tel: (617) 861-8960  
TWX: 710-326-5904

**MICHIGAN**  
23855 Research Drive  
Farmington Hills 48024  
Tel: (313) 476-6400  
724 West Centre Ave.  
Kalamazoo 49002  
Tel: (606) 323-8362

**MINNESOTA**  
2400 N. Prior Ave.  
St. Paul 55113  
Tel: (612) 636-0700

**MISSISSIPPI**  
\*Jackson  
Medical Service Only  
Tel: (601) 962-9363

**MISSOURI**  
11131 Colorado Ave.  
Kansas City 64137  
Tel: (816) 763-8000  
TWX: 910-771-2087  
1024 Executive Parkway  
St. Louis 63141  
Tel: (314) 878-0200

**NEBRASKA**  
Medical Only  
717 Mercy Road  
Suite 110  
Omaha 68106  
Tel: (402) 392-0948

**NEW JERSEY**  
W. 120 Century Rd.  
Paramus 07652  
Tel: (201) 265-5000  
TWX: 710-990-4951  
Crystal Brook Professional  
Building  
Eatontown 07724  
Tel: (201) 542-1384

**NEW MEXICO**  
P.O. Box 11634

Station E  
11300 Lomas Blvd., N.E.  
Albuquerque 87123  
Tel: (505) 292-1330  
TWX: 910-989-1185  
156 Wyatt Drive  
Las Cruces 88001  
Tel: (505) 526-2484  
TWX: 910-9983-0550

**NEW YORK**  
6 Automation Lane  
Computer Park  
Albany 12205  
Tel: (516) 454-7330  
201 South Avenue  
Poughkeepsie 12601  
Tel: (914) 454-7330  
TWX: 510-253-5981

650 Perinton Hill Office Park  
Fairport 14450  
Tel: (716) 223-9950  
5858 East Molloy Road  
Syracuse 13211  
Tel: (315) 454-2486  
TWX: 710-541-0482  
1 Crossways Park West  
Woodbury 11797  
Tel: (516) 921-0300  
TWX: 710-990-4951

**NORTH CAROLINA**  
P.O. Box 5188  
1923 North Main Street  
High Point 27262  
Tel: (819) 885-8101

**OHIO**  
16500 Sprague Road  
Cleveland 44130  
Tel: (216) 243-7300  
TWX: 810-423-9430  
330 Progress Rd.  
Dayton 45449  
Tel: (513) 859-8202

1041 Kingsmill Parkway  
Columbus 43229  
Tel: (614) 436-1041

**OKLAHOMA**  
P.O. Box 32006  
Oklahoma City 73132  
Tel: (405) 721-0200

**OREGON**  
17890 SW Lower Boones  
Ferry Road  
Tualatin 97062  
Tel: (503) 620-3350

**PENNSYLVANIA**  
111 Zeta Drive  
Pittsburgh 15238  
Tel: (412) 782-0400

1021 8th Avenue  
King of Prussia Industrial Park  
King of Prussia 19406  
Tel: (215) 265-7000  
TWX: 510-660-2670  
Tel: (716) 223-9950

**SOUTH CAROLINA**  
6941-O N. Trenholm Road  
Columbia 29266  
Tel: (803) 782-6493

**TENNESSEE**  
\*Knoxville  
Medical Service Only  
Tel: (615) 543-5022

3027 Vanguard Dr.  
Director's Plaza  
Memphis 38131  
Tel: (919) 885-8370

**Nashville**  
Medical Service Only  
Tel: (615) 244-5446

**TEXAS**  
P.O. Box 1270  
201 E. Arapaho Rd.  
Richardson 75080  
Tel: (214) 231-6101

10535 Harwin Dr.  
Houston 77036  
Tel: (713) 776-6400  
205 Billy Mitchell Road  
San Antonio 78226  
Tel: (512) 434-6241

**UTAH**  
2160 South 3270 West Street  
Salt Lake City 84119  
Tel: (801) 972-4711

**VIRGINIA**  
P.O. Box 12778  
No. 7 Koger Exec. Center  
Suite 212  
Norfolk 23502  
Tel: (804) 461-4025/6  
P.O. Box 9669  
2914 Hungary Springs Road  
Richmond 23228  
Tel: (804) 285-3431

**WASHINGTON**  
Bellevue Office Pk.  
1203 114th Ave. S.E.  
Bellevue 98004  
Tel: (206) 454-3971  
TWX: 910-443-2446

**WEST VIRGINIA**  
Medical/Analytical Only  
Charleston  
Tel: (304) 343-1640

**WISCONSIN**  
9004 West Lincoln Ave.  
West Allis 53227  
Tel: (414) 541-0550

**FOR U.S. AREAS NOT LISTED:**  
Contact the regional office  
nearest you: Atlanta, Georgia  
North Hollywood, California  
Rockville, Maryland  
Rolling Meadows, Illinois  
Then complete  
addresses are listed above

\*Service Only 1/78





01742-90904

PRINTED IN U.S.A.





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>