



INSTAPARK

PWT-7D MANUAL

Please contact us for questions or concerns

📞 1-800-716-0100 ✉ info@instapark.com

📍 Monday - Friday 9am to 5pm (PST)
(Excluding major federal holidays)

TWO OUTLET ELECTRONIC WATER TIMER

For watering use with outdoor home water faucet only. Do not use indoor or with appliance. Use only with pressures of 60 PSI (4 BAR) max. Do not use with water exceeding 100°F (38°C). Do not use on outlet with “Y” connectors or other hose accessories. Detach and drain before freezing weather season.

INSTALLING THE BATTERIES

- Remove the tray from the back of the timer by sliding it out
- Insert 2 AA (1.5V) alkaline batteries (not included) onto the battery tray, then reinsert the tray to the back of the timer.
- Replace battery every year, when low battery is indicated on the screen or when long unattended use. –



PROGRAMMING THE TIMER–

- Rotate the dial to the positions indicated for setup
 - Press L/R button to switch between the left and the right outlet for programming
 - To maintain water pressure both Left and Right outlets will not operate concurrently, it will only work one side at a time.
- Note: The dial should be in the RUN position for the timer to operate (Programed Mode or Manual Mode)

SET CLOCK

- Rotate the dial to SET CLOCK
- Press the + to advance or reverse the clock time
(Hold the button to advance the timer quicker)

START TIME

- Rotate the dial to START TIME
- Press L/R to choose left or right valve
- Press the + or – button to set the start time (hold the button to advance the time quicker)

HOW LONG



- Rotate the dial to HOWLONG
- Press the + or – button to set the length of the watering time (1 MIN up to 360 MINS)

HOW OFTEN

- It allows you to set the program to repeat from 1HR, 2HRS, 4HRS, 12 HRS and 1-7 days.
- Rotate the dial to HOW OFTEN
- Press the + or – button to set the frequency

RUN

- Rotate the dial to RUN
- The timer will water according to the programmed time, duration and frequency that’s being set.

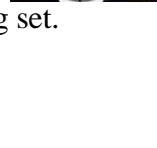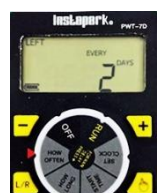



- The start and cycle duration are maintained during OFF or RUN mode.
- The dial must remain in RUN position in order for the cycle to run. If the dial is turned to any other position, the watering will stop.
- Rain drops indication will appear on the screen for the corresponding valve when watering is in process.

SET RAIN DELAY (WATERING DELAY)

- With the dial in the RUN position, pressing (+) button will cause a 24-hour delay to the program.
- Same delay will occur on both Left and Right valves.
- Delays of 0, 24, 48 and 72 hours are possible. Delay time can be changed by pressing the + or – button at any time.
- Display will flash between clock and hours remaining before programmed cycle resumes.
- To remove watering delay, turn the dial OFF and then turn it back to RUN or reduce the delay timer to 0.

MANUAL (INSTANT) WATERING

- Set the dial to the “RUN” position and press  and the valve will open after 5 seconds.
- Press “+” or “-“to change the Run Time
- Press L/R to choose Left or Right Value
- In order to ensure the max water pressure for both the Left and Right side. You must turn on the Left side first, and then the Right. If you only want to Right outlet to work, press the  and then change Left run time to 0.

OFF

- Turning the dial to the OFF position from any other position will stop the manual or the programmed watering immediately.

INSTALLATION

- After programming the timer attach the timer to the outdoor faucet, then turn the faucet on.
- Do not use on outlets with ‘Y’ end connectors or other hose accessories.

TROUBLESHOOTING

NO DISPLAY

- Ensure batteries are installed properly
- Check if batteries are very low

DOES NOT WATER or DOES NOT COME ON AT DESIRED TIME

- Ensure the dial position is set on RUN
- Faucet is on
- Clock is set to the correct time including AM and PM
- Check if batteries are low
- Desired outlet (Left or Right) is programmed
- Rain delay is on
- Start time is set to desired time including AM and PM

WATER WON'T TURN OFF

- Ensure watering duration is set to the desired time
- The Manual Mode is on
- No power / batteries are drained.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>