

## safety

- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand blender foot is thoroughly sterilised. Use a sterilising solution in accordance with the sterilising solution manufacturers instructions.
  - Never touch the blades while the machine's plugged in.
  - Keep fingers, hair, clothing and utensils away from moving parts.
  - Unplug from the power supply when not in use.
  - Never blend hot oil or fat.
  - Don't let children or infirm people use the hand blender without supervision.
  - Never use a damaged hand blender. Get it checked or repaired: see 'service'.
  - Never put the hand blender in water or let the cord or plug get wet - you could get an electric shock.
  - Never let the cord touch hot surfaces or hang down where a child could grab it.
  - Never use an unauthorised attachment.
  - Young children should be supervised to ensure that they do not play with this appliance.
  - Only use your hand blender for its intended domestic use.
  - With heavy mixtures, don't use your hand blender for longer than 50 seconds in any four minute period - it'll overheat.
- before plugging in**
- Make sure your electricity supply is the same as the one shown on the hand blender.

### Important - UK only

- The wires in the cord are coloured as follows:  
Blue = Neutral, Brown = Live.

- Your hand blender complies with European Economic Community Directive 89/336/EEC.

### before using for the first time

- 1 Remove all packaging and throw away the blade covers.
- 2 Wash the blender foot and beaker : see 'cleaning'.

## key

- ① blender foot
- ② blender body
- ③ on/off button
- ④ cord clip
- ⑤ beaker
- ⑥ hanging hook
- ⑦ wall mount

## to use the hand blender

- You can blend baby food, soups, sauces, milk shakes and mayonnaise.

### for beaker blending

- Don't fill the beaker above 500ml (17fl oz).
- Take the pan off the heat and let it cool slightly. Otherwise your hand blender could overheat.

- 1 Plug in. To avoid splashing, place the blade in the food before switching on.
- 2 Hold the beaker steady. Then press the on/off button.
- Move the blade through the food and use a stabbing action.
- If your blender gets blocked, unplug before clearing.

## storage

- 1 Wrap the cord around the hand blender, then clip the end into the cord clip ①.

2 Either:

- Clip the hanging hook over a kitchen rack, then attach the hand blender ②.
- Or secure the hanging hook to the wall. Remove the wall mount from the hanging hook and fix to the wall making sure that the rib is uppermost. Before drilling check for hidden gas, electricity and water services. Fit the hanging hook onto the wall mount then attach the hand blender ③.

## cleaning

- Always switch off and unplug before cleaning.
- Don't touch the sharp blades.
- Never immerse in water or use abrasives.
- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand blender shaft is thoroughly sterilised. Use a sterilising solution in accordance with the sterilising solution manufacturers instructions.
- Some foods, eg carrot, may discolour the plastic. Rubbing with a cloth dipped in vegetable oil helps remove discolouring.

### blender body

- Wipe with a damp cloth, then dry.

### blender foot

- either
- Wash the blades under running water, then dry thoroughly.
- or
- Part-fill the beaker with warm, soapy water. Then insert the blender foot and switch on.
- Unplug, then dry.

### beaker

- Wash up, then dry. Or wash in a dishwasher.

## service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by Kenwood or an authorised Kenwood repairer.

### UK

If you need help with:

- using your hand blender or
- servicing or repairs (in or out of guarantee)

☎ call Kenwood on **023 92392333** and ask for Customer Care. **Have your model number ready** - it's on the back of the hand blender. Alternatively, contact your authorised Kenwood repairer: look in YELLOW PAGES under 'Electrical appliance repairs'.

### Eire

 
- See our advertisement in Golden Pages.

### other countries

- Contact the shop where you bought your hand blender.
- guarantee - UK only**  
If your hand blender goes wrong within one year from the date you bought it, we will repair it (or replace it if necessary) free of charge provided:
  - you have not misused, neglected or damaged it;
  - it has not been modified (unless by Kenwood);
  - it is not second-hand;
  - it has not been used commercially;
  - you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

# KENWOOD

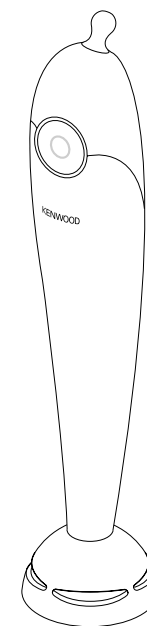

**HB150 series**



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>