

### before using your Kenwood appliance

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.

### safety

- Never put the handmixer body in water or let the cord or plug get wet.
- Keep fingers, hair, clothing and utensils away from moving parts.
- Never let the cord touch hot surfaces or hang down where a child could grab it.
- Ensure the cord is fully unwound before using the handmixer.
- Always unplug the appliance when not in use, before fitting or removing parts or before cleaning.
- Never use a damaged handmixer. Get it checked or repaired: see 'service and customer care'.
- Never use an unauthorised attachment.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

### before plugging in

- Make sure your electricity supply is the same as the one shown on the underside of your handmixer.

### Important – UK only

- The wires in the cord are coloured as follows:  
Blue = Neutral, Brown = Live.
- The appliance must be protected by a 3A approved (BS1362) fuse.  
**Note:**
- For non-rewireable plugs the fuse cover MUST be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).
- If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This appliance conforms to EC directive 2004/108/EC on Electromagnetic Compatibility and EC regulation no. 1935/2004 of 27/10/2004 on materials intended for contact with food.

### before using your handmixer for the first time

- 1 Wash the beaters: see 'cleaning'.

### know your Kenwood handmixer

see illustrations

- ① speed switch
- ② beater release button
- ③ beaters
- ④ grip clip
- ⑤ cable tidy

### to use your handmixer

- 1 Insert the beaters– turn and push. (To remove them, press the beater release button.)
- 2 Plug in.
- 3 Push the speed switch forward.
  - As the mixture thickens, increase the speed.
  - If the machine labours increase the speed.
- 4 When the mixture has reached the desired consistency, return the speed switch to the off position, then lift the beaters out of the bowl.
- 5 Unplug.

### cleaning

- Always switch off, unplug and remove the beaters before cleaning.
- Never put the handmixer body in water or let the cord or plug get wet.

### beaters

- Wash by hand or in your dishwasher, then dry.

### handmixer body

- Wipe with a damp cloth, then dry.

### storage

see illustration

- 1 Wrap the cord around the base of the handmixer. Then clip the cord together with the cable tidy.
- 2 Push the grip clip into the sockets. Then clip in the beaters.

### service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.

### UK

If you need help with:

- using your handmixer
  - servicing or repairs (in or out of guarantee)
- ☎ call Kenwood Customer Care on **023 9239 2333**. **Have your model number ready** - it is located on the underside of your handmixer.

### • spares and attachments

☎ call 0870 2413653.

### other countries

- Contact the shop where you bought your handmixer.

- Designed and engineered by Kenwood in the UK.

- Made in China.

### guarantee (UK only)

If your handmixer goes wrong within one year from the date you bought it, we will repair or replace it free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.



### IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

### very rich fruit cake

175g/6oz plain flour  
½ x 2.5ml/pinch nutmeg  
1½ x 2.5ml/¼ tsp mixed spice  
50g/2oz blanched and chopped almonds  
40g/1½ oz ground almonds  
150g/5oz soft brown sugar  
1 x 15 ml/1 tbsp black treacle  
Grated rind of 1 lemon  
1½ x 15ml/1½ tbsp brandy  
225g/8oz currants  
150g/5oz sultanas  
75g/3oz raisins  
50g/2oz mixed peel  
50g/2oz cherries halved  
125g/4oz block margarine cut into 2 cm/¾" cubes  
3 eggs lightly beaten

Line a deep 18cm 7" round or 15cm 6" square tin with a double layer of greased greaseproof paper.

Place all the ingredients into a large mixing bowl and mix on speed 1 for 10 seconds then increase to speed 3 and continue mixing for a further minute or until the ingredients are thoroughly combined.

Transfer the mixture to the tin and level the surface. Tie two strips of brown paper around the tin and stand it on another two sheets of brown paper.


Bake in a pre-heated oven at 140°C/275°F/Gas Mark 1. Check, and if necessary, test at intervals after the first 3½ hours to see if cooked. When cooked a 'skewer' inserted into the centre of the cake should come out clean. Allow to cool in the tin for 15 minutes then turn out and carefully remove paper.



Head Office Address:  
Kenwood Limited, New Lane, Havant, Hampshire PO9 2NH, UK  
[www.kenwoodworld.com](http://www.kenwoodworld.com)  
Designed and engineered by Kenwood in the UK  
Made in China

19823/1

# KENWOOD

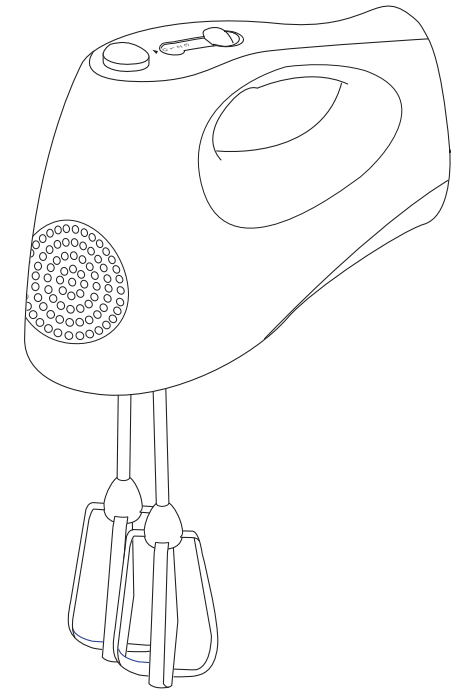

## HM220/HM226

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>