

# KENWOOD

FM/AM RECEIVER  
**KR-A3070**

## INSTRUCTION MANUAL

KENWOOD CORPORATION

### *For your records*

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on this product.

Model \_\_\_\_\_ Serial Number \_\_\_\_\_

### *Unpacking*

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost. Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage.

 
We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.

### *Accessories*

FM indoor antenna (1)



AM loop antenna (1)



Loop antenna stand (1)



AC plug adaptor (1)



Except for U.S.A., Canada  
and Australia.

# Before applying power

Caution: Read this page carefully to ensure safe operation.

KR-A307D (En)

Units are designed for operation as follows.

U.S.A. and Canada ..... AC 120 V only  
Australia ..... AC 240 V only


\*Other countries ..... AC 110-120 / 220-240 V switchable

## \*AC voltage selection

The AC voltage selector switch on the rear panel is set to the voltage that prevails in the area to which the unit is shipped. Before connecting the power cord to your AC outlet, make sure that the setting position of this switch matches your line voltage. If not, it must be set to your voltage in accordance with the following direction.

Note:  
Our warranty does not cover damage caused by excessive line voltage due to improper setting of the AC voltage selector switch.



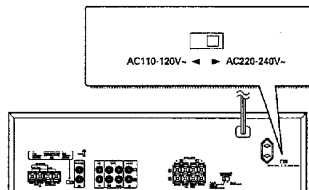

## AC voltage selector switch



Move switch lever to match your line voltage with a small screwdriver or other pointed tool.

# Safety precautions

**WARNING :** TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN		CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
	THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.	
	THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.	

## For the U.S.A.

### FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

## For the U.S.A.

### Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## Special feature

### Station preset

*This unit incorporates a function for storing received stations in preset memory with a simple operation. It is very convenient to preset the stations you like. The preset stations can be recalled also very easily.*

- 14

## Contents

Caution : Read the pages marked  $\Delta$  carefully to ensure safe operation.

<b>Before applying power</b>		
	$\Delta$ Before applying power .....	2
	$\Delta$ Safety precautions .....	2
<b>Special feature</b>		3
$\Delta$ <b>IMPORTANT SAFEGUARDS</b>	.....	4
<b>System connections</b>	.....	6
<b>FM DE-EMPHASIS / CHANNEL SPACE switch</b>	.....	7
<b>Controls and indicators</b>	.....	9
<b>Playing music</b>	.....	10
<b>Sound adjustment functions</b>	.....	11
<b>Recording</b>	.....	11
<b>Broadcast reception</b>	.....	12
	Receiving broadcast station .....	12
	Receiving radio station by specifying its frequency .....	13
	Storing radio stations in memory (Station preset) .....	14
	Receiving a preset station .....	14
	Receiving all preset stations in order .....	14
<b>In case of difficulty</b>	.....	15
$\Delta$ <b>Specifications</b>	.....	16

# IMPORTANT SAFEGUARDS

**Caution** : Read this page carefully to ensure safe operation.

KR-A3070 (En)


Please read all of the safety and operating instructions before operating this appliance. Adhere to all warnings on the appliance and in the instruction manual. Follow all the safety and operating instructions. These safety and operating instructions should be retained for future reference.

- 1. Power sources** – The appliance should be connected to a power supply only of the type described in the instruction manual or as marked on the appliance. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For appliances intended to operate from battery power, or other sources, refer to the instruction manual.
- 2. Power-cord protection** – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

Never pull or stretch the cord.




- 3. CAUTION – Polarization** – This appliance may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 4. Ventilation** – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the appliance and to protect it from overheating, and these openings must not be blocked or covered. The appliance should be situated so that its location or position does not interfere with its proper ventilation.  
To maintain good ventilation, do not put records or a table-cloth on the appliance. Place the appliance at least 10 cm away from the walls.  
Do not use the appliance on a bed, sofa, rug or similar surface that may block the ventilation openings. This appliance should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

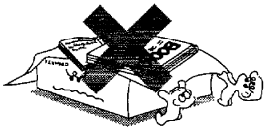


- 5. Water and moisture** – The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.

- 6. Temperature** – The appliance may not function properly if used at extremely low, or freezing temperatures. The ideal ambient temperature is above +5°C (41°F).
- 7. Heat** – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 8. Electric shock** – Care should be taken so that objects do not fall and liquid is not spilled into the enclosure through openings. If a metal object, such as a hair pin or a needle, comes into contact with the inside of this appliance, a dangerous electric shock may result. For families with children, never permit children to put anything, especially metal, inside this appliance.

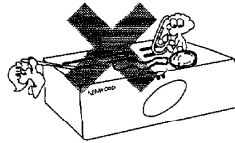

- 9. Enclosure removal** – Never remove the enclosure. If the internal parts are touched accidentally, a serious electric shock might occur.

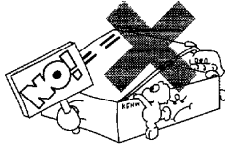

- 10. Magnetic fields** – Keep the appliance away from sources of magnetic fields such as TV sets, speaker systems, radios, motorized toys or magnetized objects.
- 11. Cleaning** – Unplug this appliance from the wall outlet before cleaning. Do not use volatile solvents such as alcohol, paint thinner, gasoline, or benzine, etc. to clean the cabinet. Use a clean dry cloth.
- 12. Accessories** – Do not place this appliance on an unstable cart, stand, tripod, bracket, or table. The appliance may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the appliance. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.




**Caution - Read this page carefully to ensure safe operation.**

KR-AS070 (En)

**13. Lightning** – For added protection for this appliance during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to lightning and power-line surges.

**14. Abnormal smell** – If an abnormal smell or smoke is detected, immediately turn the power OFF and unplug the appliance from the wall outlet. Contact your dealer or nearest service center.

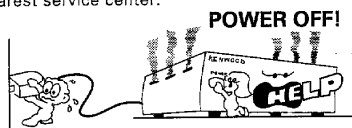


**15. Damage requiring service** – The appliance should be serviced by qualified service personnel when:

- A. The power-supply cord or the plug has been damaged.
- B. Objects have fallen, or liquid has been spilled into the appliance.
- C. The appliance has been exposed to rain or water.
- D. The appliance does not appear to operate normally by following the instruction manual. Adjust only those controls that are covered by the instruction manual as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the appliance to its normal operation.
- E. The appliance has been dropped, or the enclosure damaged.
- F. The appliance exhibits a marked change in performance.


**16. Servicing** – The user should not attempt to service the appliance beyond that described in the instruction manual. All other servicing should be referred to qualified service personnel.

**17. Outdoor antenna grounding** – If an outside antenna is connected to the appliance, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Article 810 of the National Electrical Code – ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure.

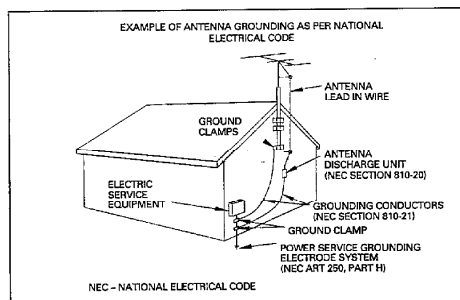

**18. Power lines** – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

**19. AC outlets** – Do not connect other audio equipment with a power consumption larger than that specified to the AC outlet on the rear panel. Never connect other electrical appliances, such as an iron or toaster, to it to prevent fire or electric shock.

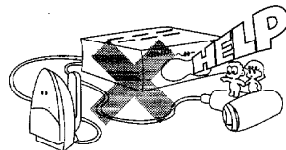

**20. Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

**21. Attachment** – Do not use attachments not recommended by the appliance manufacturer as they may cause hazards.

**22. Replacement parts** – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

**23. Safety check** – Upon completion of any service or repairs to this appliance, ask the service technician to perform safety checks to determine that the appliance is in proper operating condition.

**Notes:**


1. Item 3 is not required except for grounded or polarized equipment.
2. Item 17 and 18 are not required except for units provided with antenna terminals.
3. Item 17 complies with UL in the U.S.A.

# System connections

KR-A3070 (En)


Make connection as shown below. When connecting the related system components, refer also to the instruction manuals of the related components.  
Do not plug in the power lead until all connections are completed.

**Malfunction of microcomputer**  
If operation is not possible or erroneous display appears even though all connections have been made properly, reset the microcomputer referring to "In case of difficulty".

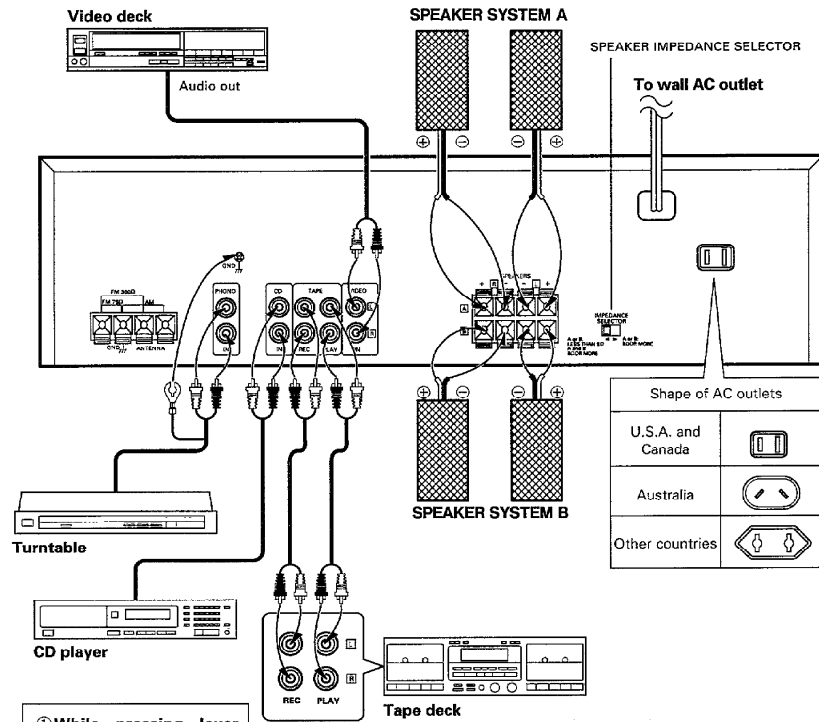

Shape of AC outlets

U.S.A. and Canada	
Australia	
Other countries	

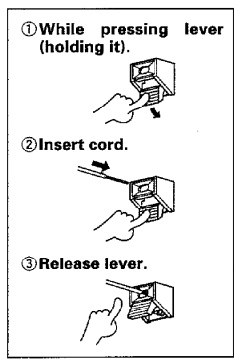

- Never short-circuit the + and - speaker cords.
- If the left and right speakers are connected inversely or if the speaker cords are connected with reversed polarity, the sound becomes unnatural with ambiguous acoustic image positioning. Be sure to connect the speakers and speaker cords correctly.

**Notes**

1. Connect all cords firmly. If connections are loose, there could be loss of sound or noise produced.
2. When plugging and unplugging connection cords, be sure to first remove the power cord from the AC outlet. Plugging / unplugging connection cords without removal of the power cord can cause malfunctions or damage to the unit.
3. Do not connect up a power source which is larger than that indicated on the socket at the rear of the unit.



**Setting the speaker IMPEDANCE SELECTOR**

**CAUTION: TO PREVENT FIRE OR DAMAGE REQUIRING SERVICE, SET THE IMPEDANCE SELECTOR SWITCH AS DESCRIBED BELOW.**

When using the speaker A or speaker B separately

Speaker impedance	Selector position
4Ω, 6Ω	
8Ω, 16Ω	

According to the impedance of the speaker used, set the speaker **IMPEDANCE SELECTOR** on the rear panel as shown in the table.


- When the **IMPEDANCE SELECTOR** switch is set to "A or B: **LESS THAN 8Ω**, A and B: **8Ω OR MORE**" it is possible to use the A and B speakers at the same time. Therefore, when using the speaker A and B simultaneously, be sure to set the **IMPEDANCE SELECTOR** switch to the "A or B: **LESS THAN 8Ω**, A and B: **8Ω OR MORE**" position.
- During speaker system connection and operation of the speaker **IMPEDANCE SELECTOR**, set the power key to OFF.

When using the speaker A or speaker B simultaneously

Speaker impedance	Selector position
8Ω, 16Ω	

**FM DE-EMPHASIS / CHANNEL SPACE switch**  
(Except for U.S.A., Canada and Australia)

The FM DE-EMPHASIS / CHANNEL SPACE switch on the rear panel is set to the correct setting that prevails in the area to which the unit is shipped. However, if the FM DE-EMPHASIS / CHANNEL SPACE setting is not matched to the area where the unit is to be used; for instance, when you moved from area 1 to area 2 or vice versa, desired reception of AM / FM broadcasts is not expected. In this case, change the FM DE-EMPHASIS / CHANNEL SPACE setting in accordance with the area corresponding to the table. The FM DE-EMPHASIS is switched over at the same time.

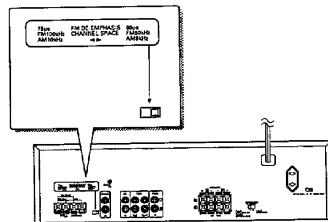


- When changing the setting of the FM DE-EMPHASIS / CHANNEL SPACE switch, first disconnect the power cord of the amplifier, then reset the channel space switch, connect the power cord again, and turn the power on.

Area	CHANNEL SPACE freq.	FM DE-EMPHASIS
1. U.S.A., Canada, and South American countries	FM: 100kHz AM: 10kHz	75 μs
2. Other countries	FM: 50kHz AM: 9kHz	50 μs

**Connection method to each antenna terminal**

 
- ① While pressing lever (holding it).
- ② Insert cord.
- ③ Release lever.



## Connection of AM antenna


**AM loop antenna connection**

The supplied antenna is for indoor use. Place it as far as possible from the main system, TV set, speaker cords and power cord, and set it to a direction which provides the best reception.

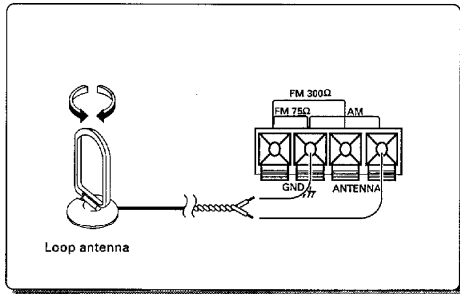

**AM outdoor antenna connection**


If the reception is poor when the AM loop antenna is used, distribute a vinyl-coated wire of more than 6 meters outdoors, without disconnecting the loop antenna.

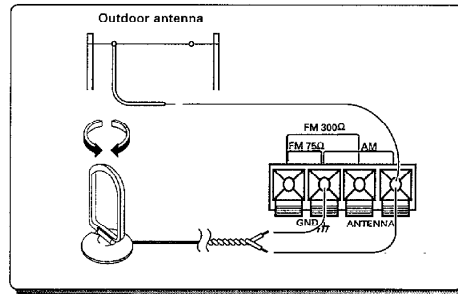

## Connection of FM antenna


**FM indoor antenna connection**

The accessory antenna is for temporary indoor use only. For stable signal reception we recommend using an outdoor antenna. Remove the indoor antenna if you connect one outdoors.

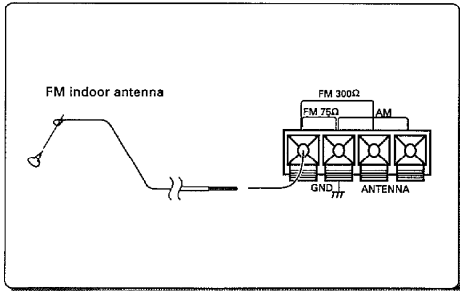


**Connection of FM outdoor antenna**

Lead the 75 Ω coaxial cable connected to the FM outdoor antenna into the room and connect it to the FM 75 Ω terminal.

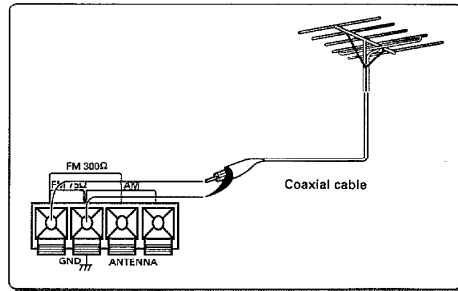



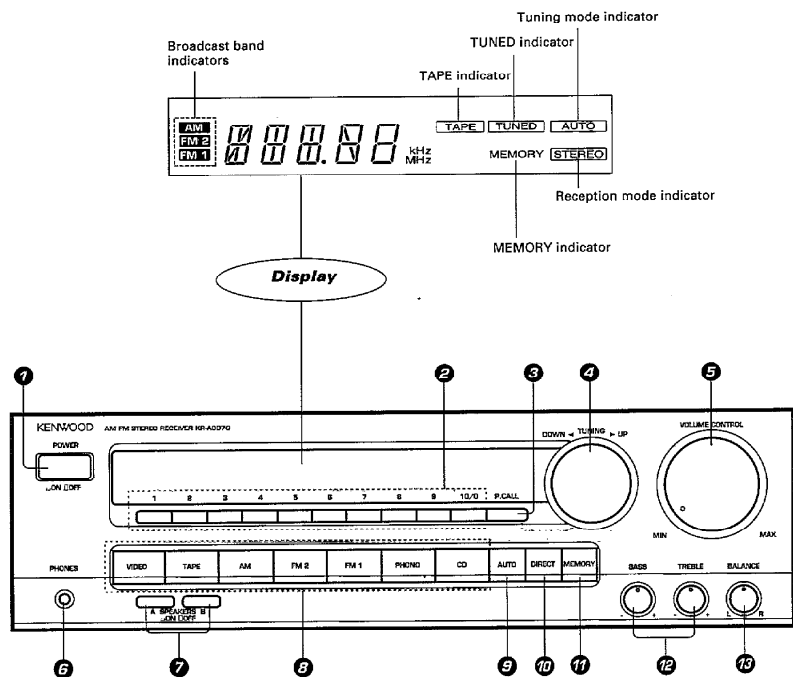

**1 POWER switch**

**2 Numeric keys**

**3 P. CALL key**

Press to recall a preset station.

**4 TUNING knob**

Selects the station to be received.

**5 VOLUME CONTROL knob**

**6 PHONES jack**

Used for headphone listening.

**7 SPEAKERS A/B switch**

Press to select the A and/or B speaker systems.

**8 Input selector keys**

Select the input sources.

**9 AUTO key**

Press to select the auto tuning mode.

**10 DIRECT key**

Press for direct station tuning based on numerical input.


**11 MEMORY key**

Press to preset a station in the memory.

**12 Tone control knobs**

**13 BALANCE control knob**


Turn to adjust the volume balance between left and right.

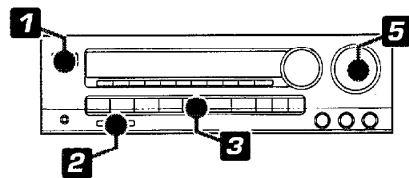


**1 Turn the power ON.**



 
**2 Select the SPEAKERS switch setting.**



**3 Select the input source.**

 


The selected source is displayed.

 

**4 Play the selected source.**

**5 Adjust the volume.**

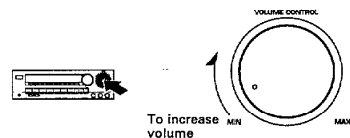





- A, B OFF**  
Sound is not output from the speakers. Use this setting for listening through headphones, etc.
- A ON**  
Sound is output from the speakers connected to the SPEAKERS A terminals on the rear panel.
- B ON**  
Sound is output from the speakers connected to the SPEAKERS B terminals on the rear panel.
- A, B ON**  
Sound is output from the speakers connected to the SPEAKERS A and B terminals on the rear panel.

●The sound of input source cannot be listened to while TAPE is ON.




## Sound adjustment functions
  
### To listen through headphones

- ① Set both of the **SPEAKERS** switches to OFF.
 

 - ② Plug headphones.
 
- ③ Adjust the volume.
 


### Adjusting the tone



To adjust low frequencies

To adjust high frequencies

### Adjusting the left/right sound balance

 
 



To decrease the right sound

To decrease the left sound

## Recording



### To record a music source

- ① Select the source to be recorded.
 
- Select an input source other than TAPE.
 
- ② Put the cassette deck in record-pause mode.
- ③ Play the source and start recording.

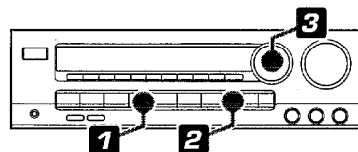


## Receiving broadcast station
  
### 1 Select the broadcast band.




### 2 Select the tuning method.

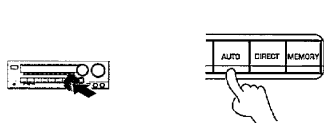

Each press switches the tuning method as follows:


 
- ① AUTO lit (auto tuning)
- ② AUTO not lit (manual tuning)



- Usually, set the switch to **AUTO** (auto tuning).


Select manual tuning when noise interferes due to weak radio wave. (The stereo broadcasting is received in monaural during manual tuning.)

### 3 Select a station.

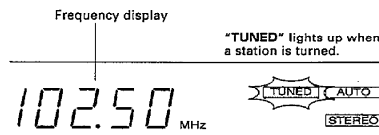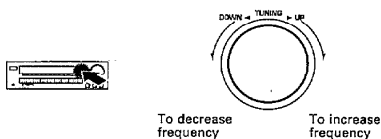

In auto tuning mode: Turn the **TUNING** control clockwise or counterclockwise and release the control — the tuner will tune a receivable frequency then stop automatically.


In manual tuning mode: Turn the **TUNING** control clockwise or counterclockwise slightly and stop it — the frequencies vary in sequence. Release the control when the desired frequency is displayed.

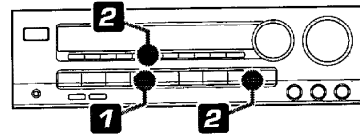

## Receiving radio station by specifying its frequency

**1 Select the broadcast band.**

 AM or FM indicator



Press the numeric keys according to the frequency to be tuned as shown below.

**2 Specify the frequency.**

① Press the DIRECT key.

 
② Enter the frequency of the desired station.

Desired station	Order of pressing numeric keys
FM 90 MHz	[9], [0], [0] * (100 kHz space) [9], [0], [0], [0] (50 kHz space)
FM 102.5 MHz	[1], [0], [2], [5] (100 kHz space) [1], [0], [2], [5], [0] (50 kHz space)
AM (MW) 810 kHz	[8], [1] (10 kHz space) [8], [1], [0] (9 kHz space)
AM (MW) 1260 kHz	[1], [2], [6] (10 kHz space) [1], [2], [6], [0] (9 kHz space)

\*FM DE-EMPHASIS/CHANNEL SPACE switch →

Frequency display

"TUNED" lights when a station is tuned.




- If you commit a mistake, repeat step 2 again.

**Preparation**

 
- Tune the station to be stored in memory.

## Storing radio stations in memory (Station preset)

**1 Press the MEMORY key during receiving a station.**




 
**2 Select one of the preset numbers from 1 to 10.**  
(If more than 5 sec. have elapsed, press the MEMORY key again.)




- Up to 10 stations can be preset for each broadcast band.
- Repeat steps 1 and 2 for each of the stations to be stored in memory.
- If a station is stored in a preset number which already stores a station memory under it, the previous memory is replaced by the new memory content.
- Once the memory content has been preset, it is held for about 3 days even after the power cord is unplugged from the mains outlet.

## Receiving a preset station

 **Press the preset number of the desired station.**

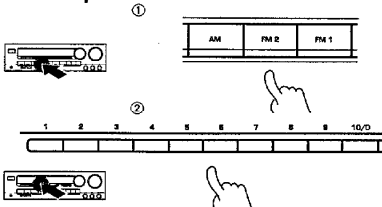

## Receiving all preset stations in order

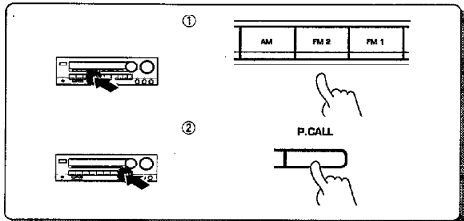

- The preset stations are received in the following order.  
In FM band : (FM 1)1→2...9→10→(FM 2)1→2...9→10→(FM 1)11...  
In AM band : (AM)1→2...9→10→1→2...
- To stop preset call operation, press the **P.CALL** key again. The preset station receives when the key is pressed will continue to be received.

## In case of difficulty

KR-A3070 (En)

### Operation to reset

The microcomputer may fall into malfunction (impossibility to operate, erroneous display, etc.) when the power cord is unplugged while power is ON or due to an external factor. In this case, execute the following procedure to reset the microcomputer and return it to normal condition.

Press the power switch to OFF, and while holding the FM1 key depressed, press the power switch to ON again.

- Please note that resetting the microcomputer clears the contents stored in it returns it to the condition when it left the factory.

### Amplifier

Symptom	Cause	Remedy
Sound is not output.	<ul style="list-style-type: none"> <li>● The speaker cords are disconnected.</li> <li>● The VOLUME is set to the minimum position.</li> <li>● The speakers switches are set to OFF.</li> </ul>	<ul style="list-style-type: none"> <li>● Connect them properly referring to "System connection".</li> <li>● Adjust the volume to a proper level.</li> <li>● Set the speaker switch(es) to ON.</li> </ul>
Sound is not output from one of the speakers.	<ul style="list-style-type: none"> <li>● The speaker cord is disconnected.</li> <li>● The BALANCE control is set to an extreme position.</li> </ul>	<ul style="list-style-type: none"> <li>● Connect it properly referring "System connection".</li> <li>● Adjust the Left/Right balance.</li> </ul>
A hum noise is generated when PHONO input selector key is pressed.	<ul style="list-style-type: none"> <li>● The audio cord from the turntable is not inserted securely into the PHONO jacks.</li> <li>● The turntable is not grounded.</li> </ul>	<ul style="list-style-type: none"> <li>● Insert the audio cord plugs securely into the PHONO jacks.</li> <li>● Connect the grounding wire to the GND terminal on the rear panel.</li> </ul>

### Tuner

Symptom	Cause	Remedy
Radio stations cannot be received.	<ul style="list-style-type: none"> <li>● No antenna is connected.</li> <li>● The broadcast band is not set properly.</li> <li>● The frequency of the desired station is not tuned</li> </ul>	<ul style="list-style-type: none"> <li>● Connect an antenna.</li> <li>● Set the broadcast band properly.</li> <li>● Tune the frequency of the desired station.</li> </ul>
Interference.	<ul style="list-style-type: none"> <li>● Noise due to ignition noise of an automobile.</li> <li>● Noise due to an influence from an electric appliance.</li> <li>● Noise due to a nearby TV set.</li> </ul>	<ul style="list-style-type: none"> <li>● Install the outdoor antenna apart from the road.</li> <li>● Turn off the power of the appliance.</li> <li>● Install the system more apart from the TV set.</li> </ul>
A station which was preset cannot be received by pressing the corresponding numeric key.	<ul style="list-style-type: none"> <li>● The preset station belongs to a frequency that cannot be received.</li> <li>● The preset memory was cleared because the power cord had been unplugged for a long period of time.</li> </ul>	<ul style="list-style-type: none"> <li>● Preset a station with a receivable frequency.</li> <li>● Preset the station again.</li> </ul>

### Speaker protection circuitry

If the speaker cords are short-circuited, the speaker protection circuitry is activated and the sound is muted. If this occurs, switch the POWER key to OFF, remove the short-circuit from the speaker cords, and switch the POWER key to ON again. Normal operation will resume.

#### Note

Do not use contact cleaners because it could cause a malfunction. Be specially careful against contact cleaners containing oil, for they may deform the plastic components.



# Specifications

Caution: Read this page carefully to ensure safe operation.

KR-A3070 (En)

## U.S.A. and Canada

### Audio section

#### Rated power output

50 watts per channel minimum RMS, both channels driven at 8  $\Omega$ , from 30 Hz to 20,000 Hz with no more than 0.09% total harmonic distortions. (FTC)

Total harmonic distortion (1 kHz, 8 $\Omega$ )	0.03% at 25 W
Signal to noise ratio (IHF A)	
PHONO (MM)	70 dB
CD, TAPE, VIDEO	100 dB
Input sensitivity / impedance	
PHONO (MM)	2.5 mV / 47 k $\Omega$
CD, TAPE, VIDEO	200 mV / 47 k $\Omega$
Tone controls	
BASS	$\pm 10$ dB (at 100 Hz)
TREBLE	$\pm 10$ dB (at 10 kHz)

#### FM Tuner section

Tuning frequency range	87.5 MHz ~ 108 MHz
Usable sensitivity (IHF)	13.2 dBf (1.2 $\mu$ V at 75 $\Omega$ )
50 dB quieting sensitivity	
STEREO	41.2 dBf (32 $\mu$ V at 75 $\Omega$ )
Total harmonic distortion at 1 kHz	
MONO	0.6%
STEREO	0.7%
Signal to noise ratio at 65 dBf (IHF)	
MONO	75 dB
STEREO	68 dB
Selectivity (IHF $\pm 400$ kHz)	50 dB
Stereo separation (IHF at 1 kHz)	40 dB

#### AM Tuner section

Tuning frequency range	530 kHz ~ 1,700 kHz
Usable sensitivity	12 $\mu$ V / (500 $\mu$ V / m)
Total harmonic distortion	0.7%
Signal to noise ratio	48 dB
Selectivity	30 dB

#### General

Power consumption	1.3 A
AC outlet	
UN SWITCHED	1: (200 W, 1.6 A max.)
Dimensions	W: 440 mm (17-5/16")
	H: 133 mm (5-1/8")
	D: 285 mm (11-1/4")
Weight (net)	5.8 kg (12.8 lb)

## Other countries

### Audio section

#### Rated power output

(EIAJ) 1 kHz, 10 % THD at 8  $\Omega$  ..... 60 W + 60 W  
(IEC/NF) from 63 Hz to 12.5 kHz,  
0.7 % T.H.D., at 8  $\Omega$  ..... 55 W + 55 W  
Total harmonic distortion (1 kHz, 8  $\Omega$ ) 0.03% at 25 W  
Signal to noise ratio (IHF '66)

PHONO (MM)	70 dB
CD, TAPE, VIDEO	100 dB
Input sensitivity / impedance	
PHONO (MM)	2.5 mV / 47 k $\Omega$
CD, TAPE, VIDEO	200 mV / 47k $\Omega$
Tone controls	
BASS	$\pm 10$ dB (at 100 Hz)
TREBLE	$\pm 10$ dB (at 10 kHz)

#### FM Tuner section

Tuning frequency range	87.5 MHz ~ 108 MHz
Usable sensitivity (IHF)	13.2 dBf (1.2 $\mu$ V at 75 $\Omega$ )
50 dB quieting sensitivity	
STEREO	41.2 dBf (32 $\mu$ V at 75 $\Omega$ )
Total harmonic distortion at 1 kHz	
MONO	0.6%
STEREO	0.7%
Signal to noise ratio at 65 dBf (IHF)	
MONO	75 dB
STEREO	68 dB
Selectivity (IHF $\pm 400$ kHz)	50 dB
Stereo separation (IHF at 1 kHz)	40 dB

#### AM Tuner section

Tuning frequency range	530 kHz ~ 1,610 kHz
Tuning frequency range (For Australia only)	
.....	531 kHz ~ 1,602 kHz
Usable sensitivity	12 $\mu$ V / (500 $\mu$ V / m)
Total harmonic distortion	0.7%
Signal to noise ratio	48 dB
Selectivity	30 dB

#### General

Power consumption	120 W
AC outlet	
UN SWITCHED	1: (200 W max.)
Dimensions	W: 440 mm
	H: 133 mm
	D: 285 mm
Weight (net)	5.8 kg

#### Note



KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>