


Installation Guide

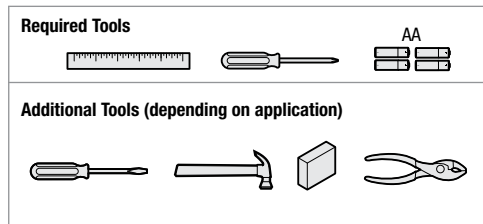

Use and programming instructions are located on the reverse side of this document.

Parts in the Box

<p>Latch and Strike</p>	<p>Exterior Assembly</p>	<p>Interior Assembly</p>
<p>If needed, please contact Kwikset to order a drive-in latch for your lock.</p> <p>A2</p>	<p>Fasteners</p>	

Kwikset
1-800-327-5625
www.kwikset.com

1 Check dimensions

2-3/8" (60 mm) or 2-3/4" (70 mm)

1-3/8" — 1-3/4" 35 mm — 44 mm

1-1/2" 38 mm or 2-1/8" 54 mm

1" 25 mm

Additional door preparation may be required for doors with 1-1/2" (38 mm) holes. Consult the drilling instructions at www.kwikset.com/doorprep.

2 Adjust the backset of latch (if needed)

A Hold the latch in front of the door hole, with the latch face flush against the door edge.

B If the latch holes are centered in the door hole, no adjustment is required. Proceed to step 3. If the latch holes are NOT centered, adjust latch. See "Latch Adjustment."

Latch Adjustment (only if needed)

3 Install latch

For doors with chiseled edge

For doors without chiseled edge

A

B

4 Prepare exterior keypad (if needed)

For doors with 2-1/8" (54 mm) holes

Proceed to step 5.

For doors with 1-1/2" (38 mm) holes

A Temporarily remove gasket **C**

B Remove adapter ring

C Reinstall gasket, ensuring a tight seal.

5 Prepare mounting plate (if needed)

For doors with 2-1/8" (54 mm) holes

Proceed to step 6.

For doors with 1-1/2" (38 mm) holes

Use pliers to remove the two tabs from the mounting plate (F).

6 Install keypad and mounting plate

A Locate screws (L) and keep them within reach.

B

C

D Keep parallel to edge of door. Tighten screws evenly. L (2x)

E Insert key and test latch. If latch does not extend or retract smoothly, adjust screws (L). Remove key when finished and make sure the latch bolt is in the unlocked position.

7 Load batteries and reset the lock

A

B

Note: The turnpiece may rotate on its own.

C Press and hold the Reset button on the interior assembly for five seconds, until you hear three beeps.

Ensure correct polarity. For best results, use new, non-rechargeable Alkaline batteries only.

8 Install interior assembly

A

B Rotate turnpiece AWAY from the door edge.

C

D Check for smooth turnpiece rotation. If turnpiece does not rotate, pull interior assembly (G) off the door. Repeat steps 7B and 7C, making sure the turnpiece is rotated away from the door edge.

E

F Make sure door is unlocked.

9 IMPORTANT: Enter door handing code and test lock

A While the door is OPEN AND UNLOCKED, enter the following code to teach the lock the orientation of the door.

Default MASTERCODE: 0-0-0-0	Lock button	"0"	Lock button
-----------------------------	-------------	-----	-------------

If programming is successful, the keypad will flash green twice with two beeps. If unsuccessful, the keypad will flash red three times with three beeps. Attempt to enter the code again.

B Press the Lock button once.

C If the latch bolt extends to lock, the lock has correctly learned the orientation of the door.

D Unlock door.

10 Install strike

J (2x)

11 Re-key the lock

D If needed, re-key the lock to work with your existing key. See the supplied SmartKey Re-key instructions for more information.

12 Program the lock

Programming instructions are located on the reverse side of this document.

Template

If your door requires drilling, cut out the template and place it on the exterior side of the door. Complete door drilling instructions are available at www.kwikset.com/doorprep.

Edge: 1-3/8" (35 mm)

Face: 2-3/8" (60 mm) or 2-3/4" (70 mm)

Centerline

Backset

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>