



## BATTERY POWERED SALT and PEPPER MILLS

### User Manual



#### Items included in the package:

- Two (2) pepper and salt mills with caps
- User Manual

To order parts, please visit [www.itouchless.com](http://www.itouchless.com)

#### INTRODUCTION

The iTouchless BATTERY POWERED SALT AND PEPPER MILLS are the convenient way to add precise flavor to your dishes with just the push of a button. The brushed stainless steel finish is fingerprint-proof and easy to clean.

The mills are designed to work with both salt and pepper, using a ceramic grinder. An adjustable dial on the bottom of each mill can be easily tuned to customize the fineness. An LED light turns on automatically while grinding to guide the volume and position of the pepper or salt being dispensed.

- Suitable for coarse salt and all kinds of peppers
- Suitable for restaurants, hotels, and homes



#### OPERATING INSTRUCTIONS

1. Hold the mill in upright position, open top cover by turning counter-clockwise. Over time, this top will become easier to remove.
2. Remove white plastic sleeve from the battery compartment, insert 4 AA size batteries (not included), put the sleeve back on to secure the batteries inside compartment. **IMPORTANT:** Do not throw away the white sleeve.
3. Pull and separate the upper console (**Figure 1**) from the container base (**Figure 2**) to load pepper or salt. Fill up to 80% full for smooth operation.

Figure 1



Figure 2



4. Align the two metal wires on the upper console with the two metal contacts on the container base, then push the upper console into the container base until it fits in.

5. Hold the mill in upright position and put the top cover back on the upper console while aligning the "arrow" symbol from the top cover to the "unlock" symbol (**Figure 3**) on the container base. Once the top cover is securely fastened onto the container base, rotate clockwise until a "click" sound is heard.



Figure 3

6. Remove the black cap (**Figure 4**) from the bottom of the mill, then push and hold the button on the top to mill. Milling stops immediately when you release the button.
7. To control the fineness of the grind, adjust the control dial on the underside of the mill. Hold the mill in upright position, turn clockwise for finer grind and counter-clockwise for coarser. **NOTE:** Do not adjust the control dial too tight.

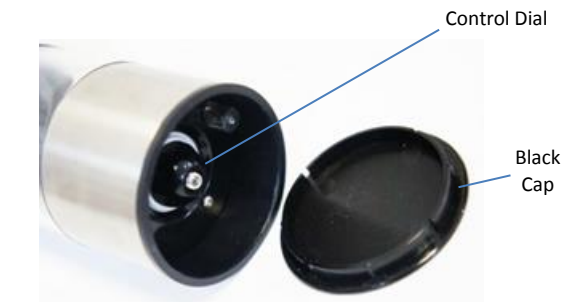


Figure 4



Register Your Product Today!  
[www.iTouchless.com/register](http://www.iTouchless.com/register)

Your Product Model # PM001C

**ATTENTION**

1. The white sleeve cover **MUST** be used to secure the batteries in place.
2. Do not overfill the container base. Fill up to 80% full of pepper or salt for smooth operation.
3. Do not adjust the control dial too tight.
4. Use only 4 AA size batteries. For best results, use alkaline batteries of the same brand.
5. Keep the mill clean and sealed when not in use.
6. Avoid contact with water.

**INSTRUCCIONES OPERATIVAS**

1. Mantenga el molino en posición vertical, abra la tapa de arriba girándola en el sentido contrario al de las agujas del reloj. (El ajuste se aflojará con el paso del tiempo).
2. Quite la manga de plástico blanca del compartimento para baterías, inserte 4 baterías AA, vuelva a colocar la manda para asegurar las baterías dentro del compartimento. **IMPORTANTE:** No deseche el protector de la batería.
3. Hale y separe la consola superior (PASO 1) de la base del contenedor (PASO 2) para cargar pimienta o sal (llene hasta el 80 % para un funcionamiento homogéneo).

PASO 1

protector  
de la  
batería

PASO 2



4. Alinee los dos cables de metal en la consola superior con los dos contactos de metal en la base del contenedor, empuje la consola superior en la base del contenedor hasta que se ajuste.
5. Mantenga el molino en posición vertical, vuelva a colocar la cubierta superior en la consola superior al tiempo que alinea el símbolo de "flecha" de la cubierta superior con el símbolo "desbloquear" de la base del contenedor (PASO 3). Cuando la cubierta superior esté ajustada de forma firme en la base del contenedor, gire en el sentido de las agujas del reloj hasta escuchar un "clic".

flecha  
bloquear  
desbloquear

PASO 3

6. Quite la tapa negra (PASO 4) de la parte inferior del molino, empuje y mantenga presionado el botón que está encima del molino. La molienda se detiene de inmediato al soltar la presión del botón.
7. Para controlar lo fino de la molienda, ajuste el dial de control en la parte inferior del molino. Mantenga el molino en posición vertical, gire en el sentido de las agujas del reloj para lograr una molienda más fina, y en

el sentido contrario al de las agujas del reloj para que sea más gruesa.


**NOTA:** No ajuste el dial de control muy apretado.



PASO 4

**ATENCIÓN**

1. No deseche el protector de la batería.
2. No llene excesivamente la base del contenedor. Llene hasta el 80 % de pimienta o sal para que el funcionamiento sea homogéneo.
3. No ajuste el dial de control muy apretado.
4. Solo use 4 pilas Aeroméxico. Para obtener mejores resultados, recomendamos usar pilas alcalinas de la misma marca.
5. Mantenga el molino limpio y seguro.
6. Evite el contacto con el agua.

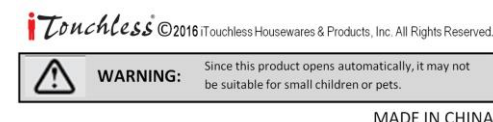**PARTS**

Top Cover



Motor Console



Container Base



White Sleeve Cover



Black Base Cap

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>