

Toaster

User Manual



TAM6202W | TAM6202B

EN

01M-8836333200-4116-04

beko


Please read this user manual first!

Dear Customers,

Thank you for selecting a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:

| | |
|---|---|
|  | Important information and useful hints about usage. |
|  | WARNING: Warnings for dangerous situations concerning the safety of life and property. |
|  | WARNING: Warning for hot surfaces. |
|  | Suitable for contact with food. |
|  | Do not immerse the appliance in water. |



This product has been produced in environmentally-friendly, state-of-the-art facilities.



This product does not contain PCB's.

CONTENTS

1 Important instructions for safety and environment 4

- 1.1 General safety 4
- 1.2 Compliance with the WEEE Directive and disposal of waste products 6
- 1.3 Package Information 6
- 1.4 Compliance with RoHS Directive 6
- 1.5 Plug Wiring 6

2 Toaster 7

- 2.1 Overview7
- 2.2 Technical data.....7

3 Operation 8

- 3.1 Preparation 8
- 3.2 Toasting 8
- 3.3 Toasting frozen bread 9
- 3.4 Warming up already toasted bread 9
- 3.5 Warming up buns 10

4 Information 11

- 4.1 Cleaning and care 11
- 4.2 Storage..... 11
- 4.3 Handling and transportation..... 11

5 Guarantee 12

This chapter contains safety instructions that will help protect from risk of personal injury or material damage.

Failure to follow these instructions will void the granted warranty.

1.1 General safety

- This appliance complies with the international safety standards.
- This appliance can be used by children who are at the age of 8 and above and by people who have reduced physical, perceptual or mental abilities or by people who are deficient in terms of experience and knowledge as long as they are supervised and given the instructions regarding the safe use of the appliance and dangers encountered. Children should not play with the appliance.
- Cleaning and maintenance should not be performed by children unless they are older than 8 years old and supervised.
- Keep the appliance and its power cable so that they are inaccessible by children under 8 years old.
- Do not use the appliance if the power cable or the appliance itself is damaged. Contact an authorised service centre.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- For additional protection, this appliance should be connected to a household residual current device with a rating of 30 mA maximum.
- Use the appliance with a grounded outlet only.
- Do not use the appliance with an extension cord.
- Prevent damage to the power cord by not squeezing, bending, or rubbing it on sharp edges.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not unplug the appliance by pulling the power cable.
- Do not immerse the appliance or its cable in water.
- Do not leave the appliance unattended while it is plugged in.

1

Important instructions for safety and environment

- Exterior surface gets hot while the appliance is in use. Do not touch hot surfaces to avoid risk of burning.
- Do not leave metal cooking utensils and items on cooking plates.
- Operate and store the appliance on a stable surface.
- Do not attempt to dismantle the appliance.
- Only use the original parts or parts recommended by the manufacturer.
- Unplug the appliance before cleaning and let it completely dry after cleaning.
- The appliance is not suitable for outdoor use.
- Food items can catch fire due to overheating. Do not allow the appliance to get in contact or be covered with flammable items such as curtains, fabric, wall panels and etc.
- Do not use the appliance in or near the areas where combustible or inflammable places and materials exist.
- Do not operate the appliance with an external timer or with another remote control system.
- If you keep the packaging materials, store them out of the reach of children.
- Keep the appliance and its power cable so that they are inaccessible by children under 8 years old.
- Allow the appliance to cool before storing it in a cupboard, on a shelf and etc.

1

Important instructions for safety and environment

1.2 Compliance with the WEEE Directive and disposal of waste products



Compliance with WEEE Directive and Disposing of the Waste Product

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.3 Package Information



The packaging used for the appliance is made of recyclable materials. Please ensure that the packaging materials are disposed of as per the applicable local rules in order to include the materials in recycling process for environment protection.

1.4 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.5 Plug Wiring


The moulded plug on this appliance incorporates a 13 A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers are available from any good electrical store.

• Fitting a different plug

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:

- Brown cable = L (Live)
- Blue cable = N (Neutral)
- Green/yellow cable must be connected to ground (E) \equiv line

With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.

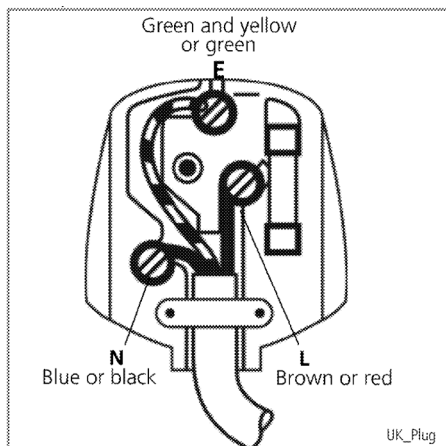

2 Toaster

2.1 Overview



1. Bread slot
2. Start lever
3. Browning control
4. Reheat button
5. Defrost button
6. Stop button
7. Crumb tray
8. Housing
9. Warming rack

2.2 Technical data

| | |
|---------------------|----------------------|
| Power supply | 220-240 V~, 50/60 Hz |
| Power | 730-870 W |
| Color | White / Black |

Technical and design modifications reserved.

The values which are declared in the markings affixed on your appliance or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

3 Operation

3.1 Preparation

1. Remove all packaging and sticker materials and dispose of them according to the applicable local regulations.
2. Before using the appliance for the first time, clean the appliance (See the "Cleaning and care" section).
3. Make sure that the appliance is in an upright position and on a stable, flat, clean, dry and nonslip surface.



When using the appliance for the first time, smoke can develop due to production residues. However, this does not mean the appliance is defective. The first time you switch it on use the appliance as you normally would but without bread. It is recommended to use the medium setting of the browning control (3). Ensure for proper room ventilation.

3.2 Toasting

1. Connect the power plug into the wall socket.
2. Insert only one slice of bread in each of the two bread slots (1).
3. Using the browning control (3) select the desired degree of browning between 1 and 7.



Pushing 1 from the browning control (3) will give the lightest degree of browning and pushing 7 the darkest.



The browning degree can vary depending on the type of bread.



When toasting several slices of bread consecutively, the toaster will become hotter and therefore the bread will gradually become darker. Therefore select an appropriate browning degree. Let the toaster cool down after each toasting process for minimum 30 seconds.



The browning degree of one slice is darker than two slices, although the browning control (3) is set to the same level.

4. Press the start lever (2) until it automatically snaps into place.
 - The toasting process begins. The indicator light of the stop button (6) and the button of the browning control level (3) illuminates during the toasting process.



If the power plug is not connected to the wall socket, the start lever (2) does not snap into place.



The degree of browning can also be adjusted during the toasting process with the browning control (3).

5. The appliance automatically switches off as soon as the set degree of browning has been reached.
 - The start lever (2) springs back up and the stop button (6) light goes off. The toast slices are pushed upwards and can be taken out of the toaster.



To cancel the toasting process before it has finished, press the stop button (6). The start lever (2) springs back up and the toast slices can be taken out of the toaster.

3 Operation



After the start lever (2) springs back up, you can use the high-lift function by pushing the start lever (2) upwards.



WARNING: Be very careful when taking the toast slices out of the toaster as the metal parts of the toaster and also the bread can become very hot.

6. Disconnect the appliance from the wall socket.



If toast slices get stuck in the toaster, switch the toaster off immediately by pressing the stop button (6). Pull the power plug out of the wall socket. Let the toaster cool down completely. Carefully try to take the bread out of the toaster without damaging the sensitive heating elements and other parts. Do not use any electroconductive objects to remove the bread from the toaster.

3.3 Toasting frozen bread

1. Follow the steps from 1 to 4 of the "Toasting" section.
2. Press the defrost button (5).
 - The indicator lights of the defrost button (5) and stop button (6) illuminate and the toasting process begins.



When the defrost button (5) is pressed, the toasting process takes longer than with normal toasting.

3. The appliance automatically switches off as soon as the set degree of browning has been reached.

- The start lever (2) springs back up; defrost button (5) and the stop button (6) lights go off. The toast slices are pushed upwards and can be taken out of the toaster.



To cancel the toasting process before it has finished, press the stop button (6). The start lever (2) springs back up and the toast slices can be taken out of the toaster.



After the start lever (2) springs back up, you can use high-lift function by pushing the start lever (2) upwards.



WARNING: Be very careful when taking the toast slices out of the toaster as the metal parts of the toaster and also the bread can become very hot.

4. Disconnect the appliance from the wall socket.

3.4 Warming up already toasted bread

1. Follow the steps from 1 to 4 of the "Toasting" section.
2. Press the reheat button (4).
 - The indicator lights of the reheat button (4) and stop button (6) illuminate and the warming up process begins.
3. The appliance automatically switches off as soon as the set degree of warming has been reached. The start lever (2) springs back up; reheat button (4) and the stop button (6) lights go off. The toast slices are pushed upwards and can be taken out of the toaster.



To cancel the toasting process before it has finished, press the stop button (6). The start lever (2) springs back up and the toast slices can be taken out of the toaster.

3 Operation



After the start lever (2) springs back up, you can use high-lift function by pushing the start lever (2) upwards.



Be very careful when taking the toast slices out of the toaster as the metal parts of the toaster and also the bread can become very hot.

4. Disconnect the appliance from the wall socket.

3.5 Warming up buns

This toaster is equipped with an external warming rack (9).



Do not toast bread and warm up buns at the same time.



Do not warm up toast slices on the warming rack (9). The toast slices hinder sufficient ventilation.



If you accidentally activate the wrong mode (defrost instead of reheat or reheat instead of defrost), then the selected mode must be cancelled first by pressing the stop button (6) before you can select the right mode.

1. Put the warming rack on the housing (8) and place it into the gaps
2. Place the buns on the warming rack (9).
3. Connect the power plug into the wall socket.
4. Using the browning control (3) select the desired degree of warming.
5. Press down the start lever (2).
 - The indicator light of the stop button (6) illuminates and the warming up process begins.
6. Turn the buns in order to reach a consistent browning.

7. The appliance automatically switches off as soon as the set degree of warming has been reached.

- The start lever (2) springs back up; and the stop button (6) light goes off.



To stop the warming up process before it has finished press the stop button (6).

8. After warming up the buns take them off the rack and put the warming rack by the warming rack handles off.

9. Disconnect the appliance from the wall socket.



WARNING: The buns and the housing (8) of the toaster can become very hot during and directly after the toasting process. Do not touch them with bare hands.

4 Information

4.1 Cleaning and care



WARNING: Never use petrol solvents, abrasive cleaners, metal objects or hard brushes to clean the appliance.



WARNING: Never put the appliance or power cord in water or any other liquids.

1. Turn the appliance off and disconnect it from wall socket.
2. Let the appliance cool down completely.
3. Remove the crumbs after each use by pulling out the crumb tray (7). Before pushing back the crumb tray in the appliance make sure that the tray is dry. Do not let bread crumbs accumulate inside the toaster, they may cause fire.
4. Turn the toaster upside down and shake it slightly to remove bread crumbs from inside.
5. Use a damp soft cloth and a small mild cleanser to clean the housing (8) of the appliance. Dry the housing thoroughly.



Before using the appliance after cleaning, dry all parts carefully using a soft towel.

4.2 Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.
- Make sure the appliance is unplugged, cooled down and completely dry.
- Wrap the power cord around the cable coil on the bottom of the toaster.
- Store the appliance in a cool, dry place.
- Make sure the appliance is kept out of the reach of children.

4.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance will render it non-operational or cause permanent damage.

5 Guarantee

Product Guarantee

12 months breakdown and repair guarantee

Guarantor: **Beko plc, 1 Greenhill Crescent, Watford, Hertfordshire. WD18 8UF**

The guarantee does not in any way diminish your statutory or legal rights.

Your **appliance** has the benefit of our manufacturer's guarantee which covers the product for 12 months from the date of original purchase.

This gives you reassurance that if within that time, your **appliance** is proven to be defective because of either workmanship or materials, we will at our discretion either repair or replace your **appliance**.

The **appliance** must be correctly installed, located and operated in accordance with the instructions contained in the user manual. The guarantor disclaims any liability for accidental or consequential damage.

The Guarantee is subject to the following conditions:

- Documentary proof of the original purchase date is provided.
- The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The appliance is used only on the electricity supply on the rating plate.
- The appliance has only been used for normal domestic purposes.
- The appliance has not been altered, serviced, dismantled or otherwise interfered with by any person.
- The appliance is used in the United Kingdom or Republic of Ireland.
- Any parts removed during repair work or any product that has been replaced becomes our property.
- The guarantee is not transferrable if the product is resold.

The Guarantee does not cover:

- Transit, installation or delivery damage.
- Accidental damage.
- Misuse or abuse.
- Replacement of any consumable item or accessories. These include but are not limited to: plugs, cables, light bulbs, knobs, filters and flaps.
- Repairs or replacements required as a result of unauthorised repairs or inexperienced installation that fails to meet the requirements contained in the user guide or instruction book.
- Repairs to products used in commercial or non-residential household premises.

How to obtain after sales service, help or general advice

Please keep your purchase receipt or other proof of purchase in a safe place as you will need to show us this document if your product requires attention within the guarantee period.

Please also record your product details below, which will allow you to access our services more quickly and help us identify your product. The model number is printed on the front of the user guide and the serial and model number is shown on your products rating plate.

| Model number | Serial number | Purchased from | Date of purchase |
|--------------|---------------|----------------|------------------|
| | | | |

Please call our UK based Customer Service department if you need help or advice from us:

United Kingdom and Northern Ireland: **0845 600 4911 / 0345 600 4911**
Republic of Ireland: **01 862 3411**
You can also contact us through our website: **www.beko.co.uk**



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>