

CAR MULTIMEDIA SAN MARINO 350



Enjoy it.


Operating instructions

NOTE: Please do not watch videos or use Apps while the vehicle is in motion. Doing so, is a safety violation. To watch videos or use Apps, please ensure that the vehicle is in parked mode with handbrake activated. Please check compatibility of the device with your mobile phone before purchase. New phone software versions in the future may or may not be compatible with the device. In-Warranty replacement will not be applicable for non compatibility of mobile phone with the device.



- 1 Microphone
- Power key
 Short press: Switch on device
 In operation: Press to mute audio source
 Long press: Switch off device
- ③ HOME key Short press: Return to home page at any point Long press: Display clock
- Volume increase key
 Short press: Increase volume step by step
 Long press: Increase volume automatically

- (5) Volume decrease key Short press: Decrease volume step by step Long press: Decrease volume automatically
- Reset button
 Restore to default factory settings of the device.
 Caution! All personal settings will be lost!
- Media SD Card Slot The card reader supports microSD cards on which audio/video files are stored.
- (8) Infrared receiver for remote control
- (9) Touchscreen user interface

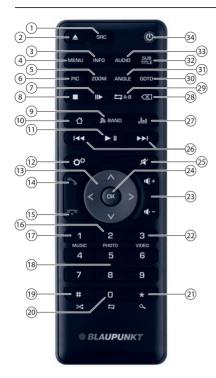

- 1 SRC button Select source
- ② ≜ button Eject a DVD/CD
- 3 **INFO** button Show information on the display
- 4 MENU button Call up DVD menu
- 5 **ZOOM** button Zoom in on image area
- PIC button Adjust the display brightness
- 7 **■** button Slow-motion playback
- 8 button Quit playback
- BAND button
 Select waveband/memory bank
- 10 🖒 button Call up main menu

- ① ► II button
 Start and interrupt playback
- (12) O button
 Call up settings menu
- (3) </>/ \/ / \/ button
 Navigate in menus and change settings
 Starting station seek tuning (</>
 Calling stored stations (\(/ \/) \)
- 14 Sutton
 Answer a call
- (15) toutton
 End/reject a phone call
- (16) **PHOTO** button

 Call up folder overview of images
- (7) MUSIC button
 Call up folder overview of audio files
- (18) Number buttons **0 9**
- (19) ★ button Random track play / Shuffle
- 20 🛱 button Repeat function
- 21 button Scan function
- 22 **VIDEO** button

 Call up folder overview of movies
- 23 **+ / -** button Adjust volume
- ② **OK** button Confirm selection
- 25 button
 Mute audio source
- ②6 I◄◄/►►I button Short press; Tune into stations manually; select title, chapter, movie
- 27 Les button Equalizer
- 28 🗷 button
 Delete last character of an entry

Long press: Fast Search

- 29 🛱 A-B button
 Define range for repeat function
- (30) **GOTO** button

 Calling up direct input for FM transmitter track, chapter, movie or playtime
- (3) ANGLE button Select camera viewing angle (if available on DVD)
- 32 **SUBTITLE** button
 Select subtitle language (if available on DVD)
- (33) AUDIO button Select playback language (if available on DVD)
- (34) (1) button Switching device on/off

Contents

Safety notes	05	Rear Camera Input	12
Symbols used	05	External monitor	12
Road safety	05		
General safety notes	05	Sound settings	13
Declaration of conformity 05		Audio distribution (fader/balance)	13
		Equalizer	13
Cleaning notes	05		
		General settings	13
Disposal notes	05	General	13
		Radio	13
Scope of delivery	06	Video	13
Dissipaths device in energica	06	SWC	13
Placing the device in operation Switch on/off	06 06	Wallpaper Data and Time	13
Volume	06	Data and Time Display	13 13
Main menu	06	Software Vision	13
Set the reception area	06	PhoneLINK*	14
Set the reception area	00	Digital Clock	14
Radio mode	07	Digital Clock	14
Start radio mode	07	Useful information	14
Select memory bank	07	Warranty	14
Tune into a station	07	Service	14
Starting station seek tuning	07	Service	14
Store stations manually	07	Instructions on Phone Link	15
Storing stations automatically (Travelstore)		matructions on I none Link	
, , , , , , , , , , , , , , , , , , ,	07	Connection diagram	16
Scaning stations	07	connection diagram	
Switch RDS on/off	07	Appendix	17
Switching the REG function (regional programme	es)	Аррениіх	17
on/off	07	USB/SD Support Files	18
Switch the AF (alternative frequencies)		oss, so support mes	
function on/off	07		
Switch the TA (Travel Announcement)			
function on/off	07		
Adjust the seek tuning sensitivity	07		
Select the programme type and start			
seek tuning	80		
USB/microSDHC media playback	09		
Basic information	0 9		
USB data carrier	09		
microSDHC cards	09		
Audio playback from USB or microSDHC	09		
Video playback from USB or microSDHC	09		
Image playback from USB or audioSDHC	09		
Bluetooth mode	10		
Starting Bluetooth mode	10		
Phonebook	11		
Register Bluetooth devices	11		
Telephone mode - Bluetooth	11		
Audio playback - Bluetooth	12		
Bluetooth settings	12		

12

12

AV-IN input

External audio/video sources

Safety notes

The car audio system was manufactured according to recommended and established safety guidelines in a state of the art facility. Even so, damage may occur if you do not observe the safety notes in these instructions.

These instructions are intended to familiarize you with the most important functions.

- Read these instructions carefully and completely before using the car audio system.
- Keep these instructions at a location so that they are always accessible to all users.

In addition, observe instructions of the devices used in conjunction with this caraudio system.

Symbols used

These instructions employ the following symbols:



Warns about injuries



CAUTION!

Warns about damages to the DVD/CD drive



DANGER!

Warns about high volume



The CE mark confirms the compliance with EU directives

- Identifies a sequencing step
- Identifies a listing

Road safety

Observe the following notes about road safety:

- Use your device in such a way that you can always safely control your vehicle. In case of doubt, stop at a suitable location and operate your device while the vehicle is parked. As the driver, you may not use the applications that will distract you from traffic (depending on the scope of functions of the device (e.g., viewing videos etc).
- Follow driving recommendations during the route guidance only if you are not violating any traffic regulations! Traffic signs and traffic regulations have always priority over driving recommendations.
- Always listen at a moderate volume to protect your hearing and to be able to hear warning signals (e.g. police sirens). During mute phases (e.g. when changing the audio source), changing the volume is not advisable. Do not increase the volume during this mute phase.

General safety notes

Observe the following note to protect yourself against injuries:

Do not modify or open the device.

Use as directed

This car audio system is intended for installation and operation in a vehicle with 12 V vehicle system voltage and must be installed in a 2DIN slot. Observe the output limits of the device. Repairs and installation, if necessary, should be performed by a specialist.

Installation instructions

You may only install the car audio system yourself if you are experienced in installing car audio systems and are very familiar with the electrical system of the vehicle. For this purpose, observe the connection diagram at the end of these instructions.

Declaration of conformity

Blaupunkt India Pvt. Ltd. declares that the device complies with the basic requirements and the other relevant regulations of the RED Directive 2014/53/EU.

Cleaning notes

Solvents, cleaning and scouring agents as well as dashboard spray and plastics care products may contain ingredients that will damage the surface & screen of the audio system.

Use only a dry or slightly moistened cloth for cleaning the car audio system.

Disposal notes



Do not dispose of your old unit / batteries in the household trash.

Use the return and collection systems available to dispose of the old device, the remote control and exhausted batteries.

Warning

Do not ingest the battery, Chemical Burn Hazard

The remote control is supplied with a coin/button cell battery. If this battery is swallowed, it can cause severe internal burns & lead to death in 2 hours.

Keep new & used batteries away from children.

If the battery compartment does not close securely, stop using the product & keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Scope of delivery

The scope of delivery includes:

- Car audio system
- Remote control (incl. battery)
- · External Bluetooth microphone
- · Getting started
- Small parts set
- Installation material
- Connecting cables

Placing the device in operation

Caution!

Transport securing screws (where applicable)

Ensure that the transport securing screws at the top side of the device are removed before startup of the device.

Switching on/off

Switching on/off with the power key

- To switch-on, press the key ②
- To switch-off, hold the key ② pressed for more than 2 seconds.

Switch on/off via vehicle ignition

If the car audio system is connected with the vehicle ignition turning off the ignition key also switches off the device. Switching on the ignition will turn on the device.

Volume

Adjusting the volume

You can adjust the volume in steps from 0 (off) to 40 (maximum).

◆ Press key ④ & ⑤ to change the volume.

Muting the car audio system (Mute)

◆ Briefly press the key ② to mute the device or to return to previous volume.

Main menu (Home)

In the main menu, please touch the buttons on the touchscreen to call up different sources and operating modes.

- Press the **HOME** key ③
- The main menu (home page) is displayed.
- Press [Display Off] turn off screen display, the audio output will keep working. Touch anywhere on the screen and the display comes on.



As long as you do not select a new audio source, the last active audio source continues to play.

Note:

The figures used in these instructions are intended to facilitate explanation. Some details may vary in your device.

Setting the reception area

This car audio system is designed for operation in different regions with different frequency ranges and station technologies. The factory default of the reception area is "India". If you operate the car audio system outside India, e.g. in the US or Europe, you may first have to set a suitable reception area in the menu:

- On the home page, press the [Settings] button. The Settings menu is displayed.
- In the bottom area of the Settings menu, press the [Radio] button.
 - The current setting is displayed under "Radio Region".
- Tap on the [Radio Region] triangle symbol to display the list of available reception areas. The selected reception is set.
- Press the [↑] button.
- The main menu is displayed again.

Radio mode

Start radio mode

In the main menu, press the [Radio] button.
 The radio page menu is displayed.



Select FM / AM band

Up to 30 stations can be stored in each memory bank.

Press the [FM] or [AM] button

Tuning into a station

Tuning into stations manually

Station seek tuning

 Press the [] or [] button for approx. 2 seconds to start station seek tuning. The radio tunes to the next receivable station.

Note:

For the reception area Europe: In the FM wave band, only traffic announcement information stations are tuned into if priority for traffic announcement feature is switched on.

Storing stations manually

- Select [FM] or [AM] button.
- Set the desired station.
- Press one of the memory buttons [1]-[30] for approx. 2 seconds to store the current station at the button. The station is stored

Storing stations automatically (Travelstore)

Upto 30 stations can be stored under the FM band and AM band separately.

Note:

For Europe reception area: If traffic announcement is switched-on, only traffic announcement stations are stored.

Scanning stations

You can use the scan function to play all the receivable stations of the current waveband for a few seconds.

Press the [] button.

The seek tuning searches for stations in the current waveband. Each receivable station is played for a few seconds in the process.

 Pressing the [] button again selects the currently scanned station and plays it back.

Switching RDS on/off

Many FM stations broadcast an RDS (Radio Data System) signal in addition to their programme in the Europe reception area that allows additional functions, such as the display of the station name.

- On the home page, press the [Settings] button. The Settings menu is displayed.
- In the bottom area of the Settings menu, press the [Radio] button
 - Tap on the [RDS] triangle symbol to turn RDS on/off.
- If the RDS function is switched on, RDS is displayed in white
- Tap on [RDS] button for RDS menu
- Press the [♠] button. The main menu is displayed again.



Switching the REG function (regional programmes) on/off

Some RDS stations divide their programmes into regional programmes with different content at certain times. If the REG function is activated, the car audio system changes

only to those alternate frequencies of the set station on which the same regional programme is being broadcast.

 Press the [REG] button to switch the REG function on or off.

If the REG function is switched on, **REG** is displayed in white.

Switching the AF(Alternate frequencies) function on/off

If the AF function is activated, the car audio system automatically tunes into the best receivable frequency for the station that is currently set.

 Press the [AF] button to switch the AF function on or off. If the AF function is switched on, AF is displayed in white.

Switching the TA (Travel Announcement) function on/off

If the TA function is activated, the car audio system automatically receive travel announcement.

- Press the ITA1 button to switch the TA function on or off.
- If the TA function is switched on. TA is displayed in white.

Adjusting the seek tuning sensitivity

The seek tuning sensitivity decides whether the automatic station seek tuning finds only strong stations or also weaker stations that may be noisy.

 Press the [LO] or [DX] button to adjust the sensitivity of station seek tuning. If **LO** is displayed, only stations with a strong signal are found during seek tuning.

If **DX** is displayed, stations with a strong and weak signal are found during seek tuning.

Selecting the programme type and starting seek tuning

You can select a programme type with the PTY function to search for stations of a particular genre, for example, stations that broadcast rock music, sport events or news.

- that broadcast rock music, sport events or news.

 Press the [PTY] button to display the programme types.
- Scroll through the list with [◀] / [▶] and tap on the desired programme type to start PTY seek tuning.
- If a station broadcasts a programme with the selected programme type, this station is played back.

USB/microSDHC media playback

Rasic information

The car audio system can be used to play MP3 files as well as MP3 or WMA files on USB data carriers and mSDHC cards.

In addition, you can view movies and images from USB data carriers and mSDHC cards on the display or a connected monitor.

For safety reasons, the playback of movies and images on the integrated monitor is allowed only while the vehicle is parked and the hand brake is applied. The "BRAKE" cable must be connected with the hand brake connection of the vehicle (see Connection diagram at the end of these instructions). The movie playback on an external monitor in the rear is possible while driving.

Notes:

Blaupunkt cannot guarantee flawless function of copyprotected USB data carriers and mSD cards available 1n the market.

Note the following information when preparing an MP3/ WMA data carrier: (max. 32GB)

- · Naming of tracks and directories:
 - Max. 32 characters without the file extension "mp3" or ".wma" (the use of more characters reduces the number of tracks and folders that the car audio system can recognize)
- USB format/file system: mass storage device / FAT / FAT16 / FAT32 (max. 32GB)
- mSD card file system: FAT/FAT16/FAT32 (max. 32GB)
- File extension of audio files
 - .MP3 for MP3 files
 - .WMA for WMA files
- WMA files only without Digital Rights management (DRM) & created with Windows Media® Player version 8 or later
- · MP3 ID3 tags: Version 1 and 2
- · Bit rate for creating audio files:
 - MP3:32 to 320 kbps
 - WMA: 32 to 192 kbps

USB data carrier

Device features a USB port at the back

Connecting a USB data carrier

- Insert the USB data carrier in the USB socket.
 - The device automatically switches to USB mode. The data is read, and playback starts with the first media file recognized by the device.

Removing the USB data carrier

- Turn off the car audio system.
- Disconnect the USB data carrier

microSDHC cards

This device features 1 microSD card slot located at the front of the device.

Inserting the microSDHC card

 Insert the microSDHC card with its labelled side to the right (flattened corner to the top) and its contacts metal side first into the card slot @ until it clicks into place.

The device automatically switches to microSDHC mode. Once the data is read, playback starts with the first media file recognized by the device.

Removing the microSDHC card

- Push on the microSDHC card until it disengages.
- Pull the microSDHC card out of the card slot ∅.

Audio playback from USB or mSDHC

The principles of audio playback (MP3/WMA) from data carriers are identical for all sources.

- Select the desired source via the main menu. The device changes to the desired source and the playback starts.
- If the playback does not start with the audio playback,
- press the [] button to previous folder list and change to the other folder/file list.
- Press the [
] button to display all folders in the data carrier.



- [\(\)] Scroll up through the list page by page.
- [▼] Scroll down through the list page by page.
- [1 Turn back previous folder.
- [] Briefly tap open folder.
- [▶] Open selected file.

After choosing a title, the playback menu is displayed.



- [] Display the folder/file list.
- [M] Short press: Play previous file. Long press: Fast search.
- [II/>] Interrupt playback and continue playback.
- [M] Short press: Play next file. Long press: Fast search.
- [] Start and end REPEAT function.

The REPEAT mode changes each time the [■] button is pressed

[X] Start MIX random track play & end it again.

If the MIX function is switched on, the symbol is displayed in white.

The MIX mode depends on the selected REPEAT function.

[III] Display equalizer.

Video playback from USB or mSDHC

- Select the desired source from the main menu. The device changes to the desired source and the playback starts.
- If the playback does not start with the video playback,
- press the [] button to previous folder list and change to the folder/file list.
 - Press the []] button to display all the folders of the data carrier.

Note:

Folders and videos are selected and started as described under audio playback.

If you select a movie, playback starts. During movie playback, the playback menu is hidden.

 Briefly touch the touchscreen once to display the playbackmenu again. The playback menu is shown.



[] Display the folder/file list.

[M] Select previous movie.

[II/▶] Interrupt playback and continue playback.

[] Select next movie.

I I Display equalizer.

[] Switch repeat function for movie or folder on/off.

[X1Start MIX random track play & end it again.

Image playback from USB or mSDHC

- Select the desired source via the main menu
- The device changes to the desired source and the playback starts.

If playback does not start with the image playback,

- press the [] button to previous folder list and change to the folder/file list.
- Press the [] button to display all the folders of the data carrier.



- □ 1Rotate image.
- [📵] Zoom in.
- []Zoom out.

Note:

Folders and images are selected and start as described under audio playback.

Bluetooth mode

The Bluetooth® function allows pairing cell phones & BT equipped media playback devices with the car audio system.

Once you pair a cell phone with the car audio system, you can make phone calls with the built-in hands free function. You can access the list of dialled numbers and the phone book of the registered cell phone after selecting "Sync" option.

If the connected Bluetooth® device supports the functions like A2DP and AVRCP, you can play music via the car audio system and control playback. During a call, music playback is interrupted and resumes again after the call.

If a cell phone is paired via Bluetooth® and a call is received during playback, the source playback is interrupted and the call menu is displayed.

Starting Bluetooth mode

- Select In the main menu, press [Phone].
- The Bluetooth® menu is displayed. It contains the phone log list



- [**\Lambda**] Scroll up through the list page by page.
- [▼]Scroll down through the list page by page.
- 「 **¼** 1 Dialed out number list
- [&] Incoming call list
- [III] Display keypad menu.
- [] Display phonebook, device will download phonebook every time its in pairing range
- [📳] Display Bluetooth® settings menu

Briefly tap contact bar of phone log / phonebook to make a phone call

Phonebook

- Select phonebook menu, Press []. The following menu
- Briefly touch [], the keypad will pop up. Input the letter to search contact.





Note:

Phone book sync: To be able to access the phone Log / phonebook of a connected mobile phone / device, you must allow sync phonebook on your mobile phone. Car audio system support up to 1024 numbers.

Phone Log / Phonebook download: Once device is paired with the car radio & sync option is selected the car radio begins downloading the phone log and phonebook. Should this be interrupted the download will begin the next time the device is within range & connected to the car radio.

Connection status - If a mobile phone/device is connected with the car audio system, the Bluetooth®icon is displayed at the top right corner of the display in all audio/video sources.

Registering Bluetooth devices

If you want to pair a device with the car audio system for the first time, proceed as follows:

- Select phone on the car audio system and on your Bluetooth® device.
- Search for new devices/connections on your Bluetooth®
- In the options menu of the Bluetooth® mode, enter a pairing code (see Bluetooth® settings). The car audio system appears as "BP 350" in the list of
- Bluetooth® devices
- To establish the connection; you may have to enter the pairing code that was previously entered on the car audio system.

Once paired successfully the menu for the registered device is displayed.



- you want to establish a connection.
- When the device is in range, the connection is established & the menu for the device is displayed.
- Press the [] 1 button if you want to delete the Bluetooth® device from the list.

Telephone mode - Bluetooth

Press the [111] button the following menu appears.



- Enter a phone number with the keypad & press the [1 1 button. -Or-
- Briefly tap a contact / number via the caller list or phone book in the pop-up window. If there's an incoming call. the call menu is displayed.



[Reject a call.

[Answer a call.

[Microphone mute.

[Switch between mobile phone & car audio during phone call.

Audio playback - Bluetooth

If an audio streaming device is connected with the car audio system via Bluetooth®, you can play back music via the car audio system & control playback.

Press the [BT Music] button to switch to audio playback.



[M] Previous track.

[> ||] Interrupt playback and resume playback.

[₩] Next track.

Bluetooth settings

In the BT Setup menu for Bluetooth®, you can make the basic settings for the Bluetooth® mode.

Press the [] button.
 The BT Setup menu is displayed.



Bluetooth - Bluetooth® can be switched on or off.

Auto connect – If "Auto Connect" is activated, the device automatically connects with known Bluetooth® devices as soon as they are in range.

Auto answer – If "Auto Answer" is activated, incoming phone calls are automatically answered.

Pin code – Many Bluetooth® devices request a pairing code before establishing a connection.

Note:

Car audio will search and connect with the Bluetooth® device in range when auto connect switched on, and then will stop to search if no device is in range after 10 minutes. You can connect a device again by selecting device on the list

External audio / video sources

AV-IN input

This device features a external AV input for audio and video playback. The AV-IN input is located at the rear of the radio.

Select [AV IN] on HOME screen.

The display shows the audio or video playback of this AV source.



Rear Camera Input

This device features a video input at the rear of the device for connecting a rear view camera that is available as an option (sold separately). If a rear view camera is connected, the image is displayed on the screen, when the reverse gear is engaged.

 Connect REVERSE wire to reverse lamp power supply to detect when the reverse gear is engaged

External monitor

This device features a video out for connecting an external monitor for passengers in the rear seat (see Connection diagram at the end of these instructions).

 Select the desired source via the main menu and start movie playback, e.g. from a USB.

The image is displayed on the rear monitor.

Sound settings

Audio distribution (fader/balance)

You can adjust the sound distribution in the vehicle for all sources.

- In the main menu or on the control bar of the current audio source, press the [EQ] button.
- The equalizer menu is displayed.
- The menu for fader and balance is displayed.



- Adjust fader & balance with [].
- Reset fader and balance to 0 with [1].
- Turn on the [Loud] button to increase bass at low volume.

Equalizer

You can adjust the equalizer for all sources.

 In the main menu or on the control bar of the current audio source, press the [] button.

The equalizer menu is displayed.



- Select a preset equalizer via the buttons.
 - -Or-
- Press the [User] button to set the levels of the available frequency bands according to your preferences.

Note:

With the [] button, you can reset the customised setting again.

General settings

In the settings menu, you can adjust the general settings for the different functions of the device to suit your requirements.

In the main menu, press the [Settings] button.
 The settings menu is displayed, the General sub menu is

activated.



Call up the sub menus with the menu bar.

General

The following settings are possible:

Beep - Switch confirmation beep on/off.

 $\mbox{\bf Back}$ $\mbox{\bf Camera}$ $\mbox{\bf Mute}$ - Switch voice output on/off when reversing.

ON Volume - Select the preset volume level every time the car audio system is switched on.

Radio

The following settings are possible:

Radio region – Select the reception region for radio reception.

 $\textbf{RDS}-\text{Turn}\,\text{on/off}\,\text{RDS}\,\text{function}.$

Video

The following settings are possible:

 $\textbf{Aspect ratio} - \mathsf{Setup} \, \mathsf{display} \, \mathsf{aspect} \, \mathsf{ratio}.$

 $\textbf{Parking Signal} \text{-} Turn parking detect on/off.}$

Camera mirror - Invert rear camera image.

 ${\bf SWC}$ – The buttons of the connected steering wheel control can be configured here.

Wallpaper - Select favorite wallpaper for home menu.

Date and Time - Set date and time.

The following settings are possible:

Date - Set the date.

Clock mode – Select between 12 and 24-h mode.

Time - Set time.

Display

The following settings are possible:

Brightness - Adjust screen display brightness.

Contrast - Adjust screen display contrast.

Color - Adjust screen display color.

Press [Reset] to return to factory default settings.

Software version – Displays current software version. The following settings are possible:

Load factory reset - Resets all personalised settings.

If your device should need service, you can find information

Call 1800 209 6820 for the location of an authorized service

PhoneLINK*

New PhoneLINK feature allows you to connect your Android and iOS Smartphones to this car audio system radio using

your mobile phone data cable. Enjoy all functions & applications on your Android phone via the in-dash radio.

 View your smart phone images on the radio display. Play music from your phone.

· Access your phone contacts & apps.

Check your Email / Messages.

*Check compatibility with your Android phone before purchase.

Please turn to the next page for instructions to turn on debugging on your phone (Android devices only).

Check the below given video link for instructions; https://youtu.be/nOM1WDjjAGQ

Digital Clock

Long press of the home button displays an Digital Clock. To exit Digital clock mode press home button again.

We provide manufacturer's warranty for products bought within the India. For devices purchased outside the India, the warranty terms issued by our respective responsible

domestic agency is valid.

about service partners at www.blaupunkt.com

center near you.

Email: Support@blaupunkt.in

Service

OR

Warranty

Useful information

General setting | Useful information

Please follow the below instructions to turn on debugging on your phone.

Some steps may be different on different phones please also refer to your mobile phone instruction manual.

1. Go to Settings

2. About Phone

3. Build Number









6 to 8 times

About phone


Application accuracy practical district conditions of the property of the prop

deal year on

Epildinumos spriberumos





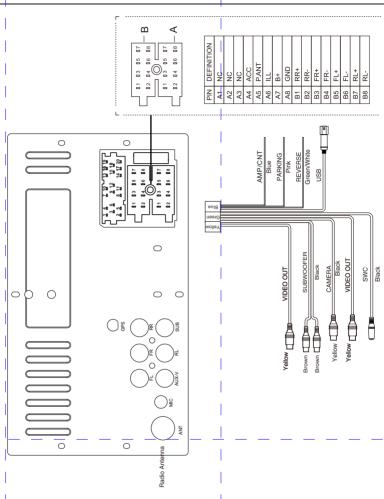

Subject to changes!

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



 Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

FCC Statement

- 1. This device complies with Part 15 of the FCC Rules.

 Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the ser's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 centimeters between the radiator and your body.

@ 2019 All rights reserved by Blaupunkt. This material maybe reproduced, copied or distributed for personal use only.

SM350 USB/SD supported media files

Video files

File format	Supported video code	Supported video profile	Supported audio code	Video bitsae limit	Supported file extention
AVI	MPEG-2 MPEG-4 Visual	MPES-2 Simple, Main, High MPES-4: Advanced		Bitrate/28Mbps Resolution:1080 Frame rate/30fps	avi xvid
MKV	MPBG-4 Visual AVC VC1 WMMV3 RX40 VFW RX30	MPEG-4 Visual: Simple, Advanced simple AVC: High, Main, Baseline	MPx port AAC ACS OGG FLAC	Bitrate/30Mbps Resolution/3080 Frame rate/30fps	untor
qт	\$263 MPMY MIPG IPEG MIPA AVICI H264 AVICI S264	AVC Baseline, Extended, Main, High JPEG Quicklime MPEG-4 Vasual Main, Simple, Advanced simple, Quicklime advanced simple SGPH: AVC, H-2KS, MPEG-4 Visual SGPH: H2KS, MPEG-4 Visual	MP3, NP4A, AAC, PCN, ANR	Strate: 10Mbps Resolution: 1080 Frame: sate: 30fps	mp4 mov 3gp
MPG	MPEG Video-1 MPEG Video-2 AVC	MPES Video: Main, High		Bitrate:30Mbps Resolution:1080 Frame rate:30fps	.mpeg .mpe .det .vob
KSEĮWIMY)	XVID MP45 M452 DIV3 DIV4 DISSO WMV3 WVC1 PMMVA	VC-1: Simple, Main, Advanced	WMA	Brinster 10M bps Resolution 1090 Frame rate 200 ps	
RV	AVC H263 H264	AVC: Baseline, Main, High	MP3. AAC	Bitrate 4.5Mbps Resolution: 1080 Frame: rate: 30fps	.tv
RMV0	RV30 RV40	RV30: Restrideo 8 RV40: Restrideo 9, 10	Cook Reac Resp	Strate:10Mbps Resolution:1080 Frame:nate:30fps	.mvb .m .mv
73	MPEGI MPEG2 H264 AVC	AUC: Main, High MPEG Victor: Main	Private1_AC3. AC3. MPEG1. MPEG2. DRA	Sitrate 20Mbps	.ts .múta

Audio files

File format	Supported audio code	Audio bitrate limit	Supported file extention
MP3	MP1/MP2/MP3	8 to 384dsps	.mp2 .mp3
WWA	WMAT/8/9	<384kbps	write
AAC	MPEG-2/4 LC-AAC	8 to 192kbps	
WAVE	PCM, IMA_ADPCM, MP1/3, MULAW	NA.	wave
FLAC		NA.	fac
APE	Version 3950~4060, Compress Levet fast/normal/high BitsPerSample B/16/24 bits	NA.	ape
066	Vorbis	NA.	000

Image files

File format	Supported file	Limitation	Supported file extention
PEG	Bassline IPEG Progressive IPEG	No support YCbCr/YIQ, CIVYK	JPG JPRG
DMP	Wo header, Code header, Non-	No support Compression	.bmp
GF	8.7a, 8.9a	No support Interlace	0x
TIFF		No support YC5Cr, CE No support COTT, I.D. CCTT_GROUP3, 2D. CCTT_GROUP4_FAX, IPEG	.se
PNG	Grayscale 1/2/4/8/16bit, RG8 B/16bit, RG8 Indes 1/2/4/8 bit, Ontical chunks, Compression, Ritering, Interlacing		.trg

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com