

COSTWAY

Model:HW54235



PLEASE READ AND SAVE THESE INSTRUCTIONS

SAFETY INFORMATION

When using electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Use the fan only as described in this manual. Other use is not recommended and may cause fire, electric shock or injury to persons.
2. This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
3. To protect against electric shock, do not place fan in window, immerse unit or cord in water, or spray with liquids.
4. This appliance has a polarized plug (one blade is wider than the other).To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.DO NOT attempt to defeat this safety feature.
5. Close supervision is necessary when any appliance is used by or near children.
6. Turn the fan OFF and unplug from the outlet when not in use, when moving the fan from one location to another or before cleaning.
7. To disconnect the fan, grip the plug and pull it from the wall outlet. Never pull by the cord.
8. Do not operate the fan in the presence of explosive and/or flammable fumes.
9. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
10. Do not operate the fan with a damaged cord or plug, or if the product malfunctions, or if it is dropped or damaged in any manner.
11. Avoid bodily contact with moving fan parts.
12. The use of attachments not recommended by the manufacturer may be hazardous.
13. Place the fan on a dry, level surface.
14. Do not mount fan on a wall or ceiling.
15. Do not operate if the fan housing is removed or damaged.
16. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
17. Take care not to stain plastic parts with oil. Avoid using non-industrial oils (cooking, etc.)to lubricate parts. Damage and deterioration are caused by oil sticking to parts.
18. This product employs overload protection (fuse).A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instruction (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
19. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
20. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.

 
WARNING: To reduce risk of fire, electric shock or injury to persons:

- Unplug or disconnect the appliance from the power supply before servicing.
- Do not use this fan with any solid-state speed control device.

CAUTION: The pillar part or the tower fan base is made of one piece, which is located on the end of the main body. The base of this fan is made of two parts, located at the bottom of the box.

PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
A	MAIN BODY	1
B	FIXED BOLT	1
C	BASE 1	1
D	BASE 2	1
E	TRIANGLE NUT(Preassembled)	1
F	REMOTE CONTROL	1

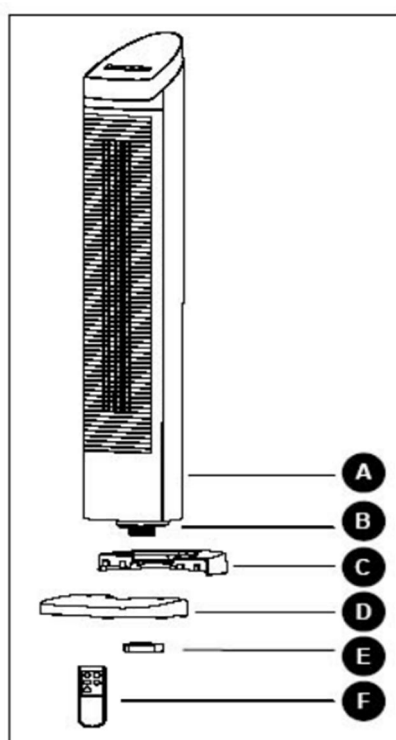

PREPARATION

 
 
 
Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 5-10 minutes.

ASSEMBLY INSTRUCTIONS

CAUTION: Never operate the fan without base 1(C) and base 2(D) assembled. Operate the fan only in upright position; any other position could create a hazardous situation.

1. Pass the power cord on main body(A) down the power cord channel between the base 1(C) and base 2(D) (See Fig.3).
2. Clockwise rotate down the triangle nut(E) from fixed bolt(B) (See Fig.2). Snap the base 1(C) and base 2(D) together (See Fig.1) and fasten triangle nut(E) by rotating counterclockwise to fixed bolt(B) on main body(A) (See Fig.3).

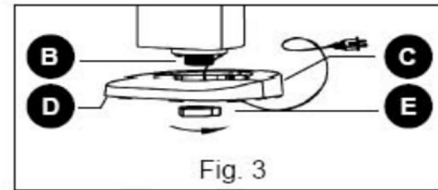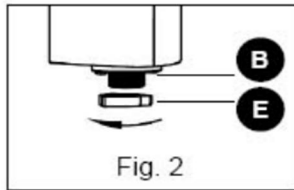
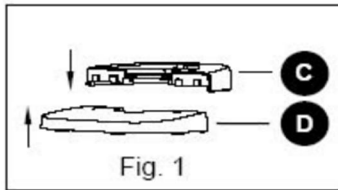


USER SERVICING INSTRUCTIONS

HOW TO PHYSICALLY REPLACE THE FUSE

Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord. Open fuse cover by side open fuse access cover on top of attachment plug towards

  WARNING: Risk of fire. Replace fuse only with 5 Amp, 125Volt fuse. Do not replace attachment plug. Contains a safety device (fuse AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.

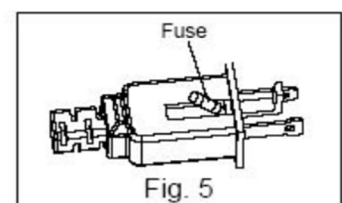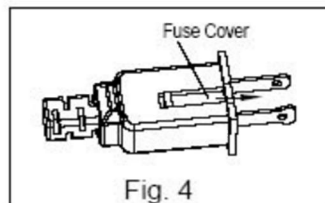

REMOTE CONTROL INSTRUCTION

HOW TO INSERT BATTERIES (SOLD SEPARATELY)

CAUTION: Remove the batteries if the remote control (F) is not to be used for a month or more.

Batteries left in the unit may leak and cause damage.

DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD CARBON-ZINC OR

RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.PLEASE DISPOSE OF BATTERIES PROPERLY.

Using the remote control (F):

 
1. The buttons of the remote control (F) function in the same manner as the buttons on the control panel located on the top of the fan.
2. The remote control (F) can be used to up to 19 ft (6 m) away from the fan. Point the remote control (F) directly at the front of the fan to ensure proper communication.
3. A “beep” from the fan will sound and lights on the control panel illuminate when the tower fan accepts instructions from the remote control (F).

Instructions for storage of Remote Control:

To store remote, push cover of storage compartment down and insert. To remove remote, repeat the above step and take out.


OPERATION INSTRUCTIONS

Timer Switch
3 Fan Modes Switch
Power Switch
3 Speed Fan Switch
Oscillating Switch

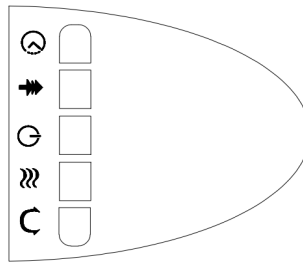


All the features of this fan can be controlled from the control pad or remote control (F)

 
To Turn the Fan On/Off:

Gently press the “ ” button on the control pad or “ON/OFF” on the remote control(F) once to turn fan on. Press a second time to turn the fan off.


To Set the Fan Speed:

Gently press the “ ” button on the control pad or “SPEED” on the remote control(F).Each time you press the “ ” button or the “SPEED” button, the speed will cycle between the LOW, MEDIUM and HIGHT settings.

Oscillating Operation:

This fan is designed to oscillate to efficiently cool large spaces. To start oscillation, press the “ ” button on the “OSCILLATE” button on the remote control (F).To stop oscillation, press the button a second time.

To Set the Fan mode:

Gently press the “ ” button on the control pad or “MODE” on the remote control(F) once to set “nature” mode (the gusts you feel like natural wind blows outdoor); press it twice to set “sleeping” mode (the wind is gentle and most suitable for sleeping), and three times to set it to “normal”(the wind is more stable than “nature” and “sleep”).

To Set Timer Operation:

This fan is equipped with a timer that ranges from 1-9 hours. To set the fan to automatically turn it off after a scheduled amount of time, simply press the "TIMER" button on the remote control (F) or the "🕒" button on the control pad.

The illuminated lights on the front of the fan will display the time you have set. Each light represents an amount of time. To cancel timer operation, press the button until all the time lights disappear.

CARE AND MAINTENANCE

- ① Always remove the plug from the outlet and allow the fan to completely stop before cleaning.
- ② Do not allow water to drip on or enter into fan housing.
- ③ To clean, use a soft cloth moistened with a mild soap solution.
- ④ Do not use any of the following as a cleaner: gasoline, thinner, or benzene.
- ⑤ In case of malfunction or doubt, do not try to repair the fan yourself; it may result in a fire hazard or electric shock.

FAN STORAGE:

When storing your fan in the off season, keep it in a safe, dry location, protected from dust.

USE THE ORIGINAL BOX FOR STORAGE.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The fan is not operating.	No electric power.	Check the power cord to make sure it is plugged into an outlet.
The remote control does not work.	No batteries.	Put(2) AAA batteries (not included) into remote control

REPLACEMENT PARTS LIST

PART	DESCRIPTION
F	REMOTE CONTROL



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>