

**Oral-B®**

**iBrush**

powered by **BRAUN**

8000-9000



Charger Type 3757  
Handle Type 3765  
Travel Case Type 3760  
Smart Plug Type 492-5214



热线：4008307880

[www.oralb.com](http://www.oralb.com)

**iBrush 9000 Plus**

**欧乐B iBrush 9000 Plus 3D智能电动牙刷系列**

**Charger Type 3757**

**Handle Type 3765**

**Travel Case Type 3760**

**Smart Plug Type 492-5214**

**充电器型号 3757**

**刷柄型号 3765**

**充电式旅行盒型号 3760**

**智能插头型号492-5214**

进口商/经销商：广州宝洁有限公司

广州市经济技术开发区滨河路一号

邮政编码：510730

 
 
 
 
 
 
 
限制使用日期（年/月/日）见包装

 
 
 
 
刷柄，刷头—原产国：德国

充电器—原产国：中国

充电器标准：GB 4706.1，GB 4706.59



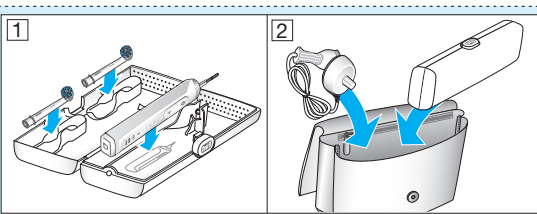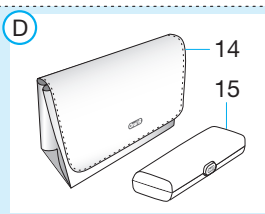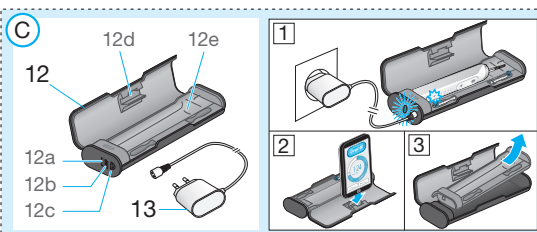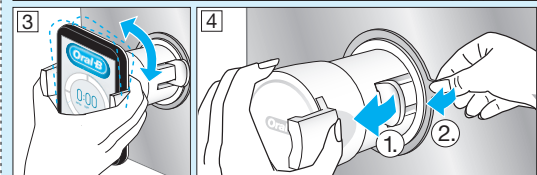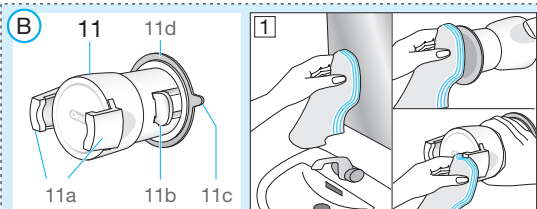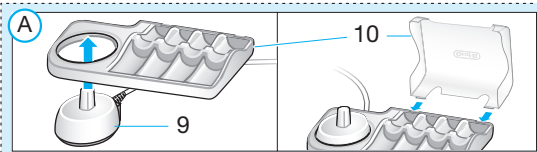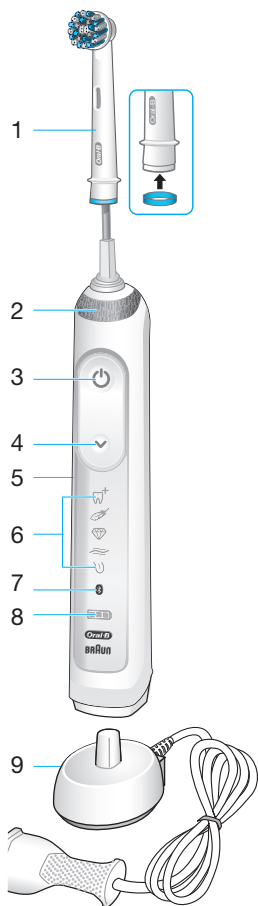

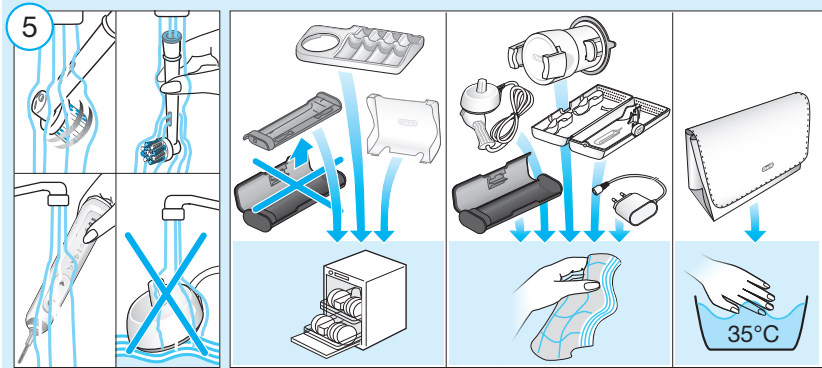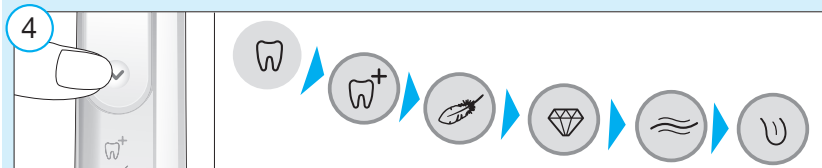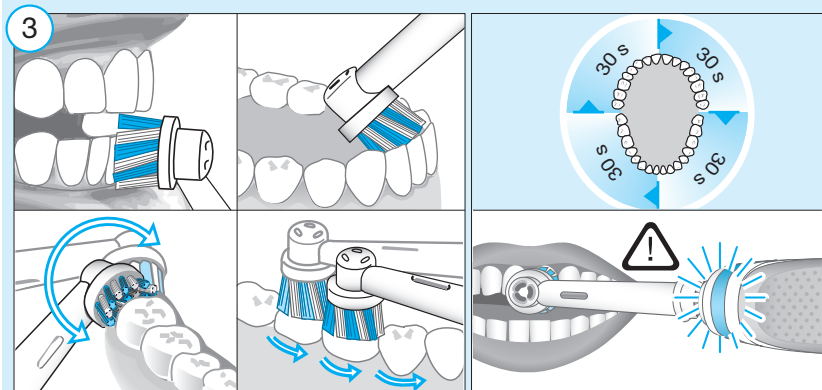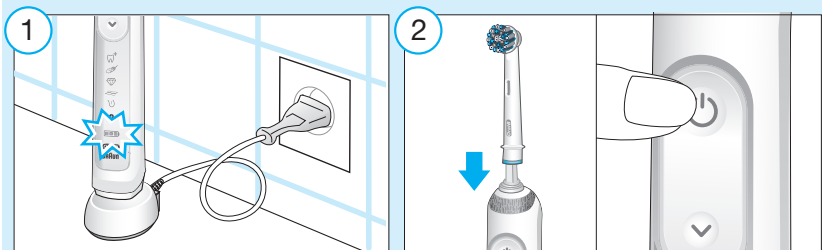



欢迎使用欧乐B电动牙刷！

在使用本牙刷之前，请仔细阅读本说明书，并妥善保管以供日后查阅。

## 重要注意事项

- 定期检查整个产品/电源线/配件是否损坏。已损坏或发生故障的电器不可继续使用。产品/电源线/配件如有损坏，请送至欧乐B服务中心。不得改装或维修本产品。这些行为可能导致火灾、触电或造成其他伤害。
- 本产品不适合3岁以下儿童使用。儿童、由于身体、感官和精神原因行动不便者及缺乏使用牙刷经验和知识的人群需要在有人监护和指导下安全地使用本产品，并了解可能存在的危险。
- 切勿让儿童清洁和维护本产品。
- 不要让儿童玩耍本产品。
- 本产品只能用于本手册说明用途。切勿使用未经生产商推荐的配件。

## 警告

- 如果产品摔落，即使没有看见损伤也要在下次使用前更换牙刷头。
- 切勿将充电器、智能插头或充电式旅行盒置于水或液体中，或是存放于容易跌落浴缸或洗漱台的地方。不要接触已经掉入水中的插座，而要立即拔下电源插头。
- 切勿打开或拆解本产品。有关电池回收，请按照当地环境法规处置整机。打开刷柄会损坏本产品并导致质保失效。
- 拔出插头时请注意握住插头而不是电源线。切勿湿手触碰插头，以免触电。
- 如果您正在接受口腔治疗，请在使用前咨询您的口腔专家。

- 本牙刷为私人护理用具，不能在牙医或医疗机构处用于多位患者的护理。
- 每三个月更换一次刷头，如果刷头因损坏而松动，请尽快更换。
- 您的充电式旅行盒配备了专用电源线（智能插头），带有一体化的超低压安全电源。切勿互换或改装充电盒的任何部件，否则存在触电风险。仅可使用随本产品配套提供的专用电源线。

## 重要信息

- 您的欧乐B电动牙刷可以与您的智能手机一起使用（有关详细信息，请查阅“电动牙刷与智能手机配对”部分）。
- 为避免电磁干扰和/或兼容性冲突，在受限环境（如飞机或医院特别标示区域）中使用前请关闭牙刷（5）的无线电传输。
- 关闭无线电的方法是，同时按下开/关按钮（3）和模式按钮（4），持续2秒，直到无线电传输显示屏（7）关闭。按照同样操作程序可以重新启动无线电传输。
- 若您正在佩戴起搏器，请确保运行中的电动牙刷远离起搏器6英寸（15厘米）以上。当您怀疑起搏器受到干扰时，请关闭电动牙刷的无线电信号。

## 产品描述

- 1 刷头
- 2 智能环
- 3 开/关按钮
- 4 刷牙模式按钮
- 5 刷柄
- 6 刷牙模式显示屏
- 7 无线电传输显示屏（内置蓝牙无线技术）

8 电量显示屏

9 充电器

附件(取决于型号)

10 带保护盖的刷头盒

11 智能手机架

11a 固定支架

11b 杠杆臂

11c 拉片

11d 吸盘

12 充电式旅行盒

12a 充电指示灯

12b USB端口

12c 智能插头端口

12d 内盖(带智能手机架)

12e 可拆卸嵌体

13 智能插头

14 化妆包

15 旅行盒

注：内容可能会因所购买的型号而有所不同。

## 规格参数

电压规格请参考充电器底座信息。

声功率级噪声：68dB(A)

220–240V交流电

50–60赫兹

0.9瓦

IP67

本款可充电牙刷包含蓝牙，使用时所产生的电波在2.4至2.48 GHz波段，工作时出现的最大功率为1mW。

此处，Braun GmbH声明无线设备3765、3754、3764、3762 and 3767是符合2014 / 53 / EU声明。对欧盟符合性声明的全文可在以下网址：[www.oralb.com/ce](http://www.oralb.com/ce)。

充电器型号 3757

刷柄型号 3765

充电式旅行盒型号 3760

智能插头型号492–5214

## 充电和使用

该牙刷是防水的刷柄，并且是可以在浴室里使用的安全电器。

- 在使用完你的牙刷后，或需要进行充电时，你只需把它放在充电器(9)插上即可。

注：电池没有电，(在打开或关闭开关(3)时候，电量显示屏(8)没有灯在闪烁或任何反应)，至少需要充电30分钟。充电量会在电量显示屏(8)上表示。灯光闪烁表示电池正在充电(图①)；待充电完成后，指示灯会熄灭。牙刷充满一次电需要大约12小时，电量可供常规刷牙使用12天(每天2次，一次2分钟)。

说明：当电量极低时，指示灯可能不会立即闪烁。充电满30分钟后指示灯闪烁。

- 电池电量较低时，电量显示屏上的红灯会亮起，电机速度降低。电量用光时，电机将停止工作。这时至少要充电30分钟，才可充足刷一次牙所需的电量。
- 您可以将刷柄一直放在充电底座上，让牙刷保持充足电力。电池不会出现过度充电。

说明：为确保最佳的电池性能，牙刷需在室温下存放。

注意：切勿把牙刷放置在50°C以上的高温环境下。

## 如何使用电动牙刷

### 刷牙技巧

打湿刷头挤上牙膏，您可以使用任何种类牙膏。为免牙膏飞溅，请在启动电动牙刷前先将刷头放置于牙齿上(图②)。刷牙时使用任一款摆动旋转欧乐B刷头，请按顺序缓慢地移动刷头，使其在每颗牙齿表面停留数秒(图③)。

无论使用哪款刷头，请从牙齿外侧开始刷起，然后刷牙齿内侧，最后到咀嚼面。均匀地清洗您口腔内四个刷牙区（图③）。您也可向您的牙医或牙科保健师咨询正确的刷牙技巧。

使用电动牙刷的前几天时，您的牙龈可能会有轻微的出血现象。通常，几天后此现象应会消失。如果此现象持续2周，请咨询牙医或牙科保健师。对于牙齿和牙龈敏感人群，欧乐B推荐您选择“柔和”模式（作为选择，可以与欧乐B“柔软敏感型”刷头一起使用）。

## 智能环的功能

您的牙刷带有一个智能环(2)，能够通过多种灯光颜色指示不同的功能。

白色（默认）=工作和计时器指示灯（可通过欧乐B应用程序的设置，选择各自的颜色）

红色=压力感应器指示灯

蓝色=蓝牙配对指示灯

## 计时器

您可以选择“专业”或者“2分钟”计时方式。

当牙医推荐的2分钟时间已到时，“2分钟”计时器会发出长长的蜂鸣音，同时智能环(2)的灯光闪烁。

如果使用“专业”计时器，每30秒钟会发出简短的蜂鸣音同时智能环灯光闪烁，以提示您将牙刷移至下一个刷牙区域（图③）。当牙医推荐的2分钟刷牙时间已到时，会发出长长的蜂鸣音，同时智能环灯光闪烁。

即便牙刷刷柄在刷牙过程中短时间暂停，计时器仍会记录保存之前的刷牙时间。若暂停时间超过30秒，在暂停期间快速按下模式按钮(4)或是刷柄被放到了插有电源的充电器上，计时器将重置。

说明：在使用欧乐B专用应用程序的各项功能时，计时器指示灯可能会被禁用。

## 计时器设置：

您的电动牙刷已默认激活了“专业”计时模式。若要更改设置，请按模式按钮

(4)并持续2秒。按住开/关按钮(3)可以在不同定时模式之间切换。按模式按钮，确认选择。

2个指示灯发光明亮表明选择了“2分钟”计时器

4个指示灯发光明亮表明选择了“专业”计时器

说明：您还可以使用欧乐B应用程序设置和增强计时器的功能。

## 压力感应器

在“日常清洁”、“专业清洁”和“柔和”模式下，当您对于牙齿施力过大时，智能环(2)会亮起红色指示灯。提醒您减少施加压力，并且刷头前后震动将停止，左右震动将减慢（图③）。

请在使用中通过稍稍用力按下牙刷头，定期检查压力感应器是否工作正常。

## 刷牙模式（取决于型号）

您的电动牙刷有多种不同的刷牙模式，刷柄上的刷牙模式显示屏(6)会指示相应的模式（选择“日常清洁”模式时，刷牙模式显示屏不发光）：

“日常清洁”-日常口腔清洁标准模式

“专业清洁”-用于实现超清洁感受（工作频率更高）

“柔和”-轻柔彻底地清洁口腔敏感区域

“美白”-抛光，可偶尔或者日常使用

“牙龈护理”-轻柔按摩牙龈

“舌苔清洁”-清洁舌头，可偶尔或每日使用

当您使用“舌苔清洁”模式时，建议您使用“柔软敏感型”刷头。清洁舌头时

可以使用或不使用牙膏。轻柔而又全面地清洁整个舌头区域。建议清洁时间为20秒钟，智能环会以闪烁灯指示。

您的牙刷会自动使用上次选择的模式。若要切换为其他模式，请在使用中连续地按模式按钮(图④)。若要从任何模式返回至“日常清洁”模式，请按住模式按钮(4)。

说明：您还可以使用欧乐B应用程序设置/增强模式功能。

## 牙刷刷头

 
欧乐B为您提供多款与您的欧乐B牙刷刷柄配套的欧乐B牙刷刷头。

我们的摆动-旋转刷头可用于逐颗牙齿的精准清洁。



### 欧乐B多角度清洁型刷头EB50

这是我们最先进的牙刷刷头。刷毛有专门的角度，以实现精准清洁。能够松动和强力去除牙菌斑。




### 欧乐B牙线效果型刷头EB25

采用微脉冲刷毛，能够显著清理牙间隙的牙菌斑。



### 欧乐B 3D美白型刷头EB18P

 带有专门的抛光杯，让您的牙齿自然亮白。请注意，12岁以下儿童不应使用欧乐B 3D美白型刷头。



### 欧乐B超细毛^柔护型刷头EB60

含有帮助清洁牙齿表面的常规毛和帮助轻柔清洁牙龈线的超细毛。

## ^指外圈刷毛

大部分欧乐B牙刷刷头采用了浅蓝色的INDICATOR®刷毛，以帮助您检查刷头更换需求。当按照每天2次每次2分钟的频率彻底地刷牙时，这些蓝色刷毛会在大约3个月内褪掉一半颜色，以提醒您更换刷头。如果刷头在颜色褪掉前就已散开，则表明您刷牙时对牙齿和牙龈施力过大。

如果您带有牙箍，建议您不要使用欧乐B牙线效果型刷头或欧乐B 3D美白型刷头。您可以使用专门设计用于清洁牙箍和钢丝周围区域的欧乐B矫正型牙刷刷头。

## 电动牙刷与智能手机配对

欧乐B应用程序可用于安装了iOS或安卓操作系统的移动设备。您可以前往应用商店<sup>(SM)</sup> 或Google Play™ 免费下载该程序。

该牙刷内置传感器，连同“位置检测”特征的应用程序，可以帮助你发现已经刷过的区域以及刷了多长时间，让你不会错过任何一个区域。把它与你的智能手机架一起使用(详情请见以下“配件-智能手机架”)。

另外，借助欧乐B应用程序，您可以编制自己的刷牙进度表并定义自己的牙刷设置(有关更多好处，请参见欧乐B的使用说明)。

启动欧乐B应用程序。该应用程序将引导您完成整个蓝牙配对过程。

说明：如果您智能手机上的蓝牙无线功能被禁用，欧乐B应用程序的功能性将会受到限制(相关说明请参见您智能手机的用户手册)。

应用程序的所有指示将显示于您的智能手机上。

如果您的刷柄已经启用了蓝牙功能，无线电传输显示屏(7)上的蓝牙符号将会

发光。刷柄配对成功后，智能环(2)会短暂地闪烁一下。

当与电动牙刷一起使用时，请将智能手机放置在周围不远处(5米范围内)。一定要将智能手机放置在干燥位置。

说明：要与智能牙刷配对，您的手机必须支持蓝牙4.0(或更高版本)。

兼容的智能手机应用可以在App Store<sup>(SM)</sup>或Google Play<sup>TM</sup>下载。

注意：遵照您的智能手机的用户手册，以确保您的手机/充电器是专为在浴室环境中使用。

## 清洁建议

刷牙后，保持刷柄电源处于打开状态，然后将刷头放在水流下进行清洗。关闭电动牙刷，取下刷头。单独地清洁刷柄和刷头，将二者擦拭干净后再重新组装在一起。清洁前需将充电器的电源插头拔下。牙刷刷头舱和保护盖都可使用洗碗机安全清洗。基本充电器仅可使用湿布清洁(图⑤)。

## 配件(取决于型号)

### 智能手机架

- 每次使用前，确保镜子表面，吸盘表面(11d)和固定支架(11a)均清洁干燥(图B1)。使用干净的布清洁吸盘表面和镜子。特别是确保吸盘表面和镜面无任何污染(如毛发、灰尘、油、绒毛、污物等)。将智能手机架(11)轻轻对中地压在清洁、干净的镜子表面上，高度与鼻子齐平。然后，小心地朝镜子按压杠杆臂(11b)，直至卡扣入位(图B2)，以装好手机架。

说明：为确保安全正确地使用，手机架只能固定于镜子上。仅适合在浴室中使用。切勿在汽车上使用。

- 在插入手机前，始终要确保智能手

手机架已经可靠地固定到镜子上。使用手机抵住一侧的支架，并用手向外拉另一侧的支架，让智能手机(如图中所示)从一侧放入到两个固定支架(11a)之间(图B2)。取出手机时，请按照同样的步骤操作。

- 根据所需的角度，移动支架的球形接头，以调整整体位置(图B3)。
- 刷牙后，将手机从支架上取出。将杠杆臂翻回原位，小心拉出拉片，取下智能手机架(图B4 1./2.)。每次使用时，都要重新固定智能手机架。
- 智能手机架只能使用湿布清洁(图⑥)。您可以使用玻璃清洁剂，酒精或类似的产品(避免产品与硅油物质接触)。清洗后确保表面干净，无尘。

请存放于阴凉、干燥处。不使用时，一定要将智能手机从手机架上取下。

说明：适合的手机尺寸：最小58mm，最大83mm。

注意：有可能会有小部件掉出，远离儿童放置。

遵照您的智能手机的用户手册，以确保您的手机/充电器是专为在浴室环境中使用。

### 充电式旅行盒

- 若要对电动牙刷充电(5)，请将刷柄放到充电式旅行盒(12)内的引脚上，使用配套提供的智能插头(13)连接至电源插座。
- 充电式旅行盒上的指示灯(12a)如果闪烁，则表明刷柄正在充电。待充电完成后，指示灯将熄灭。充满一次电最多需要12个小时(图C1)。说明：充电式旅行盒接有电源时，您可以通过USB端口(12b)为其他电子设备充电。但电动牙刷仅可通过智能插头(13)(12c)而不能通过USB端口充电。

- 旅行盒的内盖带有内置的智能手机架(12d)，可以在使用时放置手机(图C2)。使用前，确保您的手机与支架尺寸配合且能保持稳定。
- 旅行盒内部的可拆卸嵌体(图C3)(12e)可以使用洗碗机安全清洗(图5)。外壳应只能使用湿布清洁。重新装配前，务必保证旅行盒的各个部件均已晾干，牙刷和刷头也要在晾干后才可放入旅行盒内存放。

说明：如果旅行盒上有污渍，请立即擦拭干净。将旅行盒放置于阴凉、干燥处。

遵照您的智能手机的用户手册，以确保您的手机/充电器是专为在浴室环境中使用。



### 化妆包

- 存放您的干净牙刷/刷头在旅行盒(15)并把它们放在化妆包(14)(图D1/2)。

如化妆包上有污渍，请立即清除。化妆包应该用温水手洗(30°C-40°C)(图6)。存放在清洁和干燥的地方。

如有更改恕不另行通知。

 
### 环保提示

产品包含电池和/或可回收电子废物。为了保护环境，请   不要在产品使用期满后，将本产品与生活垃圾一起处理，请将其送至您本国提供的电子废物回收点。

### 在产品使用寿命结束时请移除电池

除了处理丢弃电池外，请勿拆解产品。在取出电池前将电池电量耗尽。取出电池时请穿戴保护装置(手套、安全镜等)，避免皮肤接触到电池漏液。请勿将电池正负极相连。隔离电池(用胶带

等)，放进塑料袋里面丢弃。

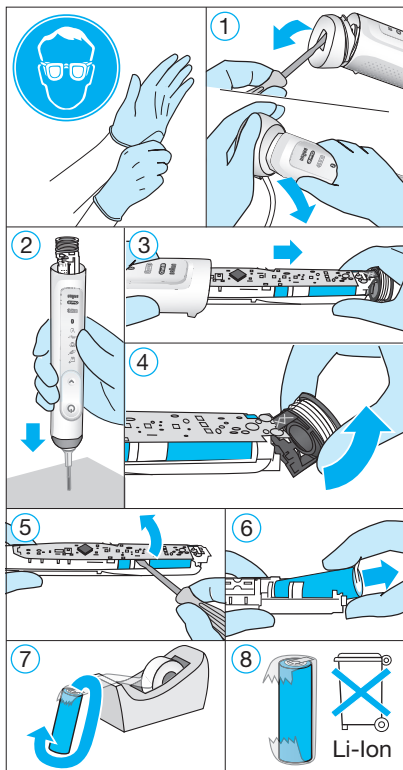

请按指导移除电池并根据当地环保规定丢弃。

请注意，拆开刷柄将损坏牙刷，将不再享受质保服务。

### 保修

我们为产品提供2年的有限保修，保修期从购买之日起开始计算。在保修期内对于材料或生产工艺所引起的各种瑕疵，我们会免费处理，视情况予以修复或更



换整个产品。

本保修适用于全球范围内所有博朗公司及其指定供应商出售的博朗产品。上述保修不包含以下情况：由于使用不当造成的产品损坏；正常使用引起的产品老化、磨损，尤其是刷头，以及对产品的价值或使用功能不产生影响的一些瑕疵。如果产品经过未经授权的人员修理，或产品使用了非博朗公司的零件，保修期立即终止。

本电动牙刷带有智能蓝牙许可的无线电模块。除非本电动牙刷的蓝牙无线电模块损坏，否则，无法与特定智能手机实现蓝牙配对的情况不属于本产品的质保范围。

蓝牙装置由其自己的制造商而非欧乐B提供质保。欧乐B未向蓝牙装置制造商提出任何建议或影响其设计，因此，欧乐B不保证我们的蓝牙系统能够与多少种兼容设备兼容或是承担任何相应责任。

为了确保欧乐B的装置功能可靠，欧乐B保留对设备功能、接口以及菜单结构执行各种所需的技术调整以下改变的权利，如有此类更改，恕不另行通知。

若在保修期内需要维修，请在保修期内将本产品与销售单据一同交给授权的欧乐B博朗客户服务中心。

## 信息

### Bluetooth®无线电模块

尽管支持蓝牙设备上所示的所有功能，但是欧乐B不保证此类连接100%可靠以及各项功能始终可以稳定运行。工作性能和连接可靠性直接取决于相应的蓝牙设备、软件版本，以及这些蓝牙设备的操作系统设备和所实施的企业安全规定。

欧乐B严格遵守并实施了蓝牙标准，依据这些标准，蓝牙设备能够与欧乐B牙刷通信以及在牙刷内运行。

不过，如果设备生产商未能实施此标准，蓝牙兼容性和功能将会受到影响，用户可能会遇到与功能和特性相关的问题。请注意，蓝牙装置上所安装软件的类型会显著地影响兼容性和运行效果。

### 1) 质保—排他性与限制

本有限质保仅适用于由宝洁公司及其分公司或附属公司(“P&G”)生产或委托生产且带有博朗/欧乐B商标、商品名称或产品上所附徽标的新产品。本有限质保不包含任何非宝洁公司的产品，包括硬件和软件。本产品以及超出本质保范围的非宝洁公司生产的产品或部件中所保存的任何程序、数据、或其他信息以及媒体如有损坏或丢失，宝洁公司对此不承担任何责任。本有限质保不包含各种程序、数据或其他信息的恢复和安装。本有限质保不适用于(一)意外、不当使用、滥用、疏忽、误用或非宝洁产品导致的损坏；(二)因博朗或博朗许可服务点以外的其他人员对产品执行检修而导致的损坏；(三)未经宝洁公司书面许可，进行了改装的产品或部件；以及(四)由于使用或无法使用欧乐B智能手机架/托架、智能手机镜头架或更换充电式旅行盒(“配件”)而导致的损坏。

### 2) 使用您的智能手机架

产品包装内所包含的欧乐B配件旨在当您使用欧乐B应用程序时，让您能够方便地放置智能手机。使用前，请对您智能手机在欧乐B智能手机架中的朝向进行调整，以确定最佳位置。执行此类操作时，确保如果手机脱离手机架，不会造成您的手机损坏。切勿在汽车上使用。

### 有限责任

在法律许可的范围内，由于欧乐B配件的使用或无法使用而导致的任何形式的直

接、间接、意外、非直接、特殊、惩罚性或刑罚性损害，包括但不仅限于人身伤害、财产损失、因与欧乐B配件一起或在欧乐B配件内使用或无法使用而导致的任何第三方产品的价值丧失，即使宝洁知道或应该知道发生此类损害的可能性，宝洁及其经销商和供应商亦不会对您或任何第三方承担任何责任。在不限制上条款的前提下，您了解并同意如果放置于欧乐B配件之中或位于配件之外的任何消费类电子产品或其他个人财产出现损坏或破坏，或者此类产品中的数据出现任何丢失，宝洁公司对此不承担任何责任。在任何情况下，针对欧乐B提出的索赔金额都不应超过购买产品时所支付的实际价格。

### 牙刷刷头更换质保

一旦发现可充电刷柄的损坏是由于使用非欧乐B牙刷刷头造成的，欧乐B质保将失效。

欧乐B建议不要使用非欧乐B牙刷刷头。

- 欧乐B无法控制非欧乐B牙刷刷头的质量。因此，我们无法保证非欧乐B牙刷刷头与购买时原装的可充电刷柄一起使用时，可达到的清洁效果。
- 欧乐B无法保证非欧乐B牙刷刷头能够与刷柄完好配合。
- 欧乐B无法预测非欧乐B牙刷刷头对刷柄的长期磨损影响。

所有欧乐B牙刷刷头都带有欧乐B徽标且都符合欧乐B的高质量标准。欧乐B不会以其他任何品牌销售牙刷刷头或刷柄部件。



## 故障排查

故障现象	可能原因	解决办法
<b>应用程序</b>		
刷柄无法与欧乐B应用程序一起(正确使用)。	<ol style="list-style-type: none"><li>1. 欧乐B应用程序已关闭。</li><li>2. 尚未在智能手机上启动蓝牙接口。</li><li>3. 刷柄上的无线电传输功能被禁用;无线电传输显示屏(7)关闭。</li><li>4. 与智能手机的蓝牙连接已断开。</li><li>5. 您的智能手机不支持蓝牙4.0(或更高版本)。</li><li>6. 刷柄位于接有电源的充电器上。</li></ol>	<ol style="list-style-type: none"><li>1. 打开欧乐B应用程序。</li><li>2. 启动智能手机上的蓝牙接口(请参见手机说明书)。</li><li>3. 启动无线电传输,方法为:同时按下开/关按钮(3)和模式按钮(4),持续2秒,直到无线电传输显示屏(7)打开。</li><li>4. 通过应用程序设置,再次对刷柄和智能手机配对。当与电动牙刷一起使用时,请将智能手机放置在周围不远处。</li><li>5. 要与刷柄配对,您的智能手机必须支持蓝牙4.0(或更高版本)。可以在App Store<sup>(SM)</sup> or Google Play<sup>TM</sup>上检查智能手机的兼容信息。</li><li>6. 当刷柄位于接有电源的充电器上,无线电传输功能会被禁用。</li></ol>
重置为出厂设置。	想要恢复最初的app功能。	同时按住开关按钮(3)并持续10秒,直至所有指示灯同时闪烁两次。
<b>牙刷</b>		
刷柄不工作(首次使用时)	当电池电量很低时,指示灯不亮。	至少充电30分钟

<p>刷柄无法与家中已有的睿智向导一起使用。</p>	<ol style="list-style-type: none"> <li>1. 无法与已有的睿智向导同步。</li> <li>2. 无线电传输被禁用；无线电传输显示屏(7)关闭。</li> <li>3. 睿智向导与刷柄不兼容。</li> <li>4. 已有两把牙刷与您的睿智向导同步。</li> <li>5. 该功能已被应用程序功能禁用。</li> </ol>	<ol style="list-style-type: none"> <li>1. 通过睿智向导电池舱内的睿智向导设置，将(已有)刷柄(再次)同步：按住“h/min”按钮3秒钟。打开您要同步的刷柄。然后，打开您要同步的第二个刷柄。按“h/min”或“set”，退出同步模式。</li> <li>2. 启动无线电传输，方法为：同时按下开/关按钮(3)和模式按钮(4)，持续2秒，直到无线电传输显示屏(7)打开。</li> <li>3. 刷柄无法与已有的睿智向导一起使用。</li> <li>4. 每个睿智向导最多可以同步两支牙刷。您可通过睿智向导设置更换同步的刷柄(见1)。</li> <li>5. 在使用一些特殊的应用程序功能时，可能会禁用与睿智向导之间的通信。 您可以通过应用程序禁用/启用任何的睿智向导通信。</li> </ol>
<ol style="list-style-type: none"> <li>1. 短暂蜂鸣音每30秒或2分钟后发出一次声音/灯光闪烁一次。</li> <li>2. 刷柄未启用任何计时器。</li> </ol>	<ol style="list-style-type: none"> <li>1. 启动了“专业”或“2分钟”计时器。</li> <li>2. 已通过应用程序更改/禁用了计时器。</li> </ol>	<ol style="list-style-type: none"> <li>1. 将您的计时器设置为2分钟计时器(2分钟后发出蜂鸣音/灯光闪烁)；或是设置为专业计时器(每30秒发出一次蜂鸣音/灯光闪烁一次)按照“计时器设置”中所述的步骤操作。</li> <li>2. 使用应用程序更改计时器设置或重置为出厂设置(请参见应用程序故障排查)。</li> </ol>
<p>刷柄不能充电。</p>	<ol style="list-style-type: none"> <li>1. 刷柄电量不足。</li> <li>2. 周围的温度超出有效充电的温度范围 (<math>\leq 0^{\circ}\text{C}</math> 和 <math>\geq 60^{\circ}\text{C}</math>)。</li> </ol>	<ol style="list-style-type: none"> <li>1. 充电灯可能不会立即闪烁，充满30分钟后闪烁。</li> <li>2. 建议周围充电温度为<math>5^{\circ}\text{C}</math>到<math>35^{\circ}\text{C}</math>。</li> </ol>

## 产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电动马达	X	0	0	0	0	0
内置电池（仅适用于欧乐B清亮型/亮杰型系列电动牙刷）	0	0	X	0	0	0

本表格依据SJ/T 11364的规定编制。

0：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X：表示该有害物质至少在该部件的某一均质材料中的含量超出了GB/T 26572规定的限量要求。

在某些产品中可能包含一次性电池，该电池并非宝洁公司产品，该电池的关于有害物质含量的标识应由电池生产商提供。

## English

Welcome to Oral-B!

Before operating this toothbrush, please read these instructions and save this manual for future reference.

### IMPORTANT

- Periodically check the entire product/cords/accessories for damage. A damaged or non-functioning unit should no longer be used. If the product/cords/accessories are damaged, take it to an Oral-B Service Centre. Do not modify or repair the product. This may cause fire, electric shock or injury.
- Usage by children under age 3 is not recommended. Toothbrushes can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and maintenance shall not be performed by children.
- Children shall not play with the appliance.
- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.

### WARNING

- If the product is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Do not place the charger, smart plug or charging travel case in water or liquid or store where it can fall or be pulled into a tub or sink. Do not reach for it when fallen into water. Unplug immediately.
- Do not open and disassemble device. For battery recycling please dispose whole device according to local environmental regulations. Opening the handle will destroy the appliance and invalidate the warranty.
- When unplugging, always hold the power plug instead of the cord. Do not touch the power plug with wet hands. This can cause an electric shock.
- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.
- This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution.
- Replace brush head every 3 months or sooner if brush (head) becomes worn.
- Your charging travel case is provided with a special cord set (smart plug), which has an integrated Safety Extra Low Voltage power supply. Do not exchange or tamper with any part of it, otherwise there is risk of an electric shock. Only use the special cord set provided with your appliance.

### Important Information

- Your Oral-B toothbrush can be used with your smartphone (find details under «Connecting your toothbrush to your Smartphone»).
- To avoid electromagnetic interference and/or compatibility conflicts, deactivate the radio transmission of your toothbrush handle (5) before using it in restricted surroundings, such as aircrafts or specially marked areas in hospitals.
- Deactivate radio transmission by simultaneously pressing the on/off (3) and mode button (4) for 2 seconds until the radio transmission display (7) goes off. Follow the same procedure to reactivate transmission again.
- Persons with pacemakers should always keep the toothbrush more than six inches

(15 centimeters) from the pacemaker while turned on. Anytime you suspect interference is taking place, deactivate the radio transmission of your handle.

## Description

- 1 Brush head
- 2 Smart Ring
- 3 On/off button
- 4 Brushing mode button
- 5 Handle
- 6 Brushing mode display
- 7 Radio transmission display (with *Bluetooth*<sup>®</sup> wireless technology)
- 8 Charge level display
- 9 Charger

### Accessories (depending on model):

- 10 Brush head compartment with protective cover
- 11 Smartphone holder
- 11a Holding brackets
- 11b Lever arm
- 11c Pull tab
- 11d Suction cup
- 12 Charging travel case
- 12a Charge indicator light
- 12b USB port
- 12c Smart plug port
- 12d Inner lid (with smartphone holder)
- 12e Removable inlay
- 13 Smart plug
- 14 Beauty bag
- 15 Travel case

**Note:** Content may vary based on the model purchased.

### Specifications

For voltage specifications refer to the bottom of the charging unit.

Noise level: 68 dB (A)

220-240 V ac~

50-60 Hz

0.9 W

IP 67

This rechargeable toothbrush contains a Bluetooth radio which operates in the 2.4 to 2.48 GHz band with a maximum power of 1mW.

Hereby, Braun GmbH declares that the radio equipment types 3765, 3754, 3764, 3762 and 3767 are in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.oralb.com/ce](http://www.oralb.com/ce)

Charger Type 3757

Handle Type 3765

Travel Case Type 3760

Smart Plug Type 492-5214

## Charging and Operating

Your toothbrush has a waterproof handle, is electrically safe and designed for use in the bathroom.

- You may use your toothbrush right away or charge it briefly by placing it on the plugged-in charger (9).  
Note: In case the battery is empty (no lights illuminated on charge level display (8) while charging or no reaction when pressing the on/off button (3)), charge at least for 30 minutes.
- The charge level is indicated on the charge level display (8). Flashing lights indicate that the battery is charging (picture ①); once it is fully charged, the lights turn off. A full charge takes about 12 hours and enables up to 12 days of regular brushing (twice a day, 2 minutes).  
Note: At a very low charge level, the lights might not flash immediately; it can take up to 30 minutes.
- If the battery is running low, a red light is flashing on the charge level display and the motor is reducing its speed. Once the battery is empty, the motor will stop; it will need at least a 30-minute charge for one usage.
- You can always store the handle on the plugged-in charging unit to maintain it at full power; a battery overcharge is prevented by device.  
Note: Store handle at room temperature for optimal battery maintenance.  
**Caution:** Do not expose handle to temperatures higher than 50 °C.

## Using your toothbrush

### Brushing technique

Wet brush head and apply any kind of toothpaste. To avoid splashing, guide the brush head to your teeth before switching on the

handle (picture ②). When brushing your teeth with one of the Oral-B **oscillating-rotating brush heads** guide the brush head slowly from tooth to tooth, spending a few seconds on each tooth surface (picture ③). With any brush head start brushing the outsides, then the insides and finally the chewing surfaces. Brush all four quadrants of your mouth equally. You may also consult your dentist or dental hygienist about the right technique for you.

In the first days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and/or gums, Oral-B recommends using the «Sensitive» mode (optional in combination with an Oral-B «Sensitive» brush head).

### Smart Ring features

Your toothbrush is equipped with a Smart Ring (2) that has various functionalities indicated via different colors of light:  
White (default) = Operating and visual timer light (choose individual color via Oral-B™ App settings)  
Red = Pressure sensor light  
Blue = *Bluetooth*® pairing indicator

### Timer

You can choose between «Professional» or «2-Minute» timer.

The «2-Minute» timer signals with a long stuttering sound and a flashing light of the Smart Ring (2) that the professionally recommended 2-minute brushing time has been reached.

The «Professional» timer signals with a short stuttering sound and a flashing light of the Smart Ring at 30-seconds intervals to move to the next quadrant of your mouth (picture ③). A long stuttering sound and a flashing light indicate the end of the professionally recommended 2-minute brushing time.

The timer memorizes the elapsed brushing time, even when the handle is briefly switched off during brushing. The timer resets if pausing longer than 30 seconds, briefly pressing the mode button (4) during pause or placing the handle on the plugged-in charger.

Note: During the use of special Oral-B™ App features, the visual timer light may be deactivated.

### Timer setup:

Your toothbrush comes with the «Professional» timer activated. To change this, press and hold the mode button (4) for 2 seconds. Toggle between timer selection by pressing the on/off button (3). Confirm selection by pressing the mode button.

- 2 LED's illuminated indicate «2-Minute» timer
- 4 LED's illuminated indicate «Professional» timer

Note: You can also set/advance the timer functionality via Oral-B™ App.

### Pressure sensor

If too much pressure is applied, the Smart Ring (2) will light up in red, reminding you to reduce pressure. In addition the pulsation of the brush head will stop and the oscillation movement of the brush head will be reduced (during «Daily Clean», «Pro Clean» and «Sensitive» mode) (picture ③). Periodically check the operation of the pressure sensor by pressing moderately on the brush head during use.

### Brushing modes (depending on model)

Your toothbrush offers different brushing modes indicated on the brushing mode display (6) on your handle («Daily Clean» mode does not illuminate on the brushing mode display):

- «Daily Clean» – Standard mode for daily mouth cleaning
- «Pro Clean» – For an extraordinary clean feeling (operated with a higher frequency)
- «Sensitive» – Gentle, yet thorough cleaning for sensitive areas
- «3D White» – Polishing for occasional or everyday use
- «Gum Care» – Gentle massage of gums
- «Tongue Clean» – Tongue cleaning for occasional or everyday use

When operating the «Tongue Clean» mode, we recommend using the «Sensitive» brush head. You can brush your tongue either with or without toothpaste. Brush the whole area of your tongue systematically in gentle movements. The recommended brushing time is 20 seconds; indicated with a flashing light of the Smart Ring.

 
Your toothbrush automatically starts in the mode selected last. To switch to other modes, successively press the mode button during use (picture ④). To return from any mode back to «Daily Clean» mode, press and hold the mode button (4).

Note: You can also set/advance the mode functionality via Oral-B™ App.


## Brush heads

Oral-B offers you a variety of different Oral-B brush heads that fit your Oral-B toothbrush handle.


Our **oscillating-rotating brush heads** can be used for tooth-by-tooth precision cleaning.



 
Oral-B CrossAction brush head  
Our most advanced brush head. Angled bristles for a precise clean. Lifts and powers away plaque.



 Oral-B FlossAction brush head  
features micropulse bristles that allow for an outstanding plaque removal in the interdental areas.



 Oral-B 3D White brush head  
features a special polishing cup to naturally whiten your teeth. Please note that children under 12 years old should not use the Oral-B «3D White» brush head.



Oral-B Sensi Ultrathin brush head  
features a combination of regular bristles to clean teeth surfaces and ultrathin bristles

for a gentle brushing experience on the gumline.

Most Oral-B brush heads feature light blue INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the blue color will fade halfway approximately within 3 months, indicating the need to exchange your brush head. If the bristles splay before the color recedes, you may exert too much pressure on teeth and gums.

We do not recommend using the Oral-B «FlossAction» or Oral-B «3D White» brush head with braces. You may use the Oral-B «Ortho» brush head, specifically designed to clean around braces and wires.

## Connecting your toothbrush to your Smartphone

The Oral-B™ App is available for mobile devices running iOS or Android operating systems. It can be downloaded for free from App Store<sup>(SM)</sup> or Google Play™.

Your handle has a sensor installed that, together with a «position detection» feature in the app, helps you to detect what areas you have brushed and for how long so you will never miss a zone. Use it along with your smartphone holder (find details under «Accessories – Smartphone Holder»). Furthermore, the Oral-B™ App gives you the opportunity to chart your brushing progress and customize your toothbrush settings (for many more benefits see the Oral-B™ App instructions).

- Start the Oral-B™ App. It will guide you through the entire *Bluetooth* pairing procedure.  
Note: Oral-B™ App functionality is limited if *Bluetooth* wireless technology is deactivated on your smartphone (for directions please refer to your smartphone's user manual).
- Any app instructions will be displayed on your smartphone.
- If *Bluetooth* wireless technology is activated on your handle, the *Bluetooth* symbol on the radio transmission display (7) illuminates. Once the handle is paired, the Smart Ring (2) flashes briefly.

- Keep your smartphone in close proximity (within 5 m distance) when using it with the handle. Make sure the smartphone is safely positioned in a dry place.

Note: Your smartphone must support *Bluetooth 4.0* (or higher)/*Bluetooth Smart* in order to pair your handle.

Compatible smartphones are listed in App Store<sup>(SM)</sup> or Google Play<sup>TM</sup>.

**Caution:** Follow your smartphone's user manual to ensure your phone/charger is designed for use in a bathroom environment.

## Cleaning recommendations

After brushing, rinse your brush head under running water with the handle switched on. Switch off and remove the brush head. Clean handle and brush head separately; wipe them dry before reassembling. Unplug the charging unit before cleaning. Brush head compartment and protective cover are dishwasher-safe. Basic charger should be cleaned with a damp cloth only (picture ⑤).

## Accessories

(depending on model)

### Smartphone Holder

- Before each use, make sure mirror, suction cup surface (11d) and holding brackets (11a) are always clean and dry (picture B1). Use a fuzz-free cloth for cleaning suction cup surface and mirror. In particular make sure suction cup surface and mirror are free from any contamination (e.g. hair, dust, oil, fuzz, dirt etc.).
- Press your smartphone holder (11) just with enough pressure, centered at nose level on a sturdy mirror. Then mount the holder by pressing the lever arm (11b) towards the mirror until it snaps in (picture B2).

Note: Only affix on mirror to ensure safe and correct conditions. For use in bathroom only. Do not use in automobiles.

- Always make sure the smartphone holder is securely mounted on the mirror before inserting your smartphone. Place your smartphone (portrait) sideways in

between the holding brackets (11a) by pressing against one bracket with your phone and sliding the other bracket to the side (picture B2). Follow the same procedure to remove your phone again.

- Adjust the overall position for the required angle by moving the ball joint of the holder (picture B3).
- Once done, remove your phone from the holder. Take off the smartphone holder by flipping the lever arm back and pulling the tab carefully (picture B4 1./2.). Affix smartphone holder with each use again.
- The smartphone holder should be cleaned with a damp fuzz-free cloth only (picture ⑤). You may use glass cleaner, alcohol or similar products (avoid products with silicone oil). Make sure the surface is dry and dust free after cleaning. Store in clean and dry place. If not in use, always remove your smartphone from the holder.

Note: Smartphone width required for usage: minimum 58 mm, maximum 83 mm.

**Caution:** Small parts may come off, keep out of reach of children.

Follow your smartphone's user manual to ensure your phone/charger is designed for use in a bathroom environment.

### Charging Travel Case

- To charge your handle (5) place it on the pin in the charging travel case (12) and connect it to an electric outlet, using the extra smart plug (13) provided.
- The flashing light (12a) of the charging travel case indicates that the handle is charging. Once the handle is fully charged the light turns off. A full charge can take up to 12 hours (picture C1).  
Note: You may use the USB port (12b) to charge an electric device while the charging travel case is plugged in. The handle can only be charged with the smart plug (13) (12c) not via USB port.
- The inner lid of the travel case has a built-in smartphone holder (12d), which can hold your smartphone while using (picture C2). Before use, make sure your phone fits the stand and keeps stable.
- The removable inlay (picture C3) (12e) of the travel case is dishwasher-safe (picture ⑤). The outer case should be cleaned with a damp cloth only. Make



sure that travel case parts are completely dry before reassembling and toothbrush/brush heads are dry before storing in the travel case.

Note: Clean stains on travel case surface immediately. Store travel case in a clean and dry place.

Follow your smartphone's user manual to ensure your phone/charger is designed for use in a bathroom environment.

### Beauty Bag

Store your clean and dry toothbrush/brush heads in the travel case (15) and place it inside the beauty bag (14) (picture D1/2). Clean stains on the surface immediately. The beauty bag should be hand washed only with lukewarm water (30 °C – 40 °C) (picture 5). Store in clean and dry place.

Subject to change without notice.

 
### Environmental Notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.



### Battery removal at the end of the product's useful life

Do not disassemble the product except when disposing of the battery. Run down battery before removing. When taking out the battery for disposal, use protective clothing (gloves, safety glasses, etc.) to omit skin contact whilst leaking batteries. Use caution not to short the positive (+) and negative (-) terminals. Insulate terminals (e.g. with tape) and put the battery in a plastic bag for disposal.

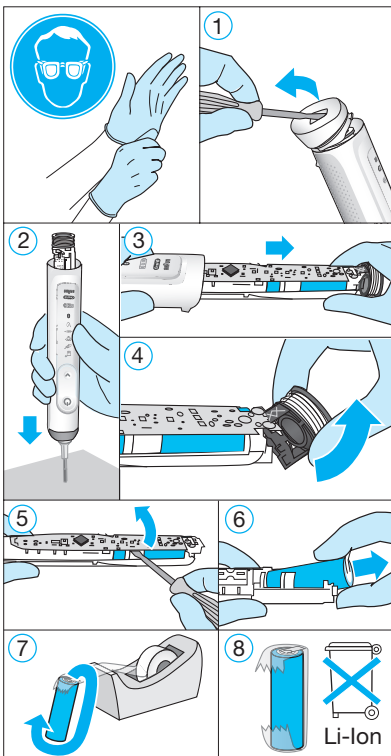

Open the handle as shown, remove the battery and dispose of it according to local environmental regulations.

**Caution! Opening the handle will destroy the appliance and invalidate the warranty.**

## Guarantee

We grant 2 years guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

This appliance is equipped with a *Bluetooth* Smart approved radio module. Failure to establish a *Bluetooth* Smart connection to specific smart phones is not covered under the device guarantee, unless the *Bluetooth* radio module of this appliance is damaged. The *Bluetooth* devices are warranted by their own manufacturers and not by Oral-B. Oral-B does not influence or make any recommendations to device manufacturers, and therefore Oral-B does not assume any responsibility for the number of compatible devices with our *Bluetooth* systems. Oral-B reserves the right, without any prior notice, to make any technical modifications or changes to system implementation of device features, interface, and menu structure changes that are deemed necessary to ensure that Oral-B systems function reliably.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Oral-B Braun Customer Service Centre.

### Information *Bluetooth*® radio module

Although all indicated functions on the *Bluetooth* device are supported, Oral-B does not ensure 100% reliability in connection, and feature operation consistency. Operation performance and connection reliability are direct consequences of each individual *Bluetooth* device, software version, as well as the operating system of those

*Bluetooth* devices and company security regulations implemented on the device. Oral-B adheres to and strictly implements the *Bluetooth* standard by which *Bluetooth* devices can communicate and function in Oral-B toothbrushes.

However, if device manufacturers fail to implement this standard, *Bluetooth* compatibility and features will be further compromised and the user may experience functional and feature-related issues. Please note that the software on the *Bluetooth* device can significantly affect compatibility and operation.

### 1) Warranty – Exclusions and Limitations

This limited warranty applies only to the new products manufactured by or for The Procter & Gamble Company, its Affiliates or Subsidiaries («P&G») that can be identified by the Braun / Oral-B trademark, trade name, or logo affixed thereto. This limited warranty does not apply to any non-P&G product including hardware and software. P&G is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-P&G product or part not covered by this limited warranty. Recovery or reinstallation of programs, data or other information is not covered under this limited warranty.

This limited warranty does not apply to (i) damage caused by accident, abuse, misuse, neglect, misapplication, or non-P&G product; (ii) damage caused by service performed by anyone other than Braun or authorised Braun service location; (iii) a product or part that has been modified without the written permission of P&G, and (iv) damage arising out of the use of or inability to use the Oral-B Smartphone stand/puck, Smartphone mirror holder, or charging travel case («Accessories»).

### 2) Using your smartphone holder

The Oral-B Accessories included in the package has been designed to provide you with a convenient way to position your smartphone while you are using the Oral-B app. Try multiple orientations of your smartphone in the Oral-B smartphone holder prior to use to determine the best positioning of your smartphone in the holder. Be sure to try this in a manner which will not harm your smartphone if it falls out of the stand. Do not use in automobiles.

## **LIMITATION OF LIABILITY**

TO THE EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL P&G ITS DISTRIBUTORS OR SUPPLIERS BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, EXEMPLARY OR PUNITIVE DAMAGES, OF ANY NATURE WHATSOEVER, ARISING OUT OF THE USE OF OR INABILITY TO USE THE ORAL-B ACCESSORIES, INCLUDING, WITHOUT LIMITATION, INJURY TO PERSONS, PROPERTY DAMAGE, LOSS OF VALUE OF ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE ORAL-B ACCESSORIES, OR LOSS OF USE OF THE ORAL-B ACCESSORIES OR ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE ORAL-B ACCESSORIES, EVEN IF P&G HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. WITHOUT LIMITING THE FOREGOING, YOU UNDERSTAND AND AGREE THAT P&G HAS NO LIABILITY FOR ANY DAMAGE OR DESTRUCTION TO CONSUMER ELECTRONICS DEVICES OR OTHER PERSONAL PROPERTY THAT ARE CONTAINED ON OR EXTERIOR TO THE ORAL-B ACCESSORIES, OR ANY LOSS OF DATA CONTAINED IN THE FOREGOING DEVICES. IN NO EVENT SHALL ANY RECOVERY AGAINST ORAL-B EXCEED THE ACTUAL PRICE PAID FOR THE PURCHASE OF THE PRODUCT.

All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads or handle parts under any other brand name.

## **Warranty replacement brush heads**

Oral-B warranty will be voided if electric rechargeable handle damage is found to be attributed to the use of non-Oral-B replacement brush heads.

Oral-B does not recommend the use of non-Oral-B replacement brush heads.

- Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable handle at time of initial purchase.
- Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.
- Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.

## Trouble Shooting

Problem	Possible reason	Remedy
<b>APP</b>		
Handle does not operate (properly) with Oral-B™ App.	<ol style="list-style-type: none"> <li>1. Oral-B™ App is turned off.</li> <li>2. <i>Bluetooth</i> interface is not activated on smartphone.</li> <li>3. Radio transmission is deactivated on handle; radio transmission display (7) is turned off.</li> <li>4. <i>Bluetooth</i> connection to smartphone has been lost.</li> <li>5. Your smartphone does not support <i>Bluetooth</i> 4.0 (or higher)/ <i>Bluetooth</i> Smart.</li> <li>6. Handle on plugged-in charger.</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn on Oral-B™ App.</li> <li>2. Activate <i>Bluetooth</i> interface on smartphone (described in its user manual).</li> <li>3. Activate radio transmission by simultaneously pressing on/off (3) and mode button (4) for 2 seconds until radio transmission display (7) turns on.</li> <li>4. Pair handle and smartphone again via app settings. Keep your smartphone in close proximity when using it with handle.</li> <li>5. Your smartphone must support <i>Bluetooth</i> 4.0 (or higher)/ <i>Bluetooth</i> Smart in order to pair handle. Check App Store<sup>(SM)</sup> or Google Play™ for compatible smartphones.</li> <li>6. Radio transmission is deactivated while handle is placed on plugged-in charger.</li> </ol>
Reset to factory settings.	Original app functionality wanted.	Press and hold on/off button (3) for 10 seconds until all indicator lights double blink simultaneously.
<b>TOOTHBRUSH</b>		
Handle is not operating (during first use).	Battery has a very low charge level; no lights illuminate.	Charge at least for 30 min.

<p>Handle does not operate with existing SmartGuide in household.</p>	<ol style="list-style-type: none"> <li>1. Synchronizing with existing SmartGuide failed.</li> <li>2. Radio transmission is deactivated; radio transmission display (7) is turned off.</li> <li>3. SmartGuide is not compatible with handle.</li> <li>4. Two handles are already assigned to SmartGuide.</li> <li>5. Function is deactivated via App feature.</li> </ol>	<ol style="list-style-type: none"> <li>1. Synchronize (existing) handle(s) (again) via SmartGuide settings in SmartGuide's battery compartment: Press «h/min» for 3 seconds. Turn on handle that you want to synchronize. Then turn on second handle you want to synchronize. Press «h/min» or «set» to exit synchronization mode.</li> <li>2. Activate radio transmission by simultaneously pressing on/off (3) and mode button (4) for 2 seconds until radio transmission display (7) turns on.</li> <li>3. Handle cannot be used with existing SmartGuide.</li> <li>4. You can synchronize a total of 2 handles only. Change handles via SmartGuide settings (see 1.)</li> <li>5. During use of special app features, transmission to SmartGuide may be deactivated. You can also (de)activate any SmartGuide communication via app.</li> </ol>
<ol style="list-style-type: none"> <li>1. Short stuttering sounds/flashing light every 30 seconds or after 2 minutes.</li> <li>2. Handle does not operate any timer.</li> </ol>	<ol style="list-style-type: none"> <li>1. «Professional timer» or «2-Minute timer» activated.</li> <li>2. Timer has been modified/deactivated via App.</li> </ol>	<ol style="list-style-type: none"> <li>1. Set your timer to 2-Minute timer (stuttering sounds/flashing light after 2min); or set your timer to Professional timer (stuttering sounds/flashing light every 30 seconds). Follow steps under «Timer setup».</li> <li>2. Use App to change timer settings or perform factory reset (see App Trouble Shootings).</li> </ol>
<p>Handle does not charge.</p>	<ol style="list-style-type: none"> <li>1. Battery is at a very low charger level.</li> <li>2. Ambient temperature for charging is out of valid range (<math>\leq 0^{\circ}\text{C}</math> and <math>\geq 60^{\circ}\text{C}</math>).</li> </ol>	<ol style="list-style-type: none"> <li>1. Charging lights might not flash immediately; it can take up to 30 minutes.</li> <li>2. Recommended ambient temperature for charging is <math>5^{\circ}\text{C}</math> to <math>35^{\circ}\text{C}</math>.</li> </ol>

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>