

200 Watt Power
2 Speed Operation
With a Mix/Measuring Cup







CUSTOMER SERVICE: 1-800-423-4248

BIG BOSS STICK BLENDER™ 200 Watt ITEM NO. 8452
Distributed By EMSON® NY, NY, 10001 ©Copyright 2011
EMSON® All Rights Reserved. Printed In China.

INSTRUCTION MANUAL

CONTENTS

IMPORTANT SAFEGUARDS	. (
UNPACKING - PARTS AND FEATURES	
USAGE - BLENDER ATTACHMENT	(
CLEANING AND MAINTENANCE	. 8

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

- 1. Read all instructions.
- 2. Before use check that the voltage of wall outlet corresponds to the one shown on the rating plate.
- 3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- 4. If the supply cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
- 5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- 6. Do not let cord hang over edge of table or hot surface.
- 7. Do not immerse upper part of blender into water due to the risk of electric shock.
- 8. Close supervision is necessary when your appliance is being used near children.
- 9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- 10. Ensure fingers are kept well away from moving parts.
- 11. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- 12. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
- 13. The use of accessory not recommended by the manufacturer may cause injuries to persons.
- 14. Do not operate the appliance for other than its intended use.
- 15. Do not use outdoors.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

UNPACKING - PARTS AND FEATURES

USAGE-BLENDER ATTACHMENT

- MAIN BODY WITH MOTOR
- **BLENDER ATTACHMENT**
- **MIXING CUP**



MIXING CUP (3 cup/800mL capacity)

Ideal for measuring and for blending directly in the cup



LOW/HIGH SPEED SWITCH

MAIN BODY WITH MOTOR



NOTE: The blending blades are extremely sharp, use caution when handling.

Before using the unit for the first time, wipe the outside of the unit with a clean damp cloth to remove any dust from shipping, dry it thoroughly. Refer to p.8 for complete cleaning instructions.



BLENDER ATTACHMENT

To attach, turn the blender attachment counterclockwise to lock in with the main body.

BLADE GUARD WITH STAINLESS STEEL BLADE

USAGE - Blender

Before first use, hold the unit with blender attachment in the cup half filled with water and turn on for a few seconds.

IMPORTANT: Do not operate unit without food or liquid, unless performing a **Quick Cleaning** on p.8.

CAUTION: Blade is very sharp, handle with care. Ensure that the unit with blender attachment is unplugged from the power outlet before assembling or removing attachments.

- To assemble the Blender Attachment with the motor unit, turn the attachment clockwise until tightened. To disassemble, just turn the attachment counterclockwise.
- 2. Plug the unit with blender attachment into the power outlet.
- 3. **IMPORTANT:** Maximum operation time on high speed cannot exceed 60 seconds (1 minute). To avoid spatter, don't turn the unit on until the blade is submerged in the food mixture. Lower the unit with blender attachment into food and depress the switch on the top of the main body.







LOCK

5

USAGE-BLENDER ATTACHMENT

CLEANING AND MAINTENANCE

- 4. You can use the provided Mixing Cup for blending and easy pouring.
- 5. For best results, use an up and down motion to blend the ingredients. For easier blending, chop or cut the ingredients prior to blending. To avoid possible damage to the blade, remove all of the hard materials such as pits and/or bones from the mixture before blending.
- 6. If mixing soups and sauces, or any other liquids, make sure that there is about 1 inch clearance from where the main body connects to the blender attachment.
- 7. To avoid spatter, turn the unit off first, letting the blade stop completely before lifting the unit out of the food mixture. To stop the unit, simply release the switch at the top of the main body.
- 8. Unplug after use.

QUICK CLEANING

Between processing tasks, hold the unit with blender attachment in the cup half filled with water and turn on for a few seconds.

MAIN BODY

- 1. Unplug and remove the attachment. To disassemble, just turn the attachment counterclockwise.
- 2. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as electric shock may occur.
- 3. Dry thoroughly. Place the attachment back onto main unit.

BLENDER ATTACHMENT

CAUTION: Blade is very sharp, handle with care.

- 1. Unplug the appliance. To disassemble, just turn the attachment counterclockwise. **Note:** Do not immerse the blender attachment in water because overtime the lubrication on the bearings may wash away.
- 2. Wash the blender attachment under running water, without the use of abrasive cleaners or detergents.
- 3. After finishing cleaning the blender attachment, place it upright so that any water which may have got in, can drain out. The blender attachment is dishwasher safe.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com