

7. SPECIFICATIONS & FEATURES

Features	<ul style="list-style-type: none">• Foldable handle for convenient storage• Reinforced cloth carrying strap• Built-in siren
Max Output Power	8 Watts
Power requirements	4 "C" (UM-2) size alkaline batteries
Effective Distance	500 feet
Battery Usage Time	> 4 hours (depends on battery and usage)
Product Construction	Megaphone Body: ABS plastic
Product Dimensions	5.5" x 5.5" x 8"
Product Weight (incl. accessories)	1 lb 12 oz

8. WARRANTY

Califone warrants this product to be free from defective material and workmanship for one year from the purchase date. Our "Project Intercept" Customer Satisfaction program will replace defective parts and repair malfunctioning equipment under this warranty when the defect occurs under normal use.

All Damage Claims Must Be Made With the Freight Carrier

Notify the freight carrier immediately if you observe any damage to the shipping carton or product. Repack the unit in the carton and await inspection by the carrier's claim agent. Notify your dealer of the pending freight claim.

Returning Your Unit for Service or Repairs

Should your unit require service, contact our Customer Service Department online at califone.com/techsupport or via email warranty@califone.com or by phone at 800-722-0500 / 818-407-2400 to first obtain an RA (Return Authorization) number before returning it to Califone. The unit must be returned to our factory via prepaid transportation only after the factory issues an RA number, which must be clearly written on the outside of the box.

Califone® International, Inc.
1145 Arroyo Avenue, #A
San Fernando, CA 91340 USA
Toll Free 800.722.0500 | Toll Free Fax 877.402.2248
International Customers call 818.407.2400 or Fax 818.407.2405
califone.com



Model PA-8 Megaphone



User Manual



Thank you for purchasing the Califone® Model PA-8 Megaphone.

We encourage you to visit our website www.califone.com to register your product for its warranty coverage, to sign up to receive our newsletter, download our catalog, and learn more about the complete line of Califone® audio visual products, including portable and installed wireless PA systems, multimedia players and recorders, headphones and headsets, computer peripheral equipment, visual presentation products and language learning materials.

1. IMPORTANT SAFETY INSTRUCTIONS

Before using this product, read the instruction manual for important safety information. Please retain this manual for future reference and warranty information.

Troubleshooting & Servicing

Do not attempt to service or repair the device yourself. Refer all servicing to qualified service personnel. Do not attempt to modify the device in any way. Doing so could invalidate your warranty.

Moisture and heat sources

Do not use this apparatus near water (for example, sinks, baths, pools) or expose it to rain, moisture, dripping or splashing liquids. Do not expose the unit to high temperatures, high humidity or direct sunlight.

Cleaning

When cleaning the device, please use a soft, dry cloth. Never use benzene, paint-thinner, or other chemicals on the device.

Location

Place the device in stable location, so it will not fall causing damage to the device or bodily harm.

Intended use

The product may only be used with the original parts intended for it. The product may only be used in closed and dry rooms. The intended use includes adherence to the specified installation instructions. The manufacturer accepts no liability for damage arising due to improper use.

2. PACKAGE CONTENTS

- PA-8 Megaphone
- 4pcs "C" (UM-2) size batteries
- User Manual

3. PART NAMES AND FUNCTIONS



1. Microphone
2. Power LED
3. Volume Control
4. Function Switch
5. Battery compartment latch
6. Foldable handle
7. Cloth carrying strap

califone.com

4. SETUP AND INSTALLATION

1. Ensure the unit is off. To turn off the unit, slide the FUNCTION SWITCH to the "OFF" position.
2. Open the BATTERY COMPARTMENT by pressing the latch and insert 4pcs of "C" size batteries making sure that the battery polarity is correct.

5. BASIC OPERATION

1. Adjust the volume to minimum.
2. Switch the FUNCTION SWITCH to "TALK" for amplifying voice through the built-in microphone. Alternatively, adjust the switch to the "SIREN" position to amplify a siren sound through the speaker.
3. Increase the volume to the desired level.
4. To turn off the speaking or siren mode, adjust the FUNCTION SWITCH to the "OFF" position.

CAUTION: No person should stand within 15 feet of the megaphone while on. Avoid exposing listeners to excessive volume for long periods of time as this can result in hearing damage.

6. TROUBLESHOOTING

No Sound or Low Volume	<ul style="list-style-type: none">• Ensure the batteries do not need to be replaced and are installed with the correct polarity.• Ensure that the function switch is in siren or speak mode and the volume is up.• Ensure you are speaking directly and closely to the microphone.
------------------------	--

califone.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>