

Canon

EOS M6

Mark II

Getting Started **ENGLISH**

Manuals and Software

 
For more information about the camera, look for feature guidance displayed on the camera, or refer to the *Advanced User Guide* that can be downloaded from the Canon website.



Download camera and lens manuals and software from the following page.

<http://www.canon.com/icpd/>

- With a computer connected to the Internet, access the above URL.
- Access the site for your country or region.
- Adobe Reader is required to view the manuals.
- For instructions on downloading and installing the software, refer to the downloaded manuals.
- You can also access the manuals and software webpage from a QR code that you can display on the camera. To display the QR code, choose MENU > [F] (Function settings) > [Manual/software URL].

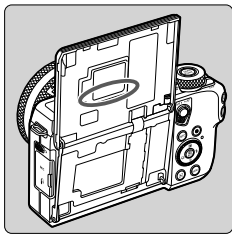

You may be requested to enter the serial number (body number) when downloading the manuals or software.
In this case, enter the number on the back of the screen (monitor).

Preliminary Notes and Legal Information

- Take and review some test shots initially to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that result in the failure of an image to be recorded or to be recorded in a way that is machine readable.
- The user's unauthorized photographing or recording (video and/or sound) of people or copyrighted materials may invade the privacy of such people and/or may violate others' legal rights, including copyright and other intellectual property rights. Note that restrictions may apply even when such photographing or recording is intended solely for personal use.
- For information on camera warranty or Customer Support, please refer to the warranty information provided with your camera User Manual Kit.
- Although the screen is produced under extremely high-precision manufacturing conditions and more than 99.99% of the pixels meet design specifications, in rare cases some pixels may be defective or may appear as red or black dots. This does not indicate camera damage or affect recorded images.
- When the camera is used over an extended period, it may become warm. This is not a malfunction.

Safety Instructions

- Be sure to read these instructions in order to operate the product safely.
- Follow these instructions to prevent injury or harm to the operator of the product or others.



WARNING: Denotes the risk of serious injury or death.

- Keep the product out of the reach of young children.

A strap wrapped around a person's neck may result in strangulation.

The parts or provided items of cameras or accessories are dangerous if swallowed.

If swallowed, seek immediate medical assistance.

The battery is dangerous if swallowed. If swallowed, seek immediate medical assistance.

- Use only power sources specified in this instruction manual for use with the product.
- Do not disassemble or modify the product.
- Do not expose the product to strong shocks or vibration.
- Do not touch any exposed internal parts.
- Stop using the product in any case of unusual circumstances such as the presence of smoke or a strange smell.
- Do not use organic solvents such as alcohol, benzene or paint thinner to clean the product.
- Do not get the product wet. Do not insert foreign objects or liquids into the product.
- Do not use the product where flammable gases may be present.

This may cause electric shock, explosion or fire.

- Do not leave a lens or a camera with a lens attached, exposed without the lens cap attached.

The lens may concentrate the light and cause fire.

- Do not touch the product connected to a power outlet during lightning storms.

This may cause electric shock.

- Observe the following instructions when using commercially available batteries or provided battery packs.
 - Use batteries/battery packs only with their specified product.
 - Do not heat batteries/battery packs or expose them to fire.
 - Do not charge batteries/battery packs using non-authorized battery chargers.
 - Do not expose the terminals to dirt or let them come into contact with metallic pins or other metal objects.
 - Do not use leaking batteries/battery packs.
 - When disposing of batteries/battery packs, insulate the terminals with tape or other means.

This may cause electric shock, explosion or fire.

If a battery/battery pack leaks and the material contacts your skin or clothing, flush the exposed area thoroughly with running water. In case of eye contact, flush thoroughly with copious amounts of clean running water and seek immediate medical assistance.

- Observe the following instructions when using a battery charger or AC adapter.
 - Periodically remove any dust buildup from the power plug and power outlet using a dry cloth.
 - Do not plug in or unplug the product with wet hands.
 - Do not use the product if the power plug is not fully inserted into the power outlet.
 - Do not expose the power plug and terminals to dirt or let them come into contact with metallic pins or other metal objects.

- Do not touch the battery charger or AC adapter connected to a power outlet during lightning storms.
- Do not place heavy objects on the power cord. Do not damage, break or modify the power cord.
- Do not wrap the product in cloth or other materials when in use or shortly after use when the product is still warm in temperature.
- Do not unplug the product by pulling the power cord.
- Do not leave the product connected to a power source for long periods of time.
- Do not charge batteries/battery packs at temperatures outside the range of 5 - 40 °C (41 - 104 °F).

This may cause electric shock, explosion or fire.

- Do not allow the product to maintain contact with the same area of skin for extended periods of time during use.

This may result in low-temperature contact burns, including skin redness and blistering, even if the product does not feel hot. The use of a tripod or similar equipment is recommended when using the product in hot places and for people with circulation problems or less sensitive skin.

- Follow any indications to turn off the product in places where its use is forbidden.

Not doing so may cause other equipment to malfunction due to the effect of electromagnetic waves and even result in accidents.



CAUTION: Denotes the risk of injury.

- Do not fire the flash near the eyes.

It may hurt the eyes.

- Do not look at the screen or through the viewfinder for prolonged periods of time.

This may induce symptoms similar to motion sickness. In such a case, stop using the product immediately and rest for a while before resuming use.

- Flash emits high temperatures when fired. Keep fingers, any other part of your body, and objects away from the flash unit while taking pictures.

This may cause burns or malfunction of the flash.

- Do not leave the product in places exposed to extremely high or low temperatures.

The product may become extremely hot/cold and cause burns or injury when touched.

- Strap is intended for use on the body only. Hanging the strap with any product attached on a hook or other object may damage the product. Also, do not shake the product or expose the product to strong impacts.
- Do not apply strong pressure on the lens or allow an object to hit it.

This may cause injury or damage to the product.

- Only mount the product on a tripod that is sufficiently sturdy.
- Do not carry the product when it is mounted on a tripod.

This may cause injury or may result in an accident.

- Do not touch any parts inside the product.

 
This may cause injury.

- If any abnormal skin reaction or irritation occurs during or following the use of this product, refrain from further use and get medical advice/attention.

Initial Preparations


Attaching the Strap

- 1 Attach the included strap to the strap mount.


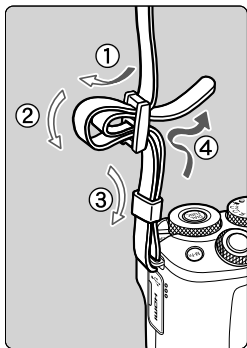


Charging the Battery

 - 1 Insert the battery in the charger.

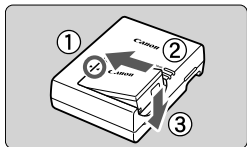


- 2 Charge the battery.

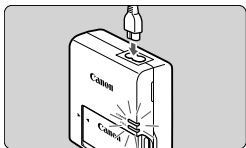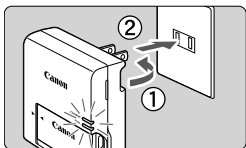  

- Lamp colors
 - Charging: Orange
 - Fully charged: Green

 - 3 Remove the battery.

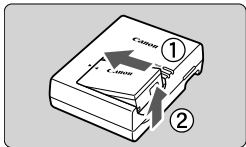

Preparing a Card

Use the following cards (sold separately), in any capacity.

- SD memory cards*¹
- SDHC memory cards*^{1*2}
- SDXC memory cards*^{1*2}

 


*1 Cards conforming to SD standards. However, not all cards have been verified to work with the camera.


*2 UHS-II and UHS-I cards are also supported.

Inserting/Removing the Battery and Card


1 Open the cover.

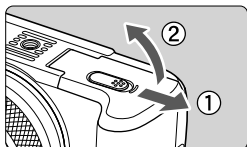


2 Insert the battery.

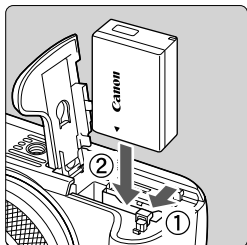 


Removal

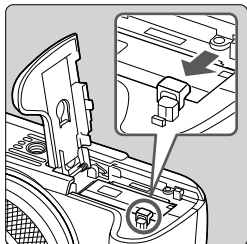 


3 Insert the card.

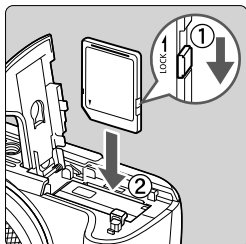 

Removal

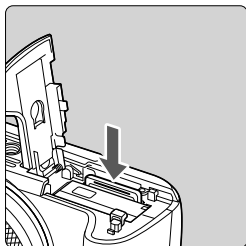 


4 Close the cover.

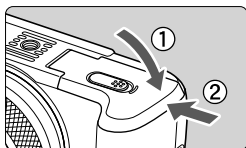 


Attaching a Lens

 
- 1** Set the power switch to <OFF>.

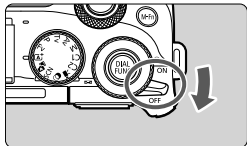

- 2** Remove the lens and camera cap.

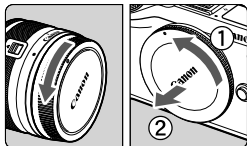 


- 3** Attach the lens.

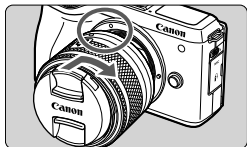 

- Align the white mount index on the lens with the white mount index on the camera and turn the lens as shown by the arrow until it clicks in place.

 
- 4** Prepare to shoot.

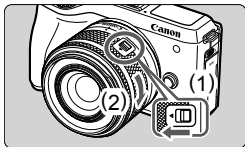


- Press (1) as you turn (2) slightly, and then release (1).
- Turn (2) a little more until it clicks.

Detaching a Lens

 - 1** Set the power switch to <OFF>.

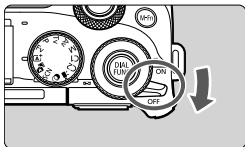


- 2** Remove the lens.

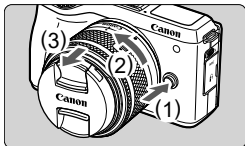 


- Press (1) as you turn the lens toward (2) until it stops.
- Remove the lens toward (3).

 3 Attach the lens and camera cap.


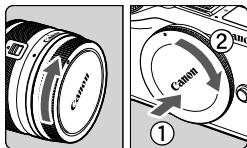


Setting the Date, Time, Time Zone, and Language

 
1 Set the power switch to <ON>.

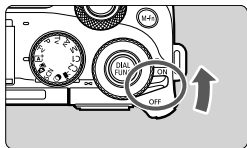


2 Set the time zone.

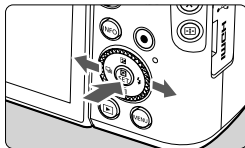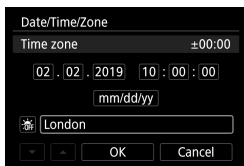  

 - Use the <<▶> <▶> keys to select the time zone, then press <SET>.

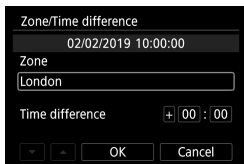

- Press <SET>.

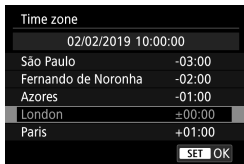 


- <▲> <▼> keys to select the time zone → <SET> → <<▶> <▶> keys to select [OK] → <SET>

3 Set the date and time.




 - <◀> <▶> keys to navigate → <SET> → <▲> <▼> keys to adjust → <SET>

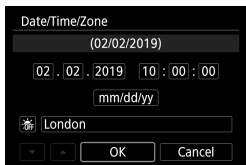

- Select [OK], then press <SET>.

 4 Set the desired language.

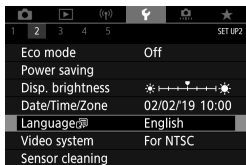

- Use the <▲> <▼> keys to select [Language], then press <SET>.

 


- Use the <⬆> cross keys to select a language, then press <SET>.

Trying the Camera Out

Shooting

- 1 Remove the lens cap and set the power switch to <ON>.

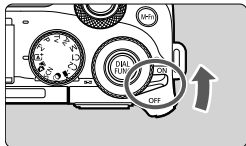

- 2 Set the focus mode switch to <AF>.

 


- 3 Enter <A+> mode.




- Press <SET>.

4 Zoom in or out, as needed.

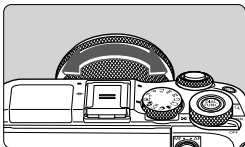


- Turn the zoom ring on the lens with your fingers as you watch the screen.

 5 Focus (press halfway).

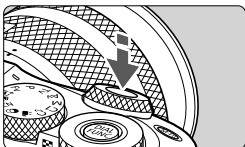


- The camera beeps twice after focusing.
- AF points are displayed around positions in focus.

 Using the flash

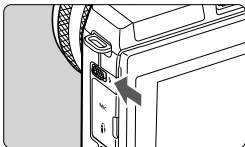


- If [⚡] blinks, use the <⏪> lever to raise the built-in flash.

 6 Shoot (press fully).

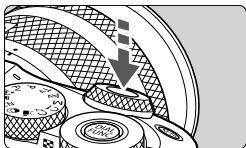


Recording movies

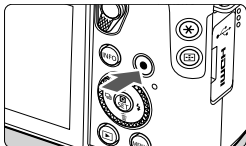 


- [●REC] is displayed during recording.
- To stop recording, press the movie shooting button again.


Viewing

 1 Press the <▶> button.


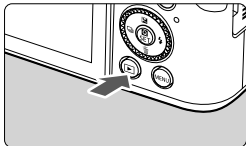


2 Select an image.

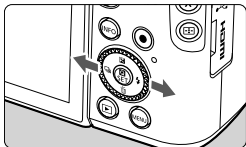 

- Movies are labeled with [SET ].

  Playing movies

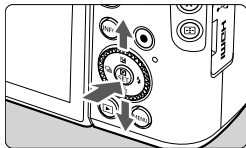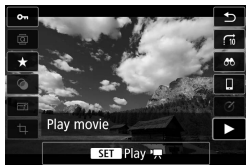

- Press <SET> twice.
- Use the <▲> <▼> keys to adjust the volume.

Trademarks and Licensing

- The SDXC logo is a trademark of SD-3C, LLC.

Disclaimer

- Unauthorized reproduction of this guide is prohibited.
- Illustrations and screenshots in this guide may differ slightly from the actual equipment.

Only for European Union and EEA (Norway, Iceland and Liechtenstein)



These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2012/19/EU), the Battery Directive (2006/66/EC) and/or national legislation implementing those Directives.

If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration above an applicable

threshold specified in the Battery Directive.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit www.canon-europe.com/weee, or www.canon-europe.com/battery.

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO LOCAL REGULATION.**

To ensure proper operation of this product, use of genuine Canon accessories is recommended.

Use of USB cables designated as genuine Canon accessories is recommended.

Use a commercially available HDMI cable (connector on side of camera is type D).

Use of cables that are both no longer than 2.5m is recommended.

The model number is PC2358 (including WLAN module and BLE module model WM600). To identify your model, check the label on the bottom of the camera or behind the tilt-up screen for a number beginning with PC.

Countries and Regions Permitting Wireless Function Use

- Use of wireless function is restricted in some countries and regions, and illegal use may be punishable under national or local regulations. To avoid violating wireless regulations, visit the Canon website to check where use is allowed.

Note that Canon cannot be held liable for any problems arising from wireless function use in other countries and regions.

Doing any of the following may incur legal penalties:

- Altering or modifying the product
- Removing the certification labels from the product

Do not use the wireless function of this product near medical equipment or other electronic equipment.

Use of the wireless function near medical equipment or other electronic equipment may affect operation of those devices.

Hereby, Canon Inc. declares that this equipment is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.canon-europe.com/ce-documentation>

Wi-Fi Frequency range: 2401 - 2473MHz

Wi-Fi Maximum output power: 11.7dBm

Bluetooth Frequency range: 2402 - 2480MHz

Bluetooth Maximum output power: 9.7dBm

CANON EUROPA N.V. Bovenkerkerweg 59, 1185 XB Amstelveen, The Netherlands

CANON INC. 30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

You can check the [Certification Logo Display] in the settings tab of the Menu.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>