

Canon

EOS REBEL T6i EOS 750D

EOS REBEL T6i (W)
EOS 750D (W)

Quick Reference Guide

This quick reference guide explains the basic function settings and how to shoot and play back images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS REBEL T6i (W) or EOS 750D (W) Instruction Manual.

E
English

CPQ-E154-000 © CANON INC. 2015

Quick Start Guide

- 1** Insert the battery.
- 2** Insert a card.
- 3** Attach the lens. Align the lens's white or red mount index with the camera's mount index of the same color.
- 4** Set the lens focus mode switch to <AF>.
- 5** Set the power switch to <ON>, then set the Mode Dial to <A+> (Scene Intelligent Auto).

- 6** Flip out the LCD monitor.
- 7** Focus on the subject. Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.
- 8** Take the picture. Press the shutter button completely to take the picture.
- 9** Review the picture. The captured image will be displayed for 2 sec. on the LCD monitor.

The ☆ on the right of the function indicates that the function is available only in Creative Zone modes.

Number of Possible Shots (Viewfinder Shooting)

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 550 shots	Approx. 440 shots

Image Playback

Select image

INFO. Shooting information display

Erase

Playback

Preparation

Menu Operations

<MENU> button

LCD monitor/Touch screen

<SET> button

<Left> <Right> cross keys

- Press the <MENU> button to display the menu.
- Press the <Left> <Right> keys to select a tab, then press the <Up> <Down> keys to select the desired item.
- Press <SET> to display the setting.
- After selecting the setting, press <SET>.

Basic Zone Modes

Movie Shooting

Creative Zone Modes

Menu items

Menu settings

Image-recording Quality

- Select [📷 1: Image quality], then press <SET>.
- Press the <Left> <Right> keys to select the image-recording quality, then press <SET>.

Image-recording quality

Pixels recorded

Possible shots

Picture Style ☆

- Press the <Down> <Up> button.
- Press the <Left> <Right> keys to select a Picture Style, then press <SET>.

Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscapes	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <Neutral> (Neutral) and <Faithful> (Faithful), refer to the Camera Instruction Manual.

Quick Control

- Press the <Q> button.
- The Quick Control screen will appear.

Basic Zone Modes

Creative Zone Modes

Shooting mode

Exposure compensation/AEB setting

Picture Style

AF operation

Return

White balance

AF area selection mode

White balance correction

Metering mode

Shutter speed

Aperture

Highlight tone priority

ISO speed

Flash exposure compensation

Built-in flash settings

Image-recording quality

Auto Lighting Optimizer

Drive mode

White balance bracketing

- Press the <Left> <Right> cross keys to select a function, then turn the <Dial> to set it.
- In Basic Zone modes, settable functions vary by shooting mode.

Touch Screen

- The LCD monitor is a touch-sensitive panel that you can operate with your fingers.
- For information on touch screen operations, refer to the Camera Instruction Manual.

Custom Functions ☆

C.Fn I: Exposure

- Exposure level increments
- ISO expansion

C.Fn II: Image

- Highlight tone priority

C.Fn III: Autofocus/Drive

 
- AF-assist beam firing
- AF area selection method
- Auto AF point selection: Color Tracking
- AF point display during focus
- VF display illumination
- Mirror lockup

C.Fn IV: Operation/Others


- Shutter/AE lock button
- Assign SET button
- LCD display when power ON
- Retract lens on power off

Shooting Operation


Nomenclature

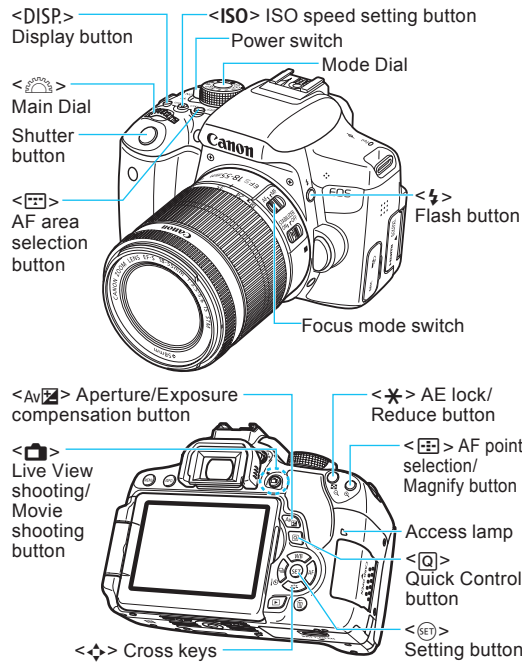


Shooting Function Settings

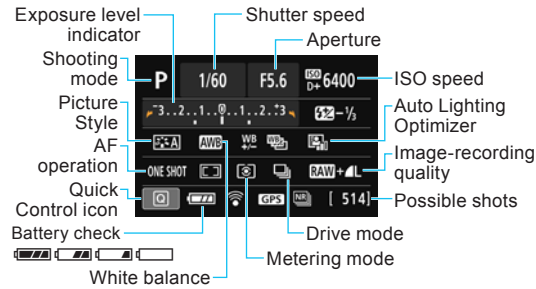 

Viewfinder Information

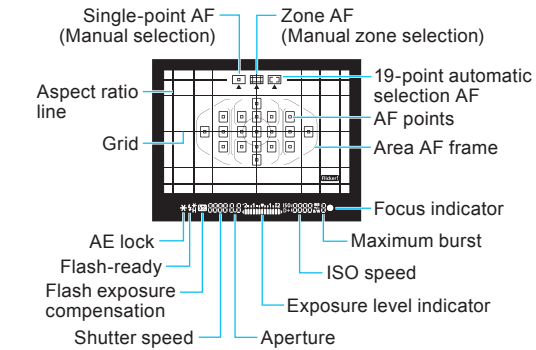 

Basic Zone Modes

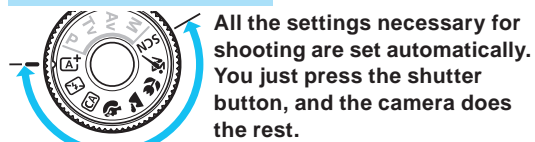 

- All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.
- P** Scene Intelligent Auto
 - Tv** Flash Off
 - CA** Creative Auto
 - Portrait** Portrait
 - Landscape** Landscape
 - Close-up** Close-up
 - Sports** Sports
 - SCN** Special scene
 - Kids
 - Food
 - Candlelight
 - Night Portrait
 - Handheld Night Scene
 - HDR Backlight Control

Using the Built-in Flash

Basic Zone Modes

If necessary, the built-in flash will be automatically raised and fired in low-light or backlit conditions (with certain shooting modes).

Creative Zone Modes

- Press the **<Flash>** button to raise the built-in flash, then shoot.

Creative Zone Modes

You can change the camera settings as desired to shoot in various ways.

P: Program AE

- Set the Mode Dial to **<P>**.
- The camera automatically sets the shutter speed and aperture in the same way as the **<Av>** mode.

 
Tv: Shutter-priority AE

- Set the Mode Dial to **<Tv>**.
- Turn the **<Main Dial>** to set the desired shutter speed, then focus on the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the **<Main Dial>** until it stops blinking.


Av: Aperture-priority AE

- Set the Mode Dial to **<Av>**.
- Turn the **<Main Dial>** to set the desired aperture, then focus on the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the **<Main Dial>** until it stops blinking.

ISO: ISO Speed ☆

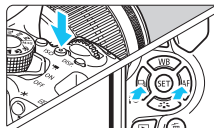

 
- Press the **<ISO>** button.
- Press the **<Left>** or **<Right>** keys or turn the **<Main Dial>** to select the desired ISO speed, then press **<Set>**.
- When **[AUTO]** is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting is displayed.

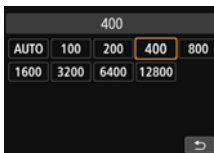

Drive Mode



 
- Press the **<Drive Mode>** button, press the **<Left>** or **<Right>** keys to select the drive mode, then press **<Set>**.
- [Single shooting]**
- [Continuous shooting]**
- [Silent single shooting]**
- [Silent continuous shooting]**
- [10-sec. self-timer/remote control]**
- [Self-timer: 2 sec.]**
- [Self-timer: Continuous]**

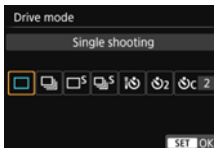

AF: AF Operation ☆




 - Set the lens focus mode switch to **<AF>**.
- Press the **<AF>** button, press the **<Left>** or **<Right>** keys to select the AF operation, then press **<Set>**.

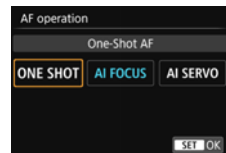


- ONE SHOT (One-Shot AF):** For still subjects
- AI FOCUS (AI Focus AF):** Switches the AF operation automatically
- AI SERVO (AI Servo AF):** For moving subjects

 
AF Point Selection ☆

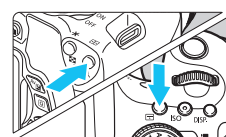

 - Press the **<AF Point Selection>** or **<AF Area Selection>** button.
- You can shift the AF point horizontally by turning the **<Main Dial>**, and vertically by turning the **<Main Dial>** dial while holding down the **<Av>** button. If you press **<Set>** straight down, the center AF point (or center zone) will be selected.

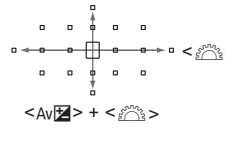


AF Area Selection Mode ☆

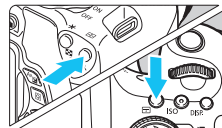 


- Press the **<AF Area Selection>** or **<AF Point Selection>** button.
- Look through the viewfinder and press the **<AF Area Selection>** button.
- Each time you press the **<AF Area Selection>** button, the AF area selection mode changes.

 Live View Shooting

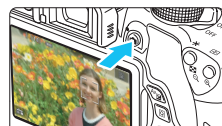

 - Press the **<Live View>** button to display the Live View image.

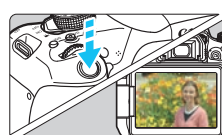


- Press the shutter button halfway to focus, then press it completely to take the picture.

Number of Possible Shots (Live View Shooting)

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 200 shots	Approx. 180 shots

 
Movie Shooting (Autoexposure)

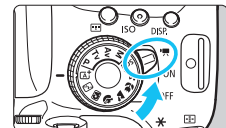

- Set the power switch to **<Movie>**.
- Set the Mode Dial to any shooting mode except **<M>**.



 - Press the **<Movie>** button to start shooting a movie.
- To stop movie shooting, press the **<Movie>** button again.

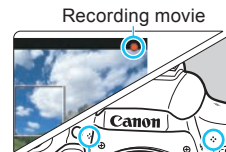

Built-in microphones

- When the shooting mode is **<M>**, you can shoot movies with manual exposure.
- You can set movie shooting settings with the menu options under the **[Menu 1]** or **[Menu 2]** tab.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>