

# Canon

# *PowerShot A3150 IS*

# *PowerShot A3100 IS*

# *PowerShot A3000 IS*

## Camera User Guide



Photo of PowerShot A3100 IS

- Make sure you read this guide before using the camera.
- Store this guide safely so that you can use it in the future.

**ENGLISH**

## Checking the Package Contents

Check if the following items are included in your camera package. If anything is missing, contact the retailer from which you purchased the camera.




Camera




Battery Pack NB-8L (with Terminal Cover)



Battery Charger CB-2LA/2LAE

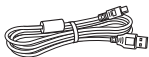

Interface Cable IFC-400PCU

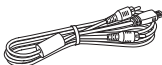

AV Cable AVC-DC400



Wrist Strap WS-800



Getting Started



DIGITAL CAMERA Solution Disk



Warranty System Booklet

### Using the Manuals

Also refer to the manuals on the DIGITAL CAMERA Manuals Disk.

- **Camera User Guide (This Guide)**

Once you have mastered the basics, use the camera's many features to shoot more challenging photos.

- **Personal Printing Guide**

Read when you want to connect the camera to a printer (sold separately) and print.

- **Software Guide**

Read when you want to use the included software.



- A memory card is not included.
- Adobe Reader is required to view the PDF manuals. Microsoft Word/Word Viewer can be installed to view the Word manuals (required only for manuals for the Middle East).

# Read This First

## Test Shots and Disclaimer

Take some initial test shots and play them back to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that results in the failure of an image to be recorded or to be recorded in a way that is machine readable.

## Warning Against Copyright Infringement

The images recorded with this camera are intended for personal use. Do not record images that infringe upon copyright laws without the prior permission of the copyright holder. Please be advised that in certain cases the copying of images from performances, exhibitions, or commercial properties by means of a camera or other device may contravene copyright or other legal rights even if the image was shot for personal use.

## Warranty Limitations

For information on your camera's warranty, please refer to the Canon Warranty System Booklet supplied with your camera.

For Canon Customer Support contacts, please see the Warranty System Booklet.

## LCD Monitor

- The LCD monitor is produced with extremely high-precision manufacturing techniques. More than 99.99% of the pixels operate to specification, but occasionally non-performing pixels may appear as bright or dark dots. This is not a malfunction and has no effect on the recorded image.
- The LCD monitor may be covered with a thin plastic film for protection against scratches during shipment. If so, remove the film before using the camera.

## Camera Body Temperature

Please take care when operating the camera for an extended period as the camera body may become warm. This is not a malfunction.

# What Do You Want to Do?

## Shoot

- Shoot, leaving it to the camera to make settings . . . . . 24
- Just take pictures (Easy mode) . . . . . 29
- Shoot to match special conditions . . . . . 54 – 57

### Take good people shots



Portraits  
(p. 54)



At night  
(p. 54)



Kids and pets  
(p. 54)



At the beach  
(p. 56)



Against snow  
(p. 56)

### Take good landscapes



Landscape  
(p. 54)



Foliage  
(p. 56)

### Shoot various other scenes



Indoors  
(p. 55)



Low light  
(p. 56)



Fireworks  
(p. 56)

- Focus on faces . . . . . 24, 78
- Shoot in places where I cannot use the flash  
(turn off the flash) . . . . . 58
- Take pictures with me in them too (self-timer). . . . . 62, 63
- Insert the date and time into my shots. . . . . 61
- Take close-up pictures of subjects (macro shooting) . . . . . 67
- Add effects and shoot (Poster Effect, Super Vivid) . . . . . 57
- Take sepia toned or black and white pictures . . . . . 73
- Change the size of picture I want to take (recording pixels) . . . . . 68
- Take pictures continuously . . . . . 74
- Change the ISO speed . . . . . 71

 **View**

- Look at my pictures . . . . . 27
- Automatically play back pictures (slideshow) . . . . . 94
- Look at my pictures on a TV . . . . . 97
- Look at my pictures on a computer . . . . . 34
- Quickly search pictures . . . . . 92, 93
- Erase pictures . . . . . 28, 101
- Protect pictures from accidental erasure . . . . . 98

 **Shoot/View Movies**

- Shoot movies . . . . . 31
- View movies . . . . . 33, 88

 **Print**

- Easily print pictures . . . . . 110

 **Save**

- Save images to a computer . . . . . 34

 **Other**

- Turn off sounds . . . . . 48
- Use the camera abroad . . . . . 39, 120
- Understand what is displayed on the screen . . . . . 132

# Table of Contents

Chapters 1 – 3 explain the basic operations and frequently used functions of this camera. Chapters 4 onward explain the advanced functions, letting you learn more as you read each chapter.

Checking the Package Contents .....	2
Read This First .....	3
What Do You Want to Do? .....	4
Conventions Used in This Guide .....	8
Safety Precautions.....	9

## 1 Getting Started ..... 13

Charging the Battery .....	14
Compatible Memory Cards (Sold Separately) .....	16
Inserting the Battery and Memory Card .....	16
Setting the Date and Time .....	19
Setting the Display Language.....	21
Formatting Memory Cards .....	22
Pressing the Shutter Button .....	23
Taking Pictures (Smart Auto).....	24
Viewing Images .....	27
Erasing Images .....	28
Shooting in Easy Mode.....	29
Viewing or Erasing in Easy Mode ...	30
Shooting Movies .....	31
Viewing Movies .....	33
Transferring Images to a Computer for Viewing .....	34
Accessories .....	38
Separately Sold Accessories .....	39

## 2 Learning More..... 41

Components Guide .....	42
Indicator .....	43
Screen Display.....	44
Power Saving Function (Auto Power Down).....	45
FUNC. Menu – Basic Operations ...	46

MENU – Basic Operations .....	47
Changing the Sound Settings .....	48
Changing the Screen Brightness ....	49
Returning the Camera to Default Settings .....	50
Low Level Memory Card Formatting .....	51
Clock Functions.....	52

## 3 Shooting in Special Conditions and Commonly Used Functions ..... 53

Shooting in Various Conditions .....	54
Shooting in Special Scenes .....	55
Turning the Flash Off .....	58
Zooming in Closely on Subjects (Digital Zoom).....	59
Inserting the Date and Time.....	61
Using the Self-Timer .....	62
Using the Face Self-Timer .....	63

## 4 Choosing Settings Yourself ..... 65

Shooting in Program AE.....	66
Adjusting the Brightness (Exposure Compensation) .....	66
Turning the Flash On .....	67
Shooting Close-ups (Macro) .....	67
Shooting Far Away Subjects (Infinity) .....	68
Changing the Recording Pixel Setting (Image Size).....	68
Changing the Compression Ratio (Image Quality).....	69
Changing the ISO Speed .....	71
Adjusting the White Balance .....	72

Changing the Tone of an Image (My Colors) .....	73
Continuous Shooting .....	74
Shooting Using the Two Second Self-Timer .....	74
Customizing the Self-Timer .....	75
Shooting Using a TV Monitor .....	76
Changing the Composition with the Focus Lock .....	76

## 5 Getting More Out of Your Camera ..... 77

Changing the AF Frame Mode .....	78
Magnifying the Focal Point .....	79
Choosing the Person to Focus On (Face Select).....	80
Shooting with the AF Lock .....	81
Changing the Metering Mode .....	81
Shooting with the AE Lock .....	82
Shooting with the FE Lock .....	82
Shooting with Slow Synchro .....	83
Red-Eye Correction .....	83
Shooting Long Exposures.....	84

## 6 Using Various Functions for Shooting Movies ..... 85

Changing the Image Quality .....	86
AE Lock/Exposure Shift .....	87
Other Shooting Functions .....	87
Playback Functions.....	88
Editing.....	89

## 7 Using Various Playback and Editing Functions ..... 91

Quickly Searching Images .....	92
Searching for Images Using the Jump Display .....	93
Viewing Slideshows .....	94
Checking the Focus .....	95
Magnifying Images.....	96
Changing Image Transitions.....	96

Viewing Images on a TV .....	97
Protecting Images .....	98
Erasing All Images .....	101
Tagging Images as Favorites.....	103
Organizing Images by Category (My Category) .....	104
Rotating Images .....	105
Resizing Images.....	106
Trimming .....	107
Correcting the Red-Eye Effect .....	108

## 8 Printing ..... 109

Printing Images .....	110
Choosing Images for Printing (DPOF).....	112
Printing Images with DPOF Settings .....	114

## 9 Customizing Camera Settings ..... 115


Changing Camera Settings .....	116
Changing Shooting Function Settings .....	121
Changing Playback Function Settings .....	124

## 10 Useful Information..... 125

Using Household Power.....	126
Troubleshooting .....	127
List of Messages That Appear on the Screen.....	130
Information Displayed on the Screen.....	132
Functions Available in Each Shooting Mode .....	134
Menus .....	136
Specifications .....	140
Handling Precautions .....	143
Index .....	144

## Conventions Used in This Guide

- Icons are used in the text to represent the camera buttons and the mode dial.
- Language that displays on the screen appears inside [ ] (square brackets).
- The directional buttons and FUNC./SET button are represented by the following icons.

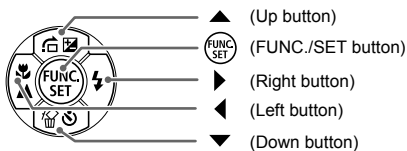

- ⓘ : Things you should be careful about.
- ❗ : Troubleshooting tips.
- 💡 : Hints for getting more out of your camera.
- 📎 : Supplemental information.
- (p. xx): Reference pages. “xx” stands for a page number.
- This guide assumes all functions are at their default settings.
- The various types of memory cards that can be used in this camera are collectively referred to as memory cards in this guide.
- Functions that differ depending on the camera model are indicated with the following icons:
  - A3100IS** : Functions and precautions for the PowerShot A3100 IS and A3150 IS only
  - A3000IS** : Functions and precautions for the PowerShot A3000 IS onlyExplanations without these icons apply to both models.
- PowerShot A3100 IS screenshots and illustrations are used for the explanations in this guide.



## Safety Precautions

- Before using the camera, please ensure that you read the safety precautions described below. Always ensure that the camera is operated correctly.
- The safety precautions noted on the following pages are intended to prevent injuries to yourself and other persons, or damage to the equipment.
- Be sure to also check the guides included with any separately sold accessories you use.



**Warning** Denotes the possibility of serious injury or death.



**Caution** Denotes the possibility of injury.

**Caution** Denotes the possibility of damage to the equipment.



### Warning

#### Camera

- **Do not trigger the flash in close proximity to people's eyes.**  
Exposure to the intense light produced by the flash could damage eyesight. In particular, remain at least one meter (39 inches) away from infants when using the flash.

- **Store this equipment out of the reach of children and infants.**  
Strap: Putting the strap around a child's neck could result in asphyxiation.  
Memory card: Dangerous if swallowed. If this occurs, contact a doctor immediately.

- **Do not attempt to disassemble or alter any part of the equipment unless expressly indicated to do so in this guide.**
- **To avoid the risk of injury, do not touch the interior of the camera if it has been dropped or otherwise damaged.**
- **Stop operating the camera immediately if it emits smoke, a strange smell, or otherwise behaves abnormally.**
- **Do not use organic solvents such as alcohol, benzene, or thinner to clean the equipment.**
- **Do not allow liquids or foreign objects to enter the camera.**

The above could result in fire or electrical shock.

If liquid or foreign objects come into contact with the camera interior, immediately turn the camera power off and remove the battery.

- **Use only recommended power sources.**  
Using other power sources could result in fire or electrical shock.

### Battery and Battery Charger

- Use only recommended batteries.
- Do not place the battery near or in direct flame.
- Do not let the battery come into contact with water (e.g. sea water) or other liquids.
- Do not attempt to disassemble, alter or apply heat to the battery.
- Avoid dropping or subjecting the battery to severe impacts.

The above may cause explosions or leaks, resulting in fire, injury and damage to the surroundings. In the event that a battery leaks and the eyes, mouth, skin or clothing contacts these substances, immediately flush with water and seek medical assistance. If the battery charger becomes wet, unplug it from the outlet and consult your camera distributor or the closest Canon Customer Support Help Desk.

- 
- Use only the specified battery charger to charge the battery.
  - Unplug the power cord periodically and wipe away any dust and dirt that has collected on the plug, the exterior of the power outlet, and the surrounding area.
  - Do not handle the power cord with wet hands.
  - Do not use the equipment in a manner that exceeds the rated capacity of the electrical outlet or wiring accessories. Do not use if the power cord or plug are damaged, or not fully plugged into the outlet.
  - Do not allow dirt or metal objects (such as pins or keys) to contact the charger terminals or plug.

The above could result in fire or electrical shock.

### Other Warnings

- Do not play the supplied CD-ROM(s) in any CD player that does not support data CD-ROMs.

It is possible to suffer hearing loss from listening with headphones to the loud sounds of a CD-ROM played on a music CD player. Additionally, playing the CD-ROM(s) in an audio CD player (music player) could damage the speakers.



### Caution

- Be careful not to bang the camera or subject it to strong impacts or shocks when hanging it by the strap.
- Be careful not to bump or push strongly on the lens.

This could damage the camera or lead to injury.

- 
- Avoid using, placing or storing the camera in the following places.
    - Places subject to strong sunlight.
    - Places subject to temperatures above 40 °C (104 °F).
    - Humid or dusty areas.

These could cause leakage, overheating or an explosion of the battery, resulting in electrical shock, fire, burns or other injuries. High temperatures may also cause deformation of the casing.

- **When using the flash, be careful not to cover it with your fingers or clothing.** This could result in burns or damage to the flash.

## Caution

- **Do not aim the camera at bright light sources (the sun, etc.).**

Doing so may cause malfunctions or damage the image sensor.

- **When using the camera on a beach or at a windy location, be careful not to allow dust or sand to enter the camera.**

This may cause the camera to malfunction.

- **In regular use, small amounts of smoke may be emitted from the flash.**

This is due to the high intensity of the flash burning dust and foreign materials stuck to the front of the unit. Please use a cotton swab to remove dirt, dust or other foreign matter from the flash to prevent heat build-up and damage to the unit.

- **Unplug the battery charger from the power outlet after recharging is complete, or when you are not using it.**
- **Do not place anything, such as cloth on top of the battery charger while it is charging.**

Leaving the unit plugged in for a long period of time may cause it to overheat and distort, resulting in fire.

- **Remove and store the battery when you are not using the camera.**

If the battery is left inside the camera, damage caused by leakage may occur.

- **Before you discard batteries, cover the terminals with tape or other insulators.**

Contacting other metal materials in waste containers may lead to fire or explosions.

- **Do not place the battery near pets.**

Pets biting the battery could cause leakage, overheating or explosion, resulting in fire or injuries.

- **Do not sit down with the camera in your pocket.**

Doing so may cause malfunctions or damage the screen.

- **When putting the camera in your bag, ensure that hard objects do not come into contact with the screen.**

- **Do not attach accessories to the strap.**

Doing so may cause malfunctions or damage the screen.





# 1


## Getting Started

This chapter explains preparations before shooting, how to shoot in **AUTO** mode, and then how to view and erase the images you take. The latter part of this chapter explains how to shoot and view images in Easy Mode, how to shoot and view movies and how to transfer images to a computer.

---


### Attaching the Strap/Holding the Camera

- Be sure to attach the supplied strap to the camera and wrap it around your wrist when shooting to avoid dropping the camera.
- Keep your arms tight against your body while holding the camera firmly by the sides. Be sure that your fingers do not block the flash.

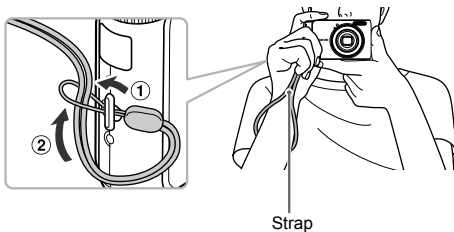


## Charging the Battery

Use the included charger to charge the battery. Be sure to charge the battery as it is not charged at the time of purchase.

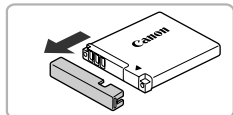


### 1 Remove the cover.

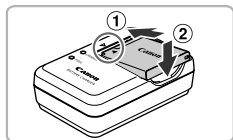



### 2 Insert the battery.

- Align the ▲ marks on the battery and charger, then insert the battery by sliding it in ① and down ②.

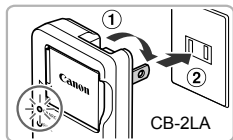

### 3 Charge the battery.

- For CB-2LA: Flip out the plug ① and plug the charger into a power outlet ②.
- For CB-2LAE: Plug the power cord into the charger, then plug the other end into a power outlet.
- ▶ The charge lamp lights orange and charging starts.
- ▶ The charge lamp will light green when charging has finished. Charging takes approx. 1 hour and 30 minutes.

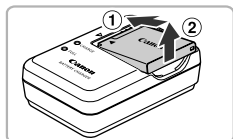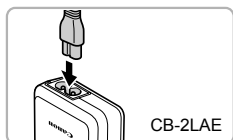

### 4 Remove the battery.

- Unplug the battery charger from the power outlet, then remove the battery by sliding it in ① and up ②.



To protect the battery and prolong its life, do not charge it for longer than 24 hours continuously.




## Approximate Number of Shots That Can Be Taken

Number of Shots	<b>A3100IS</b> 240	<b>A3000IS</b> 230
Playback Time (Hours)	6	

- The number of shots that can be taken is based on the Camera & Imaging Products Association (CIPA) measurement standard.
- Under some shooting conditions, the number of shots that can be taken may be less than mentioned above.


## Battery Charge Indicator

An icon or message will appear on the screen indicating the battery's charge state.

Display	Summary
	Sufficient charge.
	Slightly depleted, but sufficient.
 (Blinking red)	Nearly depleted. Charge the battery.
"Change the battery pack."	Depleted. Recharge the battery.

### Using the battery and charger effectively

- Charge the battery on the day, or the day before, it will be used. Charged batteries continue to discharge naturally even if they are not used.

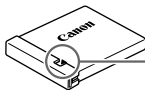


Attach the cover to a charged battery so that the ▲ mark is visible.

- How to store the battery for long periods:  
Deplete and remove the battery from the camera. Attach the terminal cover and store the battery. Storing a battery for long periods of time (about a year) without depleting it may shorten its life span or affect its performance.
- The battery charger can also be used when abroad.  
The charger can be used in regions that have 100 – 240 V (50/60 Hz) AC power. If the plug does not fit the outlet, use a commercially available plug adapter. Do not use electrical transformers for foreign travel as they will cause damage.
- The battery may develop a bulge.  
This is a normal characteristic of the battery and does not indicate a problem. However, if the battery bulges to the point where it will no longer fit into the camera, please contact a Canon Customer Support Help Desk.
- If the battery is quickly depleted even after charging, it has reached the end of its life span.  
Purchase a new battery.



## Compatible Memory Cards (Sold Separately)

- SD memory cards (2 GB and less)\*
- SDHC memory cards (More than 2 GB, up to and including 32 GB)\*
- SDXC memory cards (More than 32 GB)\* 
- MultiMediaCards
- MMCplus memory cards
- HC MMCplus memory cards


\* This memory card complies with the SD standards. Some cards may not operate properly depending on the brand of card used.



Depending on your computer's OS version, SDXC memory cards may not be recognized when using a commercially available card reader. Check to make sure that your OS supports this function beforehand.


## Inserting the Battery and Memory Card

Insert the included battery and a memory card (sold separately).

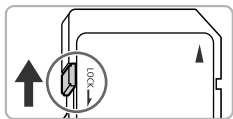


### 1 Check the card's write-protect tab.

- If the memory card has a write-protect tab, you will not be able to record images if the tab is in the locked position. Slide the tab up until you hear a click.

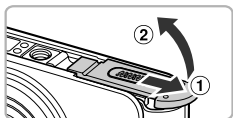

### 2 Open the cover.

- Slide the cover ① and open it ②.

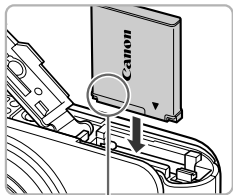


Terminals

### 3 Insert the battery.

- Insert the battery as shown until it locks into place with a click.
- Be sure to insert the battery in the correct direction or it will not properly lock into place.




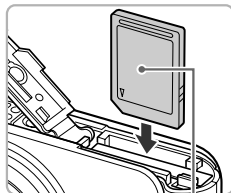

Label

## 4 Insert the memory card.

- Insert the memory card as shown until it locks into place with a click.
- Be sure the memory card is oriented correctly. Inserting the memory card in the wrong direction could damage the camera.

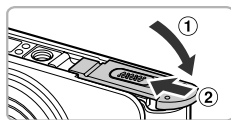

## 5 Close the cover.


- Close the cover ① and press downward as you slide it until it clicks into place ②.



### What if [Memory card locked] appears on the screen?


SD, SDHC and SDXC memory cards have a write-protect tab. If this tab is in the locked position, [Memory card locked] will appear on the screen and you will not be able to take or erase images.

## ● Removing the Battery and Memory Card

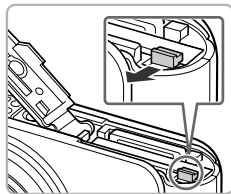

### Remove the battery.

- Open the cover and press the battery lock in the direction of the arrow.
- ▶ The battery will pop up.

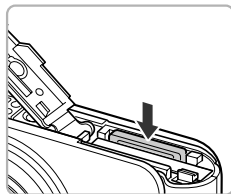

### Remove the memory card.

- Push the memory card in until you hear a click, then slowly release it.
- ▶ The memory card will pop up.

## Approximate Number of Shots per Memory Card

### A3100IS

Memory Card	4 GB	16 GB
Number of Shots	1231	5042

### A3000IS


Memory Card	4 GB	16 GB
Number of Shots	1471	6026

- Values are based on the default settings.
- The number of shots that can be taken will vary depending on camera settings, the subject and the memory card used.

### Can you check the number of shots that can be taken?


You can check the number of shots that can be taken when the camera is in a Shooting mode ([p. 24](#)).

Number of shots that can be taken

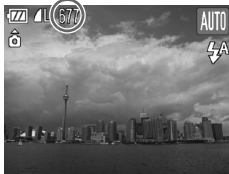


# Setting the Date and Time

The Date/Time settings screen will appear the first time the camera is turned on. Since the dates and times recorded into your images are based on these settings, be sure to set them.

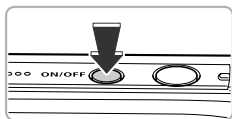

## 1 Turn on the camera.

- Press the ON/OFF button.
- ▶ The Date/Time screen will appear.

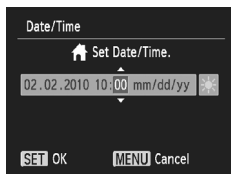


## 2 Set the date and time.

- Press the ◀▶ buttons to choose an option.
- Press the ▲▼ buttons to set a value.



## 3 Complete the setting.

- Press the  button.
- ▶ Once the date and time have been set, the Date/Time screen will close.
- Pressing the ON/OFF button will turn off the camera.





### Reappearing Date/Time screen

Set the correct date and time. If you have not set the date and time, the Date/Time screen will appear each time you turn on the camera.




### Daylight saving time settings **A3100IS**

If you choose  in Step 2 and press the ▲▼ buttons to choose , you will set the time to daylight saving (1 hour ahead).

## Setting the Date and Time


### ● Changing the Date and Time

You can change the current date and time settings.

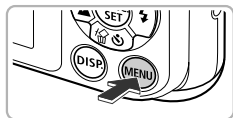



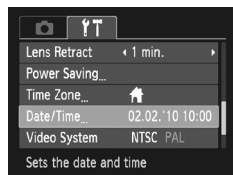

#### 1 Display the menus.

- Press the **MENU** button.




#### 2 Choose [Date/Time] in the tab.

- Press the  buttons to choose the  tab.
- Press the  buttons to choose [Date/Time], then press the  button.



#### 3 Change the date and time.

- Follow Steps 2 and 3 on [p. 19](#) to adjust the setting.
- Pressing the **MENU** button will close the menu.

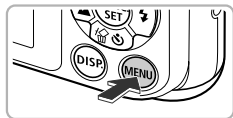

#### Date/Time battery

- The camera has a built-in date/time battery (backup battery) that allows the date/time settings to be retained for about three weeks after the battery pack has been removed.
- By inserting a charged battery or connecting an AC adapter kit (sold separately, [p. 39](#)) the date/time battery can be charged in about 4 hours even if the camera is not turned on.
- If the date/time battery is depleted, the Date/Time menu will appear when you turn the camera on. Follow the steps on [p. 19](#) to set the date and time.




# Setting the Display Language

You can change the language that displays on the screen.



## 1 Enter Playback mode.

- Press the button.

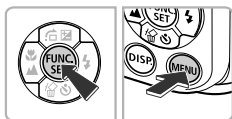

## 2 Display the settings screen.

- Press and hold the button, then press the **MENU** button.

English	Svenska	Türkçe
Deutsch	Español	繁體中文
Français	简体中文	한국어
Nederlands	Русский	മലിന
Dansk	Português	العربية
Suomi	Ελληνικά	Română
Italiano	Polski	فارسی
Norsk	Čeština	日本語
Українська	Magyar	

## 3 Set the display language.

- Press the buttons to choose a language, then press the button.
- ▶ Once the display language has been set, the settings screen will close.






You can also change the display language by pressing the **MENU** button, choosing the tab, and choosing the [Language] menu item.

# Formatting Memory Cards

Before you use a new memory card or one that has been formatted in other devices, you should format the card with this camera.

Formatting (initializing) a memory card erases all data on the memory card. As you cannot retrieve the erased data, exercise adequate caution before formatting the memory card.

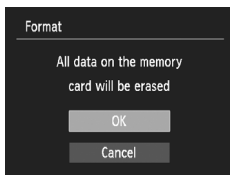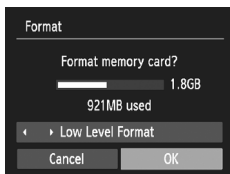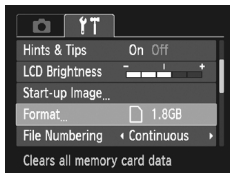

## 1 Display the menu.

- Press the **MENU** button.


## 2 Choose [Format].

- Press the ◀▶ buttons to choose the **FUNC** tab.
- Press the ▲▼ buttons to choose [Format], then press the **FUNC/SET** button.

## 3 Format the memory card.

- Press the ◀▶ buttons to choose [OK], then press the **FUNC/SET** button.
  - ▶ A confirmation screen will appear.
- Press the ▲▼ buttons to choose [OK] and press the **FUNC/SET** button.
  - ▶ The memory card will be formatted.



- ▶ When formatting ends, [Memory card formatting complete] will appear on the screen.
- Press the  button.




Formatting or erasing data on a memory card merely changes the file management information on the card and does not ensure its contents are completely erased. Be careful when transferring or disposing of a memory card. When disposing of a memory card, take precautions such as physically destroying the card to prevent personal information leaks.



The total capacity of the memory card displayed in the formatting screen may be less than indicated on the memory card.


## Pressing the Shutter Button

To take images that are in focus, be sure to first press the shutter button lightly (halfway) to focus, then press fully to shoot.

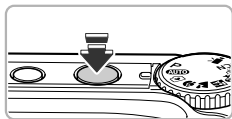

### 1 Press halfway (lightly to focus).

- Press lightly until the camera beeps twice and AF frames appear where the camera focused.

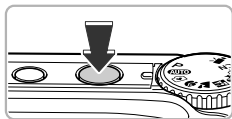

### 2 Press fully (all the way to shoot).


- ▶ The camera plays the shutter sound and takes the shot.



If you shoot without pressing the shutter button halfway, the image may not be in focus.

# Taking Pictures (Smart Auto)

Since the camera can determine the subject and shooting conditions, you can let it automatically select the best settings for the scene and just shoot. The camera can also detect and focus on faces, setting the color and brightness to optimal levels.

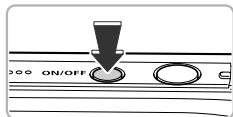

## 1 Turn on the camera.

- Press the ON/OFF button.
- ▶ The start-up screen will appear.





## 2 Choose **AUTO** mode.

- Set the mode dial to **AUTO**.
- When you point the camera toward the subject, the camera will make a slight noise as it determines the scene.
- ▶ The icon for the determined scene will appear in the upper right of the screen.
- ▶ The camera will focus on detected faces and display frames on them.



## 3 Compose the shot.

- Pressing the zoom button toward  will zoom in on your subject, making it appear larger. Pressing the button toward  will zoom out from your subject, making it appear smaller (the zoom bar will appear).




Zoom bar




## 4 Focus.


- Press the shutter button halfway to focus.

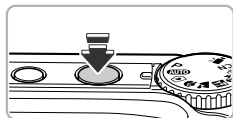



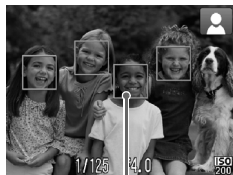

AF Frame

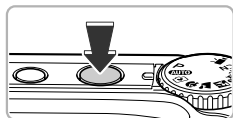

## 5 Shoot.

- Press the shutter button fully.
- ▶ The camera will play the shutter sound and shoot. The flash will automatically fire in low light conditions.
- ▶ The image will appear on the screen for about two seconds.
- You can take a second picture even while an image is displayed by pressing the shutter button again.


## ● Scene Icons

The camera displays an icon for the scene it has determined and then automatically focuses and selects the optimum settings for subject brightness and color.

Background \ Subject	Bright		Including Blue Skies		Sunsets	Dark	
		Backlit		Backlit			When Using Tripod
People					–		*
Landscapes	AUTO		AUTO			AUTO	*
Close Subjects					–		–
Icon Background Color	Gray		Light Blue		Orange	Dark Blue	

\* Appears when the scene is dark and the camera is attached to a tripod.



Under certain conditions, the icon that appears may not match the actual scene. Especially when there is an orange or blue colored background (a wall for example),  or the “Including Blue Skies” icons may appear and it may not be possible to shoot with the appropriate color. If this happens, try shooting in **P** mode (p. 66).

### What if...



- **What if white and gray frames appear when you point the camera toward a subject?**

When faces are detected, a white frame appears on the face of the main subject, while gray frames appear on other detected faces. The frames will follow the subjects within a certain range (p. 78).


 
- **What if a flashing  appears?**

Attach the camera to a tripod so that the camera does not move and blur the image.


 
- **What if the camera does not play any sounds?**

Pressing the **DISP.** button while turning on the camera power will turn off all sounds except for warning sounds. To turn the sounds on, press the **MENU** button, choose the  tab, and then choose [Mute]. Press the  buttons to choose [Off].

- **What if the image comes out dark even if the flash fired when shooting?**

The subject is too far away for the flash to reach. Press the zoom button toward  and hold it until the lens stops moving. The camera will be at its maximum wide angle setting and you can shoot within the effective flash range of approximately 30 cm – 4.0 m (12 in. – 13.1 ft.). Press the zoom button toward  and hold it until the lens stops moving. The camera will be at its maximum telephoto setting and you can shoot within the effective flash range of approximately 30 cm – 2.0 m (12 in. – 6.6 ft.).

- **What if the camera beeps once when the shutter button is pressed halfway?**

Your subject may be too close. Press the zoom button toward  and hold it until the lens stops moving. The camera will be at its maximum wide angle setting and you will be able to focus on subjects that are approximately 3 cm (1.2 in.) or more away from the end of the lens. Press the zoom button toward  and hold it until the lens stops moving. The camera will be at its maximum telephoto setting and you will be able to focus on subjects that are approximately 30 cm (12 in.) or more away from the end of the lens.

- **What if the lamp lights when the shutter button is pressed halfway?**

To reduce red-eye and to assist in focusing, the lamp may light when shooting in dark areas.


- **What if the  icon blinks when you try to shoot?**

The flash is charging. You can shoot when recharging ends.




# Viewing Images

You can view the images you have taken on the screen.

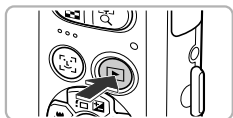


 


## 1 Enter Playback mode.

- Press the  button.
- ▶ The last image you took will appear.



## 2 Choose an image.

- Pressing the  button will cycle through the images in the reverse order they were taken, from the newest image to the oldest.
- Pressing the  button will cycle through the images in the order they were taken, from oldest to newest.
- The images change more quickly if you keep the  buttons pressed, but they will appear coarse.
- ▶ The lens will retract after approximately 1 minute elapses.
- Pressing the  button again while the lens is retracted will turn off the power.



### Switching to Shooting mode


Pressing the shutter button halfway, or turning the mode dial in Playback mode switches the camera to Shooting mode.


# Erasing Images

You can choose and erase images one at a time. Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image.




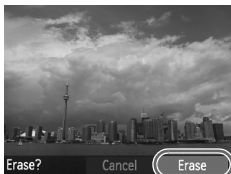
## 1 Enter Playback mode.

- Press the  button.
- ▶ The last image you took will appear.

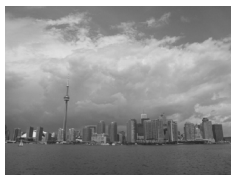






## 2 Choose an image to erase.

- Press the  buttons to display an image to erase.



## 3 Erase the image.

- Press the  button.
- ▶ [Erase?] appears on the screen.
- Press the  buttons to choose [Erase], then press the  button.
- ▶ The displayed image will be erased.
- To exit instead of erasing, press the  buttons to choose [Cancel], then press the  button.




## Shooting in Easy Mode

In Easy mode, operational instructions are displayed on the screen, and the camera is set so that only the buttons explained on this page and the zoom button are functional. This prevents incorrect operation of the camera, allowing even beginners to take worry-free pictures.



### 1 Enter mode.


- Set the mode dial to .

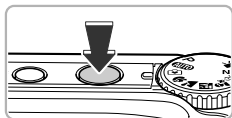


 

### 2 Shoot.

- Follow Steps 3 – 5 on [pp. 24 – 25](#) to shoot (no sound will play).

## Turning Off the Flash

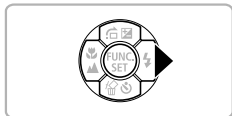

### Press the button.


- ▶ The flash turns off and  appears.
- ▶ Pressing  again displays  on the screen, and the flash will automatically fire in low light conditions.





## Viewing or Erasing in Easy Mode

In Easy mode, operational instructions are displayed on the screen, and the camera is set so that only the buttons explained on this page are functional. This prevents incorrect operation of the camera, allowing even beginners to view and erase images without worry.
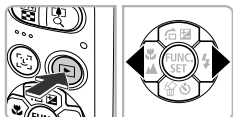
### Viewing Single Images






#### Choose an image.

- Press the  button, then press the  buttons to switch images.


### Viewing Slideshows





#### Start the slideshow.

- ▶ Press the  button, then press the  button, and all the shots you have taken will display for about 3 seconds each.
- Press the  button again to stop the slideshow.

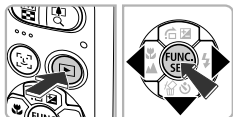


### Erasing Images



#### 1 Choose an image to erase.

- Press the  button, then press the  buttons to display the images you want to erase.

#### 2 Erase the image.

- Press the  button, then press the  buttons to choose [Erase] and press the  button.
- ▶ The chosen image will be erased.

# Shooting Movies

The camera can automatically select all settings so that you can shoot movies just by pressing the shutter button.



Shooting Time






## 1 Enter mode.

- Set the mode dial to .




## 2 Compose the shot.

- Pressing the zoom button toward  will zoom in on your subject, making it appear larger. Pressing the button toward  will zoom out from your subject, making it appear smaller.

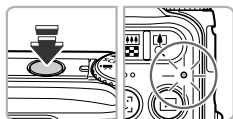

## 3 Focus.

- Press the shutter button halfway to focus.
- ▶ When the camera focuses, it will beep twice and the indicator will light green.


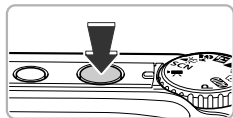


## 4 Shoot.


- Press the shutter button fully.

## Shooting Movies

Elapsed Time

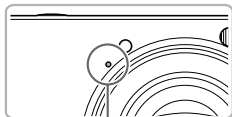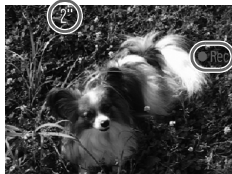

Microphone

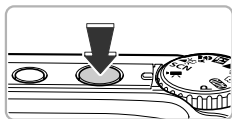

- ▶ Recording will start, and [● Rec] and the elapsed time will appear on the screen.
- Once shooting begins, take your finger off the shutter button.
- If you change the composition of your shot during shooting, the focus will stay the same, but the brightness and tone will automatically adjust.
- Do not touch the microphone while shooting.
- Do not press any buttons other than the shutter button while shooting. The sound the buttons make will be recorded in the movie.

## 5 Stop shooting.

- Press the shutter button fully again.
- ▶ The camera will beep once and stop shooting the movie.
- ▶ The movie will record to the memory card.
- ▶ Shooting will automatically stop when the memory card fills.



### Magnifying the subject while shooting

Pressing the zoom button toward [ ] while shooting will zoom in on the subject. However, operation sounds will be recorded and the movie may appear coarse.

## Estimated Shooting Times

Memory Card	4 GB	16 GB
Shooting Time	32 min. 26 sec.	2 hrs. 12 min. 50 sec.

- Shooting times are based on default settings.
- Recording will automatically stop when either the clip file size reaches 4 GB or the recording time reaches approximately 1 hour.
- Recording may stop even if the maximum clip length has not been reached on some memory cards. SD Speed Class 4 or higher memory cards are recommended.



# Viewing Movies

You can view the movies you have shot on the screen.




## 1 Enter Playback mode.

- Press the button.
- ▶ The last image you took will appear.
- ▶ appears on movies.



## 2 Choose a movie.

- Press the buttons to choose a movie, then press the button.
- ▶ The movie control panel will appear.

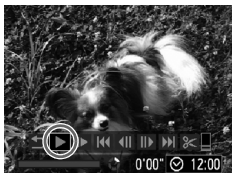

## 3 Play the movie.

- Press the buttons to choose (Play), then press the button.
- ▶ The movie will play.
- Press the button again to pause the movie or resume playback.
- Press the buttons to adjust the volume.
- ▶ After the movie finishes, appears.



# Transferring Images to a Computer for Viewing

You can use the included software to transfer images you have shot with the camera to a computer for viewing. If you are already using ZoomBrowser EX/ImageBrowser, install the software from the included CD-ROM, overwriting your current installation.

## ● System Requirements

### Windows

<b>OS</b>	Windows 7 Windows Vista (including Service Pack 1 and 2) Windows XP Service Pack 2, Service Pack 3
<b>Computer model</b>	The above OS should be pre-installed on computers with built-in USB ports.
<b>CPU</b>	Pentium 1.3 GHz or higher
<b>RAM</b>	Windows 7 (64 bit): 2 GB or more Windows 7 (32 bit), Windows Vista: 1 GB or more Windows XP: 512 MB or more
<b>Interface</b>	USB
<b>Free Hard Disk Space</b>	ZoomBrowser EX: 200 MB or more* PhotoStitch: 40 MB or more
<b>Display</b>	1,024 x 768 pixels or higher

\* For Windows XP, Microsoft .NET Framework 3.0 or later (max. 500MB) must be installed. Installation may take some time depending on your computer's capabilities.

### Macintosh

<b>OS</b>	Mac OS X (v10.4 – v10.6)
<b>Computer model</b>	The above OS should be pre-installed on computers with built-in USB ports.
<b>CPU</b>	PowerPC G4/G5 or Intel Processor
<b>RAM</b>	Mac OS X v10.4 – v10.5: 512 MB or more Mac OS X v10.6: 1 GB or more
<b>Interface</b>	USB
<b>Free Hard Disk Space</b>	ImageBrowser: 300 MB or more PhotoStitch: 50 MB or more
<b>Display</b>	1,024 x 768 pixels or higher

## ● Preparations

Windows Vista and Mac OS X (v10.5) are used for these explanations.

### 1 Install the Software.

#### Windows



#### ① Place the CD in the computer's CD-ROM drive.

- Place the supplied CD-ROM (DIGITAL CAMERA Solution Disk) (p. 2) into the computer's CD-ROM drive.

#### ② Begin installation.

- Click [Easy Installation] and follow the on-screen instructions to proceed with the installation.
- If the [User Account Control] window appears, follow the on-screen instructions to proceed.



#### ③ When the install finishes, click [Restart] or [Finish].

#### ④ Remove the CD-ROM.

- Remove the CD-ROM when your desktop screen appears.


#### Macintosh




#### ① Place the CD in the computer's CD-ROM drive.

- Place the supplied CD-ROM (DIGITAL CAMERA Solution Disk) (p. 2) into the computer's CD-ROM drive.

#### ② Begin installation.

- Double-click the  on the CD.
- Click [Install], and follow the on-screen instructions to proceed with the installation.


## 1 Transferring Images to a Computer for Viewing

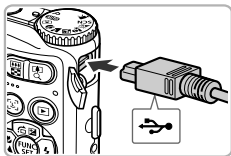


## 2 Connect the camera to the computer.

- Turn off the camera.
- Open the cover, and insert the small end of the plug firmly into the camera terminal in the direction shown.
- Insert the cable's larger plug into the computer. For connection details, refer to the user guide provided with the camera.

## 3 Turn on the camera.


- Press the  button to turn on the camera.

## 4 Open CameraWindow.

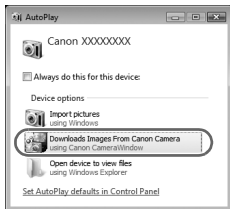

### Windows

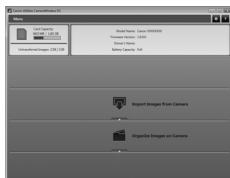


- Click [Downloads Images From Canon Camera using Canon CameraWindow].
- ▶ CameraWindow will appear.
- If CameraWindow does not appear, click the [Start] menu and choose [All Programs], followed by [Canon Utilities], [CameraWindow] and [CameraWindow].




### Macintosh

- ▶ CameraWindow will appear when you establish a connection between the camera and computer.
- If CameraWindow does not appear, click the CameraWindow icon on the Dock (the bar which appears at the bottom of the desktop).

For Windows 7, use the following steps to display CameraWindow.

- Click  on the task bar.
- In the screen that appears, click the  link to modify the program.
- Click [Downloads Images From Canon Camera using Canon CameraWindow], then click [OK].
- Double click .

## ● Transfer and View Images

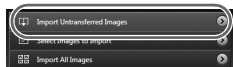

- Click [Import Images from Camera], and then click [Import Untransferred Images].
- ▶ All images not previously transferred will transfer to the computer. Transferred images will be sorted by date and saved in separate folders in the Pictures folder.
- When [Image import complete.] appears, click [OK], then click [X] to close CameraWindow.
- Turn off the camera and unplug the cable.
- For details on how to view images using a computer, refer to the *Software Guide*.



You can transfer images without installing the included software by simply connecting your camera to a computer. There are, however, the following limitations.

- It may take a few minutes from when you connect the camera to the computer until you can transfer images.
- Movies will not transfer correctly.
- Images shot in the vertical position may be transferred in the horizontal position.
- Protection settings for images may be lost when transferred to a computer.
- There may be problems transferring images or image information correctly depending on the version of the operating system in use, the file size, or the software in use.



# Accessories

## Supplied with Camera

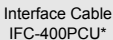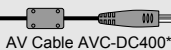

\* Also available for purchase separately.



Windows/Macintosh

### Canon-Brand PictBridge Compliant Printers



Compact Photo Printers  
(SELPHY series)



Inkjet Printers

See the user guide supplied with the printer for more information on the printer and interface cables.




TV/Video

## Separately Sold Accessories


The following camera accessories are sold separately. Some accessories are not sold in some regions, or may no longer be available.

### Power Supplies

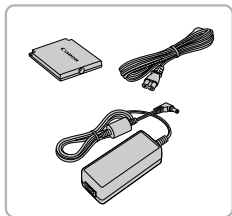

#### **AC Adapter Kit ACK-DC60**

This kit lets you power the camera using household power. Recommended for powering the camera for an extended period of time or when connecting to a computer or printer. Cannot be used to charge the battery inside the camera.

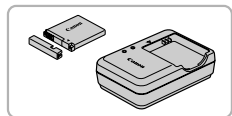

#### **Battery Charger CB-2LA/2LAE**

An adapter for charging Battery Pack NB-8L.

#### **Battery Pack NB-8L**

Rechargeable lithium-ion battery.

### **CAUTION**

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING TO LOCAL REGULATION.



### **Using accessories abroad**

The battery charger and the AC adapter kit can be used in regions that have 100 – 240 V (50/60 Hz) AC power. If the plug does not fit the outlet, use a commercially available plug adapter. Do not use devices such as electrical transformers for foreign travel because they will cause malfunctions.


### Flash



#### **High-Power Flash HF-DC1**

This attachable supplementary flash can illuminate subjects that are too distant for the light from the built-in flash to reach.

## Printers

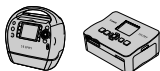

SELPHY series



Inkjet Printers

### Canon-Brand PictBridge Compliant Printers

By connecting your camera to a Canon-brand PictBridge compliant printer, you can print your images without having to use a computer. For more information, visit your nearest Canon retailer.

#### **Use of genuine Canon accessories is recommended.**

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.




# 2


## Learning More

This chapter explains the parts of the camera and what appears on the screen, as well as the basic operating instructions.

---

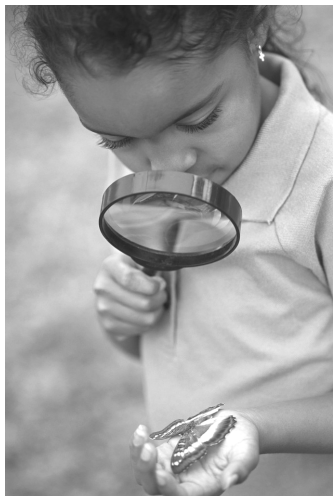

## Components Guide

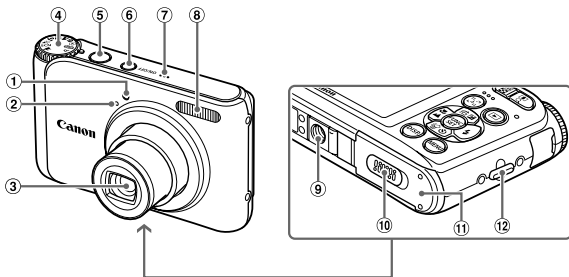

① Lamp (pp. 26, 62, 63, 121)

② Microphone (p. 32)

③ Lens

④ Mode Dial

⑤ Shutter Button (p. 23)

⑥ ON/OFF Button

⑦ Speaker

⑧ Flash (pp. 58, 67)

⑨ Tripod Socket

⑩ DC Coupler Terminal Cover (p. 126)

⑪ Memory Card / Battery Cover (p. 16)

⑫ Strap Mount (p. 13)

### Mode Dial

Use the mode dial to change the Shooting mode.

#### P Mode

Choose settings yourself to take various types of pictures (p. 66).

#### Auto Mode

You can leave it to the camera to select settings for fully automatic shooting (p. 24).

#### Easy Mode

You can shoot just by pressing the shutter button (p. 29).



#### Movie Mode


For shooting movies (pp. 31, 85).

 
 








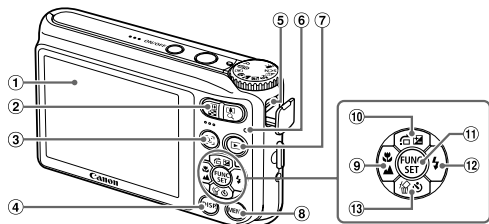






#### Scene Mode

 You can shoot with the best settings for the scene (p. 54) or add effects and shoot (p. 57).



If you turn the mode dial while in Playback mode, the camera will switch to Shooting mode.



- ① Screen (LCD Monitor) (pp. 44, 132)
- ② Zoom Button  
Shooting:  (Telephoto) /  (Wide Angle) (p. 24)  
Playback: Q (Magnify) (p. 96) /  (Index) (p. 92)
- ③  (Face Selector) Button (pp. 80, 95)
- ④ DISP. (Display) Button (pp. 44, 95)
- ⑤ A / V OUT (Audio/Video Output) / DIGITAL Terminal (pp. 36, 97, 110)
- ⑥ Indicator (p. 43)
- ⑦  (Playback) Button (p. 27)
- ⑧ MENU Button (p. 47)
- ⑨  (Macro) (p. 67) /  (Infinity) (p. 68) /  Button
- ⑩  (Exposure Compensation) (p. 66) /  (Jump) (p. 93) /  Button
- ⑪  FUNC./SET (Function/Set) Button (p. 46)
- ⑫  (Flash) (pp. 58, 67) /  Button
- ⑬  (Self-Timer) (pp. 62, 74, 75) /  (Single Image Erase) (p. 28) /  Button

## Indicator

The indicator on the back of the camera (p. 43) will light or blink depending on the camera's status.

Color	Status	Operation Status
Green	Lights	Shooting preparation complete/Display off (p. 120)
	Blinks	Recording/reading/transmitting image data



When the indicator blinks green, data is being recorded to/read from the memory card or various information is being transmitted. Do not turn off the power, open the memory card slot/battery cover, shake or jolt the camera. These actions may corrupt the image data or cause the camera or memory card to malfunction.

# Screen Display

## Switching the Display

You can change the screen display pressing the **DISP.** button. Refer to [p. 132](#) for details on information that appears on the screen.

### Shooting



Information Display



No Information Display

### Playback



No Information Display



Simple Information Display



Detailed Information Display



Focus Check Display ([p. 95](#))



You can also switch the display by pressing the **DISP.** button while the image displays right after shooting. However, “Simple Information” will not display. You can change the display that appears first by pressing the **MENU** button to choose the tab, then setting [Review Info].


## Screen Display in Dark Shooting Conditions

The display automatically brightens when shooting in dark conditions, allowing you to check the composition (Night Display function). However, the brightness of the image on the screen, and the brightness of the actual image recorded may be different. Screen noise may appear and the movement of the subject may appear somewhat jagged on the screen. This has no effect on the recorded image.

## Overexposure Warning during Playback

In “Detailed Information Display”, overexposed areas of the image flash on the screen.

## Histogram during Playback

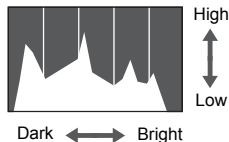

The graph that appears in “Detailed Information Display” (p. 44) is called the histogram. The histogram shows the distribution of brightness in an image horizontally, and the amount of brightness vertically. When the graph approaches the right side, the image is bright, but when it approaches the left side, the image is dark, and in this way you can judge the exposure.

## Power Saving Function (Auto Power Down)

To save battery power, the camera shuts down automatically when it is not operated for a certain time.

### Power Saving during Shooting

The screen will turn off approximately 1 minute after the camera is last operated. After about 2 more minutes, the lens will retract and the power will turn off. When the screen has turned off but the lens has not yet retracted, pressing the shutter button halfway (p. 23) turns on the screen and shooting can continue.

### Power Saving during Playback

The power will turn off approximately 5 minutes after the camera is last operated.



- You can turn off the Power Saving Function (p. 119).
- You can adjust the time before the screen turns off (p. 120).

# FUNC. Menu – Basic Operations

Commonly used shooting functions can be set with the FUNC. menu. The menu items and options differ depending on the mode (pp. 134 – 135).



## 1 Choose a shooting mode.

- Set the mode dial to the desired Shooting mode.



## 2 Display the FUNC. menu.

- Press the  button.




Available Options

Menu Items

## 3 Choose a menu item.


- Press the ▲▼ buttons to choose a menu item.
- ▶ The available options for the menu item appear in the lower part of the screen.

## 4 Choose an option.

- Press the ◀▶ buttons to choose an option.
- You can also choose settings by pressing the  button.




## 5 Complete the setting.

- Press the  button.
- ▶ The shooting screen will reappear and the setting you chose will display on the screen.

# MENU – Basic Operations

Various functions can be set from the menus. The menu items are organized under tabs, such as for shooting (📷) and playback (▶). The available menu items differ depending on the mode (pp. 136 – 137).

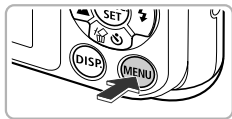

## 1 Display the menu.


- Press the MENU button.




## 2 Choose a tab.

- Press the ◀▶ buttons, or press the zoom button to choose a tab.

## 3 Choose a menu item.

- Press the ▲▼ buttons to choose a menu item.
- Some items require you to press the  button or ▶ button to display a submenu in which you change the setting.

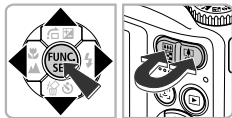


## 4 Choose an option.

- Press the ◀▶ buttons to choose an option.

## 5 Complete the setting.

- Press the MENU button.
- ▶ The normal screen will reappear.

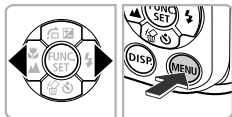

# Changing the Sound Settings

You can silence or adjust the volume of camera sounds.

## Muting Sounds





### 1 Display the menu.

- Press the **MENU** button.

### 2 Choose [Mute].

- Press the ◀▶ buttons to choose the **Y T** tab.
- Press the ▲▼ buttons to choose [Mute], then press the ◀▶ buttons to choose [On].
- Press the **MENU** button again to return to the normal screen.

## Adjusting the Volume

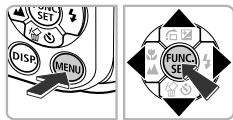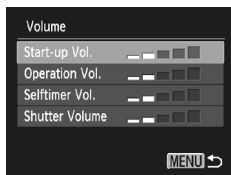

### 1 Display the menu.

- Press the **MENU** button.

### 2 Choose [Volume].

- Press the ◀▶ buttons to choose the **Y T** tab.
- Press the ▲▼ buttons to choose [Volume], then press the **FUNC. SET** button.

### 3 Change the volume.

- Press the ▲▼ buttons to choose an item, then press the ◀▶ buttons to adjust the volume.
- Press the **MENU** button twice to return to the normal screen.



# Changing the Screen Brightness

The screen brightness can be changed in two ways.

## Using the Menu



### 1 Display the menu.


- Press the **MENU** button.

### 2 Choose [LCD Brightness].


- Press the ◀▶ buttons to choose the **↑↑** tab.
- Press the ▲▼ buttons to choose [LCD Brightness].

### 3 Change the brightness.

- Press the ◀▶ buttons to change the brightness.
- Press the **MENU** button twice to return to the normal screen.

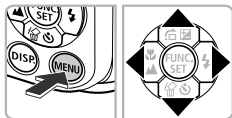

## Using the DISP. Button

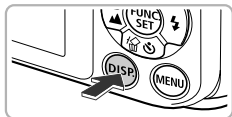

- Press the **DISP.** button for more than one second.
- ▶ The screen increases to maximum brightness regardless of the setting in the **↑↑** tab.
- Pressing the **DISP.** button again for more than one second will return the screen to the original brightness.



- The next time you turn on the camera, the screen will be at the brightness setting chosen in the **↑↑** tab.
- When you have set the brightness to its highest setting in the **↑↑** tab, you cannot change the brightness with the **DISP.** button.

# Returning the Camera to Default Settings


When you have mistakenly changed a setting, you can reset the camera to the default settings.





## 1 Display the menu.


- Press the MENU button.

## 2 Choose [Reset All].

- Press the ◀▶ buttons to choose the ⏏ tab.
- Press the ▲▼ buttons to choose [Reset All], then press the  button.

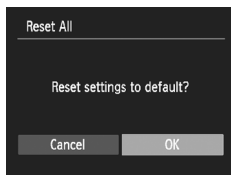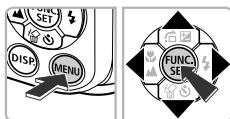

## 3 Reset the settings.

- Press the ◀▶ buttons to choose [OK], then press the  button.
- ▶ The camera will reset to the default settings.

### Are there functions that cannot be reset?




- The [Date/Time] (p. 19) in the ⏏ tab, [Language] (p. 21), [Video System] (p. 97).
- The saved data for custom white balance (p. 72).

# Low Level Memory Card Formatting

Perform low level formatting when you think that the recording/reading speed of a memory card has dropped.

Performing a low-level format on a memory card erases all data on the memory card. As you cannot retrieve the erased data, exercise adequate caution before performing a low-level format.

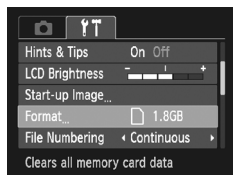


## 1 Display the menu.

- Press the MENU button.

## 2 Choose [Format].


- Press the ◀▶ buttons to choose the ƒ/⌂ tab.
- Press the ▲▼ buttons to choose [Format], then press the FUNC/SET button.

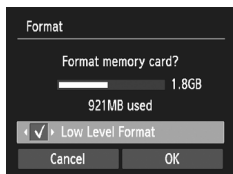

## 3 Perform the low level format.

- Press the ▲▼ buttons to choose [Low Level Format], then press the ◀▶ buttons to display ✓.
- Press the ▲▼◀▶ buttons to choose [OK], then press the FUNC/SET button.

- ▶ A confirmation screen will appear.
- Press the ▲▼ buttons to choose [OK], then press the FUNC/SET button.
- ▶ Low level formatting starts.

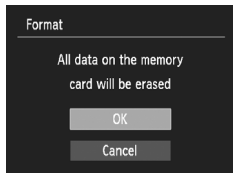

### About low level formatting



If the [Memory card error] message appears, or if the camera does not work correctly, performing a low level format may solve the problem. Copy the images from the memory card to a computer or other device before performing a low level format.


- Low level formatting may take longer than standard formatting, since all recorded data are erased.



- You can stop a low level format of a memory card by choosing [Stop]. When stopping low level formatting, the data will be erased but the memory card can be used without problem.

## ● Clock Functions **A3100IS**

You can check the current time.

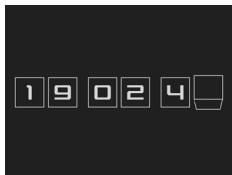

- Press and hold the button.
- ▶ The current time appears.
- If you hold the camera vertically while using the clock function, it will switch to vertical display. Press the buttons to change the display color.
- Press the button to cancel the clock display.



When the camera power is off, press and hold the button, then press the ON/OFF button to display the clock.


# 3

## Shooting in Special Conditions and Commonly Used Functions

This chapter explains how to shoot in different conditions, as well as how to use common functions, such as the self-timer.

---



- When you choose a Shooting mode that matches a particular set of conditions, the camera will automatically select any necessary settings. All you need do is press the shutter button to take an optimized picture.
- This chapter assumes **AUTO** mode is set for “Turning the Flash Off” (p. 58) to “Using the Self-Timer” (p. 62). When shooting in a mode other than **AUTO** mode, check which functions are available in that mode (pp. 134 – 137).
- The section “Using the Face Self-Timer” (p. 63) assumes that the mode dial is set to **SCN** mode and the camera is in .

# Shooting in Various Conditions

The camera will select the necessary settings for the conditions in which you wish to shoot when you choose the matching mode.



## 1 Choose the Shooting mode.

- Set the mode dial to the desired Shooting mode.

## 2 Shoot.



### Take portraits (Portrait)

- Produces a soft effect when photographing people.



### Take landscapes (Landscape)

- Lets you shoot majestic landscapes with a real sense of depth.



### Take snapshots at night (Night Snapshot)

- Lets you take beautiful snapshots of city nightscapes or people against night backgrounds.
- If you hold the camera firmly, you can take pictures with reduced camera shake, even without a tripod.



### Take shots of kids and pets (Kids&Pets)

- Lets you capture subjects that move around, such as children and pets, without missing photo opportunities.



## Take indoor shots (Indoor)

- Lets you shoot indoors with natural colors.



In **PA**, **AI**, or **SCN** mode, images may appear coarse because the ISO speed (p. 71) is increased to match the shooting conditions.

## Shooting in Special Scenes

The camera will select the necessary settings for the conditions in which you wish to shoot when you choose the matching mode.



### 1 Enter SCN mode.

- Set the mode dial to **SCN**.




### 2 Choose the Shooting mode.

- After pressing the **FUNC/SET** button, press the **▲**/**▼** buttons to choose **SCN**, then press the **◀**/**▶** buttons to choose a Shooting mode.
- Press the **FUNC/SET** button.



### 3 Shoot.

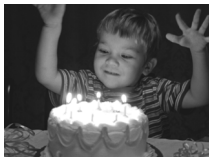

### **Take shots in low light conditions (Low Light)**

- Depending on the scene, the ISO speed will be set higher and the shutter speed faster than in **AUTO** mode so that you can shoot in dark places with reduced camera shake and subject blur. Recommended for shooting in candlelight or similarly dark scenes.
- A recording pixel setting of **M** will display, and the image will be fixed at 1600 x 1200 pixels.



### **Take shots of people at the beach (Beach)**

- Lets you take shots of brightly lit people on sandy beaches where the reflected sunlight is strong.



### **Take shots of foliage (Foliage)**

- Lets you shoot trees and leaves, such as new growth, autumn leaves or blossoms, in vivid colors.



### **Take shots of people in snow (Snow)**

- Lets you take bright, natural-colored shots of people against snowy backgrounds.




### **Take shots of fireworks (Fireworks)**

- Lets you take shots of fireworks in vivid colors.





In  mode, attach the camera to a tripod to prevent the camera from moving and blurring the image. Additionally, if you attach the camera to a tripod, you should set [IS Mode] to [Off] (p. 123).

## ● Adding Effects and Shooting



### Shoot images with vivid colors (Super Vivid)


 

- Lets you take shots with vivid, intense colors.



### Take posterized shots (Poster Effect)

- Lets you take shots that look like an old poster or illustration.





Since you may not achieve the expected results with images shot in  and , try taking some test shots first. 

### **Modes for other scenes**


In addition to the modes explained here, the following scene modes are also available.




-  Face Self-Timer (p. 63)
-  Long Shutter (p. 84)

## Turning the Flash Off

You can shoot with the flash turned off.

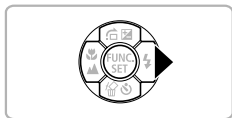

**1** Press the ► button.

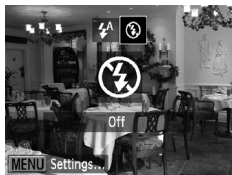

**2** Choose ⚡.

- Press the ◀▶ buttons to choose ⚡, then press the FUNC SET button.
- ▶ Once set, ⚡ will appear on the screen.
- To turn the flash back on, follow the steps above to return the setting to ⚡<sup>A</sup>.



### What if a flashing ⚡ appears?



When you press the shutter button halfway in low light conditions where camera shake is likely, a flashing ⚡ will appear on the screen. Attach the camera to a tripod to prevent it from moving.


## Zooming in Closely on Subjects (Digital Zoom)

You can use the digital zoom to zoom up to a maximum equivalent of 16x and capture subjects that are too far away for the optical zoom to enlarge. The images may appear coarse, however, depending on the recording pixel setting (p. 68) and the zoom factor used.



### 1 Press the zoom button toward .

- Hold the button until zooming stops.
- ▶ The zoom will stop when the largest possible zoom factor without image deterioration has been reached, and the zoom factor will appear when you release the zoom button.

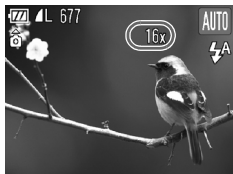

### 2 Press it toward again.

- ▶ The digital zoom will zoom in even further on the subject.




#### What if the zoom factor appears in blue?

Images shot at zoom factors that appear in blue will be coarse.



#### Turning off the digital zoom

To turn off the digital zoom, press the **MENU** button, choose the  tab, and choose [Digital Zoom] and the [Off] option.





The focal length when using the optical zoom is 35 – 140 mm, and the focal length when using the digital zoom is 35 – 560 mm (35mm film equivalent).

## Digital Tele-Converter

The focal length of the lens can be increased by an equivalent of **A3100IS** 1.5x or 2.0x **A3000IS** 1.4x or 2.3x. This enables a faster shutter speed and less chance of camera shake than the zoom (including digital zoom) used by itself at the same zoom factor.

The images may appear coarse, however, depending on the combination of recording pixel (p. 68) and digital tele-converter settings used.

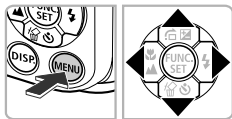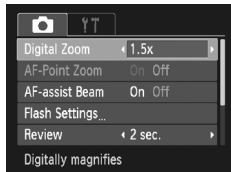

### 1 Choose [Digital Zoom].

- Press the **MENU** button.
- Press the **◀▶** buttons to choose the **📷** tab.
- Press the **▲▼** buttons to choose [Digital Zoom].

### 2 Accept the setting.

- Press the **◀▶** buttons to choose a magnification.
- Pressing the **MENU** button will restore the shooting screen.
- ▶ The view will be enlarged and the zoom factor will appear on the screen.
- To return to standard digital zoom, choose [Digital Zoom] and the [Standard] option.

### What if the zoom factor appears in blue?


- Using **A3100IS** [1.5x] **A3000IS** [1.4x] at a recording pixel setting of **L** or **M1** will cause image deterioration (the zoom factor will appear in blue).
- Using **A3100IS** [2.0x] **A3000IS** [2.3x] at a recording pixel setting of **L**, **M1** or **M2** will cause image deterioration (the zoom factor will appear in blue).



- The respective equivalent focal lengths when using [1.5x] and [2.0x] are 52.5 – 210 mm and 70 – 280 mm (35mm film equivalent). **A3100IS**
- The respective equivalent focal lengths when using [1.4x] and [2.3x] are 49 – 196 mm and 80.5 – 322 mm (35mm film equivalent). **A3000IS**
- The digital tele-converter cannot be used together with the digital zoom.

# Inserting the Date and Time

You can insert the shooting date and time in the lower right corner of an image. Once inserted, however, they cannot be deleted. Be sure to check beforehand that the date and time are correctly set (p. 19).

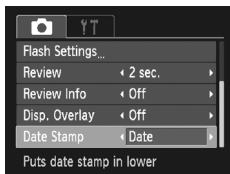


## 1 Choose [Date Stamp].

- Press the **MENU** button.
- Press the ◀▶ buttons to choose the tab.
- Press the ▲▼ buttons to choose [Date Stamp].

## 2 Accept the setting.

- Press the ◀▶ buttons to choose [Date] or [Date & Time].
- Pressing the **MENU** button will restore the shooting screen.
- ▶ Once set, [DATE] will appear on the screen.

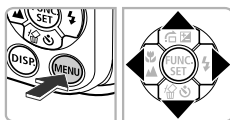

## 3 Shoot.

- ▶ The shooting date or time will be recorded in the image's lower right corner.
- To restore to the original setting, choose [Off] in Step 2.



You can insert and print the shooting date in images which do not have an embedded date and time as follows. However, if you do this for images with an embedded date and time, the date and time may be printed twice.




- **Use the DPOF print settings (p. 112) to print.**
- **Use the included software to print.**  
Refer to the *Software Guide* for details.
- **Print using printer functions.**  
Refer to the *Personal Printing Guide* for details.

## Using the Self-Timer




The self-timer can be used to shoot a group photo that includes the photographer. The camera will activate approximately 10 seconds after the shutter button is pressed.

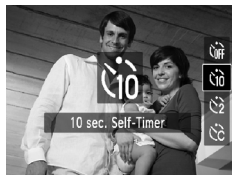


### 1 Press the ▼ button.

 


### 2 Choose .

- Press the ▲▼ buttons to choose , then press the  button.
- ▶ Once set,  will appear on the screen.

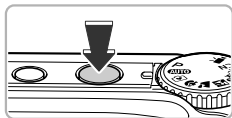

### 3 Shoot.

- Press the shutter button halfway to focus on the subject, then press it fully.
- ▶ When the self-timer starts, the lamp blinks and the self-timer sound plays.
- ▶ Two seconds before the shutter releases, the lamp and sound speed up (the lamp remains lit when the flash will fire).
- To cancel shooting with the timer after countdown has started, press the ▼ button.
- To restore the original setting, choose  in Step 2.




You can change the delay time and number of shots (p. 75).

## Using the Face Self-Timer

To take a photo that includes the photographer, such a group photo, compose the shot, and press the shutter button. The camera will shoot two seconds after you enter the shot and it detects your face (p. 78).




### 1 Choose .

- Follow Steps 1 – 2 on p. 55 and choose .

### 2 Compose the shot and press the shutter button halfway.

- Make sure a green frame appears on the face focused on and white frames appear on other faces.

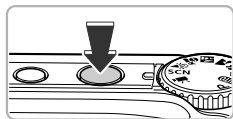


### 3 Press the shutter button fully.

- ▶ The camera will enter shooting stand-by, and [Look straight at camera to start count down] will appear on the screen.
- ▶ The lamp will blink and the self-timer sound will play.

 



### 4 Join the subjects and look at the camera.

- ▶ When the camera detects a new face, the lamp and sound will speed up (the lamp remains lit when the flash will fire), and two seconds later the shutter will release.
- To cancel the countdown after the timer has started, press the  button.

#### Changing the number of shots



For the screen in Step 1, press the **DISP.** button, then press the  buttons to change the number of shots. Press the  button to accept the setting.



Even if your face is not detected after joining the subjects, the shutter will release approximately 15 seconds later.








## Shooting in Program AE

You can choose the settings for various functions to suit your preferences. AE stands for Auto Exposure.

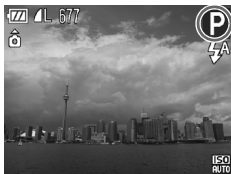

- 1 Set the mode dial to **P**.
- 2 Adjust the settings according to your purposes (pp. 66 – 75).
- 3 Shoot.



### What if the shutter speed and aperture value appear in orange?

If a correct exposure cannot be obtained when pressing the shutter button halfway, the shutter speed and aperture value are shown in orange. Try the following settings to obtain the correct exposure.

- Turn on the flash (p. 67)
- Choose a higher ISO speed (p. 71)



## Adjusting the Brightness (Exposure Compensation)

You can adjust the standard exposure set by the camera in 1/3-stop increments in the range of -2 to +2.





 

 
- 1 Enter Exposure Compensation mode.
  - Press the **▲** button.
- 2 Adjust the brightness.
  - While watching the screen, press the **◀▶** buttons to adjust the brightness and press the **FUNC/SET** button.
  - ▶ The exposure compensation amount will appear on the screen.

## Turning the Flash On


You can make the flash fire every time you shoot. The flash range is approximately 30 cm – 4.0 m (12 in. – 13.1 ft.) from the end of the lens (when the zoom button is pressed toward  and held until the lens stops moving, which is the maximum wide angle setting of the lens), and 30 cm – 2.0 m (12 in. – 6.6 ft.) (when the zoom button is pressed toward  and held until the lens stops moving, which is the maximum telephoto setting of the lens).



### Choose .



 


- After pressing the  button, press the  buttons to choose , then press the  button.
- ▶ Once set,  will appear on the screen.

## Shooting Close-ups (Macro)

You can shoot an object at a close distance or even shoot extreme close-ups of it. The shooting range (focusing zone) is approximately 3 – 60 cm (1.2 in. – 2.0 ft.) from the end of the lens (when the zoom button is pressed toward  and held until the lens stops moving, which is the maximum wide angle setting of the lens).



### Choose .


- After pressing the  button, press the  buttons to choose , then press the  button.
- ▶ Once set,  will appear on the screen.



The edges of the image may darken if the flash fires.

### How can I take better close-ups?



- Try attaching the camera to a tripod and shooting in , to prevent the camera from moving and blurring the image (p. 74).
- You can reduce the AF frame size when you want to focus on a specific portion of the subject (p. 79).

## Shooting Far Away Subjects (Infinity)

When it is difficult to focus because your shot contains subjects that are both near and far, you can change the focus range (the distance range from your subject) to focus more reliably on far away subjects (approx. 3.0 m (9.8 ft.) or more) only.



### Choose $\Delta$ .

- After pressing the  $\blacktriangleleft$  button, press the  $\blacktriangleleft$  buttons to choose  $\Delta$ , then press the  $\text{FUNC. SET}$  button.
- ▶ Once set,  $\Delta$  will appear on the screen.

## Changing the Recording Pixel Setting (Image Size)

You can choose from six recording pixels (image size) settings.



### 1 Choose the recording pixel setting.

- After pressing the  $\text{FUNC. SET}$  button, press the  $\blacktriangle$  $\blacktriangledown$  buttons to choose  $\Delta$ .


 
### 2 Choose an option.


- Press the  $\blacktriangleleft$  $\blacktriangleright$  buttons to choose an option, then press the  $\text{FUNC. SET}$  button.
- ▶ The setting you chose will appear on the screen.






If you choose  $\text{W}$ , you cannot use Digital Zoom (p. 59) or Digital Tele-Converter (p. 60).

## Changing the Compression Ratio (Image Quality)

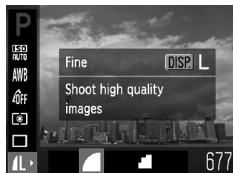

You can choose from the following two levels of compression ratio (image quality):  (Fine),  (Normal).



### 1 Choose the compression ratio setting.













- After pressing the  button, press the  buttons to choose , then press the DISP. button.

### 2 Choose an option.

- Press the  buttons to choose an option, then press the .
- ▶ The setting you chose will appear on the screen.

## Approximate Values for Recording Pixels and Compression Ratio

**A3100IS**

Recording Pixels	Compression Ratio	Single Image Data Size (Approx. KB)	Number of Recordable Images	
			4 GB	16 GB
<b>L</b> (Large) 12M/4000 x 3000		3084	1231	5042
		1474	2514	10295
<b>M1</b> (Medium 1) 8M/3264 x 2448		2060	1828	7487
		980	3771	15443
<b>M2</b> (Medium 2) 5M/2592 x 1944		1395	2681	10981
		695	5247	21486
<b>M3</b> (Medium 3) 2M/1600 x 1200		558	6352	26010
		278	12069	49420
<b>S</b> (Small) 0.3M/640 x 480		150	20116	82367
		84	30174	123550
<b>W</b> (Widescreen) 4000 x 2248		2311	1630	6677
		1105	3352	13727

## Changing the Compression Ratio (Image Quality)

A3000IS

Recording Pixels	Compression Ratio	Single Image Data Size (Approx. KB)	Number of Recordable Images	
			4 GB	16 GB
<b>L</b> (Large) 10M/3648 x 2736		2565	1471	6026
		1226	3017	12354
<b>M1</b> (Medium 1) 6M/2816 x 2112		1620	2320	9503
		780	4641	19007
<b>M2</b> (Medium 2) 4M/2272 x 1704		1116	3352	13727
		556	6352	26010
<b>M3</b> (Medium 3) 2M/1600 x 1200		558	6352	26010
		278	12069	49420
<b>S</b> (Small) 0.3M/640 x 480		150	20116	82367
		84	30174	123550
<b>W</b> (Widescreen) 3648 x 2048		1920	1978	8101
		918	4022	16473


\* The values in the table are measured according to Canon standards and may change depending on the subject, memory card and camera settings.

## Approximate Values for Paper Size

A2		<b>L</b>
A3		<b>M1</b>
A4, Letter size	<b>M2</b>	
5" x 7" Postcard size 3.5" x 5"	<b>M3</b>	

- **S** Suitable for sending images as e-mail attachments.
- **W** For printing on wide size paper.

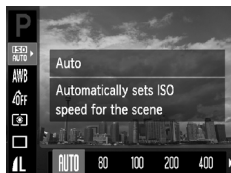

# Changing the ISO Speed










## 1 Choose the ISO speed.

- After pressing the  button, press the  buttons to choose .

## 2 Choose an option.

- Press the  buttons to choose an option, then press the .
- ▶ The setting you chose will display on the screen.




	Automatically adjusts the ISO speed to the Shooting mode and shooting conditions.	
 <b>A3100IS</b>	Low	Fine weather conditions, outdoor shooting.
 	↑	
 	↓	Cloudy, Twilight
	High	Nightscares, Dark interiors

## Changing the ISO speed



- Lowering the ISO speed results in sharper images, but there may be an increased chance of image blurring in certain shooting conditions.
- Raising the ISO speed results in a faster shutter speed, reducing camera shake and letting the flash reach greater distances to the subject. The images, however, will appear coarse.



- When the camera is set to , you can press the shutter button halfway to display the automatically set ISO speed.
- In  (p. 56), ISO speeds will automatically be set higher than in  mode, depending on the scene.

# Adjusting the White Balance



The white balance (WB) function sets the optimal white balance for natural looking colors to match the shooting conditions.










## 1 Choose the white balance function.

- After pressing the  button, press the  buttons to choose .


## 2 Choose an option.


- Press the  buttons to choose an option, then press the .
- ▶ The setting you chose will display on the screen.

 Auto	Automatically sets the optimal white balance for the shooting conditions.
 Day Light	Fine weather conditions, outdoor shooting
 Cloudy	Cloudy, shady, twilight conditions
 Tungsten	Tungsten, bulb-type (3-wavelength) fluorescent lighting
 Fluorescent	Warm-white fluorescent, cool-white fluorescent, warm-white-type (3-wavelength) fluorescent lighting
 Fluorescent H	Daylight fluorescent, daylight-type (3-wavelength) fluorescent lighting
 Custom	Manually sets a custom white balance.

## ● Custom White Balance

You can adjust the white balance to the light source at the shooting location. Make sure that you set the white balance under the light source of the actual scene you will shoot.

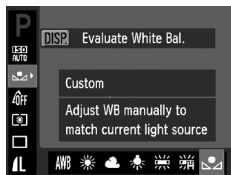

- In Step 2 above, choose .
- Make sure the entire screen is filled with a plain, white colored subject, then press the **DISP** button.
- ▶ The tint on the screen will change after recording the white balance data.




If you change camera settings after recording white balance data, the tone may not turn out properly.



# Changing the Tone of an Image (My Colors)

You can change the tone of an image to sepia or black and white when shooting.

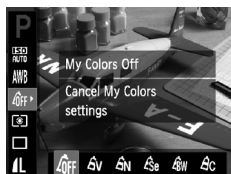

## 1 Choose My Colors.

- After pressing the **FUNC/SET** button, press the **▲▼** buttons to choose **OFF**.

## 2 Choose an option.

- Press the **◀▶** buttons to choose an option, then press the **FUNC/SET** button.
- ▶ The setting you chose will display on the screen.


<b>OFF</b>	My Colors Off	—
<b>Av</b>	Vivid	Emphasizes the contrast and color saturation for a vivid impression.
<b>AN</b>	Neutral	Tones down the contrast and color saturation for neutral hues.
<b>Se</b>	Sepia	Sepia tones.
<b>BW</b>	B/W	Black and white.
<b>Ac</b>	Custom Color	You can adjust contrast, sharpness, and color saturation etc. to your preference.



The white balance cannot be set in the **Se** and **BW** modes (p. 72).

## ● Custom Color


The contrast, sharpness, and color saturation in an image can be chosen and set at 5 different levels.

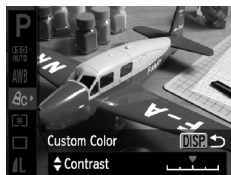

- Follow Step 2 above to choose **Ac**, then press the **DISP.** button.
- Press the **▲▼** buttons to choose an option, then press the **◀▶** buttons to choose a value.
- The more to the right, the stronger/deeper the effect gets, the more to the left, the weaker/lighter the effect gets.
- Press the **DISP.** button to accept the setting.

## Continuous Shooting

You can shoot continuously at a maximum speed of approximately 0.8 images/second while the shutter button is pressed fully and held.

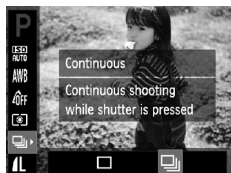

### 1 Choose a Drive mode.


- After pressing the button, press the buttons to choose .

### 2 Choose an option.

- Press the buttons to choose , then press the .


### 3 Shoot.

- ▶ As long as you hold the shutter button down, the camera will shoot successive images.

- 
- Cannot be used with the self-timer (pp. 62, 74, 75).
  - Continuous shooting speed increases in (p. 56).
  - For continuous shooting, the focus and exposure are locked when the shutter button is pressed halfway.
  - For a certain interval, images may not be recorded, and the shooting speed may slow down depending on the shooting conditions and the camera settings.
  - As the number of images increases, the shooting speed may slow down.
  - If the flash fires, the shooting speed may slow down.

## Shooting Using the Two Second Self-Timer

The camera will shoot approximately two seconds after the shutter button is pressed, avoiding any camera shake that occurs when pressing the shutter button.

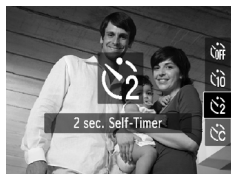


### Choose .




- After pressing the button, press the buttons to choose , then press the .
- ▶ Once set, will appear on the screen.
- Follow Step 3 on p. 62 to shoot.


# Customizing the Self-Timer

   You can set the time delay (0 – 30 seconds) and the number of shots (1 – 10 shots).

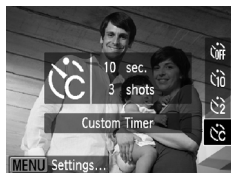




## 1 Choose .

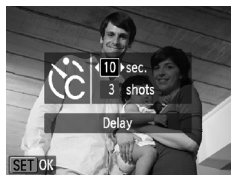- After pressing the  button, press the  buttons to choose , then press the **MENU** button.



## 2 Choose the settings.

- Press the  buttons to choose [Delay] or [Shots].
- Press the  buttons to choose a value, then press the  button.
- Follow Step 3 on [p. 62](#) to shoot.

### What if the number of shots is set to two or more shots?



- Exposure and white balance settings are set with the first shot.
- When you set the time delay for more than two seconds, the self-timer lamp and sound speed up two seconds before the shutter releases (when the flash will fire, the lamp lights).



- If the flash fires, the shooting interval may be longer.
- If you set a high number of shots, the shooting interval may be longer.
- If the memory card becomes full, shooting stops automatically.


## Shooting Using a TV Monitor

You can use a TV to display the camera screen content while shooting.

- Connect the camera to a TV as described in “Viewing Images on a TV” (p. 97).
- Shooting procedures are the same as when using the camera screen.

## Changing the Composition with the Focus Lock

While you keep the shutter button pressed halfway, the focus and exposure are locked. You can now recompose and shoot. This is called Focus Lock.

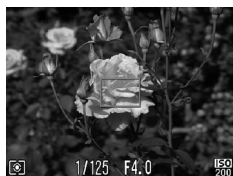

### 1 Focus.

- Center the subject you want in focus, and press the shutter button halfway.
- Confirm that the AF Frame is green.



### 2 Recompose.

- Keep the shutter button pressed halfway and recompose the scene.

### 3 Shoot.

- Press the shutter button fully.

# 5

## Getting More Out of Your Camera

This chapter serves as the advanced version of Chapter 4 and explains how to take pictures using various functions.


---




- This chapter assumes that the mode dial is set to **P** mode.
- The section “Shooting Long Exposures” (p. 84) assumes that the mode dial is set to **SCN** mode and the camera is in  $\star$ .
- Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 134 – 137).

## Changing the AF Frame Mode

You can change the AF (Auto Focus) frame mode to match the conditions you want to shoot.

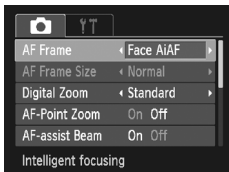

### Choose [AF Frame].

- Press the **MENU** button, choose the  tab, and then choose the [AF Frame] menu item. Press the **◀▶** buttons to choose an option.

### ● Face AiAF

- Detects people's faces and sets the focus, exposure (evaluative metering only) and white balance (AWB only).
- When the camera is pointed at subjects, a white frame appears on the face the camera judges to be the main subject, and gray frames (max. 2) will appear on other faces.
- A frame will follow a detected face that is moving within a certain range.
- When the shutter button is pressed halfway, up to 9 green frames will appear on faces on which the camera focuses.

- If a face is not detected and only gray frames (no white frame) appear, up to 9 green frames will appear on the areas the camera focuses on when the shutter button is pressed halfway.
- Examples of faces that cannot be detected:
  - Subjects that are far away or extremely close.
  - Subjects that are dark or light.
  - Faces turned to the side or at a diagonal, or faces with a portion hidden.
- The camera may mistakenly identify non-human subjects as a face.
- If the camera cannot focus when you press the shutter button halfway, the AF frame will not appear.



### ● Center

The AF frame is locked to the center. This is effective for focusing on a specific point.

### You can reduce the AF frame size




- Press the **MENU** button, choose the tab, then choose the [AF Frame Size] menu item and [Small] option.
- The setting is configured to [Normal] when the Digital Zoom (p. 59) or Digital Tele-converter (p. 60) is used.



If the camera cannot focus when you press the shutter button halfway, the AF frame will turn yellow and will appear on the screen.

## Magnifying the Focal Point

If you press the shutter button halfway, the AF frame will magnify and you can check the focus.

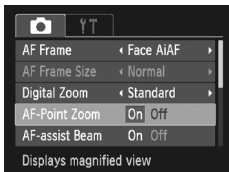

### 1 Choose [AF-Point Zoom].

- Press the **MENU** button, choose the tab, and then choose the [AF-Point Zoom] menu item. Press the buttons to choose [On].



### 2 Check the focus.

- Press the shutter button halfway.
  - ▶ In [Face AiAF] (p. 78), the face detected as the main subject will appear magnified.
  - ▶ In [Center] (p. 78), the contents of the center AF frame will appear magnified.

### What if the display does not magnify?



The display will not appear magnified in [Face AiAF] if a face cannot be detected or is too big in relation to the screen. In [Center], it will not appear magnified if the camera cannot focus.






 
The magnified display will not appear when using Digital Zoom (p. 59) or Digital Tele-converter (p. 60) or when connected to a TV (p. 97).

# Choosing the Person to Focus On (Face Select)

You can choose a specific person's face to focus on and then shoot.

 
 


## 1 Enter Face Select mode.

- Point the camera toward the face of the subject and press the  button.
- ▶ After [Face Select : On] appears, a face frame  will appear around the face detected as the main subject.
- Even if the subject moves, the face frame  will follow the subject within a certain range.
- If a face is not detected,  will not appear.




## 2 Choose the face on which to focus.

- If you press the  button, the face frame  will move to another face detected by the camera.
- When the frame has made a full circuit of all detected faces, [Face Select : Off] will appear, and the AF frame mode screen will reappear.




## 3 Shoot.

- Press the shutter button halfway. The face frame of the chosen face will change into a green .
- Press the shutter button fully to shoot.




### Confirming the number of detected faces

Keeping the  button pressed will display the number of faces detected by the camera (35 at the most) (orange: main subject's face, white: detected face).



## Shooting with the AF Lock

The focus can be locked. After locking the focus, the focal distance will not change even when you release your finger from the shutter button.

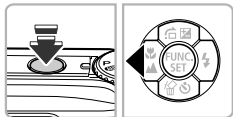


### 1 Lock the focus.

- Keep the shutter button pressed halfway and press the ◀ button.
- ▶ The focus locks and AFL appears on the screen.
- If you release your finger from the shutter button and press the ◀ button again, AFL will disappear and the focus will unlock.

### 2 Compose the scene and shoot.

## Changing the Metering Mode


You can change the Metering mode (brightness measuring function) to match the shooting conditions.

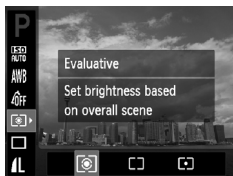
 



### 1 Choose the Metering mode.

- After pressing the  button, press the ▲▼ buttons to choose .

### 2 Choose an option.


- Press the ◀▶ buttons to choose an option, then press the .
- ▶ The setting will appear on the screen.

	Evaluative	Suitable for standard shooting conditions, including back lit shots. Automatically adjusts the exposure to match the shooting conditions.
	Center Weighted Avg.	Averages the light metered from the entire frame, but gives greater weight to the center.
	Spot	Only meters within the [ ] (Spot AE Point frame).

## Shooting with the AE Lock

You can lock the exposure and shoot, or set the focus and exposure separately to shoot.

AE stands for “Auto Exposure”.

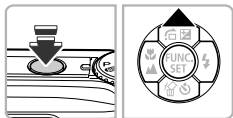

### 1 Lock the exposure.


- Point the camera toward the subject and press the ▲ button while pressing the shutter button halfway.
- ▶ When AEL appears on the screen, the exposure will be locked.
- If you release your finger from the shutter button and press the ▲ button again, AEL will disappear and the AE will unlock.

### 2 Compose the scene and shoot.

## Shooting with the FE Lock

Just as with the AE lock, you can lock the exposure for shooting with the flash.

FE stands for “Flash Exposure”.

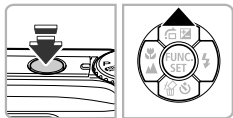

### 1 Choose ⚡ (p. 67).


### 2 Lock the flash exposure.

- Point the camera toward the subject and press the ▲ button while pressing the shutter button halfway.
- ▶ The flash will fire and when FEL appears on the screen, the flash output will be retained.
- If you release your finger from the shutter button and press the ▲ button again, FEL will disappear and the FE will unlock.






### 3 Compose the scene and shoot.
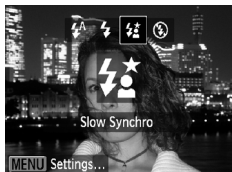
## Shooting with Slow Synchro

 You can make the main subject, such as people, appear bright by having the camera provide the appropriate illumination with the flash. At the same time, you can use a slow shutter speed to brighten the background that the light from the flash cannot reach.



### 1 Choose .

- After pressing the  button, press the  buttons to choose , then press the  button again.
- ▶ Once set,  will appear on the screen.

### 2 Shoot.



- Even if the flash fires, ensure that the subject does not move until the shutter sound ends.



Attach the camera to a tripod to prevent the camera from moving and blurring the image. Additionally, if you attach the camera to a tripod, you should set [IS Mode] to [Off] (p. 123).

## Red-Eye Correction




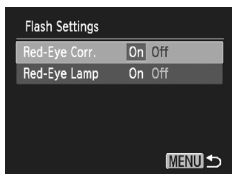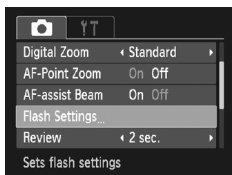

You can automatically correct red-eye that occurs in images taken with the flash.



### 1 Choose [Flash Settings].

 - Press the **MENU** button, choose [Flash Settings] from the  tab and press the  button.

### 2 Adjust the setting.

- Press the   buttons to choose [Red-Eye Corr.] and press the   buttons to choose [On].
- ▶ Once set,  will appear on the screen.



Red-eye correction may be applied to areas other than red eyes. For example, when red make-up has been used around eyes.




- You can correct recorded images (p. 108).
- You can also display the screen in Step 2 by pressing the **▶** button, then the **MENU** button.


## Shooting Long Exposures

You can set the shutter speed to a range between 1 and 15 seconds to shoot long exposures. However, you should attach the camera to a tripod to prevent the camera from moving and blurring the image.



### 1 Choose .

- Follow Steps 1 – 2 on p. 55 to choose .

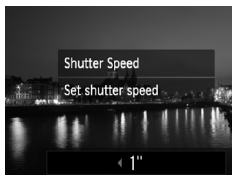

### 2 Choose the shutter speed.

- Press the **▲** button.
- Press the **◀▶** buttons to select the shutter speed, then press the **FUNC SET** button.


### 3 Confirm the exposure.

- When you press the shutter button halfway, the exposure for the chosen shutter speed will appear on the screen.



- The brightness of the image may differ from the brightness of the screen in Step 3 when the shutter button was pressed halfway.
- When shutter speeds of 1.3 seconds or slower are used, images are processed to eliminate noise after being taken. A certain amount of processing time may be needed before you can take the next shot.
- If you attach the camera to a tripod, you should set the [IS Mode] to [Off] (p. 123).




If the flash fires, the image may be overexposed. If this happens, set the flash to  and shoot.


# 6

## Using Various Functions for Shooting Movies

This chapter provides more advanced information than the “Shooting Movies” and “Viewing Movies” sections of Chapter 1.

---

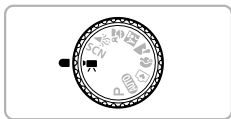


- This chapter assumes that the mode dial is set to  (Movie mode).



# Changing the Image Quality

You can choose between three image quality settings.

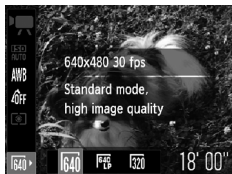

## 1 Choose the image quality setting.

- After pressing the button, press the buttons to choose .

## 2 Choose an option.

- Press the buttons to choose an option, and press the button.
- ▶ The setting will display on the screen.

## Image Quality Table

Image Quality (Recording Pixels/Frame Rate)	Content
640 x 480 pixels, 30 frames/sec.	For shooting standard quality movies.
640 x 480 pixels, 30 frames/sec. LP	The image quality will appear coarse when compared with , but you can record twice the length.
320 x 240 pixels, 30 frames/sec.	Since the number of the recording pixels is smaller, the image quality will appear coarse when compared with , but you can record three times the length.

## Estimated Shooting Time

Image Quality	Shooting Time	
	4 GB	16 GB
	32 min. 26 sec.	2 hrs. 12 min. 50 sec.
	1 hr. 2 min. 51 sec.	4 hrs. 17 min. 23 sec.
	1 hr. 31 min. 25 sec.	6 hrs. 14 min. 23 sec.

- Based on Canon's testing standards.
- Recording will automatically stop when either the clip file size reaches 4 GB or the recording time reaches approximately 1 hour.
- Recording may stop even if the maximum clip length has not been reached on some memory cards. SD Speed Class 4 or higher memory cards are recommended.

## AE Lock/Exposure Shift

You can lock the exposure or change it in 1/3 steps within a range of  $\pm 2$  before shooting.



### 1 Focus.

- Press the shutter button halfway to focus.

### 2 Lock the exposure.

- After releasing the shutter button, press the  $\blacktriangle$  button to lock the exposure. The exposure shift bar appears.
- Press the  $\blacktriangle$  button again to release the lock.

### 3 Change the exposure.

- While watching the screen, press the  $\blacktriangleleft$  buttons to adjust the brightness.

### 4 Shoot.

## Other Shooting Functions

The following functions can be used in the same way as for still images.




 








- **Zooming in More Closely on Subjects (Digital Zoom) (p. 59)**  
You can use the digital zoom while shooting, but the optical zoom cannot be used. If you want to shoot at the maximum zoom factor, you should adjust the optical zoom to the maximum before shooting.  
The sounds from zoom operation will be recorded.
- **Using the Self-Timer (p. 62)**
- **Shooting Close-ups (Macro) (p. 67)**
- **Shooting Far Away Subjects (Infinity) (p. 68)**
- **Adjusting the White Balance (p. 72)**
- **Changing the Tone of an Image (My Colors) (p. 73)**
- **Shooting Using the Two Second Self-Timer (p. 74)**
- **Shooting Using a TV Monitor (p. 76)**
- **Shooting with the AF Lock (p. 81)**
- **Turning off the AF Assist Beam (p. 121)**
- **Displaying the Overlay (p. 123)**  
[3:2 Guide] is not available.
- **Changing the IS-Mode Settings (p. 123)**  
You can switch between [Continuous] and [Off].

## Playback Functions

 The following functions can be used in the same way as for still images.


- Erasing Images (p. 28)
- Quickly Searching Images (p. 92)
- Searching for Images Using the Jump Display (p. 93)
- Viewing Slideshows (p. 94)
- Changing Image Transitions (p. 96)
- Viewing Images on a TV (p. 97)
- Protecting Images (p. 98)
- Erasing All Images (p. 101)
- Tagging Images as Favorites (p. 103) **A3100IS**
- Organizing Images by Category (My Category) (p. 104) **A3100IS**
- Rotating Images (p. 105)

### Summary of Movie Control Panel in “Viewing Movies” (p. 33)

	Exit
	Playback
	Slow Motion Playback (you can use the  buttons to adjust the speed. Sound will not play back.)
	Display the first frame
	Previous frame (Rewind if you hold down the  button.)
	Next frame (Fast forward if you hold down the  button.)
	Display the last frame
	Edit (p. 89) <b>A3100IS</b>
	Appears when connected to a PictBridge compliant printer (p. 110). Refer to the <i>Personal Printing Guide</i> for details.



You can trim the beginnings and ends of recorded movies in one-second increments.

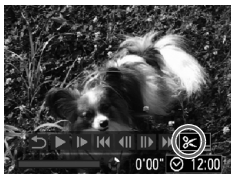



Movie Editing Panel




















Movie Editing Bar






 


## 1 Choose .


- Follow Steps 1 – 3 on p. 33, choose  and press the  button.
- ▶ The movie editing panel and the movie editing bar will appear on the screen.

## 2 Set the editing range.



- Press the  buttons and choose  or .
- Press the  buttons to move .  will display at each one-second interval. If you choose , you can trim the beginning of the movie from . If you choose , you can trim the end of the movie from .
- ▶ Even if you move  to a point other than a  point, only the portion from the nearest  to the left will be trimmed when  is chosen. Only the portion from the nearest  to the right will be trimmed when  is chosen.
- ▶ The section indicated with  will be the section of the movie that remains after editing.

## 3 Check the edited movie.

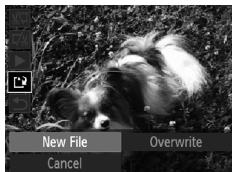- Press the  buttons to choose  (Play), then press the  button. The edited movie will play.
- To edit the movie again, repeat Step 2.
- To cancel editing, press the  buttons, and choose . After pressing the  button, press the  buttons to choose [OK], and press the  button again.



## 4 Save the edited movie.

- Press the ▲▼ buttons to choose [New File], then press the  button.
- Press the ◀▶ buttons to choose [New File], then press the  button.
- ▶ The movie will be saved as a new file.




- When [Overwrite] is chosen in Step 4, the unedited movie is overwritten with the edited movie, erasing the original.
- When there is not enough space left on the memory card, only [Overwrite] can be chosen.
- If the battery is depleted partway through editing, the edited movie clips may not be saved. When editing movies, you should use a fully charged battery or the separately sold AC adapter kit ([p. 39](#)).

# 7

## Using Various Playback and Editing Functions

This chapter explains various ways to play back and edit images.

---

- Press the  button to enter Playback mode before operating the camera.



- It may not be possible to play back or edit images that have been edited on a computer, had their file name changed, or have been taken on a different camera.
- The edit function (pp. 106 – 108) cannot be used if the memory card does not have free space available.



## Quickly Searching Images

### ● Searching Images Using Index Display

Displaying multiple images at a time lets you quickly find the image you want.



 




#### 1 Press the zoom button toward .

- ▶ Images will display in an index.
- Press the zoom button toward  to increase the number of images. The number of images increases each time you press the button.
- Press the zoom button toward  to reduce the number of images. The number of images will reduce each time you press the button.







#### 2 Choose an image.



- Press the     buttons to choose an image.
- ▶ An orange frame appears on the chosen image.
- Press the  button to display the chosen image by itself.



#### Searching from a large number of images


 



By repeatedly pressing the zoom button toward , you can display an index of up to 100 images. If you press the zoom button toward  again, an orange frame appears around all of the images and you can quickly search by pressing the   buttons to switch between sets of 100 images.

### ● Searching Images by Scrolling A3100IS

Pressing the   buttons for more than one second will display images in a line letting you quickly search them. You can also jump by the shooting date (Scroll Display).



#### Choose an image.

- If you set single image playback and press the   buttons for more than one second, the screen shown on the left will appear.
- If you press the   buttons, you can search images by the shooting date.
- Pressing the  button restores single image playback.



To turn off this effect, press the **MENU** button, then choose [Scroll Display] in the tab and choose [Off].

## Searching for Images Using the Jump Display

When there are many images on the memory card, you can search them by a specified method or image unit.




### 1 Choose a jump method.

- In Single Image Playback, press the button.
- ▶ The search method and the position of the currently displayed image will appear at the bottom of the screen.
- Press the buttons to choose the desired search method.

### 2 Switch images.

- Press the buttons.
- ▶ The camera will use the chosen search method to jump to an image.
- To return to Single Image Playback, press the **MENU** button.

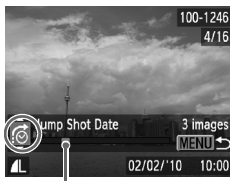

Position of currently displayed image

	Jump 10 Images	Jumps over 10 images at a time.
	Jump 100 Images	Jumps over 100 images at a time.
	Jump to My Category	Jumps to images registered to categories (p. 104). <b>A3100IS</b>
	Jump Shot Date	Jumps to the first image in each shooting date group.
	Jump to first	Jumps to still images only.
	Jump to Movie	Jumps to a movie.
	Jump to Favorites	Jumps to images tagged as favorites only. <b>A3100IS</b>

• The number of images matching the search filter will display on the right side of the screen except for and .



If there are no images matching the jump method, the ◀▶ buttons will not function.


## Viewing Slideshows

You can automatically play back images recorded to a memory card.



### 1 Choose [Slideshow].

- Press the MENU button, choose [Slideshow] from the ▶ tab and press the button.

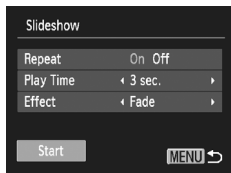

### 2 Make the setting.

- Press the ▲▼ buttons to choose an item, and press the ◀▶ buttons to adjust the setting.

Repeat	Repeats playback of images
Play Time	Display time for each image
Effect	Transition effects when switching between images

### 3 Choose [Start].


- Press the ▲▼ buttons to choose [Start], then press the button.
- ▶ The slideshow will start a few seconds after [Loading image...] displays.
- You can pause/restart a slideshow by pressing the button again.
- Press the MENU button to stop the slideshow.



- If you press the ◀▶ buttons during playback, the image will switch. If you keep the ◀▶ buttons pressed, you can fast-forward through images.
- The power saving function does not work during slideshows (p. 45).

## Checking the Focus

You can magnify the area of a recorded image that was inside the AF Frame, or the area of a face that was detected, to check the focus.

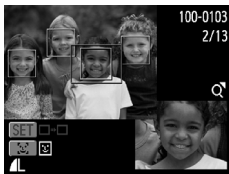

### 1 Press the **DISP.** button, and switch to the focus check display (p. 44).

- For images with detected faces, you can also switch to the focus check display by pressing the button.
- ▶ A white frame will appear where the AF frame or face was when the focus was set.
- ▶ A gray frame will appear on a face detected during playback.
- ▶ The area within the orange frame appears magnified.



### 2 Switch frames.

- Press the zoom button toward once.
- ▶ The screen shown to the left will appear.
- Press the button to switch between frames on detected faces. Press the button to move to another frame.

### 3 Change the magnification level or location.












- Press the zoom button to change the display size, and the buttons to change the display position while checking the focus.
- Pressing the **MENU** button resets the display to Step 1.

## Magnifying Images




Approximate Location of Displayed Area

### Press the zoom button toward .



- The display will zoom in on the image and  will appear on the screen. If you continue to hold the zoom button, it will continue to zoom in up to a maximum factor of 10x.
- If you press the , ,  buttons, you can move the location of the displayed area.
- Press the zoom button toward  to zoom out, or continue to hold it to return to Single Image Playback.
- When  appears on the screen, press the  button to switch to . Press the  buttons to switch between images in the zoomed state. Press the  button again to return to .

## Changing Image Transitions

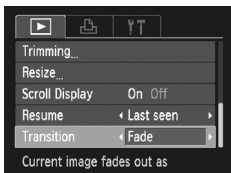You can choose from two transition effects when switching between images in Single Image Playback.






### Choose [Transition].

- Press the **MENU** button and choose the  tab, then choose [Transition] and press the  buttons to choose an option.



## Viewing Images on a TV

Using the supplied AV Cable (p. 2), you can connect the camera to a TV to view images you have shot.

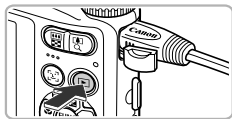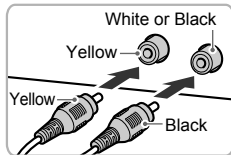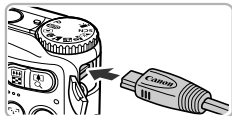


### 1 Turn off the camera and TV.

### 2 Connect the camera to the TV.

 
- Open the camera's terminal cover and fully insert the cable plug into the camera's terminal.
- Insert the cable plug fully into the video input terminals as shown in the illustration.

### 3 Turn on the TV and switch it to the input to which the cable is connected.

### 4 Turn on the camera.

- Press the  button to turn on the camera.
- ▶ The image will appear on the TV (nothing will appear on the screen of the camera).
- After you finish, turn off the camera and TV, and unplug the cable.

#### What if the images don't properly display on the TV?

Images will not display correctly if the camera's video output setting (NTSC/PAL) does not match the TV system. Press the **MENU** button, choose the  tab and [Video System] to switch to the correct video system.



# Protecting Images

You can protect important images so that they cannot be accidentally erased with the camera (pp. 28, 101).



- If you format the memory card (pp. 22, 51), protected images will also be erased.
- If you switch Shooting modes or turn off the power before performing the operations in Step 4, images will not be protected.




Protected images cannot be erased with the camera's erase function. To erase an image, cancel protection first.

## Choosing Images Individually



### 1 Choose [Protect].

- Press the **MENU** button, choose [Protect] in the tab, and then press the button.

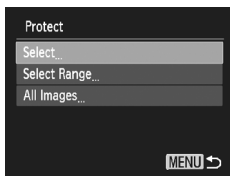

### 2 Choose [Select]. **A3100IS**

- Press the buttons to choose [Select], and then press the button.



### 3 Choose an image.

- Press the buttons to choose an image, then press the button.
- ▶ will appear on the screen.
- If you press the button again, will disappear.
- To protect additional images, repeat the above procedure.




## 4 Protect images.

- If you press the **MENU** button, a confirmation screen will appear.
- Press the ◀▶ buttons to choose [OK], then press the **FUNC SET** button.
- ▶ The images will be protected.

## ● Choose Range **A3100IS**

### 1 Choose [Select Range].

- Follow Step 2 on p. 98 to choose [Select Range] and press the **FUNC SET** button.

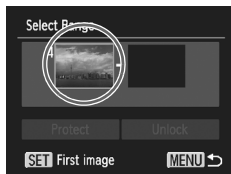

### 2 Choose the starting image.

- Press the **FUNC SET** button.
- Press the ◀▶ buttons to choose the image and press the **FUNC SET** button.



## Protecting Images




### 3 Choose the ending image.

- Press the ► button, choose [Last image] and press the button.
- Press the ◀▶ buttons to choose an image, and press the button.
- You cannot choose images before the first image.

### 4 Protect images.

- Press the ▼ button, choose [Protect] and press the button.

## ● Choose All Images **A3100IS**

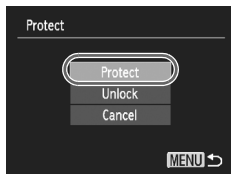

### 1 Choose [All Images].

- Follow Step 2 on [p. 98](#) to choose [All Images] and press the button.

### 2 Protect images.

- Press the ▲▼ buttons to choose [Protect] and press the button.



You can unlock groups of protected images if you choose [Unlock] in Step 4, while in [Select Range] or Step 2 while in [All Images].

# Erasing All Images

You can erase all images at once. Since erased images cannot be recovered, exercise adequate caution before erasing. Protected images (p. 98) cannot be erased.


## Choose All Images

A3100IS



### 1 Choose [Erase].

- Press the **MENU** button, choose [Erase] in the tab, and press the button.

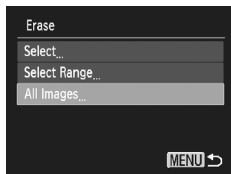

### 2 Choose [All Images].

- Press the buttons to choose [All Images], then press the button.

### 3 Erase.

- Press the buttons to choose [OK], then press the button.
  - ▶ All images will be erased.
- Pressing the **MENU** button will restore the menu screen.


A3000IS




### 1 Choose [Erase all].

- Press the **MENU** button, choose [Erase all] in the tab, and press the button.

## Erasing All Images

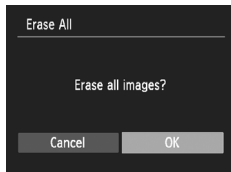



### 2 Erase all images.

- Press the ◀▶ buttons to choose [OK], then press the  button.
- ▶ All images will be erased.
- Pressing the MENU button will restore the menu screen.


## Choosing Images Individually A3100IS




### 1 Choose [Select].


- Follow Step 2 on p. 101 to choose [Select] and press the  button.
- Follow Step 3 on p. 98 to choose the image.
- ▶ Once set, ✓ will appear on the screen.
- Pressing the  button once more deselects the image, and ✓ will disappear.
- To choose multiple images, repeat the above operation.

### 2 Erase.


- If you press the MENU button, a confirmation screen will appear.
- Press the ◀▶ buttons to choose [OK] and press the  button.

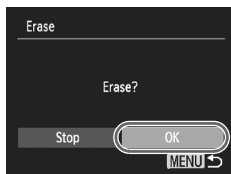


## Choose Range A3100IS

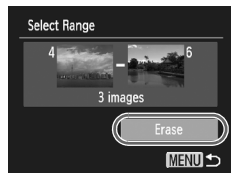

### 1 Choose [Select Range].

- Follow Step 2 on p. 101 to choose [Select Range] and press the  button.
- Follow Steps 2 – 3 on pp. 99 – 100 to choose images.

### 2 Erase.

- Press the ▼ button to choose [Erase], then press the  button.

# Tagging Images as Favorites **A3100IS**

When you tag images as favorites, you can easily categorize just those images. You can also filter out and display just those images for viewing (p. 93).



## 1 Choose [Favorites].

- Press the **MENU** button, choose the tab and [Favorites], and press the button.



## 2 Choose an image.

- Press the buttons to choose an image and press the button.
- ▶ Once set, appears on the screen.
- Press the button again to untag an image, will disappear.
- To choose multiple images, repeat the above operation.

## 3 Make the setting.

- If you press the **MENU** button, a confirmation screen will appear.
- Press the buttons to choose [OK] and press the button.
- ▶ The image will be tagged as a favorite.



If you switch Shooting modes or turn off the power before making the setting, images will not be tagged as favorites.



If you use Windows 7 or Windows Vista and transfer tagged images to the computer, they will be given a star rating of 3 (★★★☆☆) (except for movies).

# Organizing Images by Category (My Category) **A3100IS**

You can organize images in categories. You can register images to categories and filter them for viewing (p. 93).



If you switch Shooting modes or turn the camera off before performing the steps listed below, the images will not be registered to categories.

Images are automatically categorized by shooting condition as they are shot.




: Images with detected faces, or images shot in , , .

: Images detected as , , in **AUTO** or modes, or images shot in or .


: Images shot in , , , .

## Choosing Images Individually

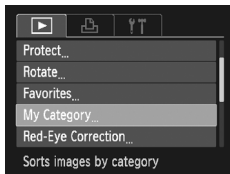


### 1 Choose [My Category].

- Press the **MENU** button and choose the tab, then choose [My Category] and press the button.

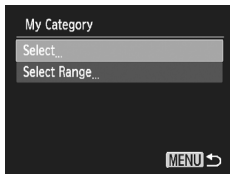

### 2 Choose [Select].

- Press the buttons to choose [Select] and press the .
- Follow Step 2 on p. 98 to choose images.
- Press the buttons, choose a category and press the .
- ▶ Once set, will appear on the screen.
- Pressing the again deselects the category and disappears.
- To choose multiple images, repeat the above operation.

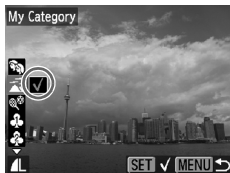





### 3 Make the setting.

- If you press the **MENU** button, a confirmation screen will appear.
- Press the ◀▶ buttons to choose [OK] and press the **FUNC SET** button.
- ▶ The image will be registered to the category.

## ● Choose Range



### 1 Choose [Select Range].

- Follow Step 2 on p. 104 to choose [Select Range] and press the **FUNC SET** button.
- Follow Steps 2 – 3 on pp. 99 – 100 to choose images.
- Press the ▼ button, choose the item and press the ◀▶ buttons to choose a type.

### 2 Make the setting.


- Press the ▼ button to choose [Select] and press the **FUNC SET** button.



If you choose [Deselect] in Step 2, you can deselect all of the images in the [Select Range] category.

## Rotating Images

You can change the orientation of an image and save it.

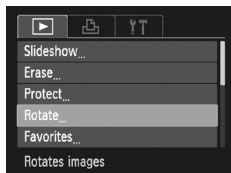

### 1 Choose [Rotate].

- Press the **MENU** button, choose the **▣** tab and [Rotate], and press the **FUNC SET** button.




### 2 Rotate the image.



- Press the ◀▶ buttons to choose an image.
- ▶ The image will rotate 90° with each press of the **FUNC SET** button.
- Pressing the **MENU** button will restore the menu screen.

# Resizing Images

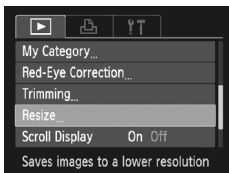

You can resize images to a lower pixel setting and save the resized image as a separate file.



## 1 Choose [Resize].

- Press the **MENU** button and choose the  tab, then choose [Resize] and press the  button.

## 2 Choose an image.



- Press the  buttons to choose the image and press the  button.


## 3 Choose an image size.

- Press the  buttons to choose an option, then press the  button.
  - ▶ The [Save new image?] screen will appear.






## 4 Save the new image.

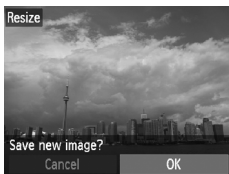- Press the  buttons to choose [OK] and press the  button.
  - ▶ The image will be saved as a new file.



## 5 Display the new image.

- When you press the **MENU** button, the [Display new image?] screen will appear.
- Press the  buttons to choose [Yes], and press the  button.
  - ▶ The saved image will be displayed.

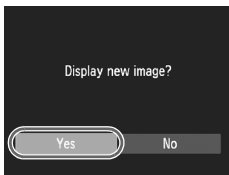


- You cannot resize an image to a larger size.
- Images recorded at a pixel setting of **W** (p. 69), or saved as **XS** in Step 3 cannot be edited.

# Trimming **A3100IS**

You can cut out a portion of a recorded image and save it as a new image file.




Trimming Area

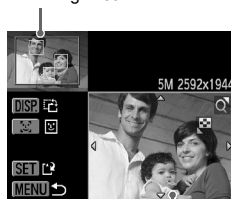



Trimming Area Display

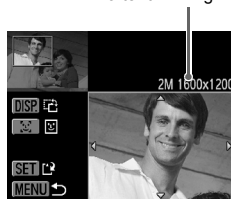


Recorded pixels after trimming









## 1 Choose [Trimming].

- Press the **MENU** button, choose the  tab and [Trimming], then press the  button.

## 2 Choose an image.

- Press the   buttons to choose the image and press the  button.

## 3 Adjust the trimming area.

- ▶ A frame will appear around the portion of the image to be trimmed.
- ▶ The original image will display in the upper left and the trimmed image will display in the lower right.
- If you press the zoom button to the left or right, you can change the frame size.
- If you press the     buttons, you can move the frame's position.
- If you press the **DISP.** button, you can change the frame orientation.
- In an image with detected faces, gray frames appear around the faces located in the upper left image. The frames can be used for trimming. You can switch between frames by pressing the  button.
- Press the  button.

## 4 Save as a new image and display.


- Follow Steps 4 – 5 on [p. 106](#).

- Images with a recording pixel setting of **S** or **M**, or images resized as **XS** cannot be edited.
- The width and height ratio of an image that can be changed is fixed at 4:3 (for a vertical image 3:4).
- The number of recorded pixels in a trimmed image will be smaller than before trimming.





# Correcting the Red-Eye Effect

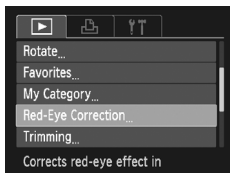

You can automatically correct red eyes in images and save them as new files.




## 1 Choose [Red-Eye Correction].

- Press the **MENU** button, choose the  tab and [Red-Eye Correction], then press the  button.

## 2 Choose an image.

 
 



- Press the   buttons to choose an image.

## 3 Correct the image.

- Press the  button.
  - ▶ Red-eye detected by the camera will be corrected and a frame will appear around the corrected portion.
- You can magnify or reduce the size of the image using the procedures in “Magnifying Images” (p. 96).



## 4 Save as a new image and display.

- Press the     buttons to choose [New File], and press the  button.
  - ▶ The image will be saved as a new file.
- Follow Step 5 on p. 106.



- Some images may not be properly corrected.
- When [Overwrite] in Step 4 is chosen, the uncorrected image is overwritten with the corrected data, erasing the original image.
- Protected images cannot be overwritten.

# 8

## Printing

This chapter explains how to choose images for printing, and print using a PictBridge compliant printer (sold separately, [p. 40](#)). Please also refer to the *Personal Printing Guide*.

---

### Canon-Brand PictBridge Compliant Printers



SELPHY series





Inkjet Printers



## Printing Images

You can easily print the pictures you take by connecting the camera to a PictBridge compliant printer using the supplied interface cable (p. 2).

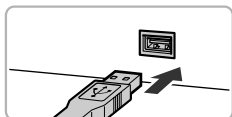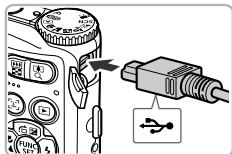



**1 Turn off the camera and printer.**

**2 Connect the camera to the printer.**



- Open the cover, and insert the small end of the plug firmly into the camera terminal in the direction shown.
- Insert the cable's larger plug into the printer. For connection details, refer to the user guide provided with the printer.


**3 Turn on the printer.**

**4 Turn on the camera.**


- Press the  button to turn on the camera.
- ▶  **SET** will appear on the screen.

**5 Choose an image to print.**

- Press the  buttons to choose an image, then press the  button.

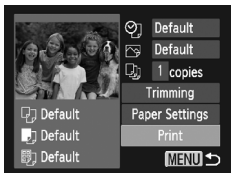

## 6 Print images.

- Press the ▲▼ buttons to choose [Print] and press the  button.
- ▶ Printing will start.
- If you want to print additional images, repeat Steps 5 and 6 after printing has completed.
- After printing has completed, turn off the camera and printer, and unplug the interface cable.

- Refer to the *Personal Printing Guide* for details on printing.
- Refer to [pp. 38, 40](#) for Canon-brand PictBridge compliant printers.
- Index printing is not available with the following Canon-brand PictBridge compliant printers: CP710/CP510/CP500/CP400/CP330/CP300/CP220/CP200. **A3100IS**




# Choosing Images for Printing (DPOF)



You can choose up to 998 images on a memory card for printing and specify settings such as the number of copies so that they can be printed together or processed at a photo developer service. These selection methods comply with the DPOF (Digital Print Order Format) standards.

## Print Settings

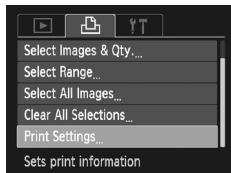
 
You can set the print type, date and file number. These settings apply to all images chosen for printing.



### 1 Choose [Print Settings].


- Press the **MENU** button and choose the  tab, then choose [Print Settings] and press the  button.

### 2 Adjust the settings.


- Press the  buttons to choose a menu item, then press the  buttons to choose an option.
- Pressing the **MENU** button accepts the settings and restores the menu screen.

<b>Print Type</b>	Standard	Prints one image per page.
	Index	Prints several reduced size images per page.
	Both	Prints both standard and index formats.
<b>Date</b>	On	Prints the shooting date.
	Off	–
<b>File No.</b>	On	Prints the file number.
	Off	–
<b>Clear DPOF data</b>	On	Removes all print settings after printing.
	Off	–




- Some printers or photo developer services may not be able to reflect all of the settings in the output.
-  may appear on the screen when using a memory card with print settings set by a different camera. These settings will be overwritten with those set by your camera.
- If [Date] is set to [On], some printers may print the date twice.





- With [Index] chosen, the [Date] and [File No.] options cannot be set to [On] at the same time.
- The date will be printed in the style set in the [Date/Time] function in the  tab (p. 19).

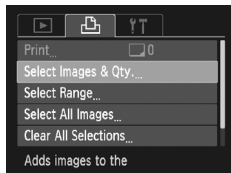





## ● Choosing the Number of Copies





### 1 Choose [Select Images & Qty.].

- Press the **MENU** button and choose the  tab, then choose [Select Images & Qty.] and press the  button.

### 2 Choose an image.


- Press the   buttons to choose an image, then press the  button.
- ▶ You will be able to set the number of print copies.
- If you choose [Index],  appears on the screen. Pressing the  button again will deselect the image and  will disappear.

### 3 Set the number of prints.


- Press the   buttons to set the number of prints (maximum 99).
- Repeat Steps 2 and 3 to choose other images and the number of prints for each.
- You cannot set the number of print copies for index prints. You can only choose which images to print in Step 2.
- Pressing the **MENU** button accepts the settings and restores the menu screen.



## ● Choose Range A3100IS

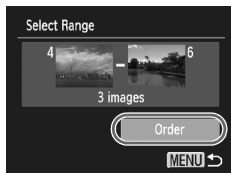


### 1 Choose [Select Range].

- In Step 1 above to choose [Select Range], then press the  button.
- Follow Steps 2 – 3 on pp. 99 – 100 to choose images.


### 2 Make print settings.

- Press the   buttons to choose [Order], then press the  button.


## ● Set All Images to Print Once

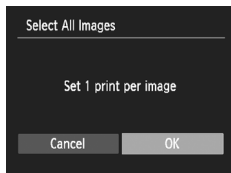


### 1 Choose [Select All Images].

- In Step 1 on p. 113, choose [Select All Images] and then press the  button.


### 2 Make print settings.

- Press the ◀▶ buttons to choose [OK] and press the  button.


## ● Clearing All Selections

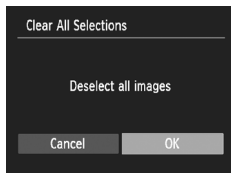

### 1 Choose [Clear All Selections].

- In Step 1 on p. 113, choose [Clear All Selections] and then press the  button.

### 2 All selections will be cleared.

- Press the ◀▶ buttons to choose [OK], then press the  button.

## ● Printing Images with DPOF Settings

The following examples use the Canon SELPHY series printers.

Number of copies to print



### 1 Connect the camera to the printer.

- Follow Steps 1 – 4 on p. 110.

### 2 Print images.

- Press the ▲▼ buttons to choose [Print now], then press the  button.
- ▶ Printing will start.

# 9

## Customizing Camera Settings

You can customize various settings to suit your shooting preferences. The first part of this chapter explains convenient and commonly used functions. The latter part explains how to change shooting and playback settings to suit your purposes.

---



## Changing Camera Settings

You can customize convenient and commonly used functions from the **F/T** tab (p. 47).

### ● Turning off Hints & Tips **A3100IS**


When you choose an item in the FUNC. menu (p. 46) or MENU (p. 47), a description of the function (hints and tips) is displayed. You can turn off this function.



- Choose [Hints & Tips], then press the ◀▶ buttons to choose [Off].

### ● Change Sounds **A3100IS**

You can change your camera's operation sounds.

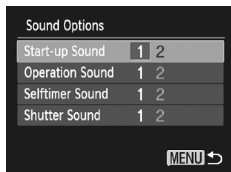


- Choose [Sound Options], then press the **FUNC/SET** button.
- Press the ▲▼ buttons to choose a menu item.
- Press the ◀▶ buttons to choose an option.

1	Preset sounds. (cannot be modified)
2	Preset sounds. You can use the included software to change the sounds (p. 117).

## ● Changing the Start-up Screen **A3100IS**

You can change the start-up image that appears on the screen when you turn on the camera.

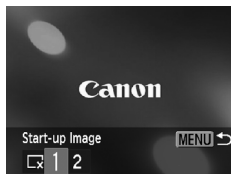


- Choose [Start-up Image], then press the **FUNC SET** button.
- Press the **◀▶** buttons to choose an option.

<input type="checkbox"/>	No start-up image.
1	Preset images. (cannot be modified)
2	Preset images. You can set recorded images, and use the included software to change the images (p. 117).

## ● Registering the Start-up Screen **A3100IS**

When you press the **▶** button and set the camera to Playback mode, you can register sounds and images.

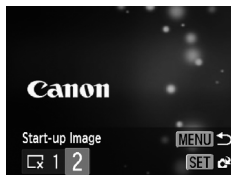

- Choose [Start-up Image], then press the **FUNC SET** button.
- Press the **◀▶** buttons to choose [2], then press the **FUNC SET** button.



- Press the **◀▶** buttons to choose an image, then press the **FUNC SET** button.
- Press the **◀▶** buttons to choose [OK], then press the **FUNC SET** button to complete registration.



**Any previously registered start-up image will be overwritten when registering a new start-up image.**




### Register images or sounds with the included software

You can register images or sounds to the camera using the included software. Refer to the *Software Guide* for details.

## Changing Camera Settings

### Turning Off the Start-up Image A3000IS

You can turn off the start-up image that displays when you turn on the camera.

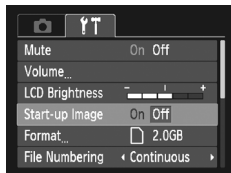

- Choose [Start-up Image], then press the ◀▶ buttons to choose [Off].

### Changing the File Number Assignment

Images you shoot are automatically assigned file numbers in the order they were taken, from 0001 – 9999, and saved to folders of up to 2,000 images. You can change the file number assignment.



- Choose [File Numbering], then press the ◀▶ buttons to choose an option.

Continuous	Even if you shoot using a new memory card, the file numbers are assigned consecutively until an image with the number 9999 is taken/saved.
Auto Reset	If you replace the memory card with a new one, or a new folder is created, file numbering begins with 0001 again.



- If you use a memory card already containing images, the newly assigned file numbers may continue the existing numbering for both the [Continuous] and [Auto Reset] settings. If you want to start over with file number 0001, format the memory card before use (p. 22).
- Refer to the *Software Guide* for information regarding folder structure or image types.

## ● Creating Folders by Shooting Date


Images are saved into folders created each month, however, you can also create folders by shooting date.



- Choose [Create Folder] and press the ◀▶ buttons to choose [Daily].
- ▶ Images will be saved into folders created on each shooting date.

## ● Changing the Lens Retract Time


For safety reasons, the lens retracts about 1 minute after pressing the ▶ button when in a Shooting mode (p. 27). If you want the lens to retract immediately when you press the ▶ button, set the retract time to [0 sec.].

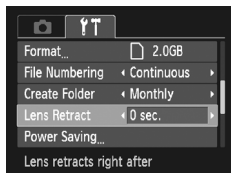


- Choose [Lens Retract], then press the ◀▶ buttons to choose [0 sec.].

## ● Turning off the Power Saving Function

You can set the power saving function (p. 45) to [Off]. Setting it to [On] is recommended to save battery power.

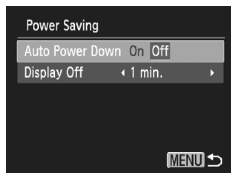


- Choose [Power Saving], then press the  button.
- Press the ▲▼ buttons to choose [Auto Power Down], then press the ◀▶ buttons to choose [Off].
- If you set the power saving function to [Off], be sure to turn the camera off after use.

## ● Changing Camera Settings

### ● Setting the Screen Shut-Off Time


You can adjust the time the screen takes to shut off automatically (p. 45). This also works when [Auto Power Down] is set to [Off].







- Choose [Power Saving], then press the  button.
- Press the ▲▼ buttons to choose [Display Off], then press the ◀▶ buttons to choose a time.
- In order to save battery power, it is recommended to choose less than [1 min.].

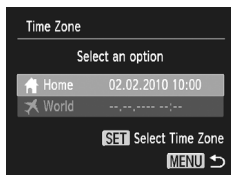
### ● Using the World Clock A3100IS

When traveling abroad, you can record images with local dates and times simply by switching the time zone setting. If you pre-register the destination time zones, you can enjoy the convenience of not having to switch the Date/Time settings.






#### 1 Set the home time zone.

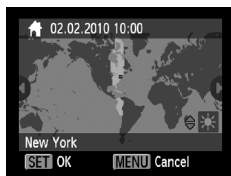- Choose [Time Zone] and press the  button.
- When setting this for the first time, check the information that displays on the screen at the left, and press the  button.
- Press the ◀▶ buttons to choose the home time zone, then press the  button. To set daylight saving time (adds 1 hour), press the ▲▼ buttons to choose .




#### 2 Set the world time zone.

- Press the ▲▼ buttons to choose [  World ], then press the  button.
- Press the ◀▶ buttons to choose the destination time zone, then press the  button.
- You can also set the daylight saving time as in Step 1.





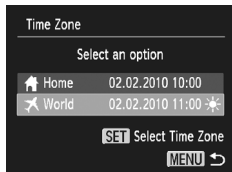

### 3 Choose the world time zone.

- Press the ▲▼ buttons to choose [✈ World], then press the MENU button.
- ✈ will appear in the shooting screen (p. 132).



If you change the date or time in the ✈ setting (p. 19), your [🏠 Home] time and date will automatically change.

## Changing Shooting Function Settings


If you set the mode dial to **P**, you can change the settings in the 📷 tab (p. 47).



Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 136 – 137).

### Turning off the AF Assist Beam

The lamp will automatically light to assist focusing in low light conditions when you press the shutter button halfway. You can turn off the lamp.

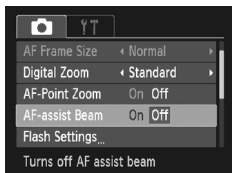


- Choose [AF-assist Beam], then press the ◀▶ buttons to choose [Off].

## Changing Shooting Function Settings

### Turning Off the Red-Eye Reduction Function


The red-eye reduction lamp lights in order to reduce the red-eye effect that occurs when shooting in dark conditions with the flash. You can turn off this function.

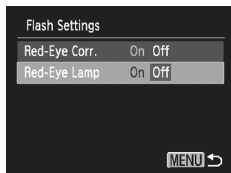

- Choose [Flash Settings], then press the button.
- Press the buttons to choose [Red-Eye Lamp], then press the buttons to choose [Off].

### Changing the Image Display Time Right After Shooting

You can change the length of time the images display after shooting.

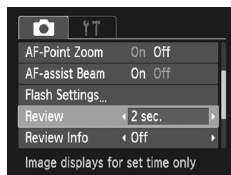


- Choose [Review], then press the buttons to choose an option.

2 – 10 sec.	Displays images for the set time.
Hold	The image displays until you press the shutter button halfway.
Off	No image displays.

### Changing the Way the Image Displays Right After Shooting

You can change the way the image displays after shooting.

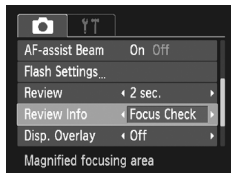


- Choose [Review Info], then press the buttons to choose an option.

Off	Displays the image only.
Detailed	Displays detailed information (p. 44).
Focus Check	The area inside the AF frame is magnified, allowing you to check the focus. The procedure is the same as in "Checking the Focus" (p. 95).

## ● Displaying the Overlay

You can display gridlines for vertical and horizontal guidance, or a 3:2 guide to confirm the printable area for postcard size prints.

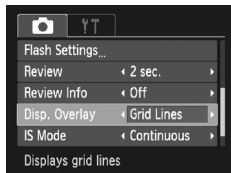

- Choose [Disp. Overlay], then press the ◀▶ buttons to choose an option.

Grid Lines	A grid overlays the display.
3:2 Guide	Gray bars will appear on the top and bottom of the display. This area will not print when printing on paper with a 3:2 aspect ratio.
Both	Both grid lines, and the 3:2 guide will display.

- In **W** mode, you cannot set [3:2 Guide] or [Both].
- Grid Lines will not be recorded on the image.
- The gray areas displayed with [3:2 Guide] are the areas that will not be printed. The actual image recorded will include the portion in the gray areas.



## ● Changing the IS-Mode Settings



- Choose [IS Mode], then press the ◀▶ buttons to choose an option.

Continuous	Image stabilization is always on. You can confirm the result directly on the display, which makes it easier to check the composition or focus.
Shoot Only	Image stabilization is only active at the moment of shooting.
Panning	Image stabilization only counters up and down motion. This option is recommended for shooting objects moving horizontally.





- If camera shake is too strong, attach the camera to a tripod. If you attach the camera to a tripod, you should set the IS Mode to [Off].
- When using [Panning], hold the camera horizontally to shoot. Image stabilization does not work when the camera is held vertically.

## Changing Playback Function Settings

You can adjust the settings in the  tab by pressing the  button (p. 47).

### ● Choosing the Image that First Displays in Playback

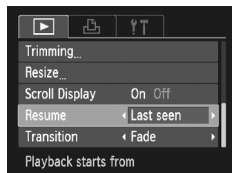

- Choose [Resume], then press the  buttons to choose an option.

Last seen	Resumes with the image last viewed.
Last shot	Resumes with the most recently shot image.

# 10

## Useful Information


This chapter introduces how to use the AC adapter kit (sold separately), troubleshooting tips, and contains lists of functions and items that appear on the screen. The index also appears at the end.

---



## Using Household Power


If you use AC Adapter Kit ACK-DC60 (sold separately), you can use the camera without worrying about how much charge is left in the battery.

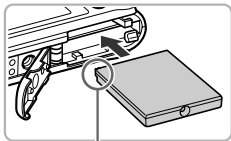

Terminals


### 1 Insert the coupler.

- Open the cover (p. 16) and insert the coupler as shown until it locks into place with a click.
- Close the cover (p. 16).

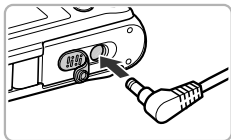

### 2 Plug the cord into the coupler.

- Open the cover and fully insert the plug into the coupler.

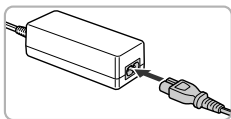

### 3 Connect the power cord.

- Connect the power cord to the compact power adapter, then plug the other end into a power outlet.
- You can turn the camera on to use it.
- After you finish, turn off the camera and unplug the power cord from the power outlet.



Do not unplug the plug or power cord with the camera turned on. This could erase images you have taken or damage the camera.

## Troubleshooting

If you think there is a problem with the camera, first check the following. If the items below do not solve your problem, contact a Canon Customer Support Help Desk as listed on the included customer support list.

### Power

#### **You pressed the ON/OFF button, but nothing happened.**

- Confirm that the battery is properly inserted (p. 16).
- Confirm that the battery is not depleted (p. 15).
- Confirm that the memory card/battery cover is securely closed (p. 17).
- If the battery terminals are dirty, battery performance will decrease. Clean the terminals with a cotton swab and re-insert the battery several times.

#### **Battery is consumed quickly.**

- Battery performance decreases at low temperatures. Warm the battery, for example, by placing them in your pocket, taking care that the terminals do not come into contact with any metal objects.

#### **Lens will not retract.**

- Do not open the memory card/battery cover while the power is on. After closing the memory card/battery cover, turn the power on then back off (p. 17).

### TV output

#### **Image is distorted or not showing on TV (p. 97).**

### Shooting

#### **Cannot shoot.**

- Set the mode dial to a Shooting mode (p. 42).
- When in Playback mode (p. 27), press the shutter button halfway (p. 23).

#### **Screen does not display properly in dark places (p. 44).**


#### **Screen does not display properly while shooting.**

Please note, the following will not be recorded in still images, but will be recorded in movies.

- When the camera is subjected to powerful light sources, the display may darken.
- When shooting under fluorescent lighting, the screen may flicker.
- When shooting bright light sources, a bar of light (purplish red) may appear on the screen.

#### **The screen turns off and you cannot shoot when you press the shutter button (p. 26).**

#### **appears when the shutter button was pressed halfway (p. 58).**

- Set the [IS mode] to [Continuous] (p. 123).
- Set the flash to  (p. 67).
- Increase the ISO speed (p. 71).
- Attach the camera to a tripod.

## Troubleshooting


### **Image is blurred.**

- Press the shutter button halfway to focus on the subject, then press fully to shoot (p. 23).
- Shoot the subject within the focusing distance (p. 140).
- Set the [AF-assist Beam] to [On] (p. 121).
- Confirm that functions which you do not intend to use (macro, etc.) are not set.
- Shoot using the focus lock or AF lock (pp. 76, 81).


### **Even when you press the shutter button halfway, the AF frame does not appear, and the camera does not focus.**

- If you center on the light and dark contrasting area of the subject and push the shutter button halfway, or repeatedly push the shutter button halfway, the frame will appear and the camera will focus.

### **Subject is too dark.**

- Set the flash to  (p. 67).
- Adjust the brightness with exposure compensation (p. 66).
- Use the AE lock, or spot metering to shoot (pp. 81, 82).


### **Subject is too bright (overexposed).**

- Set the flash to  (p. 58).
- Adjust the brightness with exposure compensation (p. 66).
- Use the AE lock, or spot metering to shoot (pp. 81, 82).
- Reduce the light illuminating the subject.

### **Image is dark even though the flash fired (p. 26).**

- Increase the ISO speed (p. 71).
- Shoot within an appropriate distance for flash photography (p. 67).

### **Image taken using the flash is too bright (overexposed).**

- Shoot within an appropriate distance for flash photography (p. 67).
- Set the flash to  (p. 58).

### **White dots appear on the image when shooting with the flash.**

- Light from the flash has reflected off dust particles or other objects in the air.

### **Image appears rough or grainy.**

- Shoot with the ISO speed on a lower setting (p. 71).
- Depending on the Shooting mode, when shooting in a high ISO speed the image may appear rough or grainy (p. 55).

### **Eyes appear red (p. 83).**

- Set the [Red-Eye Lamp] to [On] (p. 122). When shooting with the flash, the lamp (on the front of the camera) lights (p. 42), and for approximately 1 second while the camera is reducing red-eye, it is not possible to shoot. It is more effective if the subject is looking directly at the lamp. Even better results can be obtained by increasing the lighting in indoor settings or approaching closer to the subject.

### **Recording images to the memory card takes a long time, or continuous shooting slows down.**


- Perform a low-level format of the memory card in the camera (p. 51).



## When you can't make settings for shooting functions or FUNC. menu.

- The items in which settings can be made differ depending on the shooting mode. Refer to “Functions Available in Each Shooting Mode” (pp. 134 – 135).

### Cannot operate buttons.

- When the mode dial is set to , some buttons cannot be used (p. 29).

## Shooting movies

### Correct shooting time does not display, or stops.

- Format the memory card in the camera, or use a memory card capable of recording at high speeds. Even when the shooting time does not display properly, the recorded video will be the length that it was actually shot (pp. 22, 32).

### appeared on the screen and shooting ended automatically.

The camera's internal memory was insufficient. Try one of the following:

- Perform a low-level format of the memory card in the camera (p. 51).
- Change the image quality setting (p. 86).
- Use a memory card capable of recording at high speeds (p. 86).

### Zoom does not operate.

- You can use the digital zoom while recording, but not the optical zoom (p. 87).

## Playback


### Cannot play back images or movies.

- If the file name or folder structure is changed on a computer, you may not be able to play back images or movies. Refer to the *Software Guide* for information regarding folder structure or file names.

### Playback stops, or audio cuts out.

- Use a memory card that has been formatted on this camera (p. 22).
- If you copy a movie to a memory card that reads slowly, playback may interrupt momentarily.
- Depending on its capabilities, when playing movies, the computer may drop frames or the audio may cut out.




### Cannot operate buttons.

- When the mode dial is set to , some buttons cannot be used (p. 30).

## Computer

### Cannot transfer images to a computer.

It may be possible to solve the problem when the camera is connected to the computer via cable by reducing the transfer speed.

- Press and hold down the **MENU** button, then press and hold the  and  buttons simultaneously. Choose [B] when it appears on the screen, then press the  button.

## List of Messages That Appear on the Screen

If error messages appear on the screen, try one of the following solutions.

### **No memory card**

- The memory card is not installed in the correct direction. Install the memory card in the correct direction (p. 16).

### **Memory card locked**

- The SD memory card, SDHC memory card or SDXC memory card's write protect tab is set to "LOCK". Unlock the write protect tab (pp. 16, 17).

### **Cannot record!**

- You attempted to shoot an image without a memory card, or with a memory card installed incorrectly. Install the memory card in the correct direction to shoot (p. 16).

### **Memory card error (p. 52)**

- If the same message appears even when a formatted memory card is installed in the correct direction, contact a Canon Customer Support Help Desk.

### **Insufficient space on card**

- There is not enough free space on the memory card to shoot (pp. 24, 31, 53, 65, 77, 85) or edit images (pp. 106 – 108). Erase the images (pp. 28, 101) to open space for new images, or insert an empty memory card (p. 16).

### **Change the battery pack (p. 15)**

### **No Image.**

- There are no images recorded on the memory card that can be displayed.

### **Protected! (p. 98)**

### **Unidentified Image/Incompatible JPEG/Image too large./Cannot play back MOV/RAW**

- Unsupported images, or images with corrupted data cannot be displayed.
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not display.

### **Cannot magnify!/Cannot rotate/Cannot modify image/Cannot register this image!/Cannot modify/Unselectable image.** **A3100IS**

- Incompatible images cannot be magnified (p. 96), tagged as favorites (p. 103), rotated (p. 105), edited (pp. 106 – 108), registered to the start-up screen (p. 117), categorized (p. 104), or added to a print list (p. 112).
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not be magnified, rotated, edited, registered to the start-up screen, categorized or added to a print list.
- Movies cannot be magnified (p. 96), edited (pp. 106 – 108), added to a print list (p. 112), or registered to the start-up screen (p. 117).

**Cannot magnify!/Cannot rotate/Cannot modify image/Unselectable image.** **A3000IS**

- Incompatible images cannot be magnified (p. 96), rotated (p. 105), edited (pp. 106 – 108), or added to a print list (p. 112).
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not be magnified, rotated, edited, or added to a print list.
- Movies cannot be magnified (p. 96).

**Invalid selection range** **A3100IS**

- When choosing the selection range (pp. 99, 102, 105), you tried to choose a starting image that was after the last image or you tried to choose an ending image that was before the starting image.

**Exceeded selection limit**

- You chose more than 998 images in print settings. Choose less than 998 images (p. 112).
- Print settings could not be saved correctly. Reduce the number of selected images and try again (p. 112).
- You chose 501 or more images in Protect (p. 98), Erase (p. 101), Favorites (p. 103) or My Category (p. 104). **A3100IS**

**Communication error**

- Images could not be transferred to the computer or printed due to the large amount of images (approx. 1000) stored on the memory card. Use a commercially available USB card reader to transfer the images. Insert the memory card into the printer's card slot to print.

**Naming error!**

- The folder or image could not be created because there is an image with the same file name as the folder or image that the camera is attempting to create, or the highest possible file number has already been reached. In the **↑↑** menu, change [File Numbering] to [Auto Reset] (p. 118) or format the memory card (p. 22).

**Lens Error**


- This error can occur if you hold the lens while it is in motion or when using it in a location with excessive dust or sand in the air.
- If this error message continues to appear, contact a Canon Customer Support Help Desk as there may be a problem with the lens.

**A camera error was detected (Error number)**

- If an error code appears directly after taking a picture, the shot may not have been recorded. Check the image in Playback mode.
- If this error code reappears, note the Error number (Exx) and contact a Canon Customer Support Help Desk as there may be a problem with the camera.

# Information Displayed on the Screen

## Shooting (Information Display)

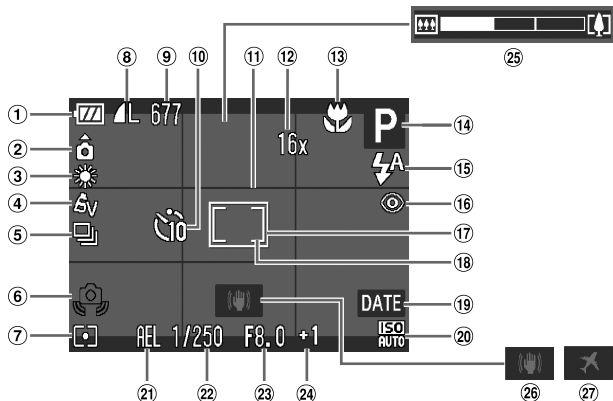


- |  |   |                                    |
|--|---|------------------------------------|
| ① Battery Charge Indicator (p. 15)   | ⑩ Self-Timer (pp. 62, 74, 75)   | ⑰ Spot AE Point Frame (p. 81)      |
| ② Camera Orientation* (p. 72)  | ⑪ Disp. Overlay (p. 123)  | ⑱ Date Stamp (p. 61)               |
| ③ White Balance (p. 72)  | ⑫ Digital Zoom Magnification (p. 59) / Digital Tele-converter (p. 60) | ⑳ ISO Speed (p. 71)                |
| ④ My Colors (p. 73)  | ⑬ Focusing Zone (pp. 67, 68), AF Lock (p. 81)                         | ㉑ AE Lock (p. 82), FE Lock (p. 82) |
| ⑤ Drive Mode (p. 74)   | ⑭ Shooting Mode   | ㉒ Shutter Speed                    |
| ⑥ Camera Shake Warning (p. 26)   | ⑮ Flash Mode (pp. 58, 67, 83)   | ㉓ Aperture Value                   |
| ⑦ Metering Modes (p. 81)   | ⑯ Red-Eye Correction (p. 83)  | ㉔ Exposure Compensation (p. 66)    |
| ⑧ Image Quality (Compression) (p. 69) / Recording Pixels (pp. 68, 86)                  |   | ㉕ Zoom Bar (p. 24)                 |
| ⑨ Still Images: Recordable Shots (p. 18) / Movies: Remaining Time/Elapsed Time (p. 32) |   | ㉖ Image Stabilizer (p. 123)        |
|  |   | ㉗ Time Zone (p. 120)               |

\* : Standard, : Held vertically

When shooting, the camera detects if it is held vertically or horizontally, and adjusts settings accordingly for the best shot. It also detects orientation during playback, so you can hold the camera in either orientation and it will automatically rotate images for correct viewing.

This function may not operate correctly when the camera is pointed straight up or down.

## ● Playback (Detailed Information Display)

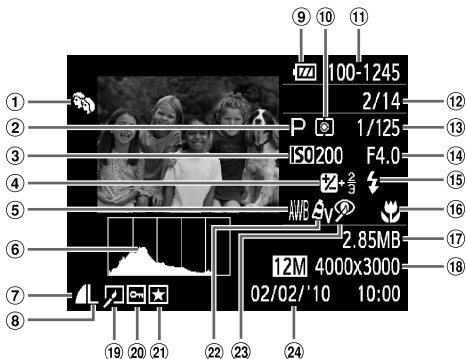

- |  |   |  |
|--|---|--|
| ① My Category (p. 104)<br><b>A3100IS</b>                       | ⑩ Metering Modes (p. 81)                        | ⑱ Still Images: Recording Pixels (p. 69)<br>Movies: Movie Length (p. 86) |
| ② Shooting Mode  | ⑪ Folder Number – File Number (p. 118)          | ⑲ Image Editing (pp. 106 – 108)  |
| ③ ISO Speed (p. 71)  | ⑫ Displayed image number/Total number of images | ⑳ Protect (p. 98)  |
| ④ Exposure Compensation (p. 66), Exposure Shift Amount (p. 87) | ⑬ Shutter Speed                                 | ㉑ Tagged as favorites (p. 103) <b>A3100IS</b>                            |
| ⑤ White Balance (p. 72)  | ⑭ Aperture Value, Image Quality (Movies)        | ㉒ My Colors (p. 73)  |
| ⑥ Histogram (p. 45)  | ⑮ Flash (p. 67)                                 | ㉓ Red-Eye Correction (p. 108)  |
| ⑦ Compression (Image Quality) (p. 69)                          | ⑯ Focusing Zone (pp. 67, 68)                    | ㉔ Shooting Date and Time (p. 61)   |
| ⑧ Recording Pixels (p. 68), AVI (Movies) (p. 86)               | ⑰ File Size (pp. 68, 86)                        |  |
| ⑨ Battery Charge Indicator (p. 15)                             |   |  |

# Functions Available in Each Shooting Mode

Function	Shooting modes		
	P	AUTO	☑
Exposure Compensation (p. 66)/Exposure Shift (p. 87)	○	—	—
Focusing Zone (pp. 67, 68)		○	—
		○	○
		○	—
Flash (pp. 58, 67, 83)		○	*1 *1
		○	—
		○	—
		○	○
Self-Timer (pp. 62, 74, 75)		○	○
		○	○
		○	○
AE Lock (p. 82)/FE Lock (p. 82)	○	—	—
AF Lock (p. 81)	○	—	—
Face Selection (p. 80)	○	○	—
Screen Display (p. 44)	Information View	○	○
	No Information	○	○
TV Display (p. 97)	○	○	○

## FUNC. Menu

ISO Speed (p. 71)		○	○	○
		○	—	—
		○	—	—
White Balance (p. 72)		○	○	○
		○	—	—
My Colors (p. 73)		○	—	—
Light Metering (p. 81)		○	○	○
		○	—	—
Drive Mode (p. 74)		○	—	—
Recording Pixels (p. 68)/Compression Ratio (Image Quality) (p. 69)/Image Quality (p. 86)		○	○	*3

\*1 Slow Synchro when the flash fires.

\*2 Possible settings: 0 – 30 seconds in [Delay], and 1 – 10 shots in [Shots].

\*3 Recording pixels fixed at , compression ratio (image quality) fixed at .

\*4 A recording pixel setting of will display, the image will be fixed at 1600 x 1200 pixels. The compression setting (image quality) is selectable.

					SCN									
○	○	○	○	○	○	○	○	—	○	○	○	○	—	○
—	—	—	—	—	—	—	—	—	—	—	—	—	○	○
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	—	—	—	—	—	—	—	○	○
○	*1	*1	○	○	○	○	○	○	○	○	○	—	—	—
○	*1	*1	○	○	○	—	○	○	○	○	○	—	*1	—
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
○	○	○	○	○	—	○	○	○	○	○	○	○	○	○
○	○	○	○	○	—	○	○	○	○	○	○	○	○	○
○	○	○	○	○	—	○	○	○	○	○	○	○	○	—
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
—	—	—	—	—	—	—	—	—	—	—	—	—	○	○
○	○	○	○	○	○	○	○	○	○	○	○	—	○	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
○	○	○	○	○	—	○	○	○	○	○	○	○	○	○
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

## FUNC. Menu

○	○	○	○	○	○	○	○	○	○	○	○	○	—	○
—	—	—	—	—	—	—	—	—	—	—	—	—	○	—
—	—	—	—	—	—	—	—	—	—	—	—	—	○	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	○	—	—	—	—	—	—	○	○
—	—	—	—	—	—	—	—	—	—	—	—	—	○	○
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
○	○	○	○	○	—	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	*4	○	○	○	○	○	○	○	○

○ Selectable, or set automatically. — Not selectable

## Shooting Menu

Function		Shooting modes	P	AUTO	
AF Frame (p. 78)	Face AiAF		○	○	○
	Center		○	—	—
AF Frame Size (p. 79)	Normal/Small		○	—	—
Digital Zoom (p. 59)	Standard/Off		○	○	*2
	Digital Tele-converter (1.5x/2.0x)	A3100IS	○	○	—
	Digital Tele-converter (1.4x/2.3x)	A3000IS	○	○	—
AF-Point Zoom (p. 79)	On/Off		○	○	—
AF-assist Beam (p. 121)	On/Off		○	○	*2
Flash Settings (pp. 83, 122)	Red-Eye Corr.	On/Off	○	○	*3
	Red-Eye Lamp	On/Off	○	○	*2
Review (p. 122)	Off/2 – 10 sec./Hold		○	○	*4
Review Info (p. 122)	Off/Detailed/Focus Check		○	○	*5
Disp. Overlay (p. 123)	Off/Grid Lines		○	○	*3
	3:2 Guide/Both		○	○	—
IS Mode (p. 123)	Continuous/Off		○	*2	*2
	Shoot Only/Panning		○	—	—
Date Stamp (p. 61)	Off/Date/Date & Time		○	○	*3

\*1 AiAF















 

\*2 Fixed to [On].

\*3 Fixed to [Off].

\*4 Fixed to 2 sec.

\*5 Fixed to [Off].



					SCN										
															
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	*1
○	○	○	○	○	—	—	○	○	○	○	○	○	○	○	—
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
○	○	○	○	○	○	*3	○	○	○	○	○	○	○	○	○
○	○	○	○	○	○	—	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	—	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	○	○	○	○	○	○	○	*3	○	○
○	○	○	○	○	○	○	○	○	○	○	○	○	—	○	—
○	○	○	○	○	○	○	○	○	○	○	○	○	—	○	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	*3	○	○	○	○	○	○	○	○	*3

○ Selectable, or set automatically. — Not selectable

## **Set up Menu**

Item	Options/Summary	Ref. Page
Mute	On/Off*	p. 48
Volume	Set all operation sounds (5 levels).	p. 48
Sound Options	Set the sounds for each camera operation. <b>A3100IS</b>	p. 116
Hints & Tips	On*/Off <b>A3100IS</b>	p. 116
LCD Brightness	Set within a range of $\pm 2$ .	p. 49
Start-up Image	Add an image as start-up image. <b>A3100IS</b>	p. 117
Start-up Image	On*/Off <b>A3000IS</b>	p. 118
Format	Formats memory card, erasing all data	pp. 22, 51
File Numbering	Continuous*/Auto Reset	p. 118
Create Folder	Monthly*/Daily	p. 119
Lens Retract	1 min.*/0 sec.	p. 119
Power Saving	Auto Power Down: On*/Off Display Off: 10, 20 or 30 sec./1*, 2 or 3 min.	pp. 45, 119
Time Zone	Home/World <b>A3100IS</b>	p. 120
Date/Time	Date and time settings	p. 19
Video System	NTSC/PAL	p. 97
Language	Choose display language.	p. 21
Reset All	Returns camera to default settings.	p. 50

\* Default setting

## ▶ Playback Menu

Item	Options/Summary	Ref. Page
Slideshow	Plays back images automatically.	p. 94
Erase	Erases images. <b>A3100IS</b>	p. 101
Erase All	Erases all images. <b>A3000IS</b>	p. 101
Protect	Protects images.	p. 98
Rotate	Rotates images.	p. 105
Favorites	Tags images as favorites. <b>A3100IS</b>	p. 103
My Category	Categorizes images. <b>A3100IS</b>	p. 104
Red-Eye Correction	Corrects red eyes in still images.	p. 108
Trimming	Trims portions of still images. <b>A3100IS</b>	p. 107
Resize	Resizes and saves still images.	p. 106
Scroll Display	On*/Off <b>A3100IS</b>	p. 92
Resume	Last seen*/Last shot	p. 124
Transition	Fade*/Slide/Off	p. 96

\* Default setting

## 🖨️ Print Menu

Item	Options/Summary	Ref. Page
Print	Displays printing screen.	p. 110
Select Images & Qty.	Chooses individual images for printing.	p. 113
Select Range	Chooses starting and ending images for printing. <b>A3100IS</b>	p. 113
Select All Images	Chooses all images for printing.	p. 114
Clear All Selections	Cancel all settings for printing.	p. 114
Print Settings	Sets the printing style.	p. 112

# Specifications

Camera Effective Pixels	<b>A3100IS</b> Approx. 12.1 million, <b>A3000IS</b> Approx. 10.0 million
Image Sensor	1/2.3 type CCD (Total number of pixels: <b>A3100IS</b> Approx. 12.4 million, <b>A3000IS</b> Approx. 10.6 million)
Lens	6.2 (W) – 24.8 (T) mm 35mm film equivalent: 35 (W) – 140 (T) mm f/2.7 (W) – f/5.6 (T)
Zoom Factor	Approx. 4.0x (Up to approx. 16x in combination with the optical zoom)
LCD Monitor	6.7cm (2.7 in.) TFT LCD color monitor Approx. 230,000 dots, Picture coverage approx. 100%
AF Frame Mode	Face AiAF/Center
Focusing Range (from end of lens)	Auto: 3 cm (1.2 in.) – infinity (W)/30 cm (12 in.) – infinity (T) Normal: 5 cm (2.0 in.) – infinity (W)/30 cm (12 in.) – infinity (T) Macro: 3 – 60 cm (1.2 in. – 2.0 ft.) (W) Infinity: 3.0 m (9.8 ft.) – infinity Kids&Pets: 1.0 m (3.3 ft.) – infinity
Shutter	Mechanical shutter and electronic shutter used together
Shutter Speed	1 – 1/1600 sec. 15 – 1/1600 sec. (Total shutter speed range)
Image Stabilization	Lens-shift type
Metering System	Evaluative, Center-weighted average or Spot
Exposure Compensation	±2 stops in 1/3-stop increments
ISO speed (Standard Output Sensitivity, Recommended Exposure Index)	Auto, ISO 80 <b>A3100IS</b> /100/200/400/800/1600
White Balance	Auto, Day Light, Cloudy, Tungsten, Fluorescent, Fluorescent H, Custom
Built-in Flash	Auto, On, Slow Synchro, Off * Red-eye reduction/Red-eye correction/FE lock settings available
Built-in Flash Range	30 cm – 4.0 m (12 in. – 13.1 ft.) (W)/30 cm – 2.0 m (12 in. – 6.6 ft.) (T)
Shooting Modes	P, Auto, Easy, Portrait, Landscape, Night Snapshot, Kids&Pets, Indoor, SCN, Movie SCN Mode: Face Self-Timer, Low Light, Super Vivid, Poster Effect, Beach, Foliage, Snow, Fireworks, Long Shutter
Continuous Shooting	<b>A3100IS</b> Normal: Approx. 0.8 images/sec. Low Light: Approx. 2.6 images/sec. <b>A3000IS</b> Normal: Approx. 0.8 images/sec. Low Light: Approx. 2.1 images/sec.
Self-timer	Approx. 10-sec./Approx. 2-sec. delay, Custom Timer
Recording Media	SD memory card, SDHC memory card, SDXC memory card, MultiMediaCard, MMCplus memory card, HC MMCplus memory card

File Format	Design rule for Camera File system and DPOF compliant (version 1.1)
Data Type	Still images: Exif 2.2 (JPEG) Movies: AVI (Image data: Motion JPEG, Audio data: WAVE (Monaural))
Number of Recording Pixels (Still images)	<b>A3100IS</b> Large: 4000 x 3000 pixels Medium 1: 3264 x 2448 pixels Medium 2: 2592 x 1944 pixels Medium 3: 1600 x 1200 pixels Small: 640 x 480 pixels Widescreen: 4000 x 2248 pixels <b>A3000IS</b> Large: 3648 x 2736 pixels Medium 1: 2816 x 2112 pixels Medium 2: 2272 x 1704 pixels Medium 3: 1600 x 1200 pixels Small: 640 x 480 pixels Widescreen: 3648 x 2048 pixels
(Movies)	640 x 480 pixels (30 frames/sec.)* 640 x 480 pixels (30 frames/sec. LP*) 320 x 240 pixels (30 frames/sec.)* * Actual frame rate is 29.97 frames/sec.
Compression (Still images)	Fine, Normal
Number of Possible Shots (CIPA compliant)	<b>A3100IS</b> Approx. 240 images, <b>A3000IS</b> Approx. 230 images
Playback Function	Single Image, Easy, Movie, Magnified Display, Index, Jump, Magnified, Slideshow
Editing Function	Erase, Protect, Rotate, Favorites <b>A3100IS</b> , My Category <b>A3100IS</b> , Red-Eye Correction, Trimming <b>A3100IS</b> , Resize
Direct Print Type	PictBridge compliant
Interface	Digital input/output: Hi-Speed USB (mini-B compatible)* Analog audio output: Monaural* Analog video output: NTSC/PAL selectable* * Dedicated connector (female) with unified type of digital, audio and video.
Communication Settings	MTP, PTP
Power	Battery Pack NB-8L (Rechargeable lithium-ion battery) AC Adapter Kit ACK-DC60 (sold separately)
Operating Temperatures	0 – 40 °C (32 – 104 °F)
Operating Humidity	10 – 90%
Dimensions (CIPA compliant)	97.2 x 58.2 x 28.1 mm (3.83 x 2.29 x 1.11 in.)
Weight (CIPA compliant)	Approx. 155 g (5.47 oz.) (Including the battery and memory card) Approx. 136 g (4.79 oz.) (Camera body only)

## ● Specifications

### **Battery Pack NB-8L**

Type	Rechargeable lithium-ion battery
Voltage	3.6 V DC
Capacity	740 mAh
Charging Cycles	Approx. 300 times
Operating Temperature	0 – 40 °C (32 – 104 °F)
Dimensions	35.4 x 40.4 x 5.9 mm (1.39 x 1.59 x 0.23 in.)
Weight	Approx. 17 g (0.6 oz.)

### **Battery Charger CB-2LA/2LAE**

Rated Input	100 – 240 V AC (50/60 Hz 12 VA), 0.10 A (100 V) – 0.07 A (240 V)
Rated Output	4.2 V DC, 0.65 A
Charge Time	Approx. 1 hour 30 min.
Operating Temperature	5 – 40 °C (41 – 104 °F)
Dimensions	81.0 x 25.0 x 56.0 mm (3.19 x 0.98 x 2.20 in.)
Weight	Approx. 63 g (2.22 oz.) (CB-2LA) Approx. 60 g (2.12 oz.) (CB-2LAE, excluding power cord)

- All data is based on tests by Canon.
- Camera specifications or appearance are subject to change without notice.

## Handling Precautions

- This camera is a high-precision electronic device. Do not drop it or subject it to strong impacts.
- Never place the camera close to magnets, motors or other devices that generate strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or corrupt image data.
- If water droplets have fallen onto, or dirt is stuck on the camera or screen, wipe with a dry soft cloth or eyeglass wiper. Do not rub or apply force.
- Never use cleaners containing organic solvents to wipe the camera or screen.
- Use a commercially available blower brush to remove dust from the lens. For stubborn dirt contact the closest Canon Customer Support Help Desk as listed in your Warranty System Booklet.
- When you move the camera rapidly from cold to hot temperatures, condensation may form on the internal or external surfaces of the camera. To avoid condensation, put the camera in an airtight, resealable plastic bag and let it adjust to temperature changes slowly before removing it from the bag.
- If condensation has formed, stop using the camera immediately. Continued use may damage the camera. Remove the battery and memory card, and wait until the moisture has completely evaporated before resuming use.

## Numerics

3:2 Guide ..... 123

## A

AC Adapter Kit ..... 39, 126  
 Accessories ..... 39  
 AE Lock ..... 82, 87  
 AF Frames ..... 25  
 AF → Focus  
 AF Lock ..... 81  
 AV Cable ..... 2, 97

## B

Battery  
 Battery Charger ..... 2, 39  
 Charge ..... 14  
 Charge Indicator ..... 15  
 Date/Time Battery ..... 20  
 Power Saving ..... 45, 119, 120  
 Beach (Scene Mode) ..... 56  
 Black and White Images ..... 73

## C

Camera Shake ..... 58, 123  
 Center ..... 78  
 Clock Function ..... 52  
 Components Guide ..... 42  
 Compression Ratio (Image Quality) ..... 69  
 Continuous Shooting ..... 74  
 Custom White Balance ..... 72

## D

Date and Time  
 Adding to Image ..... 61  
 Changing ..... 20  
 Date/Time Battery ..... 20  
 Settings ..... 19  
 Date/Time → Date and Time  
 Default Settings ..... 50  
 Deleting → Erasing  
 DIGITAL CAMERA Solution Disk ..... 2

Digital Tele-Converter ..... 60  
 Digital Zoom ..... 59  
 Display Language ..... 21  
 Display Overlay ..... 123  
 DPOF ..... 112

## E

Easy Mode ..... 29, 30  
 Editing  
 Red-Eye Correction ..... 108  
 Resizing  
 (Making Images Smaller) ..... 106  
 Trimming ..... 107  
 Equipment  
 Default Settings ..... 50  
 Holding the Camera ..... 13  
 Erasing All Images ..... 101  
 Erasing Images ..... 28, 101  
 Error Messages ..... 130  
 Exposure  
 AE Lock ..... 82, 87  
 Compensation ..... 66  
 FE Lock ..... 82  
 Shift ..... 87

## F

Face AiAF ..... 78  
 Face Selection ..... 80  
 Face Self-Timer (Scene Mode) ..... 63  
 Factory Settings → Default Settings  
 Favorites ..... 103  
 FE Lock ..... 82  
 File Numbering ..... 118  
 Fireworks (Scene Mode) ..... 56  
 Flash  
 Off ..... 58  
 On ..... 67  
 Slow Synchro ..... 83  
 Focus  
 AF Frame Mode ..... 78  
 AF Frames ..... 25



- AF Lock ..... 81
  - AF-Point Zoom ..... 79
  - Face Selection ..... 80
  - Focus Check ..... 95
  - Focus Lock ..... 76
  - Foliage (Scene Mode) ..... 56
  - Format → Memory Cards, Formatting
  - Formatting (Memory Card) ..... 22, 51
  - FUNC. Menu
    - Basic Operations ..... 46
    - List ..... 134
- G**
- Grid Lines ..... 123
- H**
- Histogram ..... 45
  - Household Power ..... 126
- I**
- Image Quality → Compression Ratio
  - Images
    - Display Time ..... 122
    - Erasing Images ..... 28, 101
    - Playback → Viewing
    - Protect ..... 98
  - Indicator ..... 43
  - Indoor (Scene Mode) ..... 55
  - Infinity ..... 68
  - Interface Cable ..... 2
  - ISO Speed ..... 71
- K**
- Kids&Pets (Scene Mode) ..... 54
- L**
- Lamp ..... 42, 62, 121, 122
  - Landscape (Scene Mode) ..... 54
  - LCD Monitor → Screen
  - Long Shutter (Scene Mode) ..... 84
  - Low Light (Scene Mode) ..... 56
- M**
- Macro ..... 67
  - Magnified Display ..... 96
  - Memory Cards ..... 16
    - Available Shots ..... 18, 69, 70
    - Formatting ..... 22, 51
  - Menu
    - Basic Operations ..... 47
    - List ..... 136
  - Metering Mode ..... 81
  - Mode Dial ..... 42
  - Movies
    - Editing ..... 89
    - Image Quality (Frame Rate) ..... 86
    - Recording Pixels ..... 86
    - Shooting Time ..... 32, 86
    - Viewing (Playback) ..... 33, 88
  - MultiMediaCard/MMCplus/HC MMCplus
  - Memory Card → Memory Cards
  - My Category ..... 104
  - My Colors ..... 73
- N**
- Night Snapshot (Scene Mode) ..... 54
  - Number of Shots ..... 15, 69, 70
- O**
- ON/OFF Button ..... 42
- P**
- Package Contents ..... 2
  - Personal Printing Guide ..... 2
  - PictBridge ..... 110
  - Playback Button ..... 27, 43
  - Playback → Viewing
  - Playback With Transition Effects ..... 96
  - Portrait (Scene Mode) ..... 54
  - Postcard Size ..... 70
  - Poster Effect (Scene Mode) ..... 57
  - Power Saving ..... 45, 119, 120
  - Print Settings (DPOF) ..... 112

## Index

Printers .....	40, 110
Printing .....	110
Program AE .....	66
Protect .....	98

## R

Recording Pixels (Image Size) .....	68
Red-Eye	
Auto Correction .....	83
Correction .....	108
Reduction .....	122
Resizing (Making Images Smaller) .....	106
Rotating Images .....	105

## S

SCN (Scene Mode) .....	55
Screen	
Display Language .....	21
Information Display .....	132, 133
Menu Operations .....	46, 47
Switching the Display .....	44
Scroll Display .....	92
SD/SDHC/SDXC Memory Cards → Memory Cards	
Self-Timer	
10 second Self-Timer .....	62
Changing Delay and Number of Shots .....	75
Face Self-Timer .....	63
Two Second Self-Timer .....	74
Sepia Tones .....	73
Shooting Date and Time → Date and Time	
Shooting Using a TV .....	76
Shutter Button .....	23
Slideshow .....	94
Snow (Scene Mode) .....	56
Software	
DIGITAL CAMERA Solution Disk .....	2
Software Guide .....	2
Transferring Images to a Computer .....	34

Sound Settings .....	48
Strap .....	2, 13
Super Vivid (Scene Mode) .....	57

## T

Terminal .....	36, 97, 110, 126
Time Zone .....	120
Tone (White Balance) .....	72
Travel Abroad .....	15, 120
Trimming .....	107
Troubleshooting .....	127

## V

Video → Movies	
Viewing (Playback)	
Images on a TV .....	97
Index Display .....	92
Magnified Display .....	96
Single Image Playback .....	27
Slideshow .....	94
Viewing Images on a TV .....	97

## W

White Balance .....	72
Widescreen	
(Recording Pixels) .....	68, 69, 70
World Clock .....	120
Wrist Strap → Strap	

## Z

Zoom .....	24, 31, 59
------------	------------

## **Disclaimer**

- Reprinting, transmitting, or storing in a retrieval system any part of this guide without the permission of Canon is prohibited.
- Canon reserves the right to change the contents of this guide at any time without prior notice.
- Illustrations and screenshots in this guide may differ slightly from the actual equipment.
- Every effort has been made to ensure that the information contained in this guide is accurate and complete. However, if you notice any errors or omissions, please contact the Canon customer service center indicated on the customer support list included with the product.
- The above items notwithstanding, Canon accepts no liability for damages due to mistaken operation of the products.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>