


# PowerShot A75 SYSTEM MAP

DIGITAL CAMERA

Canon

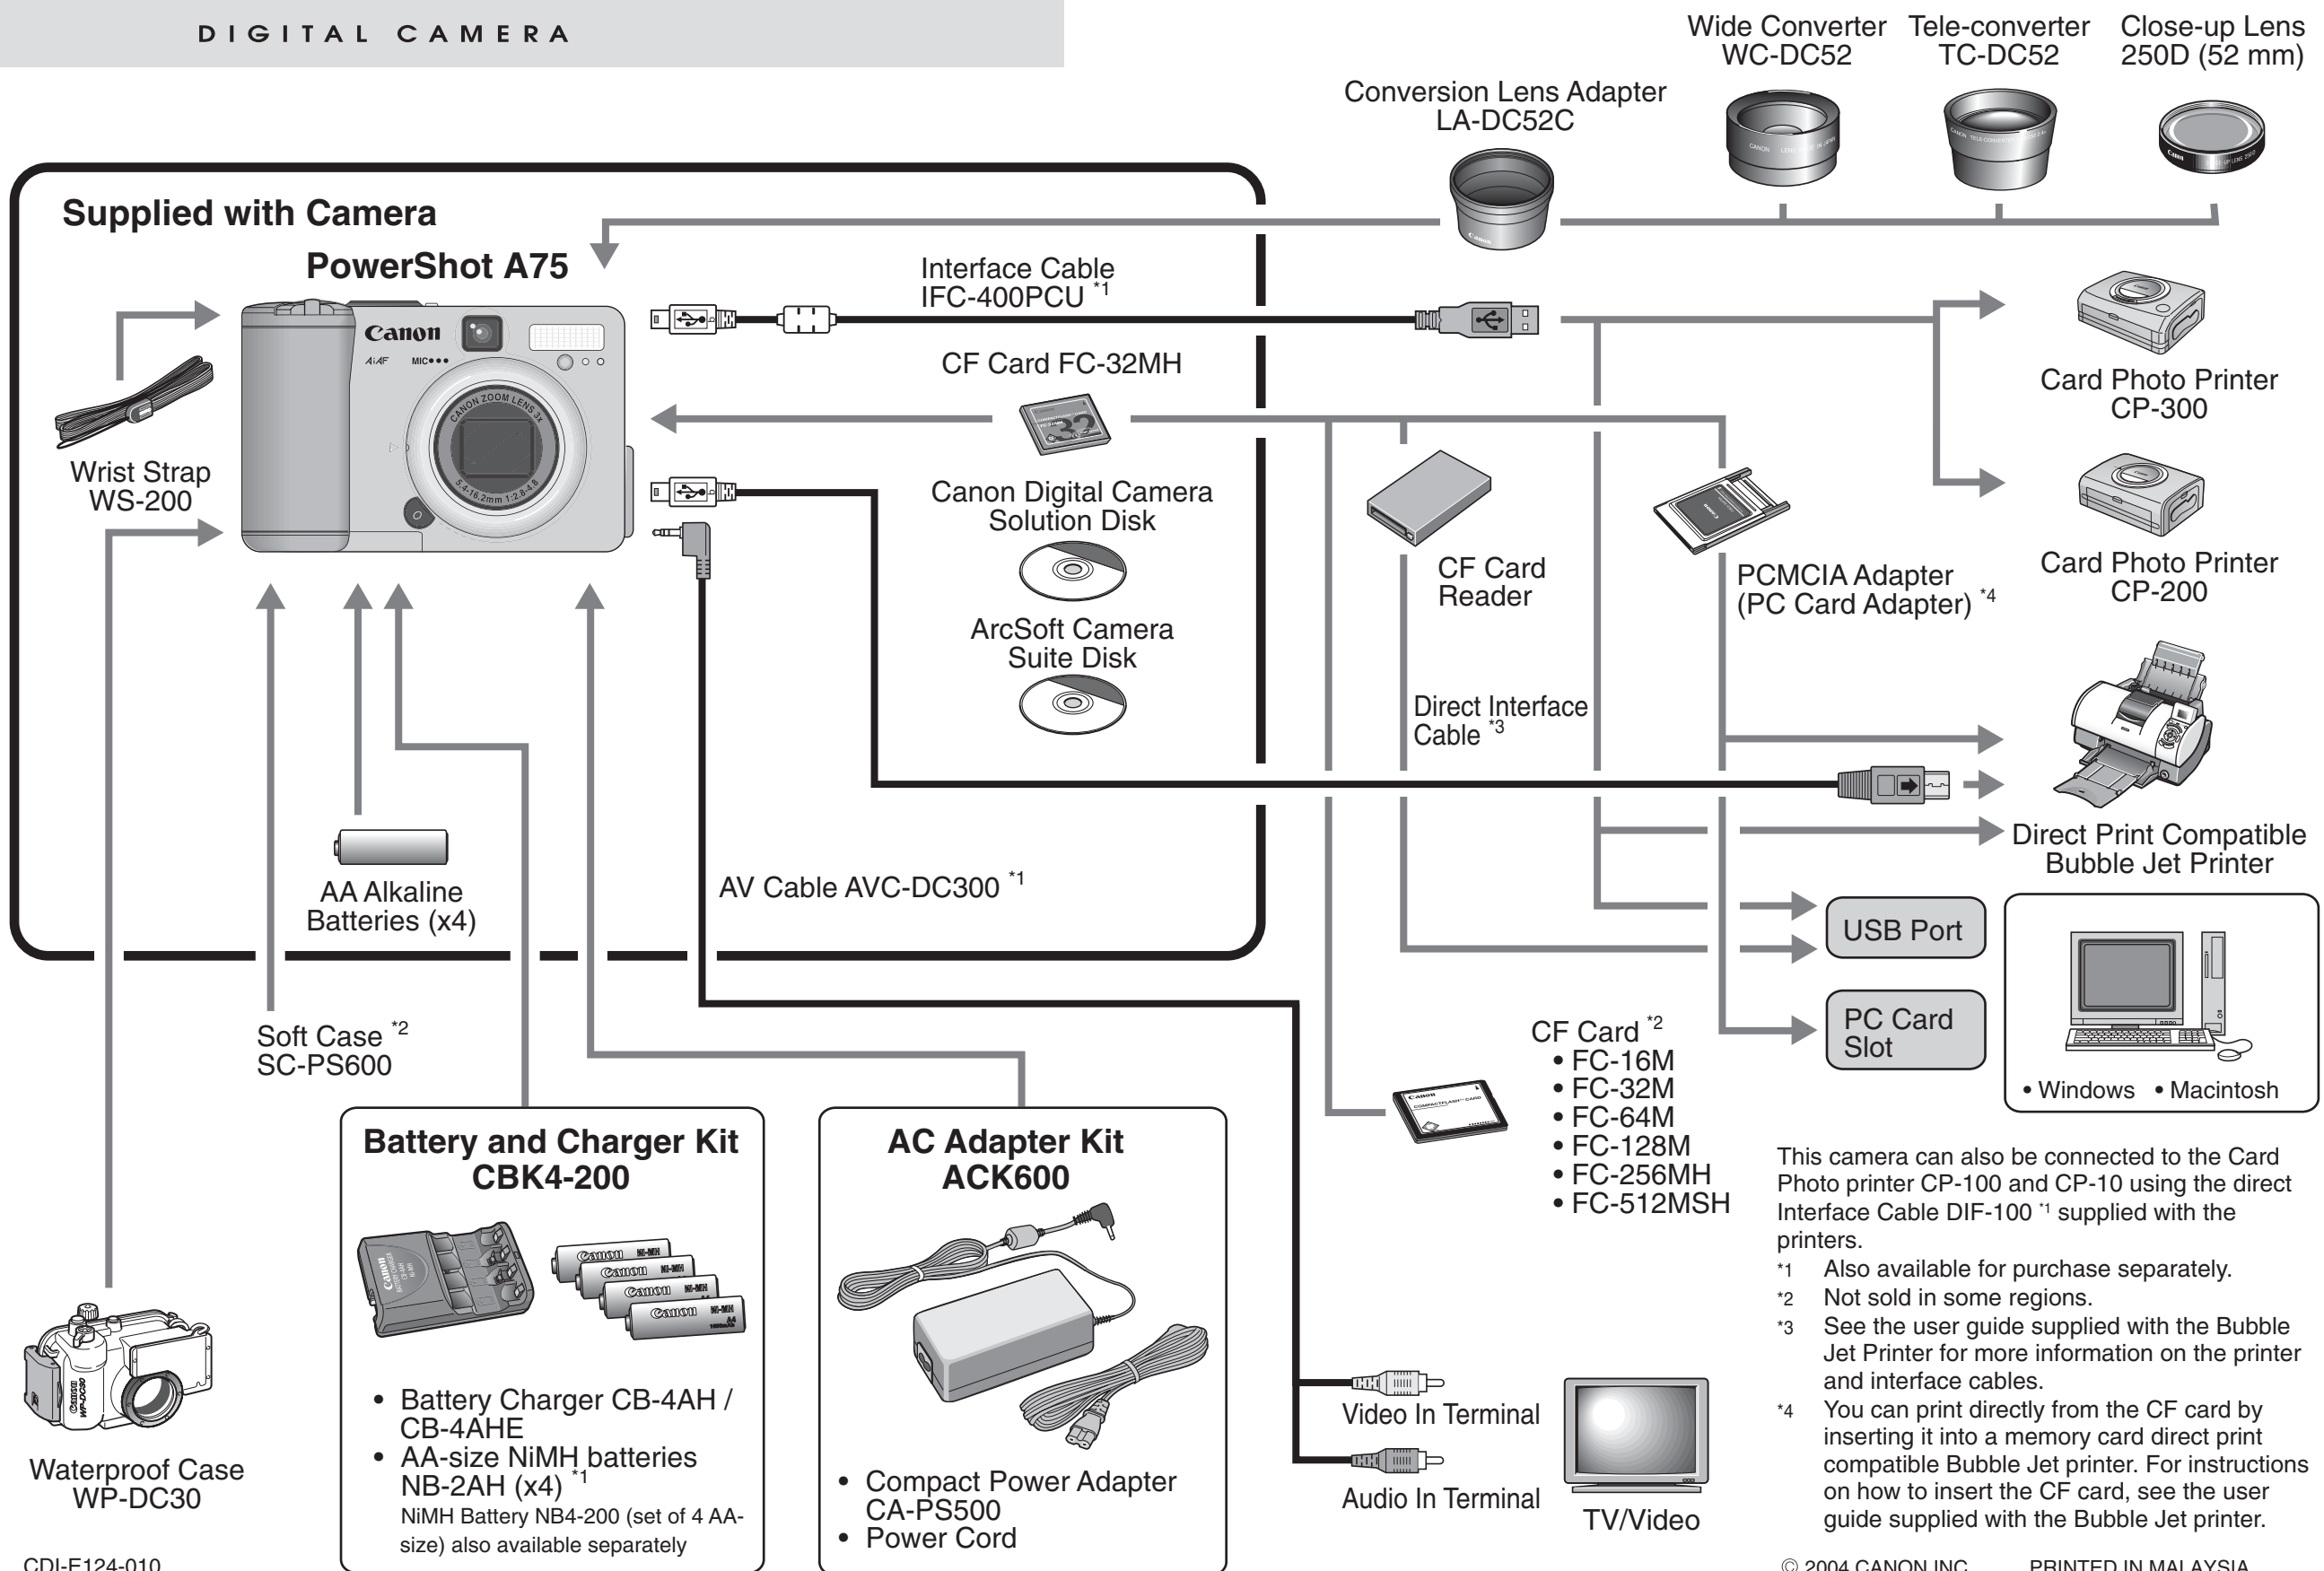

## Confirming the Package Contents

The camera package should contain the following items. Contact your camera retailer if any are missing.

- Digital Camera
- Wrist Strap WS-200
- AA Alkaline Batteries (×4)
- CompactFlash™ Card FC-32MH
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- “For Windows® XP and Mac OS X Users” Leaflet
- System Map (this sheet)
- “Canon Customer Support” Leaflet
- Warranty Card

## Optional Accessories

The following camera accessories are sold separately. *Some accessories are not sold in some regions.*

### Lenses and Lens Adapter

- **Conversion Lens Adapter LA-DC52C**  
This adapter is required for mounting the wide converter, tele-converter and close-up lens to the camera.
- **Wide Converter WC-DC52**  
Converts the focal distance of the body lens by a factor of approximately 0.7 (35mm film equivalent at maximum wide angle: approximately 24.5 mm) when attached.
- **Tele-converter TC-DC52**  
Converts the focal distance of the body lens by a factor of approximately 2.4 (35mm film equivalent at maximum telephoto: approximately 252 mm) when attached.
- **Close-up Lens 250D (52 mm)**  
A lens for shooting at higher magnifications when the camera’s macro mode is used.

### Power Supplies

- **AC Adapter Kit ACK600**  
This kit lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.

### Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

**Windows:** Systems running preinstalled Windows 98 (including Second Edition), Windows Millennium (Windows Me), Windows 2000, Windows XP

**Macintosh:** Mac OS 9.0 – 9.2, Mac OS X (v10.1/v10.2)\*

\* Only systems equipped with genuine Apple-brand built-in USB interfaces.

- **Interface Cable IFC-400PCU**  
Use this cable to connect the camera to a computer, Card Photo Printer CP-300 or CP-200, or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
- **PCMCIA Adapter (PC Card Adapter)**  
Allows you to load a CF card into the computer’s PC card slot.

### Other Accessories

- **CF Cards**  
CompactFlash™ (CF) cards are used to store images recorded by the camera.  
Canon CF cards are available in 16 MB, 32 MB, 64 MB, 128 MB, 256 MB and 512 MB capacities.
- **AV Cable AVC-DC300**  
Use this cable to connect the camera to a TV set.
- **Waterproof Case WP-DC30**  
A waterproof case for the PowerShot A75. You can use this case to take underwater shots at depths of up to 40 meters (130 feet). And of course it’s also ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.
- **Soft Case SC-PS600**  
Protects the camera from dust and scratches.

## Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily by connecting them to the camera with a single cable and operating the camera’s controls. *Some accessories are not sold in some regions.*

### Card Photo Printers (CP Series)

- **Card Photo Printer CP-300/CP-200/CP-100**  
These super-compact, light-weight printers print high-quality postcard size, L-size and card size images. The Canon rechargeable battery\* makes these printers portable, even allowing you to print your images outdoors. The rechargeable battery is included with the CP-300.  
\* CP-300/CP-100 only
- **Color Ink/Paper Set KP-36IP, KL-36IP and KC-36IP**
- **Color Ink/Label Set KC-18IL**
- **Color Ink/Full-Sized Label Set KC-18IF**  
Color ink and paper sets.
- **Paper Cassette PCL-CP100**  
L-size paper cassettes.
- **Paper Cassette PCC-CP100**  
Credit card-size paper cassette (required to print with the CP-200).
- **Computer Connection Kit CCK-CP200**  
Connects your computer to the CP-100 or the CP-10, allowing you to print images directly from your computer. With the CP-300 and CP-200 printers, you can use the software included with the printers to print images from your computer.

- **Battery and Charge Adapter Kit BCA-CP100**  
This rechargeable lithium-ion battery and charger for the CP-300/CP-100 let you print images on the move.
- **Car Battery Adapter CBA-CP100**  
Allows you to print images on the go, using a car cigarette lighter as a power source.
- **Card Photo Printer CP-10**  
Prints high-quality, credit card-size images.

### Bubble Jet Printers

For more information, visit your nearest Canon retailer.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>