User's Guide 5590

ENGLISH

E-1

E-3

CASIO

Congratulations upon your selection of this CASIO watch.

Important!

This manual provides a brief overview of your watch.

For a full Operation Guide and Q&A information about this product, go to the website below.

https://world.casio.com/manual/wat/




Contents

Configuring Home City, Time and Date Settings	E-4
Mode Selection and Operations	E-7
Misaligned Hands	.E-11
Specifications	.E-12

E-2

Configuring Home City, Time and Date Settings

- Configure Home City and summer time settings first. After that, configure time and date settings.
- In the Timekeeping Mode, hold down (A) until the flashing SET indicator disappears from the display and the currently selected city code appears on the display.
- 2. Press (C) to move the flashing in the sequence shown below to select a setting.

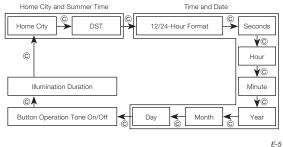

E-4

3. Use D and B to change the selected setting.

Screen	To do this:	Do this:		
TYO	Change the city code	Use (D) (East) and (B) (West).		
OFF	Toggle between Daylight Saving Time (ON) and Standard Time (OFF)	Use (D) and (B).		
12H	Toggle between 12-hour (12H) and 24-hour (24H) timekeeping	Use (D) and (B).		
36	Reset the seconds to 00	Press D.		
P 10:138	Change the hour or minute	Use (D) (+) and (B) (-) to change these settings. • Holding down either button		
20 19	Change the year			
6.30	Change the month or day	scrolls at high speed.		

E-6

Timekeeping Mode



 
(D): Changes display contents. Day of the Week → Month, day → Hour, minute
 Holding down (B) for at least three seconds swaps Home City and World Time city information

information.

F-8


Mode Selection and Operations

Press © to change the mode.
To return to the Timekeeping Mode from any other mode, hold down © for at least two seconds.



E-7



 

• Hold down (A) until the hour flashes, then (©: Selects hours, minutes, or seconds.
 (®), (0): Change selected setting.
 (A): Exits setting mode.

NYC:NEW YORK Scrolls the selected city. B 9:08 _ (36)) // D

Scrolls the selected city.

Holding down (A) for at least two seconds toggles summer time (DST) on and off.

Û

A

C


World Time Mode

© = Stop © = Start ® Reset

Stopwatch Mode

User's Guide 5590

CASIO

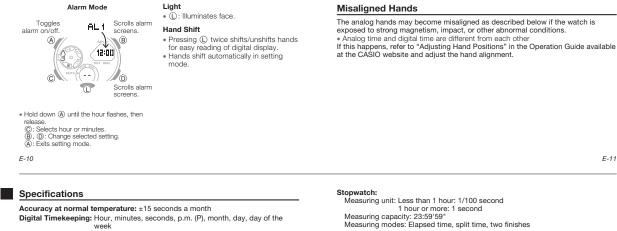

Digital Timekeeping: Hour, minutes, seconds, p.m. (P), month, day, day of the week Time format: 12-hour and 24-hour Calendar system: Full Auto-calendar pre-programmed from the year 2000 to 2099 Other: Home City code (can be assigned one of 48 city codes); Standard Time/Daylight Saving Time (summer time)

Analog Timekeeping: Hour, minutes (hand moves every 20 seconds)

World Time: 48 cities (31 time zones) and Coordinated Universal Time (UTC) Other: Daylight Saving Time/Standard Time; Home City/World Time City switching

E-12

Frequent use of illumination runs down the battery

Specifications are subject to change without notice.

Countdown Timer: Measuring unit: 1 second Countdown range: 24 hours Countdown start time setting range: 1 second to 24 hours (1-second increments)


Alarms: 5 Daily alarms; Hourly time signal

Illumination: Double LED (light-emitting diode); Selectable illumination duration (approximately 1.5 seconds or 3 seconds)

Other: Button operation tone on/off; Moving the Hands to View the Digital Display

E-13

E-11

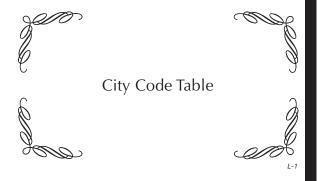

E-14

City Code Table

City Code	City	UTC Offset/ GMT Differential	City		City	UTC Offset/ GMT Differential
PPG	Pago Pago	-11	FEN		Fernando de	-2
HNL	Honolulu	-10			FEIN	•
ANC	Anchorage	-9	RA		Praia	-1
YVR	Vancouver	0	UTC			
LAX	Los Angeles	-8	LIS		Lisbon] 0
YEA	Edmonton	-	LON	1	London]
DEN	Denver	-7	MAI	5	Madrid	
MEX	Mexico City	0	PAF	{	Paris]
CHI	Chicago	-6	ROM	Λ	Rome	+1
NYC	New York	-5	BEF	{	Berlin]
YHZ	Halifax	-4	STO		Stockholm	1
YYT	St. John's	-3.5	ATH	ł	Athens	
BUE	Buenos Aires		CA		Cairo	+2
RIO	Rio De Janeiro	-3	JRS	3	Jerusalem	1
L-2						

City Code	City	UTC Offset/ GMT Differential
MOW	Moscow	+3
JED	Jeddah	+3
THR	Tehran	+3.5
DXB	Dubai	+4
KBL	Kabul	+4.5
KHI	Karachi	+5
DEL	Delhi	+5.5
KTM	Kathmandu	+5.75
DAC	Dhaka	+6
RGN	Yangon	+6.5
BKK	Bangkok	+7
SIN	Singapore	
HKG	Hong Kong	+8
BJS	Beijing	+0
TPE	Taipei]

City Code	City	UTC Offset/ GMT Differential		
SEL	Seoul	+9		
TYO	Tokyo	+9		
ADL	Adelaide	+9.5		
GUM	Guam	+10		
SYD	Sydney	+10		
NOU	Noumea	+11		
WLG	Wellington	+12		
 This table shows the city codes of this 				

watch (As of July 2018).

"The rules governing global times (GMT differential and UTC offset) and summer time are determined by each individual country.

Alarm Mode

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com