

9 & 11 ROLLER HOT DOG COOKER/GRILLERS With Bun Warmer

by Great Northern



OPERATING MANUAL

Copyright © 2017 DTX International, All Rights Reserved

Commercial Quality Hot Dog Griller With Bun Warmer

- ⚡ Stainless Steel Rollers
- ⚡ Easy Setup & Installation
- ⚡ Heating Indicator
- ⚡ Standard Household 110V
- ⚡ CE Approved for Household or Commercial Use
- ⚡ Stainless/Plastic Cover on Most Models
- ⚡ 0-250° Heat Settings
- ⚡ EZ Clean Stainless Steel Drip Tray
- ⚡ 360° Rotating Rollers
- ⚡ Secure Rubber Feet Keep Machine in Place
- ⚡ Separate Front/Back Roller Temperature Zone Controls
- ⚡ Dependable Tough Duty Motor
- ⚡ Quick Heating Allows Faster Service & Energy Efficiency

CUSTOMER SERVICE

Customer service and product support are available on line at www.greatnorthernpopcorn.com.

WARRANTY AND RETURN POLICY

All Great Northern Popcorn Company hot dog rollers are warrantied against defects in material and workmanship for a period of one year for residential and personal use under normal conditions. Warranty is limited to replacement parts.

Our return policy allows 30 days from the date of delivery to return products, provided it is new, unused and in the original packaging as received. We highly recommend that the buyer thoroughly inspect the purchased product before using it. We charge a 20% restocking charge on all returned items. Return shipping is the responsibility of the buyer. We cannot accept returns for any reason after 30 days from the date of delivery. A credit will be issued after the item is inspected and accepted.

All shipping damages must be claimed with the designated shipper. Check the shipping carton for damage before signing the bill of lading.

If an item is opened and deemed to be defective within 30 days from the date of delivery, please contact us at www.greatnorthernpopcorn.com for return instructions. A Great Northern Popcorn Company RMA is required when returning defective merchandise. When returning your order please include a copy of your order number with date purchased, your Great Northern Popcorn Company RMA and the reason for the return.

Warranty shall not apply to: products which are used for a purpose other than which they were designed for or which have been altered in any way that would be detrimental to the performance or life of the product. Misapplication, misuse or negligence will revoke the warranty.

GENERAL SAFETY PRECAUTIONS



1. You will need this manual for the safety warnings and precautions, operating, inspection, maintenance and cleaning procedures. Keep your invoice with this manual. Write the invoice number on the inside of the front cover. **Keep this manual and invoice in a safe and dry place for future reference.**



2. The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.



3. **NEVER** use this product for anything other than its intended use. **NEVER** modify this product. Failure to comply with the precautions, warnings and recommendations in this manual will nullify your warranty and may result in injury or even death.



4. **ALWAYS** ensure that this hot dog roller is plugged into a grounded outlet with the proper power supply available.



5. **DO NOT** unplug the machine by pulling or tugging on the power cord. Firmly grasp the plug and remove from outlet.



6. **MAKE SURE** that the power outlet, plug and power cords used are in good condition. Worn, frayed or damaged plugs, cords and outlets should be replaced or repaired by a certified electrician who is properly qualified to meet local safety and electrical codes. Power supply cords should be replaced by the manufacturer. **AVOID using extension cords or 3-prong adaptors.**



7. To reduce the risk of electrical shock or fire, **MAKE SURE** that your unit is properly grounded. **NEVER TAMPER WITH, REMOVE OR CUT THE GROUNDING PIN!!** The wall outlet used with this roller **MUST** be properly grounded. If you do not have a grounded outlet, have one installed by a certified electrician who is properly qualified to meet local safety and electrical codes.



8. Make sure your machine is unplugged when you conduct any maintenance or repair. A qualified service technician should always perform service or repair.



9. This product is certified for household or commercial use.



10. **Do not cover the power cord. DO NOT** immerse cord in water or use in high traffic areas. **DO NOT** run cord over carpets or heating sources or elements. **NEVER** use with damaged cords or plugs.



11. **INTENDED FOR UPRIGHT, FREESTANDING USE ONLY.** Do not install in cabinet or enclosed spaces.



12. **DO NOT operate with missing or broken parts.**



13. This product is intended for **INDOOR USE ONLY. DO NOT USE OUTDOORS.**



14. **Only qualified repair personnel should perform grill service.** Service or maintenance performed by unqualified personnel could result in injury.



15. **Do not operate this roller in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.**



16. **DO NOT** tamper with or modify the controls.



17. **KEEP UPRIGHT** when transporting. **DO NOT UPEND OR TURN UPSIDE DOWN.**

SPECIFICATIONS

Rollers	Temp	Power	Voltage	Dimensions
Nine (9) Roller	0-250°F	1700w	110V	24" x 18.75" x 12.5"
Eleven (11) Roller	0-250°F	2000w	110V	24" x 21.5" x 12.5"

STORAGE & TRANSPORTATION

NEVER STORE UPSIDE DOWN.

When storing any hot dog roller, first be sure to **DISCONNECT FROM POWER SUPPLY.**

Store away from moisture and flammable materials, fumes and chemicals.

Cover when stored for long periods to prevent dust buildup.

When transporting the roller/grill, **AVOID EXCESSIVE VIBRATION.**

KEEP UPRIGHT when transporting. **DO NOT UPEND OR TURN UPSIDE DOWN.**

OPERATION & MAINTENANCE

HOW TO USE YOUR HOT DOG COOKER/GRILLER

IMPORTANT!

Before using your hot dog cooker for the first time, apply a vegetable oil such as sunflower oil or canola oil to the ends of your rollers. This will help to keep them turning smoothly and easily.

Avoid using non-stick sprays because these can contain lecithin, which will cause an eventual buildup on your rollers.

To use your machine:

1. Turn the **Power** switch to **ON**.
2. Use the temperature control dials to the desired settings. To cook product more rapidly, turn the temperature dials to their highest settings, or in a clockwise direction. To cook more slowly, or to hold already cooked product on a warm setting, adjust the temperature dial down, or in a counter-clockwise direction.

Note: Your cooker's separate temperature dials control the heat settings for different sets of rollers. The **Front** dial controls all rollers (number of rollers will vary with model), while the **Back** dial controls the last 3 rollers of your cooker. This allows you to cook some hot dogs more quickly, while holding more cooked product at a lower warming temperature.

In addition, the green heating indicator lights marked "Heating" will be lit when the rollers are actively being heated; when they have reached the temperature set by the temperature dials, the light will go out. Increasing the temperature setting for a group of rollers will cause the indicator light to go on and when the new temperature is reached the light will extinguish to let you know that the new setting is reached.

CAUTION! Rollers will be hot. Use care when cleaning, adding product or serving product!

3. To shut down the machine, flip the **Power** switch to **OFF**.
- 4) Your hot dog roller includes a **BUN WARMING** drawer. The third dial on your machine controls the temperature of the bun warmer. It is recommended that you keep the warming drawer turned off unless in use.



CLEANING AND MAINTENANCE

IMPORTANT!

Do not immerse any part of this machine in water. Turn the machine **OFF** prior to cleaning or maintenance and allow to cool before touching rollers. **CAUTION! Rollers will be hot.**

 
Follow the cleaning and maintenance guidelines to ensure a long life for your machine.

To clean your machine:

1. Turn the **Power** switch to **OFF**.
2. Use a soft cloth or towel to wipe the surfaces of the rollers. **DO NOT USE METAL TO CLEAN YOUR ROLLERS!** This may result in damage to the machine. In most cases the natural oils exuded from sausages or hot dogs will keep the machine well lubricated. You should simply need to wipe the rollers and outside surfaces of your machine with a cloth to remove excess oils or dust. Should you need to remove any caked on material such as cheese or condiments, use a wooden utensil and then clean with a soft cloth.

HOT DOG ROLLER WIRING DIAGRAM

THIS DIAGRAM IS FOR REFERENCE ONLY! ATTEMPTING REPAIR BY UNQUALIFIED PERSONS MAY RESULT IN SERIOUS INJURY OR EVEN DEATH. NEVER ATTEMPT TO REPAIR OR SERVICE A MACHINE ON YOUR OWN. REPAIRS SHOULD ONLY BE CONDUCTED BY A QUALIFIED SERVICE PERSON OR ELECTRICIAN. DO NOT MODIFY ANY PART OF THIS MACHINE. ALWAYS UNPLUG BEFORE MAINTENANCE OR CLEANING.

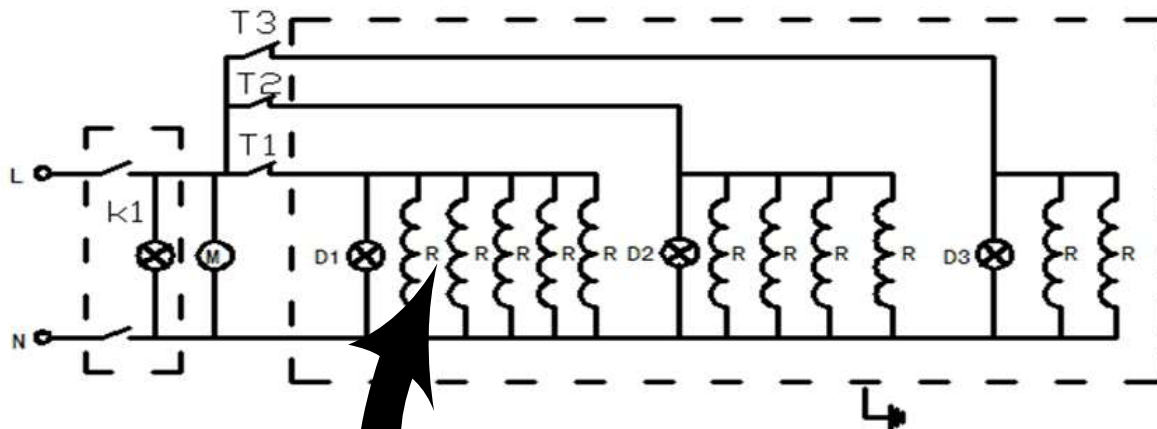


NOTE: This diagram shows an 11 roller unit with 10 heating units. A 9 roller unit is wired the same, but with 8 heating units

- | | |
|-------------------------------|-------------------------------------|
| 1) K1 Power Switch | 2) R Heating Unit |
| 3) M Motor | 4) T1 & T2 Temp. Control Switches |
| 4) T3 Thermostatic Switch | 6) D1 & D1 Heating Indicator Lights |
| 7) D3 Warming Indicator Light | |

Customer Service information: sales@greatnorthernpopcorn.com

 Hot Dog Roller Cover Assembly

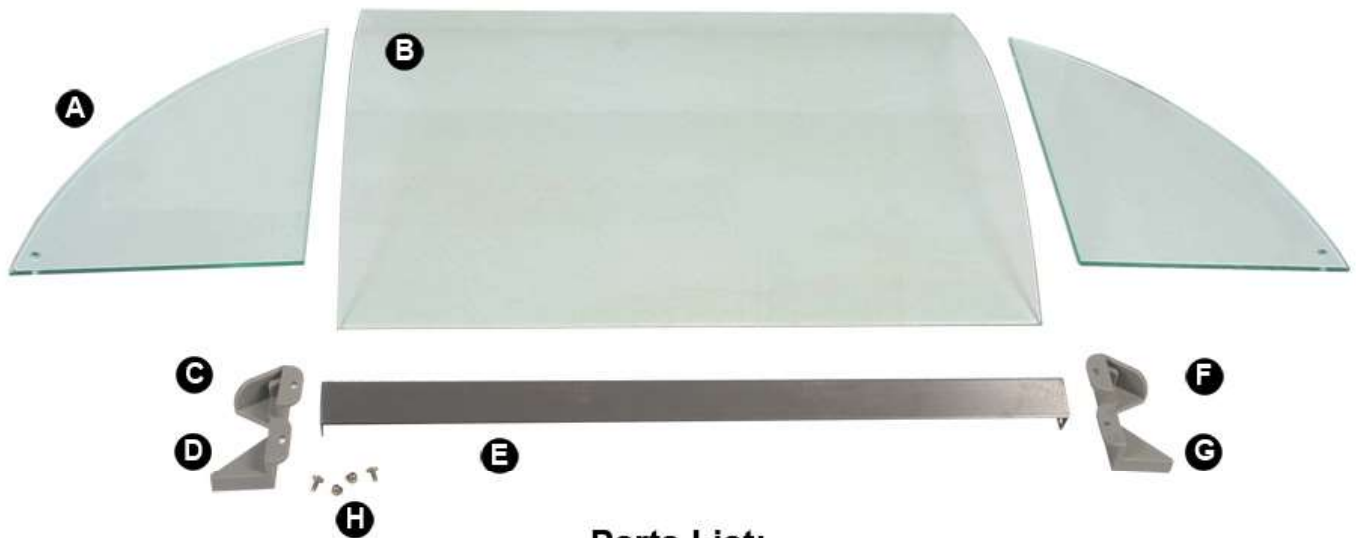

Parts List:

- | | |
|--------------------------------|---|
| A) Glass Side Panel (Qty 2) | E) Front Stainless Trim Rail |
| B) Curved Glass Top | F) Right Side Rear Glass Mount |
| C) Left Side Rear Glass Mount | G) Right Side Front Glass Mount |
| D) Left Side Front Glass Mount | H) 2 Small Phillips Head Bolts & 2 Nuts |

Please review the parts list above and ensure that you have all the parts necessary to complete assembly.

Should you have any difficulty assembling your cover or mating it to your Great Northern Popcorn Company Hot Dog Roller, please call our customer service line at (800) 665-0728, or email us at sales@greatnorthernpopcorn.com.

Hot Dog Roller Cover Assembly (Cont.)

1) Remove the four screws, two on each side, from the top inner area of the hot dog roller. See figure 1.

Remove 2 Screws
From Hot Dog Roller



Figure 1



2) Place the back side glass mount (C) onto the machine and reinsert the screw. Do not tighten down the screw at this time because we may need to move it forward or back in a later step. See figure 2.

Figure 2

3) Repeat step two for the other side rear glass mount (F) and the two front glass mounts (D&G). Remember not to tighten down the screws just yet. See figure 3.

Both side glass mounts installed


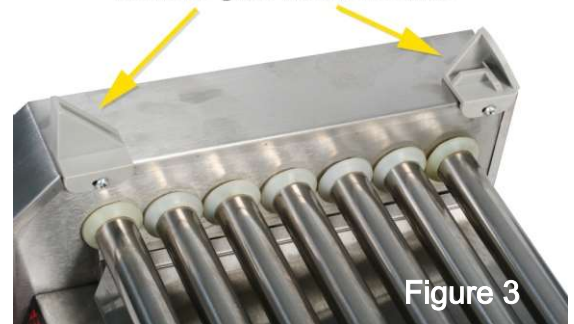 



Figure 3

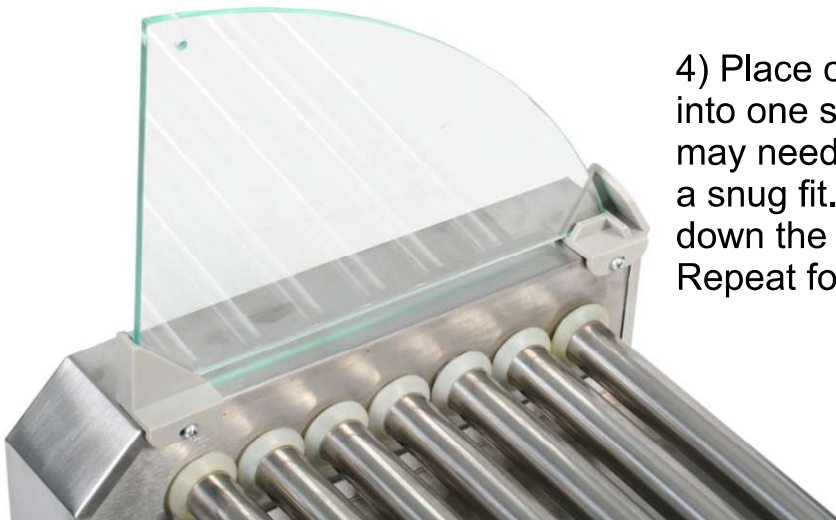 

4) Place one of the glass side panels (A) into one set of glass mounts. The mounts may need to be moved forward or back to get a snug fit. Once the fit is snug you may tighten down the screws to hold the glass securely. Repeat for the other side. See figure 4


Figure 4

 Hot Dog Roller Cover Assembly (Cont.)

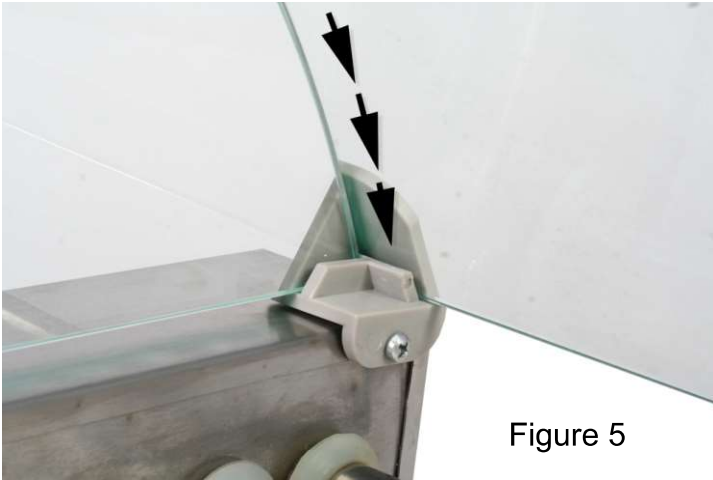

5) Slide the curved top glass (B) into the rear side glass mounts and push all the way down. **See figure 5.**

 Ensure the edge of the curved top glass and the edge of the side glass are flush. **See figure 6.**

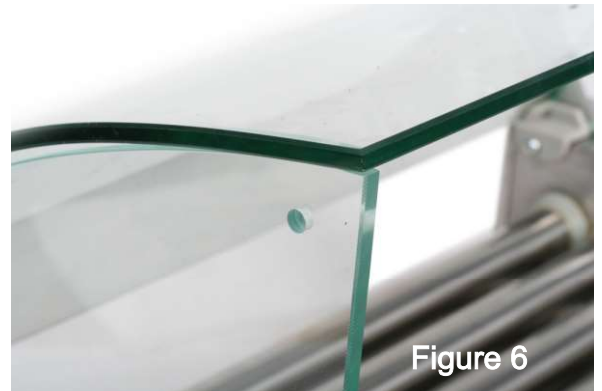


If the glass seems too snug you may need to loosen one of the screws holding the rear side glass mounts. Once the top glass is in place, tighten the screw back down again.



6) Set the front stainless trim rail (E) onto the edge of the top glass. Ensure that the holes in the ends of the trim rail line up with the holes in the top corners of the side glass (A). **See figure 7.**

7) Finally, secure the front stainless trim rail to the side glass with the nuts and bolts (H). **See figure 8.**

 NOTE: Be sure to NOT over tighten the nuts and bolts, as this might crack the glass.

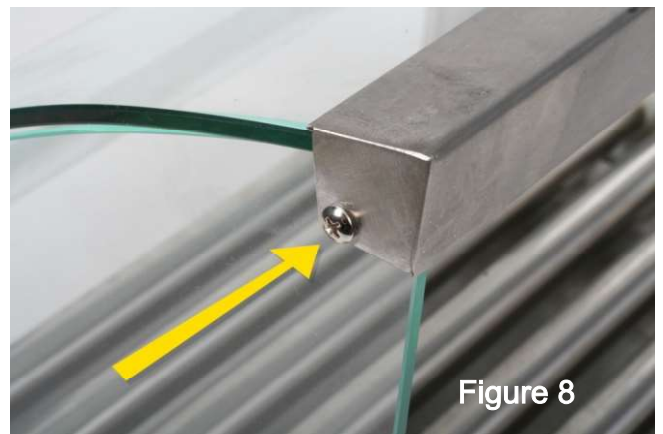

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>