 


INSTRUCTION MANUAL

36" OSCILLATING TOWER FAN


MODEL: FZ10-9LR

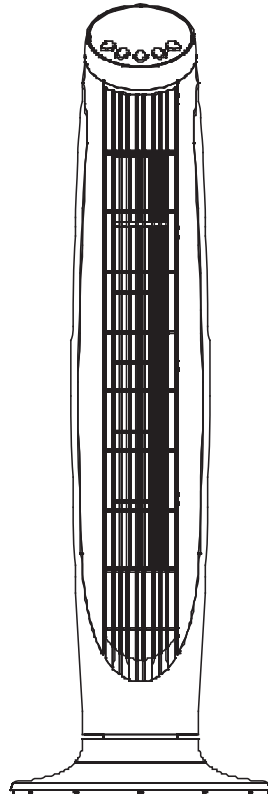

READ AND SAVE THESE INSTRUCTIONS

PACKAGE CONTENTS

 Fig. 1

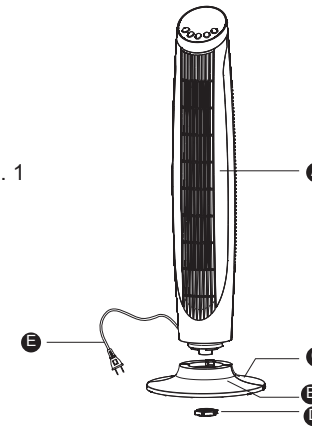

Part	Description	Quantity
A	Body	1
B	Front base	1
C	Rear base	1
D	Base clip	1
E	Power cord	1

SAFETY INFORMATION

WARNING

- To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician. Do not attempt to bypass this safety feature.

CAUTION

- Do not leave the fan running unattended.
- Do not use fan in a window. Rain may create an electrical hazard.
- This is not a toy. Keep out of the reach of children and pets.
- Do not stick any object or body parts in the grill of the fan while the fan is plugged in.

RULES FOR SAFETY OPERATION

1. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
2. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
3. Fan should be used under rated voltage.
4. Connect power after the fan is fully assembled.
5. Never insert fingers, pencils, or any other object through the guard when fan is running.
6. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts, and before cleaning.
7. Disconnect fan when removing grilles for cleaning.
8. Be sure fan is on a stable surface when operating to avoid overturning.
9. DO NOT use fan in window, rain may create electrical hazard.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 10 minutes

ASSEMBLY INSTRUCTIONS

1. Pull power cord (E) out slightly.
2. Put front base (B) onto rear base (C) and join them together.
3. Put the round base on the body (A) by inserting the cylinders under (A) to blind holes on the round base as shown on diagram.
4. Fix (A) with base clip (D) as shown.

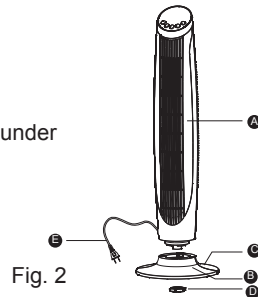 


Fig. 2

OPERATING INSTRUCTIONS (Fig. 3)

Icon	Function	Detail
	Power	Press this key to turn the fan on/off
	Speed setting	Press this key to desired fan speed, 1 = Low, 2 = Medium, 3 = High
	Wind mode	Press this key to desired wind mode in the sequence of NORMAL-BREEZE (🌳) -SLEEP (🌙)
	Timer	Press this key repeatedly to set the timer of wind sending from 1 hour to 8 hours
	Oscillating	Press this key to start or stop the fan oscillation

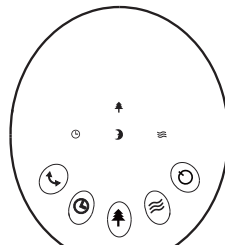 


Fig. 3

INSERT BATTERIES (Fig. 4)

1. Press down on the battery compartment cover and slide it out.
2. Insert the batteries, making sure that the positive terminals are facing the proper direction marked inside the battery compartment
3. Close the cover by sliding it in.

- Notes:**
- 1) Use 2 "AAA" batteries (NOT INCLUDED).
 - 2) Do not mix old and new batteries.
 - 3) Do not mix alkaline, standard (carbon-line) or rechargeable (nickel-cadmium) batteries.

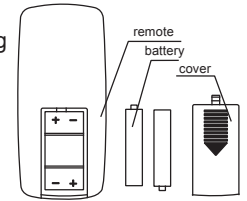 


Fig. 4

CARE AND MAINTENANCE

- Always unplug the fan before cleaning.
- Do not allow water and steam to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzine.
- Periodically clean this fan by lightly running a vacuum cleaner nozzle over the fan grill to remove any dust or dirt that may have accumulated inside or on the unit.
- Wipe all parts with a soft cloth.
- Dry all parts completely before reassembling or reconnecting the fan to the wall outlet.
- Keep surfaces dry and clean for a longer-lasting finish.

TROUBLESHOOTING

Problem	Possible Cause	Corrective Action
The fan will not operate.	The fan isn't plugged in and/or the electrical outlet isn't working properly.	Make sure the fan is plugged in and/or the electrical outlet is working properly.
The fan will not operate.	Obstructions stop the fan from working.	Check for obstructions. If you find an obstruction, turn the fan off. Unplug the fan and carefully remove the obstruction. Plug the fan in and turn it on again by referring to the operating instructions.

SPECIFICATIONS

Model No.: FZ10-9LR

Voltage: 120V, 60Hz

SERVICE & SUPPORT

In the event of a warranty claim or if service is required for this fan, please contact us at the following:

Phone#: 905-305-6118 (Monday to Friday, 9:00 A.M. to 5:00 P.M. EST)

For questions or comments, please write to:

Midea Canada, INC.
Att: Warranty Department
Unit 3,2651 John Street,
Markham, Ontario, L3R 2W5, Canada

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

(STAPLE SALES RECEIPT HERE)

**NOTE: PROOF OF PURCHASE IS REQUIRED FOR
ALL WARRANTY CLAIMS**

ONE(1) YEAR LIMITED WARRANTY

- Please read all instructions before attempting to use this product.
- Please return the Warranty Registration card within fifteen (15) days from the date of purchasing this product.

Midea Canada, INC., referred to hereafter as Midea Canada, warrants as limited herein to the original purchaser of retail that each new FZ10-9LR 36" Tower Fan, shall be free of defects in material and workmanship for a period of one (1) year from the date of original purchase. This one (1) year warranty is limited to the fan motor, fan blades, and electric control circuit board.

In the event of malfunctions or failure of your FZ10-9LR 36" Tower Fan, simply deliver or send the product, postage prepaid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to Midea Canada. Midea Canada reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. Midea Canada shall, within sixty (60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage.

Midea Canada assumes no responsibility whatsoever if the FZ10-9LR 36" Tower Fan should fail during the warranty period by reasons of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see cleaning).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specifications).

Midea Canada makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the FZ10-9LR 36" Tower Fan. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. Midea Canada shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state to state.

Should your FZ10-9LR 36" Tower Fan fail to operate under the terms of this limited warranty, contact Midea Canada at 905-305-6118 (Monday to Friday, 9:00 A.M. to 5:00 P.M. EST).

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>