



DP-101P+
Pocket Size Print Server
Web Configuration User' s Manual

Rev.01 (June, 2001)

Made In Taiwan



RECYCLABLE

TABLE OF CONTENTS

WEB CONFIGURATION	3
CONFIGURING THE PRINT SERVER	4
MANAGEMENT	5
SYSTEM STATUS	5
PRINTER STATUS	6
CONFIGURATION	7
SERVER DEVICE	7
TCP/IP PROTOCOL	8
NETBEUI PROTOCOL	9
APPLETALK PROTOCOL	10
TOOLS	11
PRINT TEST	11
RESET	12
FACTORY RESET	13
HELP	14
ABOUT	14

Web Configuration

This manual describes the use of the Web Configuration for controlling and configuring print servers.

Configuring the Print Server

Open web browser and type <http://192.168.0.1> in the address box. The number is the default IP address of your print server. Press Enter.


Note:-

The PC's IP address must correspond with the print server's IP address in the same segment for the two devices to communicate.



The print server's welcome screen will appear. There will be four options on the systems tool bar to choose from to set your print server and they are as follows:

- ◆ Management
- ◆ Configuration
- ◆ Tools
- ◆ Help

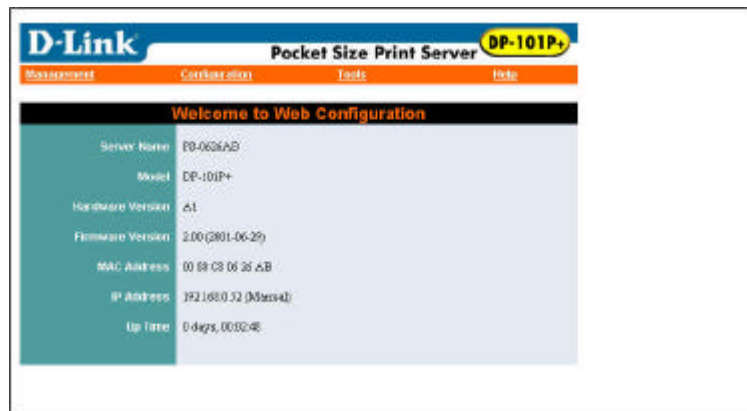


Management

Click on “Management” in the systems tool bar and in the Management Table it provides information on the print server’s Systems Status and Printer Status.

System Status

Click on “System Status” in the Management Table. The page will appear as below providing general information regarding the print server. For most updated information click on the “**Refresh**” button.

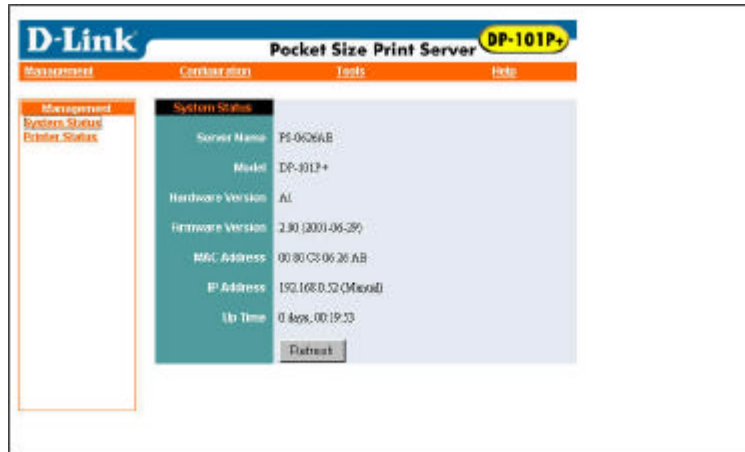

Printer Status

Click on “Printer Status” in the Management Table. The page will appear as below providing general information regarding the printer status. For most updated information click on the “**Refresh**” button. Once the print server is connected to a printer the Printer Status will show Online.



Configuration

Click on “Configuration” in the systems tool bar and in the Configuration Table it provides settings to configure the print server for the Server Device, TCP/IP Protocol, NetBEUI Protocol and AppleTalk Protocol.

Server Device

Click on “Server Device” in the Configuration Table. The page will appear as below providing the settings required to configure the print server. Click the “Save” button to ensure the settings are updated and saved.



The screenshot shows the D-Link Pocket Size Print Server configuration interface. The title bar includes the D-Link logo and the product name "Pocket Size Print Server DP-101P". Below the title bar are four tabs: "Management", "Configuration", "Tools", and "Help". The "Configuration" tab is active, and a sub-menu on the left lists "Server Device", "TCP/IP Protocol", "NetBEUI Protocol", and "AppleTalk Protocol". The "Server Device" sub-menu is selected, and the main content area displays the following configuration fields:

- Server Name: FS-0020AB
- Location: [Empty text box]
- Admin Contact: [Empty text box]
- Password: New Password: [Empty text box], Confirm Again: [Empty text box]
- LPT: Port Name: FS-0020AB-P1, Description: [Empty text box], Speed: High (dropdown), P.L. Printer: No (dropdown)

At the bottom of the configuration area are "Save" and "Cancel" buttons.


TCP/IP Protocol

Click on “TCP/IP Protocol” in the Configuration Table. The page will appear as below providing the settings required to configure the print server. Click the “**Save**” button to ensure the settings are saved and updated.

The screenshot shows the configuration interface for a D-Link Pocket Size Print Server (BP-101P+). The page is titled "D-Link Pocket Size Print Server BP-101P+" and has a navigation bar with "Management", "Configuration", "Tools", and "Help". The "Configuration" tab is active, and the "TCP/IP Protocol" sub-tab is selected. On the left, a sidebar menu lists "Configuration", "Current Service", "TCP/IP Protocol", "WebUI & Diagnostic", and "AppleTalk Protocol". The main content area is divided into two columns. The left column contains the following fields: "IP Address" (192.168.1.52), "Subnet Mask" (255.255.255.0), "Default Gateway" (0.0.0.0), "IP Assignment" (Manually Assign), "Share1 Connectivity 1" (Name: Public, Access Right: Read/Write), "Connectivity 2" (Name: [empty], Access Right: Read Only), and "Connectivity 3" (Name: [empty], Access Right: Read Only). The right column contains a "Manually Assign" section with three checkboxes: "Assign Automatically Using" (unchecked), "RARP" (unchecked), "BOOTP" (unchecked), and "DHCP" (unchecked). At the bottom of the page are "Save" and "Cancel" buttons.

NetBEUI Protocol

Click on “NetBEUI Protocol” in the Configuration Table. The page will appear as below providing the settings required to configure the print server. Click the “Save” button to ensure the settings are saved and updated.

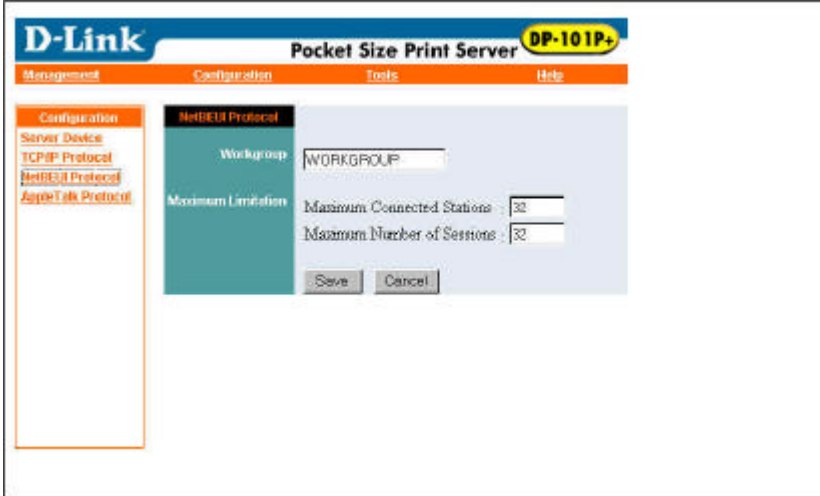


The screenshot shows the configuration interface for a D-Link Pocket Size Print Server (model DP-101P+). The interface is divided into several sections:

- Header:** D-Link logo, "Pocket Size Print Server DP-101P+", and navigation tabs for Management, Configuration, Tools, and Help.
- Configuration Table:** A list of configuration options on the left, including Server Device, TCP/IP Protocol, NetBEUI Protocol (highlighted), and AppleTalk Protocol.
- NetBEUI Protocol Settings:** A panel on the right with the following fields:
 - Workgroup:** A text input field containing "WORKGROUP".
 - Maximum Limitation:** Two numeric input fields:
 - Maximum Connected Stations: 32
 - Maximum Number of Sessions: 32
 - Buttons:** "Save" and "Cancel" buttons at the bottom.

AppleTalk Protocol

Click on “AppleTalk Protocol” in the Configuration Table. The page will appear as below providing the settings required to configure the print server. Click the “Save” button to ensure the settings are saved and updated.



The screenshot shows the D-Link Pocket Size Print Server configuration interface for the AppleTalk Protocol. The page title is "D-Link Pocket Size Print Server DP-101P-". The navigation menu includes "Management", "Configuration", "Tools", and "Help". The "Configuration" section is active, and the "AppleTalk Protocol" option is selected in the left-hand menu. The main configuration area is titled "AppleTalk Protocol" and contains the following fields:

- AppleTalk Zone:
- LPT:
- Chooser Name: PS-0626AB-P1
- Printer Type: LaserWriter
- PostScript Level: Level 2
- Font Group: Standard 35


At the bottom of the configuration area are "Save" and "Cancel" buttons.

Tools

Click on “Tools” in the systems tool bar and in the Tools Table it provides information for Print Test, Reset, and Factory Reset.

Print Test

Click on “Print Test” in the Tools Table. The page will appear as below and click the “**T**est” button to begin printer printing test.

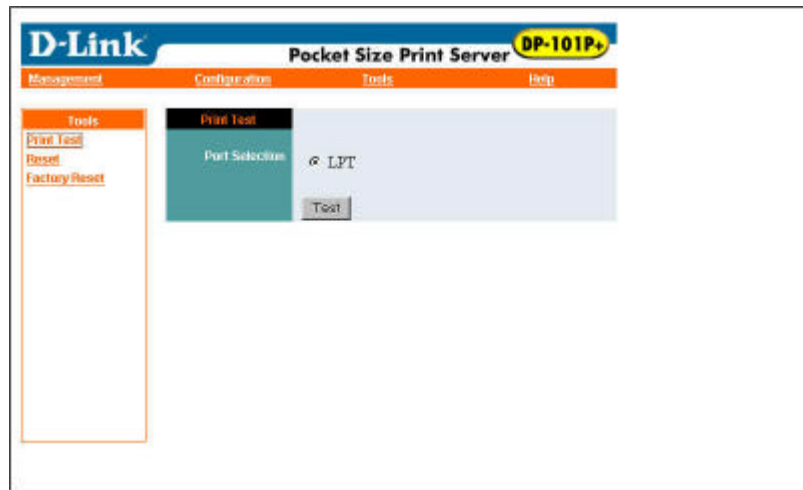

Reset

Click on “Reset” in the Tools Table. The page will appear as below and click the “Yes” button to activate the reset procedure.



Factory Reset

Click on “Factory Reset” in the Tools Table. The page will appear as below and click the “**Yes**” button to activate the factory reset procedure.




Help

Click on “Help” in the systems tool bar and in the Help Table it provides general information about the print server.

About

Click on “About” in the Help Table. The page will appear as below providing general information about the print server.

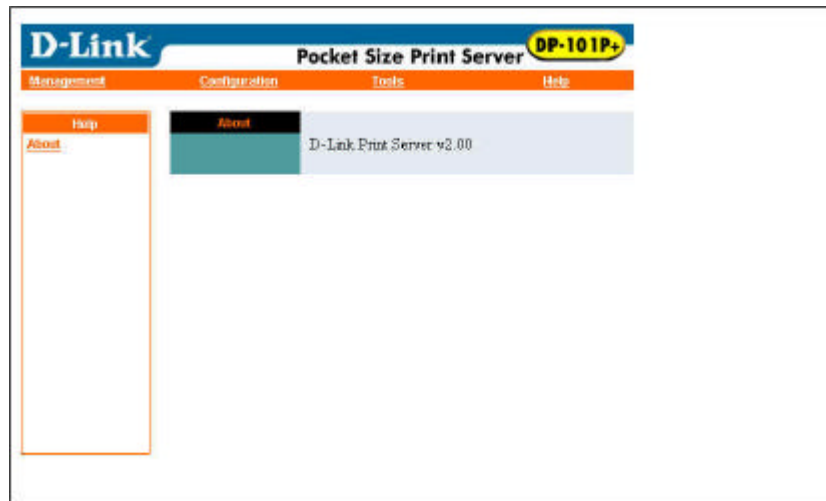

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>