

Inspiron 16 5625

Setup and Specifications



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

Chapter 1: Set up your Inspiron 16 5625	4
Chapter 2: Views of Inspiron 16 5625	6
Left.....	6
Right.....	7
Top.....	7
Front.....	8
Bottom.....	9
Chapter 3: Specifications of Inspiron 16 5625	10
Dimensions and weight.....	10
Processor.....	10
Chipset.....	11
Operating system.....	11
Memory.....	11
External ports.....	12
Internal slots.....	12
Wireless module.....	12
Audio.....	13
Storage.....	13
Media-card reader.....	14
Keyboard.....	14
Camera.....	15
Touchpad.....	15
Power adapter.....	16
Battery.....	16
Display.....	17
Fingerprint reader (optional).....	18
GPU—Integrated.....	19
GPU—Discrete.....	19
Operating and storage environment.....	19
Chapter 4: Dell ComfortView	20
Chapter 5: Keyboard shortcuts	21
Chapter 6: Getting help and contacting Dell	23

Set up your Inspiron 16 5625

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

1. Connect the power adapter and press the power button.



NOTE: The battery may go into power-saving mode during shipment to conserve charge on the battery. Ensure that the power adapter is connected to your computer when it is turned on for the first time.

2. Finish Windows setup.

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

- Connect to a network for Windows updates.

NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- If connected to the Internet, sign in with or create a Microsoft account. If not connected to the Internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

3. Locate and use Dell apps from the Windows Start menu—Recommended.

Table 1. Locate Dell apps






Resources	Description
	<p>My Dell</p> <p>Centralized location for key Dell applications, help articles, and other important information about your computer. It also notifies you about the warranty status, recommended accessories, and software updates if available.</p>

Table 1. Locate Dell apps (continued)

Resources	Description
	<p>SupportAssist</p> <p>SupportAssist proactively and predictively identifies hardware and software issues on your computer and automates the engagement process with Dell Technical support. It addresses performance and stabilization issues, prevents security threats, monitors, and detects hardware failures. For more information, see <i>SupportAssist for Home PCs User's Guide</i> at www.dell.com/serviceabilitytools. Click SupportAssist and then, click SupportAssist for Home PCs.</p> <p> NOTE: In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.</p>
	<p>Dell Update</p> <p>Updates your computer with critical fixes and latest device drivers as they become available. For more information about using Dell Update, see the knowledge base article 000149088 at www.dell.com/support.</p>
	<p>Dell Digital Delivery</p> <p>Download software applications, which are purchased but not preinstalled on your computer. For more information about using Dell Digital Delivery, see the knowledge base article 000129837 at www.dell.com/support.</p>

Views of Inspiron 16 5625

Left



1. Power-adapter port

Connect a power adapter to provide power to your computer and charge the battery.

2. Power and battery-status light

Indicates the power state and battery state of the computer.

Solid white—Power adapter is connected and the battery is charging.

Solid amber—Battery charge is low or critical.

Off—Battery is fully charged.

NOTE: On certain computer models, the power and battery-status light are also used for diagnostics. For more information, see the *Troubleshooting* section in your computer's *Service Manual*.

3. HDMI 1.4 port

Connect to a TV, external display or another HDMI-in enabled device. Provides video and audio output.

4. USB 3.2 Gen 1 port

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

5. USB 3.2 Gen 2 (Type-C) port with Power Delivery/DisplayPort

Connect devices such as external storage devices, printers, and external displays. Provides data transfer rate of up to 10 Gbps.

Supports Power Delivery that enables two-way power supply between devices. Provides up to 15 W power output that enables faster charging.

Supports DisplayPort 1.4 and also enables you to connect an external display using a display adapter.

NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

Right



1. SD-card slot

Reads from and writes to the SD card. The computer supports the following card types:

- Secure Digital (SD)
- Secure Digital High Capacity (SDHC)
- Secure Digital Extended Capacity (SDXC)


2. USB 3.2 Gen 1 port

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

3. Global headset jack

Connect headphones or a headset (headphone and microphone combo).

Top

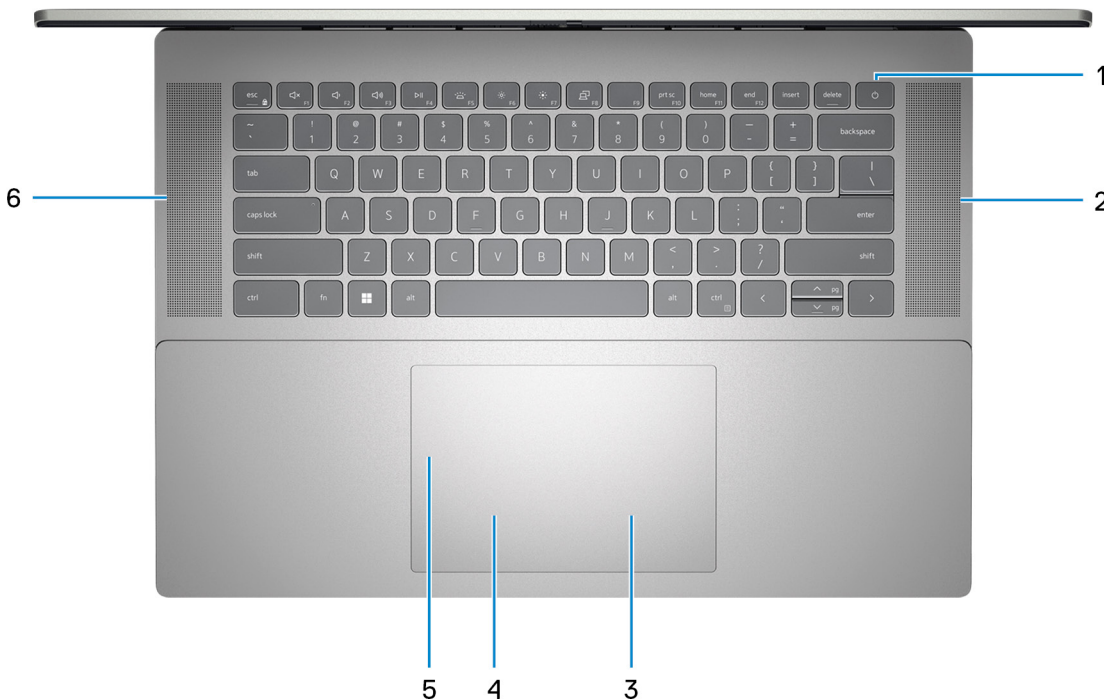

1. Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for four seconds to force shut-down the computer.

If the power button has a fingerprint reader, place your finger on the power button to log in.

i **NOTE:** You can customize power-button behavior in Windows. For more information, see *Me and My Dell* at www.dell.com/support/manuals.

2. Right speaker

Provides audio output.

3. Right-click area

Press to right-click.

i **NOTE:** The right-click area is enabled when you touch the touchpad.

4. Left-click area

Press to left-click.

i **NOTE:** The left-click area is enabled when you touch the touchpad.

5. Precision touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two fingers tap to right-click.

6. Left speaker

Provides audio output.

Front



1. Left microphone

Provides digital sound input for audio recording and voice calls.

2. Privacy shutter

Slide the privacy shutter to cover the camera lens and protect your privacy when the camera is not in use.

3. Camera

Enables you to video chat, capture photos, and record videos.

4. Camera-status light

Turns on when the camera is in use.


5. Right microphone

Provides digital sound input for audio recording and voice calls.

6. LCD panel

Provides visual output to the user.

Bottom

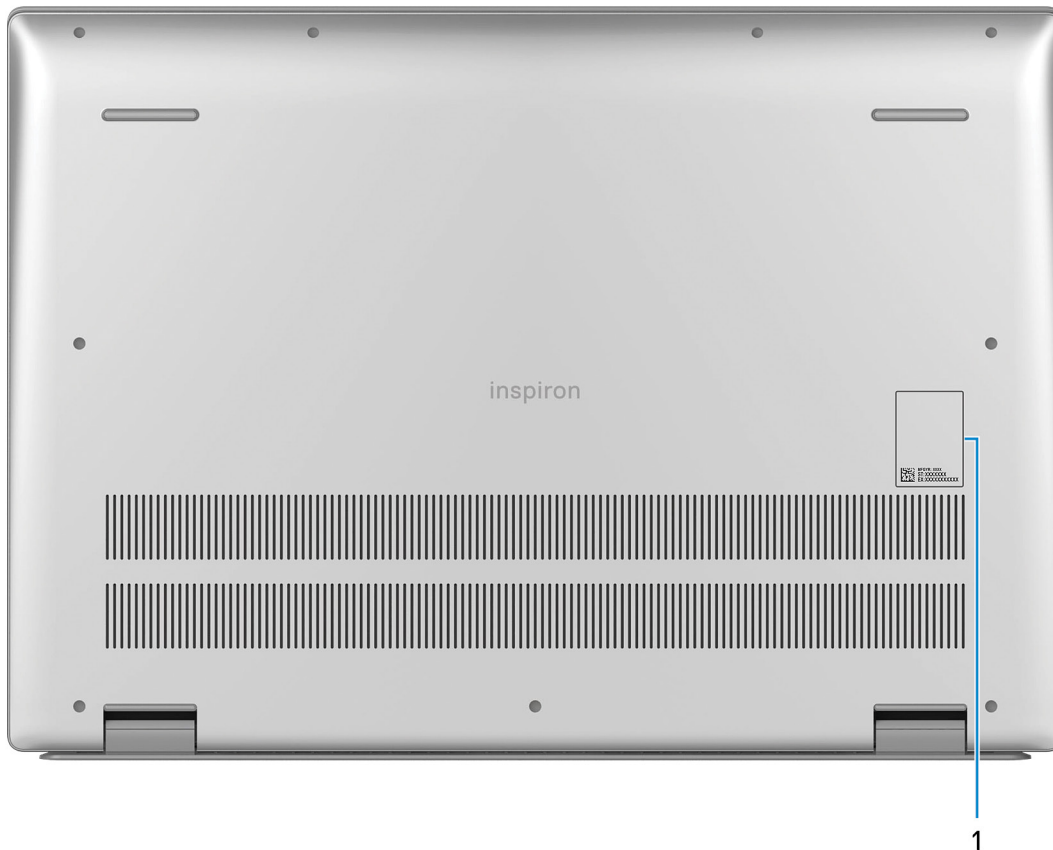

1. Service Tag and regulatory labels


The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information. The regulatory label contains regulatory information of your computer.

Specifications of Inspiron 16 5625

Dimensions and weight

The following table lists the height, width, depth, and weight of your Inspiron 16 5625.

Table 2. Dimensions and weight

Description	Values
Height:	
Front height	15.67 mm (0.62 in.)
Rear height	17.95 mm (0.71 in.)
Width	356.78 mm (14.05 in.)
Depth	251.90 mm (9.92 in.)
Weight  NOTE: The weight of your computer depends on the configuration ordered and manufacturing variability.	1.97 kg (4.34 lb) (minimum)

Processor

The following table lists the details of the processors supported by your Inspiron 16 5625.

Table 3. Processor

Description	Option one	Option two
Processor type	AMD Ryzen 5 5625U	AMD Ryzen 7 5825U
Processor wattage	25 W	25 W
Processor core count	6	8
Processor thread count	12	16
Processor speed	Up to 4.3 GHz	Up to 4.5 GHz
Processor cache	16 MB	16 MB
Integrated graphics	AMD Radeon Graphics	AMD Radeon Graphics

Chipset

The following table lists the details of the chipset supported by your Inspiron 16 5625.

Table 4. Chipset

Description	Values
Chipset	Integrated in the processor
Processor	AMD Ryzen 5/7
DRAM bus width	128-bit
Flash EPROM	16 MB
PCIe bus	Up to Gen3

Operating system

Your Inspiron 16 5625 supports the following operating systems:

- Windows 11 Pro, 64-bit
- Windows 11 Pro National Education, 64-bit
- Windows 11 Home, 64-bit
- Windows 11 Home in S-mode, 64-bit

Memory

The following table lists the memory specifications of your Inspiron 16 5625.

Table 5. Memory specifications

Description	Values
Memory slots	Two-SoDIMM
Memory type	DDR4
Memory speed	3200 MHz
Maximum memory configuration	32 GB
Minimum memory configuration	4 GB
Memory size per slot	4 GB, 8 GB, or 16 GB
Memory configurations supported	<ul style="list-style-type: none">• 4 GB, 1 x 4 GB, DDR4, 3200 MHz• 8 GB, 2 x 4 GB, DDR4, 3200 MHz, dual-channel• 8 GB, 1 x 8 GB, DDR4, 3200 MHz• 12 GB, 1 x 4 GB + 1 x 8 GB, DDR4, 3200 MHz• 16 GB, 2 x 8 GB, DDR4, 3200 MHz, dual-channel• 16 GB, 1 x 16 GB, DDR4, 3200 MHz• 24 GB, 1 x 16 GB + 1 x 8 GB, DDR4, 3200 MHz• 32 GB, 2 x 16 GB, DDR4, 3200 MHz, dual-channel

External ports

The following table lists the external ports on your Inspiron 16 5625.


Table 6. External ports

Description	Values
USB ports	<ul style="list-style-type: none"> Two USB 3.2 Gen 1 ports One USB 3.2 Gen 2 Type-C port with DisplayPort and Power Delivery
Audio port	One Headset jack
Video port/ports	One HDMI 1.4 port
Media-card reader	One SD-card slot
Power-adaptor port	One 4.5 mm x 2.9 mm DC-in
Security-cable slot	Not supported

Internal slots

The following table lists the internal slots of your Inspiron 16 5625.

Table 7. Internal slots

Description	Values
M.2	<ul style="list-style-type: none"> One M.2 2230 slot for WiFi and Bluetooth combo card One M.2 2230/2280 slot for solid-state drive <p> NOTE: To learn more about the features of different types of M.2 cards, see the knowledge base article 000144170 at www.dell.com/support.</p>

Wireless module

The following table lists the Wireless Local Area Network (WLAN) module specifications of your Inspiron 16 5625.

Table 8. Wireless module specifications

Description	Option one	Option two	Option three
Model number	Realtek RTL8822CE	MediaTek MT7921	Qualcomm WCN6856-DBS
Transfer rate	Up to 867 Mbps	Up to 1200 Mbps	Up to 3571 Mbps
Frequency bands supported	2.4 GHz/5 GHz	2.4 GHz/5 GHz	2.4 GHz/5 GHz/6 GHz
Wireless standards	<ul style="list-style-type: none"> WiFi 802.11a/b/g Wi-Fi 4 (WiFi 802.11n) Wi-Fi 5 (WiFi 802.11ac) 	<ul style="list-style-type: none"> WiFi 802.11a/b/g Wi-Fi 4 (WiFi 802.11n) Wi-Fi 5 (WiFi 802.11ac) Wi-Fi 6 (WiFi 802.11ax) 	<ul style="list-style-type: none"> WiFi 802.11a/b/g Wi-Fi 4 (WiFi 802.11n) Wi-Fi 5 (WiFi 802.11ac) Wi-Fi 6E (WiFi 802.11ax)
Encryption	<ul style="list-style-type: none"> 64-bit/128-bit WEP AES-CCMP 	<ul style="list-style-type: none"> 64-bit/128-bit WEP AES-CCMP 	<ul style="list-style-type: none"> 64-bit/128-bit WEP AES-CCMP

Table 8. Wireless module specifications (continued)

Description	Option one	Option two	Option three
	• TKIP	• TKIP	• TKIP
Bluetooth	Bluetooth 5.0	Bluetooth 5.2	Bluetooth 5.2

Audio

The following table lists the audio specifications of your Inspiron 16 5625.

Table 9. Audio specifications

Description	Values
Audio controller	Realtek ALC3254
Stereo conversion	Supported
Internal audio interface	High definition audio interface
External audio interface	Headset jack
Number of speakers	2
Internal-speaker amplifier	Supported
External volume controls	Keyboard shortcut controls
Speaker output:	
Average speaker output	2 W
Peak speaker output	2.5 W
Subwoofer output	Not supported
Microphone	Digital-array microphones in camera assembly

Storage

This section lists the storage options on your Inspiron 16 5625.

Your Inspiron 16 5625 supports one of the following storage configurations:

- One M.2 2230 solid-state drive
- One M.2 2280 solid-state drive

The primary drive of your Inspiron 16 5625 varies with the storage configuration. For computers with a M.2 drive, the M.2 drive is the primary drive.

Table 10. Storage specifications


Storage type	Interface type	Capacity
M.2 2280 solid-state drive	PCIe NVMe Gen4 x4, up to 32 Gbps  NOTE: The performance of the PCIe NVMe Gen4 x4 will be limited to PCIe Gen3 x4 bandwidth on your computer.	Up to 2 TB

Table 10. Storage specifications (continued)

Storage type	Interface type	Capacity
M.2 2230 solid-state drive	PCIe NVMe Gen4 x4, up to 32 Gbps i NOTE: The performance of the PCIe NVMe Gen4 x4 will be limited to PCIe Gen3 x4 bandwidth on your computer.	Up to 1 TB
M.2 2280 solid-state drive	PCIe NVMe Gen3x4 QLC, up to 32 Gbps	Up to 1 TB
M.2 2230 solid-state drive	PCIe NVMe Gen3x4, up to 32 Gbps	Up to 1 TB

Media-card reader

The following table lists the media cards supported by your Inspiron 16 5625.

Table 11. Media-card reader specifications

Description	Values
Media-card type	One SD-card slot
Media-cards supported	<ul style="list-style-type: none"> Secure Digital (SD) Secure Digital High Capacity (SDHC) Secure Digital Extended Capacity (SDXC)
i NOTE: The maximum capacity supported by the media-card reader varies depending on the standard of the media card installed in your computer.	


Keyboard

The following table lists the keyboard specifications of your Inspiron 16 5625.

Table 12. Keyboard specifications

Description	Values
Keyboard type	<ul style="list-style-type: none"> Standard backlit keyboard Standard non-backlit keyboard
Keyboard layout	QWERTY
Number of keys	<ul style="list-style-type: none"> United States and Canada: 79 keys United Kingdom: 80 keys Japan: 83 keys
Keyboard size	X=19.05 mm key pitch Y=18.05 mm key pitch
Keyboard shortcuts	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.

Table 12. Keyboard specifications (continued)

Description	Values
	 NOTE: You can define the primary behavior of the function keys (F1–F12) changing Function Key Behavior in BIOS setup program.

Camera

The following table lists the camera specifications of your Inspiron 16 5625.

Table 13. Camera specifications

Description	Values		
Number of cameras	One		
Camera type	RGB FHD camera		
Camera location	Front		
Camera sensor type	CMOS sensor technology		
Camera resolution:			
<table border="1" data-bbox="165 952 316 1012"> <tr> <td data-bbox="165 952 245 1012">Still image</td> <td data-bbox="245 952 316 1012"></td> </tr> </table>	Still image		2.03 megapixel
Still image			
<table border="1" data-bbox="165 1012 316 1072"> <tr> <td data-bbox="165 1012 245 1072">Video</td> <td data-bbox="245 1012 316 1072"></td> </tr> </table>	Video		1920 x 1080 (FHD) at 30 fps
Video			
Diagonal viewing angle:	82 degrees		

Touchpad

The following table lists the touchpad specifications of your Inspiron 16 5625.


Table 14. Touchpad specifications

Description	Values		
Touchpad resolution:			
<table border="1" data-bbox="245 1456 368 1516"> <tr> <td data-bbox="245 1456 325 1516">Horizontal</td> <td data-bbox="325 1456 368 1516"></td> </tr> </table>	Horizontal		> 300 dpi
Horizontal			
<table border="1" data-bbox="245 1516 368 1576"> <tr> <td data-bbox="245 1516 325 1576">Vertical</td> <td data-bbox="325 1516 368 1576"></td> </tr> </table>	Vertical		> 300 dpi
Vertical			
Touchpad dimensions:			
<table border="1" data-bbox="245 1626 368 1686"> <tr> <td data-bbox="245 1626 325 1686">Horizontal</td> <td data-bbox="325 1626 368 1686"></td> </tr> </table>	Horizontal		133 mm (5.24 in.)
Horizontal			
<table border="1" data-bbox="245 1686 368 1747"> <tr> <td data-bbox="245 1686 325 1747">Vertical</td> <td data-bbox="325 1686 368 1747"></td> </tr> </table>	Vertical		90 mm (3.54 in.)
Vertical			
Touchpad gestures	For more information about touchpad gestures available on Windows, see the Microsoft knowledge base article 4027871 at support.microsoft.com .		

Power adapter

The following table lists the power adapter specifications of your Inspiron 16 5625.

Table 15. Power adapter specifications

Description		Values
Type		65 W
Connector dimensions:		
	External diameter	4.50 mm
	Internal diameter	2.90 mm
Power-adapter dimensions:		
	Height	28 mm (1.10 in.)
	Width	108 mm (4.30 in.)
	Depth	47 mm (1.90 in.)
Power-adapter weight (maximum)		0.29 kg (0.64 lbs)
Input voltage		100 VAC–240 VAC
Input frequency		50 Hz–60 Hz
Input current (maximum)		1.6 A/1.7 A
Output current (continuous)		3.34 A
Rated output voltage		19.5 VDC
Temperature range:		
	Operating	0°C to 40°C (32°F to 104°F)
	Storage	-40°C to 70°C (-40°F to 158°F)
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.		




Battery

The following table lists the battery specifications of your Inspiron 16 5625.

Table 16. Battery specifications

Description	Option one	Option two
Battery type	3-cell, 41 Whr polymer	4-cell, 54 Whr polymer
Battery voltage	11.25 VDC	15 VDC
Battery weight (maximum)	0.18 kg (0.40 lb)	0.23 kg (0.51 lb)
Battery dimensions:		

Table 16. Battery specifications (continued)

Description		Option one	Option two
	Height	206.40 mm (8.13 in.)	271.90 mm (10.70 in.)
	Width	82 mm (3.23 in.)	82 mm (3.23 in.)
	Depth	5.75 mm (0.23 in.)	5.75 mm (0.23 in.)
Temperature range:			
	Operating	0°C to 45°C (32°F to 113°F)	0°C to 45°C (32°F to 113°F)
	Storage	-20°C to 65°C (-4°F to 149°F)	-20°C to 65°C (-4°F to 149°F)
Battery operating time		Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Battery charging time (approximate)		4 hours (when the computer is off)	4 hours (when the computer is off)
 NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information on the Dell Power Manager see, <i>Me and My Dell</i> on www.dell.com .			
Coin-cell battery		CR2032	CR2032
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.			
 CAUTION: Dell recommends that you charge the battery regularly for optimal power consumption. If your battery charge is completely depleted, connect the power adapter, turn on your computer, and then restart your computer to reduce the power consumption.			

Display

The following table lists the display specifications of your Inspiron 16 5625.

Table 17. Display specifications

Description		Option one	Option two	Option three	Option four
Display type		Full High Definition (FHD+), ComfortView	Full High Definition (FHD+), ComfortView Plus	3K, ComfortView Plus	Full High Definition (FHD+), ComfortView Plus
Display-panel technology		Wide Viewing Angle (WVA)	Wide Viewing Angle (WVA)	Wide Viewing Angle (WVA)	Wide Viewing Angle (WVA)
Display-panel dimensions (active area):					
	Height	344.68	344.68	344.68	344.68
	Width	215.42	215.42	215.42	215.42
	Diagonal	406.5	406.46	406.46	406.46

Table 17. Display specifications (continued)

Description	Option one	Option two	Option three	Option four
Display-panel native resolution	1920 x 1200	1920 x 1200	3072 x 1920	1920 x 1200
Luminance (typical)	250 nits	300 nits	300 nits	300 nits
Megapixels	2.3	2.3	5.9	2.3
Color gamut (typical)	45% NTSC	100% sRGB	100% sRGB	100% sRGB
Pixels Per Inch (PPI)	141	141	226	141
Contrast ratio (typical)	<ul style="list-style-type: none"> • 1000:1 (typical) • 800:1 (minimum) 	<ul style="list-style-type: none"> • 1200:1 (typical) • 1000:1 (minimum) 	<ul style="list-style-type: none"> • 1200:1 (typical) • 1000:1 (minimum) 	<ul style="list-style-type: none"> • 1200:1 (typical) • 1000:1 (minimum)
Response time	<ul style="list-style-type: none"> • 30 ms (typical) • 35 ms (maximum) 	<ul style="list-style-type: none"> • 30 ms (typical) • 35 ms (maximum) 	<ul style="list-style-type: none"> • 30 ms (typical) • 35 ms (maximum) 	<ul style="list-style-type: none"> • 30 ms (typical) • 35 ms (maximum)
Refresh rate	60 Hz	60 Hz	60 Hz	60 Hz
Horizontal view angle	<ul style="list-style-type: none"> • +/- 85 degrees (typical) • +/- 80 degrees (minimum) 	<ul style="list-style-type: none"> • +/- 85 degrees (typical) • +/- 80 degrees (minimum) 	<ul style="list-style-type: none"> • +/- 85 degrees (typical) • +/- 80 degrees (minimum) 	<ul style="list-style-type: none"> • +/- 85 degrees (typical) • +/- 80 degrees (minimum)
Vertical view angle	<ul style="list-style-type: none"> • +/- 85 degrees (typical) • +/- 80 degrees (minimum) 	<ul style="list-style-type: none"> • +/- 85 degrees (typical) • +/- 80 degrees (minimum) 	<ul style="list-style-type: none"> • +/- 85 degrees (typical) • +/- 80 degrees (minimum) 	<ul style="list-style-type: none"> • +/- 85 degrees (typical) • +/- 80 degrees (minimum)
Pixel pitch	0.18 mm	0.18 mm	0.11 mm	0.18 mm
Power consumption (maximum)	4.15 W	4.4 W	3.8 W	4.73 W
Anti-glare vs glossy finish	Anti-glare	Anti-glare	Anti-glare	Glossy
Touch options	No	No	No	Yes

Fingerprint reader (optional)

The following table lists the specifications of the optional fingerprint-reader of your Inspiron 16 5625.

Table 18. Fingerprint reader specifications

Description	Values
Fingerprint-reader sensor technology	Trans-capacitive sensing
Fingerprint-reader sensor resolution	500 ppi
Fingerprint-reader sensor pixel size	108 x 88

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Inspiron 16 5625.

Table 19. GPU—Integrated

Controller	Memory size	Processor
AMD Radeon Graphics	Shared system memory	AMD Ryzen 5/7

GPU—Discrete

The following table lists the specifications of the discrete Graphics Processing Unit (GPU) supported by your Inspiron 16 5625.

Table 20. GPU—Discrete

Controller	Memory size	Memory type
NVIDIA GeForce MX550	2 GB	GDDR6

Operating and storage environment

This table lists the operating and storage specifications of your Inspiron 16 5625.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 21. Computer environment

Description	Operating	Storage
Temperature range	0°C to 40°C (32°F to 104°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	50% to 90% (non-condensing)	2% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	Not applicable
Shock (maximum)	140 G†	160 G†
Altitude range	-15.2 m to 3048 m (-49.87 ft to 10000 ft)	-15.2 m to 10668 m (-49.87 ft to 35000 ft)

 **CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.**

* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse.

Dell ComfortView

CAUTION: Prolonged exposure to blue light, particularly from digital sources, may disrupt sleep patterns and cause long-term effects such as eye strain, eye fatigue, or damage to the eyes.

Blue light is a color in the white light spectrum which has a short wavelength and high frequency. Chronic exposure to blue light, particularly from digital sources, may disrupt sleep patterns and change our body's Circadian rhythm. Using the computer for an extended period may also cause fatigue in other body parts such as the neck, arm, back, and shoulder.

Dell low blue light displays optimize eye comfort with a flicker-free screen. The ComfortView feature reduces the amount of blue light emitted from the monitor to optimize eye comfort. ComfortView mode can be enabled and configured using the **Dell CinemaColor** (DCC) application. Dell ComfortView is certified by TÜV.

Dell CinemaColor

Dell CinemaColor (DCC) combines the hardware and software to deliver clear visuals that appear every bit as vibrant as the world around you. The DCC has four color profiles that optimize these settings depending on the content and your surroundings.

When you open DCC, you can choose **Movie (default)**, **ComfortView**, **Sports**, or **Animation** from the list. The ComfortView Profile optimizes eye comfort with a Low Blue Light software solution that meets TÜV standards to reduce harmful blue light emissions to make extended screen time easy on your eyes compared to standard digital panels while still retaining the vibrant colors.

ComfortView mode is certified by TÜV for the effective reduction of hazardous blue light by adjusting display parameters. You can adjust the Saturation, Temperature, and Contrast values to create your custom setting in the ComfortView mode.

NOTE: For more information on DellCinema components see KB article [000178241](https://www.dell.com/support) at <https://www.dell.com/support>.

ComfortView Plus

ComfortView Plus is a built-in, always-on, and virtually unnoticeable low blue light solution for Dell displays. ComfortView Plus employs a hardware-based design that allows for a wider blue spectrum, with a much lower peak and reduced intensity. Dell ComfortView Plus is certified by TÜV certified - low blue light hardware solution.

NOTE: ComfortView Plus is an optional hardware feature to be configured at the point of sale.

To reduce the risk of eye strain, it is also recommended that you:

- Position the display at a comfortable viewing distance between 20 in. to 28 in. (50 cm and 70 cm) from your eyes.
- Blink frequently to moisten your eyes, wet your eyes with water, or apply suitable eye drops.
- Look away from your display, and gaze at a distant object at 20 ft (609.60 cm) away for at least 20 seconds during each break.
- Take an extended break for 20 minutes every two hours.

Keyboard shortcuts

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol shown on the upper part of the key is typed out. For example, if you press **2**, **2** is typed out; if you press **Shift + 2**, **@** is typed out.

The keys F1-F12 at the top row of the keyboard are function keys for multi-media control, as indicated by the icon at the bottom of the key. Press the function key to invoke the task represented by the icon. For example, pressing F1 mutes the audio (refer to the table below).

However, if the function keys F1-F12 are needed for specific software applications, multi-media functionality can be disabled by pressing **fn + Esc**. Subsequently, multi-media control can be invoked by pressing **fn** and the respective function key. For example, mute audio by pressing **fn + F1**.

NOTE: You can also define the primary behavior of the function keys (F1–F12) by changing **Function Key Behavior** in BIOS setup program.

Table 22. List of keyboard shortcuts

Function key	Re-defined key (for multi-media control)	Behavior
F1	fn + F1	Mute audio
F2	fn + F2	Decrease volume
F3	fn + F3	Increase volume
F4	fn + F4	Play/Pause
F5	fn + F5	Toggle keyboard backlight (optional)
F6	fn + F6	Decrease brightness
F7	fn + F7	Increase brightness
F8	fn + F8	Switch to external display
F10	fn + F10	Print screen
F11	fn + F11	Home
F12	fn + F12	End

The **fn** key is also used with selected keys on the keyboard to invoke other secondary functions.

Table 23. List of keyboard shortcuts

Function key	Behavior
fn + B	Pause/Break
fn + H	Toggle between power light and battery-status light
fn + S	Toggle scroll lock
fn + R	System request
fn + ctrl	Open application menu
fn + esc	Toggle fn-key lock
fn + page up	Page up

Table 23. List of keyboard shortcuts (continued)



Function key	Behavior
fn + page down	Page down

Getting help and contacting Dell

Self-help resources


You can get information and help on Dell products and services using these self-help resources:


Table 24. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell app	
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	www.dell.com/support/windows
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support . For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer .
Dell knowledge base articles for a variety of computer concerns	<ol style="list-style-type: none"> 1. Go to www.dell.com/support. 2. On the menu bar at the top of the Support page, select Support > Knowledge Base. 3. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

 **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>