 


USE AND CARE GUIDE

OUTDOOR EXTREME WEATHER TIMER

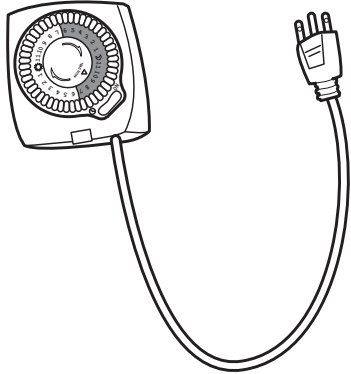

Questions, problems, missing parts? Before returning to the store, call Defiant Customer Service  
8 a.m. - 6 p.m., EST, Monday - Friday  
1-866-308-3976  
HomeDepot.com

 
THANK YOU

We appreciate the trust and confidence you have placed in Defiant through the purchase of this outdoor extreme weather timer. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Defiant!

Operation Instructions

1 Setting the timer

- Ensure all segments (2) are pulled up before programming.
- Select a time period (or periods) you want the device turned on, then push down all the segments (2) that fall on or within that time period. For example, to have the timer turn a lamp on at 10 PM and off at 2 AM, push down the segments (2) representing 10 PM and 2 AM, and all the segments (2) in between. You may need to turn the dial (3) clockwise to access the desired segments.
- Rotate the dial (3) clockwise until the pointer on the face of the dial points to the current time of day. Nighttime hours (from 6:30 PM to 6:30 AM) are highlighted with a grey background.
- Set the master switch (1) to the clock symbol (Timer On position).

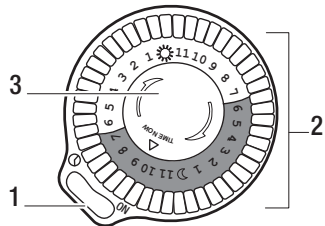

Safety Information

**NOTE:** This product is suitable for use with outdoor appliances. This is a grounded device. It has a grounded plug and one grounded outlet.

**WARNING: RISK OF ELECTRIC SHOCK:**

- Always ensure that plug of appliance is fully inserted into timer.
- Plug directly into a GFCI electrical outlet.
- Do not use in wet locations.
- Unplug the timer before cleaning with a dry cloth.
- Keep children away.
- Do not immerse in water or any liquid.

**WARNING: RISK OF FIRE:**

- Do not use to control appliances that contain heating elements, cooking appliances, heaters, irons, etc.
- Do not exceed electrical ratings.
- Do not use with an extension cord.

 
RATINGS
120 VAC, 60 Hz
15A/ 1875W Resistive
8A/ 1000W Tungsten
1 HP Motor
Min. and Max Operating and Mounting Temperature: -40°C to 50°C

Hardware Included



AA – Screws x 2

Product Description


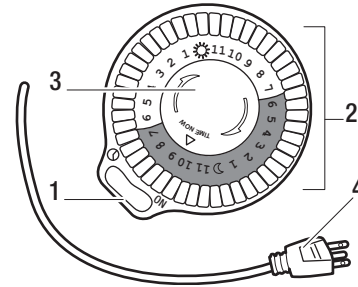


1. **Master Switch:** When pushed to the timer position (clock symbol), the timer controls the appliance. When pushed to the ON position, the timer acts like an outlet. The timer outlet always supplies the power.
2. **Timer Segments:** Each segment represents 30 minutes. Push segments down to set the timer period (length of time you want the timer on). You can use the tip of a pen or pencil. Conversely, segments that have been pushed down can be easily pulled back up by hand.
3. **Timer Dial:** Rotate to indicate the current time of day.
4. **3-Prong Plug:** Plug this into a GFCI outlet to power the timer.

Installation Instructions


1 Installing the timer

  - Two keyholes are available on the back of the timer for wall mounting. They are 1-9/16 in. apart (refer to the screw template below).
- Install the screws (AA) onto the area you wish to mount your timer. The screw heads must extend at least 3/16 in. out from the wall.
- Hang the timer from the slots on the back of the unit onto the screws (AA) after the timer has been set.

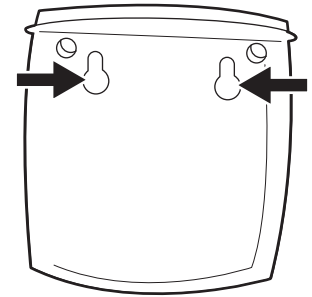


2 Plugging in the timer

 - Plug the timer into a GFCI outlet convenient to the device to be controlled.
- Plug the device to be controlled into the outlet on the timer. Make sure the device is turned on to allow for automatic control. The timer will not turn the device on if the device's main power switch is off.

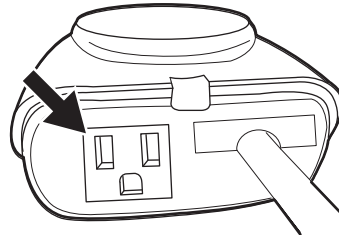

3 Manually override the timer setting

 - To override the timer and use your device normally, set the master switch (1) to the ON position. This deactivates the timer's control of the device, but the timer's dial will still show the current time of day.
- To reactivate the timer's control of the device, turn the device's switch on and set the timer's master switch (1) to the clock symbol (Timer On position). In case of power failure, reset the time of day as explained in step 1.

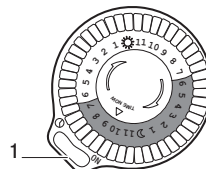

**DEFIANT®**  
Questions, problems, missing parts? Before returning to the store, call Defiant Customer Service  
8 a.m. - 6 p.m., EST, Monday - Friday  
1-866-308-3976  
HOMEDEPOT.COM

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>