

ProSweep Attachment Model 99944200552

Operator's Manual

FOR MODELS:

SRM-2400SB SRM-260SB/261SB PAS-2400 PAS-230/231 PAS-260/261 PAS-2601

ENGLISH

ESPAÑOL

FRANCAIS



WARNING

Read rules for safe operation and instructions carefully. ECHO provides an Operator's Manual with this attachment and a separate Operator's Manual and Safety Manual (if available) with the Power Head. All manuals must be read and understood for proper and safe operation. Failure to do so could result in serious injury.

DANGER

X7702091200

X770000980 08/06

2 ////EEHD.

INTRODUCTION

Welcome to the ECHO family. This ECHO product was designed and manufactured to provide long life and on-the-jobdependability. Read and understand this manual included with your attachment. You will find this manual easy to use and full of helpful operations tips and SAFETY messages.

THE OPERATOR'S MANUAL

Read and understand this manual before operation. Keep it in a safe place for future reference. It contains specifications and information for operation, starting, stopping, maintenance, storage, and assembly specific to this product.

THE SAFETY MANUAL


(*If available for attachment*) Explains possible hazards and what measures you should take to insure safe operation.

TABLE OF CONTENTS

Introduction	2
- The Operator's Manual	2
- Safety Manual	
Safety	
- Manual Safety Symbols and Important Informa	ation3
- International Symbols	3
- Personal Condition and Safety Equipment	3
- Equipment	6
Description	
Contents	8
Assembly	8
- ProSweep Gear Housing Assembly to	
Lower Shaft Assembly	8
- Power Head Shaft to ProSweep Attachment	9
Operation	10

Maintenance	11
- SkillLevels	11
- Maintenance Intervals	11
- Lubrication	11
- Brush Replacement	13
Storage	14
Specifications	
Servicing Information	16
- Parts/Serial number	
- Service	16
- ECHO Customer Assistance	16
- Warranty Card	16
- Additional or Replacement Manuals	
- Manual Ordering Instructions	16

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, but are subject to change without notice. Illustrations may include optional equipment and accessories, and may not include all standard equipment.

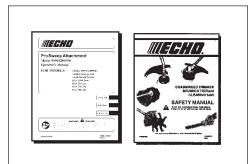

SAFETY

MANUAL SAFETY SYMBOLS AND IMPORTANT INFORMATION

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.



This symbol accompanied by the words **WARNING** and **DANGER** calls attention to an act or condition that can lead to serious personal injury to operator and bystanders.

 \bigcirc


The circle with the slash symbol means whatever is shown within the circle is prohibited.



IMPORTANT The enclosed message provides information necessary for the protection of the unit.

NOTE This enclosed message provides tips for use, care and maintenance of the unit.

INTERNATIONAL SYMBOLS

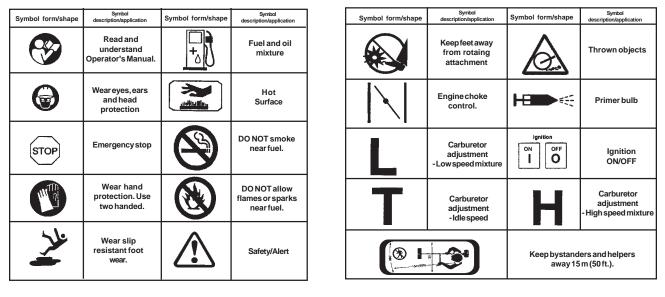

PERSONAL CONDITION AND SAFETY EQUIPMENT



ProSweep users risk injury to themselves and others if the ProSweep attachment is used improperly and or safety precautions are not followed. Proper clothing and safety gear must be worn when operating the ProSweep attachment. Failure to do so can result in serious injury.



Physical Condition

Your judgment and physical dexterity may not be good:

- if you are sick,
- if you are taking medication,
- if you have taken alcohol or drugs.

Operate unit only if you are physically and mentally well.

Eye Protection

Wear eye protection that meets ANSI Z87.1 or CE requirements whenever you operate the ProSweep attachment.

Hand Protection

Wear no-slip, heavy duty work gloves to improve your grip on the Pro Attachment Series or Split Boom handles. Gloves also reduce the transmission of machine vibration to your hands.

Hearing Protection

ECHO recommends wearing hearing protection whenever unit is used.

Proper Clothing

Wear snug fitting, durable clothing;

- Pants should have long legs, shirts with long sleeves.
- Wear hair covering to contain long hair.
- DONOTWEAR SHORTS,
- DONOT WEAR TIES, SCARFS, JEWELRY.

Wear sturdy work shoes with non-skid soles;

- DONOT WEAR OPEN TOED SHOES,
- DONOTOPERATE UNIT BAREFOOTED.

Hot Humid Weather

Heavy protective clothing can increase operator fatigue which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

Vibration and Cold --

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations followed by loss of color and numbness in the fingers. The following precautions are strongly recommended because the minimum exposure which might trigger the ailment is unknown.

- Keep your body warm, especially the head, neck, feet, ankles, hands and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.




Repetitive Stress Injuries --

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force in which you do the repetitive movement.
- Do exercises to strengthen the hand and arm muscles.
- See a doctor if you feel tingling, numbness or pain in the fingers, hands, wrists or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

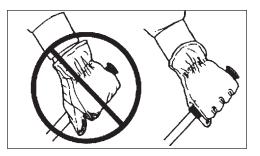



Do not operate this product indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

Read the Manuals

• Provide all users of this equipment with the Operator's Manual and Safety Manual for instructions on Safe Operation.

Clear the Work Area

• Spectators and fellow workers must be warned, and children and animals prevented from coming nearer than 15 m (50 ft.) while the unit is in use.

Keep a Firm Grip

• Hold the front and rear handles with both hands, with thumbs and fingers tightly encircling the handles.

Keep a Solid Stance

• Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.

Avoid Hot Surfaces

• During operation, the drive shaft housing, attachment bearing housing and muffler cover area may become very hot, too hot to touch. Avoid contact during and immediately after operation.









EQUIPMENT

Use this attachment with ECHO approved models only. Serious injury may result from the use of this attachment combined with a non approved ECHO product.

Before operation a complete check of the unit must be performed;


- ECHO, INC. will not be responsible for the failure of sweeping devices, accessories and parts which have not been tested and approved by ECHO for use with this ProSweep Attachment.
- Check unit for loose/missing nuts, bolts and screws. Tighten and/or replace as need
- Inspect ProSweep brushes for damage and that they are firmly secured in place. Replace brushes if damaged or missing.
- Check that the ProSweep attachment is firmly attached and in safe operating condition.

Parts

- Do not use ProSweep attachment if any part is missing or damaged.
- Have repairs done only by an authorized ECHO Service Dealer.
- Do not use any accessory or replacement part unless it is recommended in this Operator's Manual.

DESCRIPTION

Locate this safety decal on your attachment. Make sure the decal is legible and that you understand and follow the instructions on it. If it cannot be read, a new one can be ordered from your ECHO dealer. See PARTS ORDERING instructions for specific information.

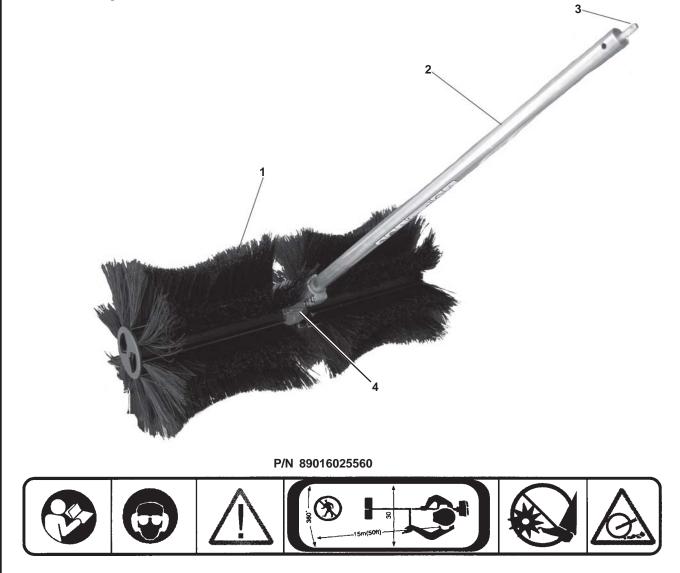

- 1. **BRUSHES -** Permanently attached to drum holders and come standard with 0.5 mm (0.018 in.) diameter nylon bristles. Optional .7 mm (0.028 in.) diameter brushes are available for fine material sweeping application.
- 2. LOWER DRIVE SHAFT ASSEMBLY Included separately in the carton and must be assembled to the ProSweep / gear housing assembly. Contains flexible drive cable, outer shaft housing and safety decal.
- 3. **FLEXIBLE DRIVE CABLE -** Cable end fits into drive shaft coupler of Pro Attachment Series or Split Boom models. Lubricate drive cable every 25 hours with high temperature automotive grease.
- 4. **BRUSH GEAR HOUSING ASSEMBLY -** Brushes come pre-assembled to the gear housing in the carton. Brushes rotate towards the operator viewed from the operators position.

8 **(((EEHD**)

CONTENTS

After opening the carton, check for damage. Immediately notify your retailer or ECHO Dealer of damaged or missing parts. Use the contents list to check for missing parts.

MI_____

- ___ 1 ProSweep Attachment
- ____1 Brushes / Gear Housing Assembly
- ____ 1 Lower Drive Shaft Assembly
- _ 1 Operators Manual
- ___ 1 Warranty Registration Card
- ___ 1 Storage Hook Assembly

ASSEMBLY




Do not perform maintenance or assembly procedures with engine running.


Tools Required:Cross Head Screwdriver, 10 mm Open End WrenchParts Required:ProSweep Gear Housing, Lower Drive ShaftAssembly, PAS or SRM-SB Power Head w/Shaft &
Coupling.

PROSWEEP GEAR HOUSING ASSEMBLY TO LOWER DRIVE SHAFT ASSEMBLY

- 1. Place brush gear housing assembly on a flat surface with gear housing shaft mount at 45° angle.
- 2. Remove gear housing locator screw (A) with cross head screwdriver.
- 3. Loosen (2) two gear housing mounting bolts (B) with 10 mm wrench.
- 4. Position lower drive shaft (end without safety decal) into gear housing shaft mount.
- 5. Align hole in drive shaft housing with gear housing shaft hole (C) and seat lower drive shaft end into gear housing shaft mount. Install and tighten locator screw (A).
- 6. Tighten gear housing mounting bolts (B).

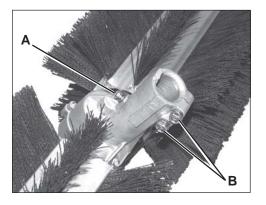

· ······

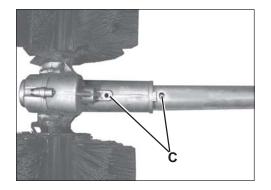

9

POWER HEAD SHAFT/LOWER SHAFT ASSEMBLY

- 1. Set Power Head/Shaft Assembly on a level surface.
- 2. Pull locator pin (A) out, and turn counter-clockwise 1/4 turn to lockout position.
- 3. Remove vinyl cap from attachment drive shaft.

CAUTION


Thrown objects hazard. Install lower drive shaft so that gear housing mounting bolts (E) face upwards. Otherwise debris will be thrown toward user.

- 4. Remove cardboard spacer from coupler, if necessary.
- 5. Carefully fit attachment drive shaft assembly into coupler (B) to decal assembly line (C), making sure that the inner lower drive shaft engages upper drive shaft mount.


NOTE


Earlier model Power Heads may have shorter couplings. Short couplings fit flush to decal point (F). New couplings are 4-3/4 in. long, and fit flush to line (C).

- 6. Rotate locator pin (A) 1/4 turn clockwise to engage lower shaft hole. Insure locator pin is fully engaged by twisting lower drive shaft. Locator pin should snap flush in coupler. Full engagement will prevent further shaft rotation.
- 7. Secure lower shaft assembly to coupler by tightening clamping knob (D).

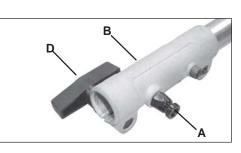



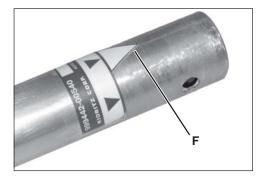

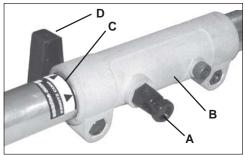

10////EEHD.

OPERATION

NOTE

Refer to your Pro Attachment Series or Split Boom Operator's Manuals for correct engine fueling, starting and stopping instructions.

- 1. Hold unit from left side resting sweeper brushes on work surface.
- 2. Firmly grasp throttle grip with right hand and front handle with left hand.
- 3. Position ProSweep at an angle to the work surface well out in front of your body.



The sweeper brushes rotate towards the operator. Do not operate ProSweep at an angle with brushes close to your body which could result in loss of control and possible serious injury.

4. Accelerate to full throttle and allow brushes to push debris ahead. Sweep to an area where debris can be piled and collected.

IMPORTANT

Extended use of unit at low throttle settings could cause damage to clutch because of clutch slipping.

5. Debris may be swept out and away from corners by turning unit over to reverse brush direction. Grip unit securely using both hands. Operate throttle trigger with thumb of right hand. For extended use, reposition front handle to allow comfortable grip. Return handle to normal position for regular operation.



Turning ProSweep over to reverse sweeper drum rotation will cause debris to be swept toward operator. Reduce engine speed, and be alert for unstable footing caused by loose debris.

- 6. When sweeping wide areas angle brushes to pile debris in rows then collect material.
- 7. Use an angle of 15-30°. This helps direct debris and reduces operator fatigue.







MAINTENANCE

Your ECHO attachment is designed to provide many hours of trouble free service. Regular scheduled maintenance will help your attachment achieve that goal. If you are unsure or are not equipped with the necessary tools, you may want to take your unit to an ECHO Service Dealer for maintenance. To help you decide whether you want to DO-IT-YOURSELF or have the ECHO Dealer do it, each maintenance task has been graded. If the task is not listed see your ECHO dealer for repairs.

SKILL LEVELS

- **Level 1** = Easy to do. Most required tools come with unit.
- **Level 2** = Moderate difficulty. Some specialized tools may be required.
- Level 3 = Experience required. Specialized tools are required.

MAINTENANCE INTERVALS

Component/System	Maintenance Procedure	<u>Skill Level</u>	Frequency
Drive Shaft Gear Housing Brushes	Grease Grease Inspect/Tighten/Replace	1 1 1	Every 25 hours of use Yearly Before each use
Screws/Nuts/Bolts	Inspect/Tighten/Replace	1	Before each use



Always stop engine and disconnect spark plug before performing maintenance procedures, otherwise serious injury may result.

LUBRICATION


Level 1.

Tools Required: 8 mm Open End Wrench, Screwdriver, Clean Rag

Parts Required: $ECHO_{\odot}LUBE^{TM} 8 \text{ oz.} (P/N 91014) \text{ or Lithium Base}$ Grease.

Gear Housing

- 1. Clean all loose debris from gear housing.
- 2. Remove screw plug (A) and check level of grease.
- 3. Add grease if necessary, DO NOT over fill.
- 4. Install screw plug (A).

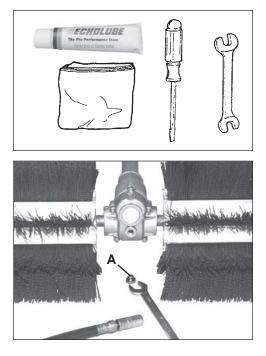


12 **[[[EEH]]**。

Drive Shaft


IMPORTANT

Lower and upper drive shaft <u>must</u> be lubricated with ECHO[®] LUBETM grease every 25 hours of operation, otherwise drive shaft assembly overheating and failure can result.

- 1. Remove gear housing locator screw (A).
- 2. Loosen (2) two gear housing mounting bolts (B).
- 3. Pull gear box from drive shaft housing.
- 4. Pull flexible cable from the drive shaft housing, wipe clean and re-coat with a thin coating [15 ml (1/2 oz.)] of ECHO_® LUBETM.
- 5. Slide the flexible cable back in the drive housing. DO NOT get dirt on the flex cable.
- 6. Position lower drive shaft (end without safety decal) into gear housing shaft mount.
- 7. Align hole in drive shaft housing with gear housing shaft hole (C) and seat lower drive shaft end into gear housing shaft mount. Install and tighten locator screw (A).
- 8. Tighten gear housing mounting bolts (B).

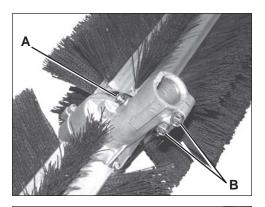



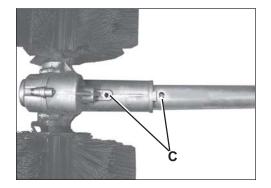

ProSweep Attachment Operator's Manual 13

BRUSH REPLACEMENT

Level 1.

Tools Required: 8 mm Open End Wrench, Cross Head Screwdriver


Parts Required: Standard Brush Asy .018in. P/N 99944200551 QTY (2) Optional Brush Asy .028in. P/N 25020225661 QTY (2)


Brushes that are broken off, deformed, or worn to within 25.4 mm (1 in.) of the brush holder drum should be replaced for best sweeping efficiency.


1. Locate brush holder access hole (A) near outer drum end.

2. Hold 8 mm nut (B) from turning with open end wrench inserted through drum holder cap. Loosen and remove bolt and lock nut with cross head screwdriver through holder access hole (A).

- 3. Remove drum cap (C). Slide brush holder drum off square axle shaft.
- 4. Install new brush holder drum, aligning hole (A) in drum axle with axle shaft hole.
- 5. Install drum cap, aligning cap holes with axle shaft and brush holder drum holes.
- 6. Install bolt and locknut. Tighten securely.

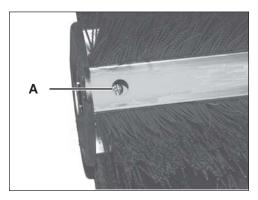

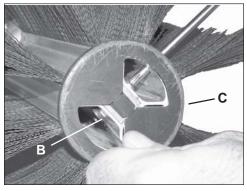

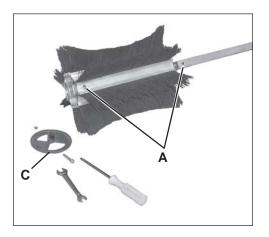



STORAGE

1. Clean ProSweep attachment bristles with water.


IMPORTANT

Do not immerse this attachment in water. Water will enter gear housing and damage gears, bearings and seals.

- 2. Apply thin coating of oil to metal parts to prevent rust.
- 3. Lubricate lower shaft assembly with grease. (Refer to Lubrication instructions.)
- 4. Store ProSweep attachment in a dry place out of reach of children. Do not store attachment with the weight resting on brushes which could bend over a long period of time. Store attachment with lower shaft housing in a horizontal or vertical position to prevent grease loss from open shaft end.

Storage Hook Installation

- 5. Insert small end of hook into locating hole on attachment shaft.
- 6. Slide plastic cap onto end of attachment shaft.

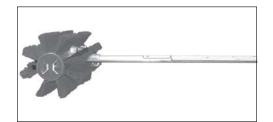




SPECIFICATIONS

ProSweep Attachment : Approved for use on PAS and Split Boom Models

Attachment Length	927 mm(36.5 in.)
Attachment Width	597 mm(23.5 in.)
Attachment Height	279 mm 11 in.)
Weight	5.1 kg. (11.25 lb.)
Drive Shaft	6.35 mm (0.25 in.)
Rotating Direction	Towards the operators viewed from the rear
Brushes	Standard 0.5 mm (0.018 in.) Nylon Bristles Optional 0.7 mm
	(0.028 in.) Nylon Bristles
Max Sweeping Width	571 mm(22.5 in.)
Lubrication	Lithium Base Grease
Gear Reduction Ratio	40 : 1
Sweeper Operating (RPM)	200
Engine Wide Open Throttle (RPM) w/attachment	7700-8500

ProSweep Attachment Operator's Manual 15

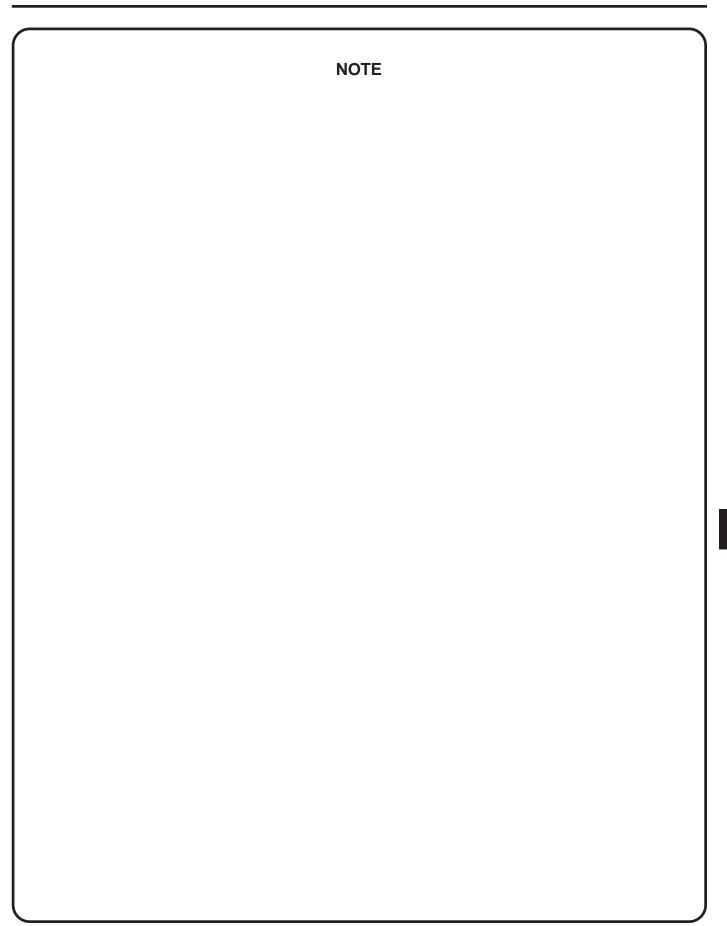

SERVICING INFORMATION

PARTS/SERIAL NUMBER

Genuine ECHO Parts and ECHO REPOWERTM Parts and Assemblies for your ECHO products are available only from an Authorized ECHO Dealer. When you do need to buy parts **always** have the Model Number and Serial Number of the attachment with you. You can find these numbers on the driveshaft model/serial number label. For future reference, write them in the space provided below.

Model No. _____ SN. _____

SERVICE

Service of this product during the warranty period must be performed by an Authorized ECHO Service Dealer. For the name and address of the Authorized ECHO Service Dealer nearest you, ask your retailer or call: 1-800-432-ECHO (3246). Dealer information is also available on our Web Site. When presenting your unit for Warranty service/repairs, proof of purchase is required.

ECHO CONSUMER PRODUCT SUPPORT

If you require assistance or have questions concerning the application, operation or maintenance of this product you may call the ECHO Consumer Product Support Department at 1-800-673-1558 from 8:30 am to 4:30 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit to help your Consumer Product Support Representative.

WARRANTY REGISTRATION

You may register your Echo equipment using the warranty registration card or register on-line at www.echo-usa.com. Registering provides a direct link between you and ECHO if we find it necessary to contact you.

ADDITIONAL OR REPLACEMENT MANUALS

<u>Safety Manuals</u> in English/Spanish or English/French are available, free of charge, from your ECHO dealer or at www.echo-usa.com.

- Operator's and Parts Manuals are available by:
- Downloading free from www.echo-usa.com
- Purchasing from your Echo Dealer.
- Manuals are available by sending a written request stating the model number and serial number of your Echo unit, part number of the manual, your name and address, and mail to the address below.

Safety Videos are available from your Echo dealer. A \$5.00 shipping charge will be required for each video.



ECHO, INCORPORATED 400 Oakwood Road Lake Zurich, IL 60047-1564

WWW.ECHO-USA.COM



SUPPORT 1-800-673-1558 8:30 - 4:30 Mon - Fri C.S.T.



001001/999999

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com