

CONTENTS

1. RECOMMENDATIONS AND SUGGESTIONS.....	3
2. USE.....	5
3. MAINTENANCE.....	5
4. CONTROLS.....	6
5. LIGHTING.....	6

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com



Register your product for better service:
www.registerelectrolux.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information


 General information and tips

 Environmental information

Subject to change without notice.

1. RECOMMENDATIONS AND SUGGESTIONS

- The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.
- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation).
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.
- Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.
- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air. When the cooker hood is used in conjunction with appliances supplied with energy other than electric, the negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the cooker hood.
- In the event of damage to the power cable, it must be replaced by the manufacturer or by the technical service department, in order to prevent any risks.
- If the instructions for installation for the gas hob specify a greater distance specified above, this has to be taken into account. Regulations concerning the discharge of air

 
- have to be fulfilled.
- Use only screws and small parts in support of the hood.
Warning: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.
 - Connect the hood to the mains through a two-pole switch having a contact gap of at least 3 mm.
 - Do not flambè under the range hood; risk of fire.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - **CAUTION:** Accessible parts may become hot when used with cooking appliances.”
 - The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.
 - Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
 - Clean and/or replace the Filters after the specified time period (Fire hazard).

2. USE


- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
 - Never use the hood for purposes other than for which it has been designed.
 - Never leave high naked flames under the hood when it is in operation.
 - Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
 - Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- Clean the hood using a damp cloth and a neutral liquid detergent.

3. MAINTENANCE


- The Activated charcoal filter is not washable and cannot be re-generated, and must be replaced approximately every 4 months of operation, or more frequently for particularly heavy usage (**W**).
- **Note:** Replacement carbon filter (**W**) is available from Electrolux spare parts.

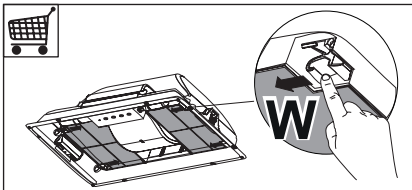

 - The Grease filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher (**Z**).

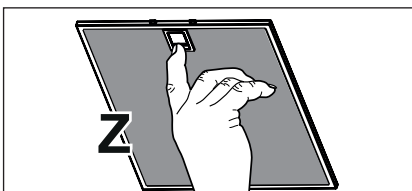

 4. CONTROLS


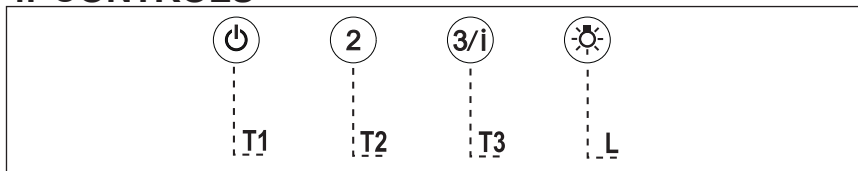
		
BUTTON	LED	FUNCTIONS
T1 Speed	On	Turns the Motor on at Speed one.
		Turns the Motor off.
T2 Speed	On	Turns the Motor on at Speed two.
T3 Speed	On	When pressed briefly, turns the Motor on at Speed three.
	Flash	Press and hold for approximately 3 seconds, turns the motor on at maximum speed. This speed is time to run 6 minutes. At the end of this time, the system will automatically return to the speed before.
L Light		Turns the Lighting System on and off.

Warning: Button T1 turns the motor off, after first passing to speed one.

5. LIGHTING

For replacement contact technical support (“To purchase contact technical support”).

  
Warning: This appliance is fitted with LED lamps. Do not look directly at the light through optical devices (binoculars, magnifying glasses...).

Lamp	Power [W]	Socket	Voltage [V]	Dimension [mm]	ILCOS Code
	40	E14	230	85x25	IBB/C-40-230-E14-35
	28	E14	220-240	104 x 35	HSGSB/C/UB-28-220/240-E14
	4	E14	220-240	107 x 37	DRBB/F-4-220-240-E14-35/100

electrolux.com/shop



 991.0XXX.XXX_01 - 160415
D00YYYY_00

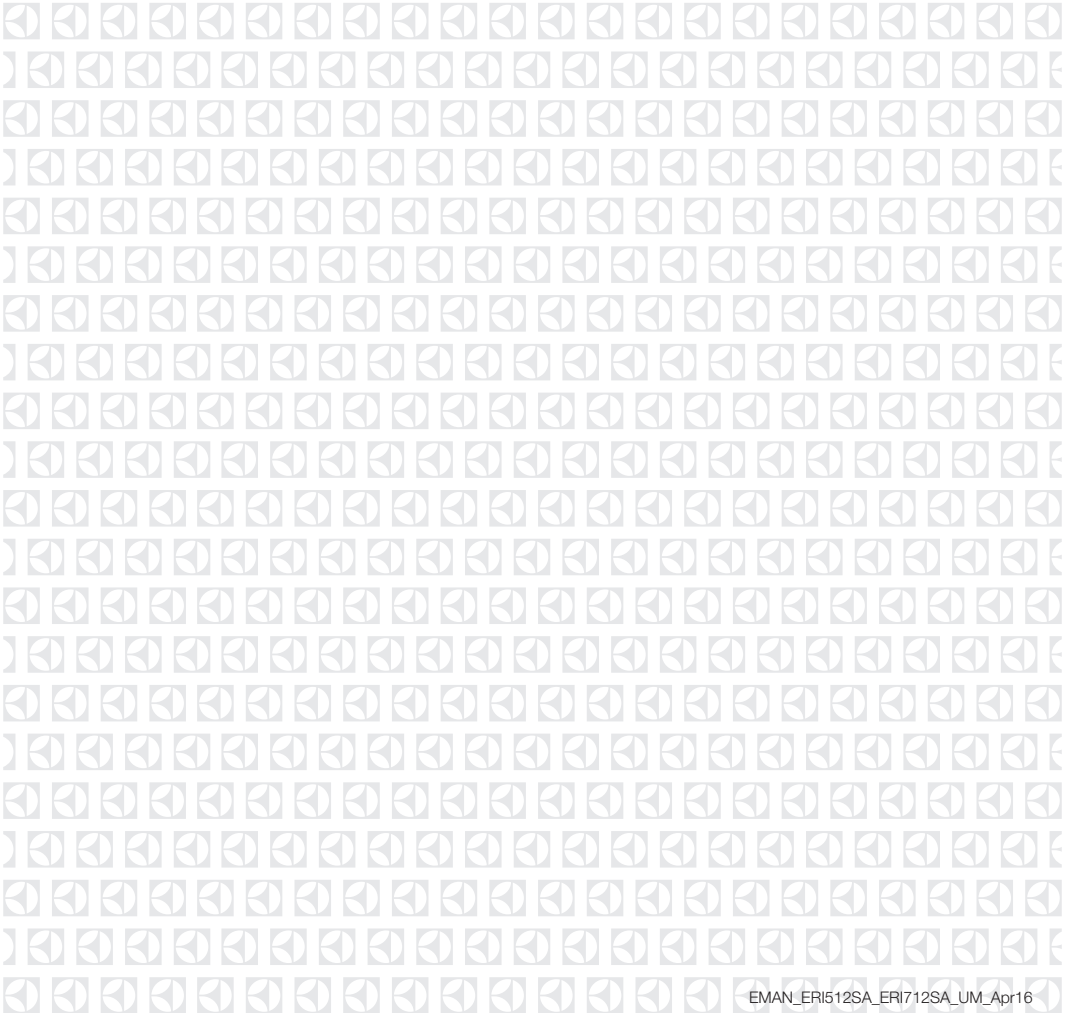

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>