STEREO SPEAKER

EBT2001



Bluetooth°

User Guide

 




Product Maintenance


Power off this product when not in use. DO NOT expose this product to water or other liquids. **DO NOT** use abrasive cleaning solvents to clean the bluetooth speaker. If you will not use the bluetooth speaker for long periods of time be sure to unplug it and store it in a dry place, free from extreme temperature, humidty, and


Using Batteries

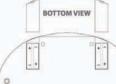

Bluetooth speaker also works with 4 AA batteries. (batteries not included)

Cocation of controls

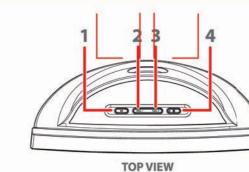

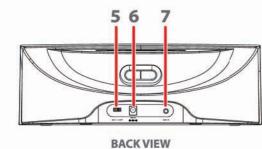

1. [►II] button

Quickpress = Pause Quickpress again = Play

2. [VOL-] button Quickpress = previous song Press & Hold = volume down

3. [VOL+] button Quickpress = next song

Press & Hold = volume up 4. [BLUETOOTH CONNECT] button / LED indicator light.

- Answer/end a call
- 5. [POWER ON/OFF] switch
- 6. DC IN jack
- 7. 3.5 mm Auxilary Cord jack

Powering ON/OFF

To turn ON:

1. Connect the pin of the included AC adaptor to the DC IN jack on the back of the Bluetooth Speaker.

- 2. Plug the AC adaptor into a wall outlet. 3. Move the [POWER ON/OFF] switch to the ON position, the
- blue LED indicator light will remain lit indicating the speaker is

To turn OFF:


1. Move the [POWER ON/OFF] switch to the OFF position, the blue LED indicator light will turn off indicating the speaker

NOTE: When not using the speaker for extened periods of time it is recommened to unplug the AC adpator from the wall

Pairing the speaker with a bluetooth enabled device


1. Make sure the Bluetooth Speaker is plugged in and turned ON.

2. Keep your **Bluetooth Speaker** and bluetooth enabled device within 3 feet of each other during the pairing

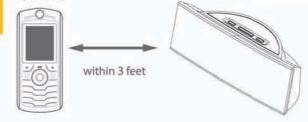

3. Press and HOLD the [BLUETOOTH CONNECT] button until you hear a beep and the blue LED indicator light starts flashing quickly. The Bluetooth Speaker is now in pairing mode.

4. Set your mobile phone or other Bluetooth enabled device accept future connection requests from your Bluetooth to search for Bluetooth devices.

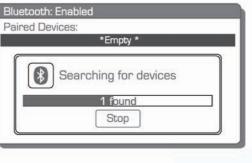


5. When the device finds the Bluetooth Speaker, confirm by selecting EBT2001 from the list.



6. Select "Pair" to connect the Bluetooth Speaker to your bluetooth enabled device.




NOTE: Depending on which model device you are trying to connect the speaker to, it may not be necessary to enter a passcode and the following message (or similar) may appear on your device's display.

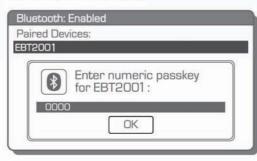

Enter passcode "0000" if prompted by the device.

7. Your Bluetooth enabled device will confirm that the pairing was completed, and prompt you to accept the connection Please respond YES to connect the Bluetooth Speaker to your Bluetooth enabled device. If the pairing was successful, the Bluetooth Speaker's indicator light will begin flashing blue every two seconds.

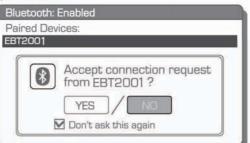

9. When attempting to reconnect the **Bluetooth Speaker** to your Bluetooth enabled device, you may see the message below, and your phone will prompt you to accept the connection request to the EBT2001 speaker, and an option not to ask this again. Please accept the connection, and if you select "Don't ask this again", your phone will automatically

Speaker.



NOTE: The screenshots above are typical of many Bluetooth enabled device in the market today, and are used to assist in the explanation of the pairing process. Your Bluetooth enabled device's interface and interaction with the Bluetooth Speaker may slightly differ from the illustrations above.

Pairing with multiple devices

The Bluetooth Speaker can be paired with up to 8 devices. Once the number of paired devices exceeds 8, the first one will be replaced.

NOTE: It is only possible to use one paired device at a time.

Stereo Bluetooth

This **Bluetooth Speaker** allows you to listen (in full stereo) and control* the music on your Bluetooth enabled mobile phone, computer or mp3 player and supports the following Bluetooth

 A2DP - Advanced Audio Distribution Profile • AVRCP - Audio/Video Remote Control Profile

To use the **Bluetooth Speaker** to listen to and/or control music, your Bluetooth enabled device must support the A2DP and AVRCP profiles. Please refer to the user guide of your Bluetooth enabled device for more information.

*The Emerson Bluetooth Speaker is compatible with any brand of Bluetooth-enabled phone or music device that supports Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

In order for Bluetooth devices to communicate with one another properly, they must utilize the same Bluetooth profile. To determine the profiles supported by your device (mobile phone, gaming console, computer or mp3 player), please refer to the device's user guide.

Certain Bluetooth features including those listed may not be supported by all compatible Bluetooth-enabled devices, and/or the functionality of such features may be limited in certain devices.

Playing music

To enjoy wireless music on your Bluetooth Speaker, press the [PLAY] button of your Bluetooth enabled device to begin music playback. Once playback has begun, you can control the music from the control buttons of the Bluetooth Speaker (Not all Bluetooth enabled devices support the control of music using Bluetooth).

applications require that your first press the [PLAY/PAUSE] button on your device before you can control the music with the Bluetooth Speaker.

playback, press the [►II] button again.

Adjusting the volume


volume to the desired level.

enabled device's volume control.

Skipping or searching songs*

Quickpress the [VOL+] button to go to the next song.

Music Controls

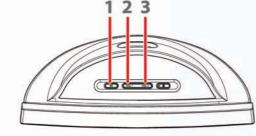

Quickpress = Pause Quickpress again = Play

Quickpress = previous song Press & Hold = volume dow

3. [VOL+] button

Quickpress = next song Press & Hold = volume up

Using as a wired speaker

The EBT2001 can be used as a wired speaker by using the included 3.5mm Auxilary Cord.

2. Plug one end of the Auxilary Cord into the DC IN jack

1. Make sure the Bluetooth Speaker is plugged in and turned

- located on the back of the Speaker. 3. Plug the other end of the Auxilary Cord into the
- headphone jack (this is a standard headphone-out jack). 4. Use your media device's music controls to control the

Troubleshooting tips

NOTE: Some phones, Bluetooth enabled media players, and/or


Play/Pause*

Press the [►II] button to pause the music. To resume music

Press and HOLD the [VOL+] or [VOL-] button to adjust the

NOTE: You may also adjust the volume from your Bluetooth

(Dependent on your phone supporting this feature) Quickpress the [VOL-] button to go to the previous song.

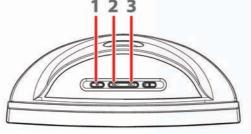

1. [►II] button

2. [VOL-] button

- headphone jack of any media device which has a 3.5mm
- music and volume (the controls on the speaker will not function when using it as wired speaker).

I Can pair the Bluetooth Speaker with my Bluetooth device, but I cannot hear any music?

Make sure your Bluetooth device supports A2DP profile.

I cannot get the Bluetooth Speaker into Pairing Mode.

- Make sure the Bluetooth Speaker is plugged in and turned ON before beginning the pairing process. • Press and hold the [BLUETOOTH CONNECT] button until the
- comply with the requirements for a Class B digital device under Part 15 of the Federal Communications BLUE indicator light flashes quickly, this will signal that the speaker is in Pairing Mode, and ready to connect to your intended to provide reasonable protection against harmful interference in a residential installation. This equipment Bluetooth enabled device. generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the
- My mobile phone is not able to pair with the Bluetooth
- Make sure that the speaker is plugged in and turned on before • Keep your Bluetooth Speaker and Bluetooth enabled
- Check that your device's Bluetooth feature is turned ON.
- Try repeating the pairing process, see "Pairing the Speaker with a Bluetooth enabled device."

device within 3 feet of each other during the pairing

- After successfully pairing my Bluethooth enabled device
- and Bluetooth Speaker, when I shut my device off and turn it on again, the speaker did not automatically connect.
- Try turning the speaker OFF, and then turning it ON again. • Many Bluetooth enable devices have an auto reconnect option when first attempting to reconnect to a newly paired Bluetooth device. Make sure you accept this option, so that your Bluetooth Speaker automatically reconnects to your Bluetooth enabled device; check the user guide of your
- Bluetooth enabled for more information regarding this option. • Try unpairing the speaker from your Bluetooth enabled device, and repeat the pairing procedure.
- The sound is very low.
- Try adjusting the volume by using the [VOL] buttons on your speaker; make sure the volume on your Bluetooth enabled device is turned up as well.

The shipping address of the authorized service center is: Safety Information

Southern Telecom, Inc. **ATTN: Customer Service - 2nd Floor** · Observe all signs in the designated areas where some electronic 14-C 53rd Street devices or RF radio products are required to be switched off. Brooklyn, NY 11232 These could include airplanes, hospitals, blasting areas, and potentially explosive atmospheres.

> Should you have any questions or problems concerning this product, please contact our customer service department at:

(2) this device must accept any interference received,

Warning: Changes or modifications to this equipment

not expressly approved by the party responsible for

the equipment.

communications

technician for help.

Limited Warranty

(Dated bill of sale).

the package.

center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

and remember to insure your return.

compliance could void the user's authority to operate

NOTE: This equipment has been tested and found to

nmission (FCC) rules. These requirements are

instructions, may cause harmful interference to radio

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception

which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interfer-

Increase the separation between the equipment and

different from that to which the receiver is connected.

In the unlikely event that this product is defective, or does

not perform properly, you may within one (1) year from your

original date of purchase return it to the authorized service

· Provide proof of the date of purchase within the package

Prepay all shipping costs to the authorized service center,

a telephone contact number, and the defective unit within

Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same

or similar model of equal value if examination by the service center

determines this product is defective. Products received damaged

as a result of shipping will require you to file a claim with the carrier.

Include a return shipping address (no P.O. Boxes),

· Connect the equipment into an outlet on a circuit

• Consult the dealer or an experienced radio/TV

Warranty Information

ence by one or more of the following measures:

• Reorient or relocate the receiving antenna.

(1-877-768-8483 (Toll Free) Monday - Thursday: 9AM - 5PM (EST) Friday: 9AM - 3PM (EST)

> via e-mail at **™** cs@southerntelecom.com

FCC and telephone company information Warranty information (Cont.)

Warranty service not provided This device complies with Part 15 of the FCC Rules. This warranty does not cover damage resulting from a Operation is subject to the following two conditions: misuse, abuse, improper installation or operation, lack of rea care, and unauthorized modification. This warranty is ve (1) this device may not cause harmful interference, and the event any unauthorized person opens, alters or rep

product. All products being returned to the authorized including interference that may cause undesired center for repair must be suitably packaged.

Limitation of Warranty:

• THE WARRANTY STATED ABOVE IS THE ONLY WAR APPLICABLE TO THIS PRODUCT. ALL OTHER WARR EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRAN MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPO HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORM GIVEN BY SOUTHERN TELECOM INC. IT'S AGENTS, OR EMP SHALL CREATE A GUARANTY OR IN ANY WAY INCREA SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WA S THE EXCLUSIVE REMEDY OF THE CONSUMER. SOL TELECOM INC. SHALL NOT BE LIABLE FOR INCIDEN CONSEQUENTIAL DAMAGES RESULTING FROM THE USE PRODUCT OR ARISING OUT OF ANY BREACH OF ANY E OR IMPLIED WARRANTY ON THIS PRODUCT, THIS DISC OF WARRANTIES AND LIMITED WARRANTY ARE GOV BY THE LAWS OF THE STATE OF NEW YORK, EXCEPT EXTENT PROHIBITED BY APPLICABLE LAW, ANY II WARRANTY OF MERCHANTABILITY OR FITNESS PARTICULAR PURPOSE ON THIS PRODUCT IS LIMI THE APPLICABLE WARRANTY PERIOD SET FORTH

Some states do not allow the exclusion nor limitation of in or consequential damages, or limitations on how long an warranty lasts so the above limitations or exclusions may n to you. This warranty gives you specific legal rights, a also may have other rights that vary from state to state



Distributed by Southern Telecom Inc. Brooklyn, NY 112

© 2012 Southern Telecom Inc. All rights reserved.

Emerson and the G-Clef logo are registered trademar nerson Radio Corp. Parsippany, New Jersey USA.

The Bluetooth® word mark and logos are owned by the Bluetoot

All other trademarks are trademarks of their respective own

www.emersonphones.com

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com