🚱 🛾 OWNER'S MANUAL

Emerson



Slimline Caller ID Phone

Model EM-2517

FCC and telephone company information

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from
- that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular ack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or it's authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone

service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

This telephone system meets FCC Standards for Hearing Aid Compatibility.

WARNING

TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



RNING: TO REDUCE THE F xclamation poir F ELECTRIC SHOCK, DO NOT within the equilateral angle is intended to a MOVE COVER (OR BACK). er to the presen O USER SERVICEABLE PART ortant operating and SIDE. REFER SERVICING T naintenance (servicing nstructions in the litera UALIFIED SERVICE PERSONNEL ccompanying the produc

Rating plate and caution marking are marked on the bottom enclosure of the apparatus.



the presence of unir

closure that may be

onstitute a risk of electr

ufficient magnitude to

vithin the product's

hock to persons.

CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the IMPORTANT SAFETY INSTRUCTIONS provided with this product and save them for future reference.

Important safety instructions

NOTE: Some of the precautions below may not apply to your product, e.g.: Battery and power cord precautions.

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions


- 2. Follow all warnings and instructions marked on the product. 3. Unplug this product from the wall outlet before cleaning. Do not
- use liquid or aerosol cleaners. Use a damp cloth for cleaning. 4. Do not use this product near water (for example, near a bath
- tub, kitchen sink or swimming pool).
- 5. Do not place this product on an unstable surface. 6. Slots and openings in the back or bottom of this product are
- provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
- 7. Never push objects of any kind into the ventilation slots of this product as they may touch dangerous voltage points or create a short circuit that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 8. Use only the power cord and batteries indicated in this manual. 9. This product should be operated only from the type of power
- source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company
- 10. Plug the adaptor to the socket outlet that is closest to the equipment and which is easily accessible.
- 11. Do not allow anything to rest on the power cord. Do not install this product where the cord may have anyone walking on it. 12. To reduce the risk of electric shock, do not disassemble this
- product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- 13. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 14. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.
- 15. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions: A. When the power supply cord or plug is damaged or frayed.
- B. If liquid has been spilled onto the product.
- C. If the product has been exposed to rain or water. D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
- E. If the product has been dropped and damaged.
- F. If the product exhibits a distinct change in performance. 16. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from
- liahtnina. 17. Do not use the telephone to report a gas leak in the vicinity of the leak
- 18. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

For products that require batteries

- Important battery precautions
- Use only the type of battery specified in this user manual Batteries may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged.
- Do not dispose of the battery(ies) in a fire. They may explode Check with local codes for disposal instructions.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing different types of batteries or inserting them incorrectly, may cause them to leak.
- Discard any leaky or deformed battery immediately. Leakage from battery acid can cause skin burns or other personal injury. • Please help to protect the environment by recycling or disposing
- of batteries according to federal, state, and local regulations.

SAVE THESE INSTRUCTIONS

Telephone jack requirements

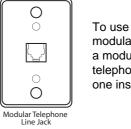

To use this phone, you must have an RJ11C modular telephone jack. If you do not have a modular jack, please call your local telephone company to find out how to get

one installed


[6] Important installation information

- Never install telephone wiring during a lightning storm. Never touch uninsulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface
- Use caution when installing or modifying telephone lines.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.

• Temporarily disconnect any equipment connected to the phone, such as faxes, other phones, or modems.


CAUTION: Disconnect the phone cord from the

wall outlet before installing or replacing the batteries. (Only for telephones which require batteries

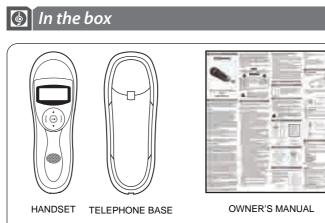



Location of controls

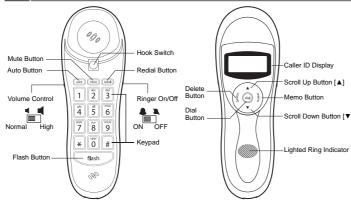


Location of controls

This telephone requires 4 AA-size alkaline batteries to operate the Caller ID and memory functions.

- 1. Make sure that the telephone is
- disconnected from the wall jack. 2. Remove the battery compartment covers located at the bottom of
- the unit's base. 3. Install 4 AA- size batteries

(not included) as shown on the diagram.

🖞 + AA 1.5V –

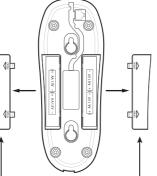

"AA" size battery


Battery compartment covers

- Replace the covers.
- wall jack.
- NOTE:

Connecting

diagram below.

telephone jack.

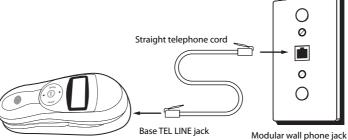

WALL MOUNTING

plate.

Re-connect the line cord to the modular


• Do not mix old and new batteries. • If you will not be using the phone for a long period of time, remove the batteries to

prevent possible leakage and corrosion.

DESK MOUNTING

1. Connect the coil cord to the handset and base as shown in the

0

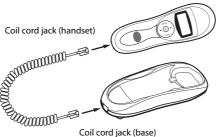

Plug one end of the straight line cord into the jack at the bottom of the phone's base, and the other end into a modular wall


3. Pick up the handset and confirm you hear the dial tone.

To mount your telephone on a wall plate (not included), follow the

instructions below: 1. Plug the straight line cord into a modular wall phone jack.

2. Align the holes on the base with the mounting studs on the wall

3. Pull the base down onto the studs until the telephone is secure.

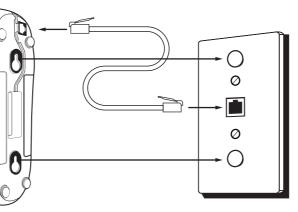

Setting up the Caller ID menu

IMPORTANT: Do not connect the telephone into the wall jack while setting up the Caller ID menu because an incoming call may invalidate the information not yet saved.

1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶".

2. Use the [▲] or [▼] buttons to scroll through the options below and press the [dial] button to select the desired option you wish

• DATE/TIME

to set.

- LOCAL AREA CODE • REGIONAL AC'S-1
- SELECT LANGUAGE
- T/P DIAL MODE
- EXIT SETUP

NOTE: Press the [flash] button to exit the setup menu, or the phone will exit automatically if there is no operation within 20 seconds and return to the "NO CALLS" screen.

DATE AND TIME

The date and time is programmed automatically when the first Caller ID record is received. It is also possible to set the date and time manually if desired.

1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶".

2. Use the [▲] or [▼] buttons and select "DATE/TIME" and press the [dial] button to enter.

3. Use the [▲] or [▼] buttons to set the hour, minute, AM/PM, month, and day 4. Press the [dial] button to confirm your selections.

LOCAL AREA CODE

The telephone uses the programmed area code to determine the number format to display when receiving Caller ID information. It is also used for the dial back feature.

1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶".

- 2. Use the [▲] or [▼] buttons and select "LOCAL AREA CODE" and press the [dial] button to enter.
- 3. Use the [▼] button to select the first digit and press the [▲] button to confirm and skip to the next digit.
- 4. Use the [delete] button to edit, and press the [dial] button to confirm.

5. Use the same method to set the rest of the digits.

NOTE: You can also use the keypad to set the area code.

REGIONAL AREA CODES

Similar to programming local area codes, programmed regional area codes allow the phone to determine the number format to display when receiving Caller ID information. Calls matching any of the programmed regional area codes are displayed as 10 digits. This is helpful for areas that have multiple or overlapping area codes that require 10 digit dialing.

- 1. Press and hold the [dial] button until the display shows
- "SET ◀ OR ▶". 2. Use the [▲] or [▼] buttons and select "REGIONAL AC'S-1'
- and press the [dial] button to enter 3. Use the [▼] button to select the first digit and press the [▲] button to confirm and skip to the next digit.
- 4. Use the [delete] button to edit, and press the [dial] button to confirm.
- 5. Use the same method to set the rest of the digits. Up to 6 regional area codes may be programmed.
- **NOTE:** You can also use the keypad to set the regional area codes

SELECT LANGUAGE

This setting allows you to choose the language for the display information

- 1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶"
- 2. Use the [▲] or [▼] buttons and select "SELECT LANGUAGE" and press the [dial] button to enter.
- Use the [▲] or [▼] buttons to select the desired language. 4. Press the [dial] button to confirm.

TONE / PULSE DIAL MODE

- Choose Tone or Pulse dialing. 1. Press and hold the [dial] button until the display shows
- "SET ◀ OR ▶" 2. Use the [▲] or [▼] buttons and select "T/P DIAL MODE" and
- press the [dial] button to enter. 3. Use the [▲] or [▼] buttons to select the desired dial mode.
- 4. Press the [dial] button to confirm.


EXIT SETUP

Telephone

When "EXIT SETUP" is displayed press the [dial] button exit.


SWITCHING THE RINGER ON OR OFF

Slide the ringer switch to the "OFF" position to turn the ringer off. The ringer will not be activated by any incoming calls. Don't forget to turn the ringer "ON" when you are ready to receive calls, otherwise you will not hear the ringing sound during incoming calls. **NOTE:** When the ringer switch is in the "OFF" position, the lighted ring indicator will still alert you to incoming calls.

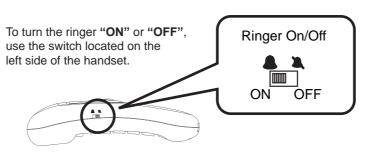

ADJUSTING THE HANDSET VOLUME

 To adjust the handset volume use the switch located on the



REDIAL

To redial the last number called use the redial feature. This feature is useful when the number you are calling is busy.

- 1. Pick up the handset.
- 2. Press the [redial] button.

3. The last number called is redialed.

FLASH

The Flash feature is used to activate calling services available through your local phone company, such as Call Waiting, and Three Way Calling. To use the features below you must subscribe to these services from your local telephone company.

To answer an incoming call while having a conversation:

After you hear the Call Waiting tone, press and release the [flash] button. The first call is placed on hold and the second call is answered.

To return to the first call and put the second call on hold: Press and release the [flash] button again to return to the first call, the second call will be put on hold.

To activate Three Way Calling:

Press and release the [flash] button while on the first call, you will hear a dial tone. Dial a second number, and press the [flash] button again to connect the two calls.

MUTE

To temporarily prevent the person on the other end of the line from hearing your conversation, press the **[mute]** button. To deactivate mute, press the [mute] button again.

MEMORY

This telephone can store up to 10 of your most frequently dialed phone numbers.

Storing frequently called numbers

- Pick up the handset.
- 2. Press the [memo] button, the display shows "M0-M9".
- 3. Push the desired memory location (0-9) on the handset keypad, and press the [memo] button to confirm.
- 4. Use the keypad to enter the telephone number and press the [memo] button to confirm.
- 5. Use the keypad to enter the name and press the [memo] button to confirm and exit.
- **NOTE:** Use the [redial] button to insert a pause when a delay is needed in an automatic dialing sequence.

Changing a stored number

Repeat the storage sequence above, the new number will replace the previously stored number at that memory location. Dialing a stored number

- 1. Pick up the handset.
- 2. Press the [auto] button on the handset keypad.
- 3. Press a memory location (0-9) and the stored number will be dialed automatically.

- 1. Pick up the handset
- 2. Press the [memo] button.

the steps below

Pick up the handset

from the keypad.

Caller ID

local telephone company.

phone's Caller ID memory

ID memory list

3. Use the [▲] or [▼] buttons to select a memory location from the display.

You can copy a number from the Caller ID memory by following

Use the [▲] or [▼] buttons to select a number from the Caller

3. Press the [memo] button, and select a memory location (0-9)

[memo] button a third time to confirm the name and exit.

IMPORTANT: In order to use this unit's Caller ID features,

Caller ID Service or Call Waiting Caller ID Service from your

This telephone automatically displays an incoming caller's name

JOHN SMITH

1 Name

2. Number

4. AM / PM

3. Time

and stored in the Caller ID memory.

to the original call.

Receiving Caller ID information

oldest Caller ID record will be deleted.

Reviewing Caller ID information

Call Waiting Caller ID

-7 (8-555- (234

5. Date

Provided you subscribe to Call Waiting Caller ID service from

your phone company; if you receive an incoming call while on the

phone, a beep will indicate the presence of a Call Waiting call on

the line. The Call Waiting Caller ID information will be displayed

NOTE: When you hear the Call Waiting beep, press the [flash]

When you receive a call, the caller's information is displayed,

for up to 90 of the most recent calls will be stored into the

allowing you to decide whether or not to answer the call. If you are

away from home or unable to answer the phone, the information

telephone's Caller ID memory. When receiving the 91st call, the

To review the information of your received calls which are stored

in the phone's Caller ID memory, use the [▲] or [▼] buttons.

button to put the current call on hold and answer the

incoming call. Press the [flash] button again to return

8. New Calls

Low Battery Indicator

7. Call Waiting indicator

and telephone number, as well as the date and time of the call.

It can record and store the information of up to 90 calls into the

vou must subscribe to either the standard Name/Number

4. Press the [memo] button to confirm the memory location, press

the [memo] button again to confirm the number, and press the

4. Press the [dial] button, to dial that number.

Copying a number from the Caller ID memory

Deleting Caller ID information

wish to delete.

automatically.

2. Press the [dial] button

code, and calling region.

is called automatically.

you are on the phone.

Phone does not ring

Replace batteries.

properly plugged in.

used at the same time.

Clean with a soft cloth.

later date

No dial tone

No display

2. Press the [delete] button.

1. Use the [▲] or [▼] buttons to select the caller information you

NOTE: To delete all Caller ID information, press and hold the [delete] button until the display shows "ERASE ALL?", then press the [delete] button again to confirm. All Caller ID records will be erased.

Dialing back a number from Caller ID memory

When reviewing Caller ID information, you may dial back the phone number displayed by pressing the [dial] button. If the phone is ON the base:

1. Use the [▲] or [▼] buttons and select the number you would like dialed from the Caller ID memory.

2. Press the [dial] button, the display shows "PICK UP OR ADJ". 3. Pick up the handset and the displayed number will be dialed

NOTE: Depending on how the incoming caller's phone number is formatted when it's received, and whether or not you previously pre-programmed your local area code into the setup menu, you may need to adjust the format of the incoming caller's stored phone number before making the call. Press the [dial] button to scroll through different dialing options (7, 10, or 11 digits).

If the phone is OFF the base:

1. Use the [▲] or [▼] buttons to select the number you would like dialed from the Caller ID memory.

3. The display shows "ADJUST"

4. A three second timer begins allowing you to adjust the number format to either 7, 10, or 11 digits depending on your local area

5. Press the [dial] button to scroll through the different dialing options (7, 10, or 11 digits).

6. When the three second timer runs out, the displayed number

Caller ID display messages

NO CALLS - The Caller ID memory is empty.

UNAVAILABLE - The incoming call does not have Caller ID service. If "UNKNOWN CALLER" appears along with a calling number, the name information for that number is not available. **LOW** - **LOW** The battery power is low, and the batteries need to

be replaced as soon as possible. Please remember to use alkaline batteries, and do not mix old and new batteries.

BLOCKED CALL - The incoming call is registered as a private number, and Caller ID information is withheld.

CALL WAITING - CALLWATING If you subscribe to Call Waiting Caller ID Service, this icon flashes when you receive a call while

NEW CALL - Indicates call or calls that have not been reviewed.

Troubleshooting tips

Check all cabling, and telephone jack connections.

Make sure the ringer switch is set to the ON position.

Make sure the batteries are properly installed.

No information is shown after the phone rings • In order to receive Caller ID records, you must subscribe to the standard name and number Caller ID service available through

your local telephone company. Be sure to wait until the second ring before answering.

Other party cannot hear you • Check if the [mute] button has been accidently pressed, if so press the [mute] button again to

deactivate the mute function. • Make sure the handset coil cord is

 Check that extension phones are on the hook at the same time you're using the phone. It is normal

for the volume to drop when additional extension phones are

Product maintenance

Follow the guidelines below to properly maintain this product: Avoid putting it near heating appliances and devices that generate electrical noise (for example: motors or fluorescent

 DO NOT expose to direct sunlight or moisture. • Avoid dropping the unit and/or other rough treatment.

 Never use a strong cleaning agent or abrasive powder because this will damage the finish.

• Retain the original packaging in case you need to ship it at a

Warranty information

1 Year Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within one (1) year from your original date of purchase return it to the authorized service center for repair or exchange.

- TO OBTAIN WARRANTY SERVICE:
- Provide proof of the date of purchase within the package (Dated bill of sale)
- Prepay all shipping costs to the authorized service center, and remember to insure your return
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.

• Describe the defect or reason you are returning the product. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Bouthern Telecom Inc. **ATTN: Returns Department** 14-C 53rd Street Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

(1-877-768-8483 (Toll Free)

Monday - Thursday: 9AM - 5PM (EST) Friday: 9AM - 3PM (EST)

via e-mail at **⊠** cs@southerntelecom.com

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC. IT'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.



www.emersonphones.com Manufactured by Southern Telecom Inc. Brooklyn NY. 11232 © 2009 Southern Telecom Inc. All rights reserved. Emerson and the G-Clef logo are registered trademarks of Emerson Radio Corp. Parsippany, New Jersey USA.



Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com