

In the box

EM185C

music
camera
videos
photos
record
voice
browser
settings

User Guide

Location of controls

- [POWER] On-Off switch
- Micro card slot
- LCD screen
- [MENU] button: previous menu / main menu
- [MODE] button: volume menu/switch camera mode
- [>||] button: next file / fast forward (hold)/ volume up
- [>||] button: select / play / pause / shutter (camera)/ power on-off/start-stop video recording
- [<||] button: previous file/rewind (hold) / volume down
- Mini USB Port
- Microphone / strap holder
- Headphone jack
- Camera lens

Charging

- Slide the [POWER] switch to the ON position.
NOTE: The player will not charge while in the power OFF position.
- Connect the player to your computer using the included USB cable.
- Charge the battery between 3-5 hours. Do not charge for more than 8 hours.
- The battery icon will move while charging and stop moving when fully charged.
- Make sure the player fully charged before turning it on.

NOTE: Charge the player for at least 8 hours before using it for the first time.

Battery level indication:

- indicates that the battery is full.
- indicates low battery; the player should be charged as soon as possible.

Videos

To watch videos

- Select "videos" from the main menu and press the [>||] button to confirm.
- Use the [<||] or [>||] button to select a folder to open or video to watch and press the [>||] button to start playing the selected video.
- If a folder is opened, use the [<||] or [>||] button to select a video and press [>||] to view the video.

Pausing playback

- While a video is playing, press the [>||] button to pause the playback.
- To resume the playback, press the [>||] button once again.

Skipping videos

- Press the [>||] button to skip forward to the next video.
- Press the [<||] button to skip back to the previous video.

Searching backward or forward within a video

- Press and HOLD the [<||] button to rewind within a video.
- Press and HOLD the [>||] button to fast forward within a video.

Adjusting the volume

*See "Basic operation".

Microsoft SD card

This player includes 4GB internal memory, you may use Micro SD cards (up to 32GB) to increase the memory of the player.

To insert the Micro SD card:

- Turn the player off before inserting or removing the card.
- Insert the Micro SD card into the card slot with the metal contacts facing towards the front of the player and gently push it in until it clicks. Do not apply excessive force as this may damage the player and/or Micro SD card.
- To view certain types of files on the Micro SD card, select a function icon from the home screen, then open the browser and select "Dir List".
or
to view all files on the micro SD card, select "browser" from the home screen then select "Dir List".
- To remove the Micro SD card, gently push it in until it pops out.
- When the player is connected to a computer with a card inserted, the card will be listed as a second drive titled "MP3".

NOTE: Do not use force while inserting or removing a card. Do not remove the card during file transfers. Turn the player off before inserting or removing a card.

Video Converter

Before transferring video files to the MP3 Player, you must convert them to the correct format. Use the Video Converter provided on the included CD to convert most video files to the correct format suitable for the player.

- Insert the CD into CD drive of your computer.
- Click on "User Guide".
- Click on "View" to view instructions on installing and using the video converter.

Click "User Guide" Click "View"

Photos and voice notes

To view photos

- Select "photos" from the main menu and press the [>||] button to confirm.
- Press the [<||] or [>||] button to select a folder to open or photo to view and press the [>||] button to open the photo.
- If a folder is opened, use the [<||] or [>||] button to select a photo and press [>||] to view the photo.
- Press the [MENU] button to return to the previous folder.

To record voice notes

- Select "voice" from the main menu and press the [>||] button to confirm. The voice note recording screen pops up.
- Press the [>||] button to start recording a voice note.
- Press the [>||] button again to pause the recording.
- Press the [MENU] button to stop the recording and save the voice file. The player will ask you to confirm your choice. Use the [<||] or [>||] button to choose and press the [>||] button to confirm.
- Press the [MENU] button to bring up the voice recording menu where you can change the recording settings.

Note: Recorded voice notes will be saved in a "Record list" folder in the "music" section. You can also find the recorded voice notes in the "RECORD" folder of the "browser" section.

Basic operation

Turning on/off

Make sure the MP3 player is fully charged before turning it on.

- To turn on the player, make sure the [POWER] switch is in the "ON" position and press and HOLD the [>||] button until the display lights up.
- To turn off the player, press and HOLD the [>||] button until the display shuts off or slide the [POWER] switch to the "OFF" position.

Slide left to turn ON Slide right to turn OFF

MicroSD card slot [POWER] switch

previous menu Open volume menu /switch camera mode

previous / volume down next / volume up

power on/off (hold) / select /confirm

Main menu

After turning on the player, the main menu appears. Use the [<||] or [>||] buttons to scroll to the desired option on the main menu and press the [>||] button to confirm your choice. To return to the main menu at any time, press the [MENU] button.

music play songs record record videos

camera take and store photos voice record voice notes

videos play videos browser browse all files

photos view pictures settings change system settings

To navigate the main menu

- [>||] button - moves the selection right to the next option.
- [<||] button - moves the selection left to the previous option.
- [>||] button - makes a selection.

To navigate sub-menus

- [>||] button - moves the selection down.
- [<||] button - moves the selection up.
- [>||] button - select option.
- [MENU] button - return to previous menu.

Adjusting the volume

NOTE: You must be in playback mode to access the volume menu.

- Press the [MODE] button to open the volume menu (a speaker will be shown on the screen).
- Press [<||] to decrease volume.
- Press [>||] to increase volume.
- Press the [MODE] button again to confirm and exit volume menu.

Camera

To use the camera

- Select "camera" from the main menu and press the [>||] button to confirm. The LCD screen turns into the viewfinder screen.
- Press the [>||] button to zoom in.
- Press the [<||] button to zoom out.
- Press the [>||] button to take a picture and save the file.
- Press the [MENU] button to bring up the camera menu where you can change the camera's settings.
- Press the [MENU] button to return to camera mode. Press again to go to main menu.

Note: Camera pictures will be saved in a folder which can be found in the "photos" section. You can also find the camera pictures in the "PICTURES" folder of the "browser" section.

zoom in shutter / take picture

previous menu / camera options menu (hold) zoom out switch camera mode

start / pause recording switch camera mode

Browser and deleting files

The "browser" section is a file directory of all information on the player. All files are categorized into their respective folders. Select "browser" from the main menu and press [>||] to confirm. You can now browse through all of your files easily by category. Use the [<||] or [>||] to scroll through the options and press the [>||] to confirm your choice.

Deleting files:

- Connect the MP3 Player to your computer, and locate "MP3."
- Open "MP3" by double clicking on it.
- Locate the file you would like to delete and RIGHT click on the file.
- Locate "Delete" and LEFT click on the selection.
- Select Yes or No to confirm or deny deletion of the file.

Or

- Connect the MP3 Player to your computer, and locate "MP3."
- Open "MP3" by double clicking on it.
- Locate the file you would like to delete and RIGHT click on the file.
- Press DELETE on the keyboard.

System settings

Select "settings" from the main menu and press the [>||] button to confirm.

System Settings options:

Date & Time: Change the date and time displayed on the player.

Display: Change the backlight timer and brightness to conserve battery power.

Power Saving: Set the Auto-Off timer ("Idle Time"). This timer turns the player off after the chosen period of inactivity to conserve battery power. Also set the Sleep Timer.

Language: Change the display language of the player.

Player Information: View the player information including free space, etc.

Note: When changing settings, press and HOLD the [MENU] button to move the cursor to the next option.

Transferring media files to the player

- Find music, picture, or video files on your computer.
- Connect the MP3 Player to your computer, and locate "MP3."
- Drag and Drop or Copy and Paste the files to the appropriate file type folder (MUSIC, PICTURES, VIDEO, etc.).

IMPORTANT: Do not disconnect the MP3 Player from the PC while transferring files as doing so will damage the MP3 Player and your files.

NOTE: Screenshots above may be slightly different than your computer's operating system.

Music

To play music

- Select "music" from the main menu and press the [>||] button to confirm.
- Scroll to the desired folder and press the [>||] button to confirm.
- Use the [<||] or [>||] button to select a track then press the [>||] button to start playing the selected track.
- Press the [MENU] button at any time to return to the previous menu.

Pausing playback

- While a song is playing, press the [>||] button to pause the playback.
- To resume the playback, press the [>||] button once again.

Skipping Tracks

- Press the [>||] button to skip forward to the next track.
- Press the [<||] button to skip back to the previous track.

Searching backward or forward within a track

- Press and HOLD the [<||] button to rewind within a track.
- Press and HOLD the [>||] button to fast forward within a track.

Adjusting the volume

*See "Basic operation".

previous menu volume menu

previous track/rewind (hold)/ volume down next track/ (hold)/ fast forward / volume up

select /confirm / play / pause

Music submenu

- While playing music, press the [MENU] button to open the music submenu.
- Use the [<||] or [>||] right buttons to select and option and press the [>||] button to confirm.
- Press the [MENU] button to return.

NOTE: To save a song to a "favorites" list, open the music submenu and select "Add to MyList" where you can choose from five playlists. To access the playlists, select "My Music List"

Legal information

FCC Part 15: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governmental laws in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to HYPERLINK "http://www.polaroid.com" www.polaroid.com and reference About Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Troubleshooting

Can not power on

- The battery may be exhausted, please recharge the battery.
- Check that the [POWER] switch is in the ON position.

Files can not be transferred to the player

- Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
- Check the connection between the player and PC, and confirm the USB cable is properly connected.
- Check that the [POWER] switch is in the ON position.

Player not recognized by computer

- Check the connection between the player and PC, and confirm the USB cable is properly connected.
- Check that the [POWER] switch is in the ON position.

No sound from the headphones

- Please ensure the volume is turned up, and the headphones are properly connected.
- Check if the format of music file is supported by the player.

Can not record

- Check if there is enough memory and battery capacity.
- Display is in the wrong language
- Please ensure you selected the correct language from the "Settings" menu.

The buttons do not work

- Slide the [POWER] switch to the left to unlock the player.
- I cannot display my .jpg files
- Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

Legal information

FCC Part 15: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governmental laws in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to HYPERLINK "http://www.polaroid.com" www.polaroid.com and reference About Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Troubleshooting

Can not power on

- The battery may be exhausted, please recharge the battery.
- Check that the [POWER] switch is in the ON position.

Files can not be transferred to the player

- Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
- Check the connection between the player and PC, and confirm the USB cable is properly connected.
- Check that the [POWER] switch is in the ON position.

Player not recognized by computer

- Check the connection between the player and PC, and confirm the USB cable is properly connected.
- Check that the [POWER] switch is in the ON position.

No sound from the headphones

- Please ensure the volume is turned up, and the headphones are properly connected.
- Check if the format of music file is supported by the player.

Can not record

- Check if there is enough memory and battery capacity.
- Display is in the wrong language
- Please ensure you selected the correct language from the "Settings" menu.

The buttons do not work

- Slide the [POWER] switch to the left to unlock the player.
- I cannot display my .jpg files
- Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom, Inc.
Attention: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

Customer Support:
1-877-768-8483 (Toll Free)
cs@southern telecom.com

Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)
www.southern telecom.com

Limited Warranty

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC.'S AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>