

# Digital Cordless Phone



## DECT 6.0



 
 
## User Guide EM7120

### The handset / Using the phone

### Getting started

#### Installing the batteries

- Open the battery cover on the back of the handset.
- Insert two (2) of the AAA rechargeable batteries with the (+) and (-) poles correctly aligned into the battery compartment.
- Close the battery cover.
- Place the handset on the base to charge.
- Insert the other two (2) batteries in the second handset as well and place on the cradle to charge.

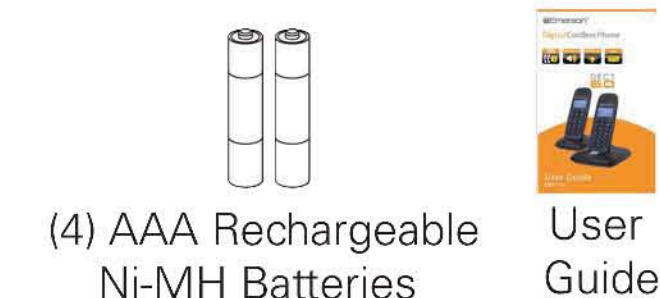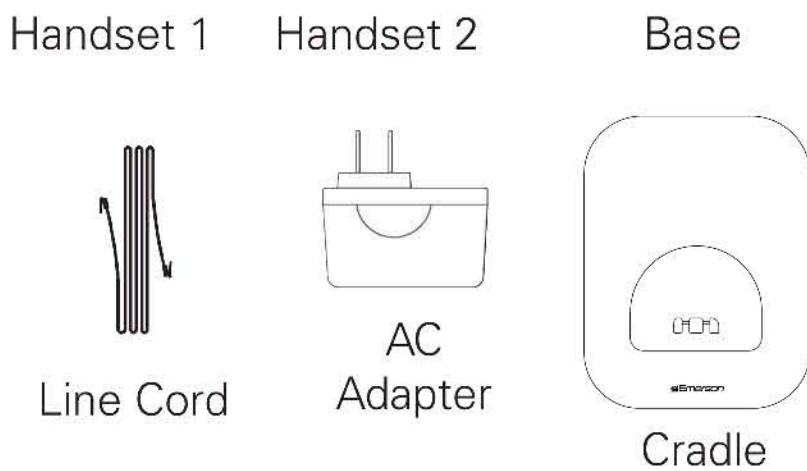

(4) AAA Rechargeable Ni-MH Batteries



Before using for the first time, charge the handsets for 12-16 hours.

### Getting started

#### Call Waiting / Flash

The Flash feature is used to activate calling services available through your local phone company, such as Call Waiting, and Three Way Calling. To use the features below use your local telephone company.

- To answer an incoming call while having a conversation:**
- Press **[F]** to enter **PHONEBOOK**.
  - Press **[F]** again. The display shows **VIEW**.
  - Scroll down using the **▼** key to **ADD NEW**.
  - Press **[F]**. The display shows **ENTER NAME**.
  - Type the contact's name using the Handset's keypad.
  - Press **[F]** to confirm.
  - ENTER NUMBER** is now displayed.
  - Type the Contact's phone number.
  - Press **[F]** once again to save your entry.

#### Caller ID

**IMPORTANT:** In order to use this unit's Caller ID features, you must subscribe to either the standard Name/Number, Caller ID Service or Call Waiting/Caller ID Service from your local telephone company. This telephone automatically displays an incoming caller's name and telephone number, as well as the date and time of the call. It can record and store the information of up to 30 calls into the phone's Caller ID memory.

#### Mute

- You can mute your handset so that you can talk to someone nearby without your caller hearing.
- During a call, press **[M]**. The display shows **MUTE ON** and your caller cannot hear you.
  - Press **[M]** again to resume your call.

#### Lock / Unlock the Keypad

- Press and hold **[OK]** for 2 seconds. **KEYS LOCKED** is displayed.
- To unlock the keypad, press **[OK]** again for 2 seconds.

#### Speaker

- to use the speakerphone, press the **[SPK]** button, this can be done before or during a call

#### Volume

- during a call or while using the speakerphone, use the **[▲]** and **[▼]** buttons to increase or decrease the volume from level 1 through level 5.

#### Intercom

The intercom feature is only available for cordless phone systems with multiple handsets. See "Adding additional handsets".

- To use the intercom, press and hold the **[INT]** button.
- Dial the number of the handset you would like to call.

#### intercom screen



#### Dialing Numbers From the Calls List

- Dial a number in the Calls list.
- Press **[F]** to open the Calls list.
- Scroll using **[▲]** or **[▼]** to the entry you want.
- Press **[F]** to dial the displayed entry.

#### Dialing a number from the Recent Calls List

- Press the **▼** key to open the Recent Calls List
- Scroll **[▲]** or **[▼]** to locate the desired entry.
- Press **[F]** to dial the displayed entry.

#### LOCATION:

You need to place your EM7000 base within 3.5 feet of a socket outlet and telephone wall socket so that the cables will reach. The socket-outlet should be installed near the equipment and should be easily accessible. Make sure that it is at least 3 feet away from other electrical appliances to avoid distortion or interference. Your EM7000 works by sending radio signals between the handset and base. The strength of the signal depends on where you place the base. Placing it as high as possible ensures the best signal.

#### HANDSET RANGE


The unit has a range of up to 200 yards outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 100 feet. Thick concrete and stone walls can severely affect the range.

#### SIGNAL STRENGTH

The **[S]** icon on your handset indicates that you are within range of the base. When out of range of the base, the **[S]** icon disappears. If you are on a call, you will hear a warning beep. The line will hang up if the handset moves out of range of the base. Move closer to the base. The handset will automatically reconnect to the base.

#### Connecting

- Plug one end of the line cord into the jack at the back of the phone's base, and the other end into a modular phone jack.

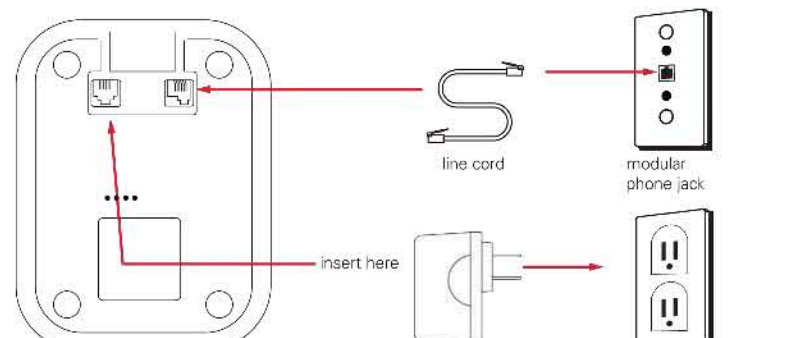

- Plug the pin of the AC adaptor into the DCVJ jack on the bottom of the base as shown above, and plug into a standard AC outlet.
- The handset will display "Searching", wait until "Handset 1" is displayed.
- Press **[F]** on the handset and confirm you hear the dial tone.

#### Handset 2

- Connect the AC adaptor as shown below, and plug into a standard AC outlet.
- The handset will display "Searching", wait until "Handset 2" is displayed.
- Press **[F]** on the handset and confirm you hear the dial tone.




- Press **[F]**, scroll **[▼]** to **SERVICES** and press **[F]**.
- Scroll **[▼]** to **Reset** and press **[F]**.
- Once "Confirm?" is displayed, press **[F]**.

#### Phone setup


##### Selecting Ring Tones

- Press **[F]** to enter **PHONE SETUP**.
- Press **[F]** to display **SOUNDS**.
- Press **[F]** to select **RING VOLUME**.
- Scroll down using **[▼]** button to display **RING TONES**.
- Press **[F]**. Scroll **[▲]** or **[▼]** to select your desired melody.
- Press **[F]** to confirm your selection.

##### Ring Tones screen

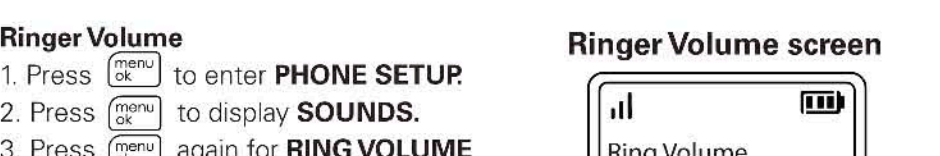

##### Ring Volume screen

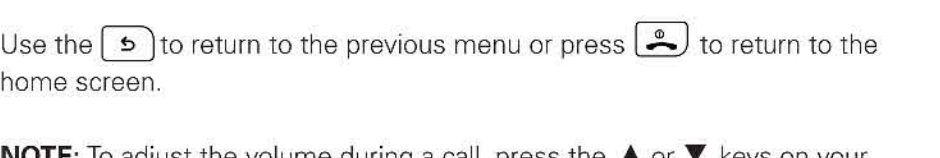

##### Ringtone Volume

- Press **[F]** to enter **PHONE SETUP**.
  - Press **[F]** to display **SOUNDS**.
  - Press **[F]** again for **RING VOLUME**.
  - Press **[F]** to enter access to the **RING VOLUME** menu. Use **[▲]** or **[▼]** to select desired ringtone volume.
- Use the **[D]** button to return to the previous menu or press **[F]** to return to the home screen.

##### Key Tones

- Press **[F]** to enter **PHONE SETUP**.
  - Press **[F]** again to display **SOUNDS**.
  - Press **[F]** to select **RING VOLUME**.
  - Scroll down using **[▼]** to display **KEY TONE**.
  - Press **[F]** to enter the **KEY TONE** menu. Use the **[▲]** or **[▼]** keys to select **ON** or **OFF**.
  - Press **[F]** again to confirm your selection.
- Use the **[D]** button to return to the previous menu or press **[F]** to return to the home screen.

##### Editing a Name and Number

- Press **[F]** to enter **PHONEBOOK**.
- Press **[F]** again. The display shows **VIEW**.
- Scroll down using the **▼** key to **EDIT**.
- Press **[F]** and use the **[▲]** and **[▼]** keys to scroll to the contact that you want to edit.
- Press **[F]** to edit the contact name. Use the **[D]** button to delete.
- Press **[F]** again to edit the contact phone number.
- Press **[F]** to confirm.

##### Deleting All Phonebook Entries

- Press **[F]** to enter **PHONEBOOK**.
- Press **[F]** again. The display shows **VIEW**.
- Scroll down using the **[D]** button to **DELETE ALL**.
- Press **[F]**. The display shows **CONFIRM?**
- Press **[F]** again to delete.

##### DIAL MODE

- The EM7000 is preset for TONE dialing. To switch from TONE to PULSE:
- Press **[F]** then use the **[▲]** or **[▼]** keys to scroll to **SERVICES**.
  - Press **[F]** and scroll to **DIAL MODE**
  - Press **[F]**.
  - Use the **[▲]** or **[▼]** keys to select **TONE** or **PULSE**.
  - Press **[F]** to confirm.

##### SETTING THE AREA CODE

- Press **[F]**, scroll using the **▼** key to **SERVICES** and press **[F]**.
- Scroll down to **UNREGISTER** and press **[F]**.
- Enter the 4 digit master PIN and press **[F]**.
- Display shows the first registered handset number.
- Scroll **[▲]** or **[▼]** to select the handset you want to delete and press **[F]**.

##### UNREGISTERED is displayed on the handset screen.

##### De-Register a Handset

- Press **[F]**, scroll using the **▼** key to **SERVICES** and press **[F]**.
- Press **[F]** to enter **UNREGISTER** and press **[F]**.
- Enter the 4 digit master PIN and press **[F]**.
- Display shows the first registered handset number.
- Scroll **[▲]** or **[▼]** to select the handset you want to delete and press **[F]**.

##### SETTING THE DATE AND TIME

- Press **[F]** then scroll to **PHONE SETUP**.
- Press **[F]**. Use the **[▲]** or **[▼]** key and scroll to **DATE & TIME**.
- Press **[F]**.
- Enter the date using the keypad and press **[F]** to set the time.
- Press **[F]** to confirm.

#### Naming Handset

If you are using more than one handset with your EM7000 base, you can set a personalized name for each handset to easily distinguish between them.

The Handset name can be up to 14 characters long. To name your Handset:

- Press **[F]** and use **[▲]** or **[▼]** and to **PHONE SETUP**
- Press **[F]** and scroll to **PHONE NAME**
- Press **[F]** again to display the Handset's name.
- To delete the current name, press the **[D]** button.
- Type the desired Handset name using the keypad and press **ENTER**.



#### Volume

- Adjust the volume of the base
- Adjust the "rings to answer" option (how many rings until the answering system picks up the call)
- Adjust the "security code" option (the security code is factory set to 000)

#### Paging

- Press **[P]** and the handset will emit an alarm making it easy to find
- Press any key on the handset to stop the paging alarm

- Press **[F]**, scroll **[▼]** to **SERVICES** and press **[F]**.
- Scroll **[▼]** to **Reset** and press **[F]**.
- Once "Confirm?" is displayed, press **[F]**.

#### Remote Access

You can operate your answering machine from most phones by calling your Answering Machine and entering a 4 digit security PIN code.

- Dial your telephone number. When you hear your outgoing message, press #.
- Enter your 4-digit PIN (default setting 0000). You will hear a confirmation beep. Use the keypad to operate your EM7120 answering machine.

#### Remote Access Keypad Controls

- [1]**: Play previous messages.
- [2]**: Play messages.
- [3]**: Play the next message.
- [6]**: Delete the current message.
- [7]**: Turn the answering machine ON.
- [8]**: Stop message playback.
- [9]**: Turn OFF the answering machine.

#### Activating Remote Access From the Handset

- Press **[F]**, scroll **[▲]** or **[▼]** to locate **ANSWER MACHINE** and press **[F]** to confirm.
- Scroll **[▼]** to **REMOTE ACCESS** and press **[F]**.
- Scroll **[▲]** or **[▼]** to select **Activated**, **Deactivated** or **Change PIN**.
- Press **[F]** to confirm.

#### Changing the PIN

If you choose Change PIN enter the old PIN and press **[F]**. Enter the new PIN and press **[F]**. Re-enter the new PIN. Press **[F]** to confirm.

#### Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

#### Warning! The cords on this product and / or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. Wash hands after handling.

#### SAVE THESE INSTRUCTIONS



 
#### 2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 88, FCC Rules and Regulations.

#### UNREGISTERED is displayed on the handset screen.

NOTE: You must use your telephone to delete another. You cannot delete the handset that is currently in use.

#### The base

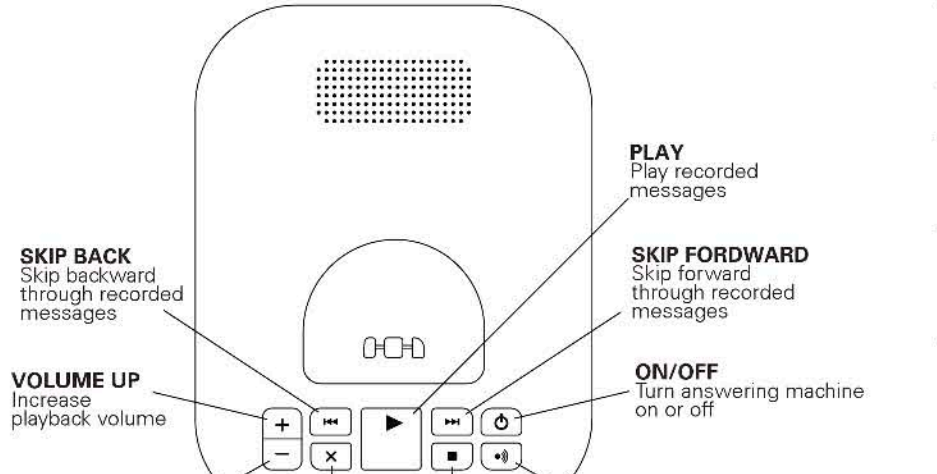

#### Volume

- Adjust the volume of the base
- Adjust the "rings to answer" option (how many rings until the answering system picks up the call)
- Adjust the "security code" option (the security code is factory set to 000)

#### Paging

- Press **[P]** and the handset will emit an alarm making it easy to find
- Press any key on the handset to stop the paging alarm

#### During Playback

- Press **[P]** to stop message playback.
- Press **[F]** to play the next message.
- Press **[F]** to play the previous message.
- Press **[X]** to delete the current message.

#### Remote Access

If more than one handset is registered to the base, internal calls can be made between two handsets. The **[I]** icon flashes and the display shows the handset number you are calling.

#### Make an internal call

- If only 2 handsets are registered to the base, press the **[I]** button and the other handset rings automatically.
- If more than 2 handsets are registered to the base press and hold **[I]** and scroll **[▼]** to the handset that is to be called and press **[F]**.

#### Receive an internal call

When you receive an internal call, the **[I]** icon flashes and the handset number that is calling you is displayed.

- Press **[F]** to answer the call.

#### Transfer a call

You can transfer an external call to another handset registered to the base. During an external call:

- If only 2 handsets are registered to the base, press and hold **[I]** and the other handset rings automatically.
- If more than 2 handsets are registered to the base press and hold **[I]** and scroll **[▼]** to the handset that is to be called and press **[F]**.
- When the other handset answers, press **[F]** to complete the transfer.

#### No Caller ID

A. Check your subscription with your network operator.  
B. The caller may have withheld their number.  
C. The record cannot be found in your phonebook. Check that you have the correct name / number stored in your phonebook, with the full area code.

#### Answering system

The EM7120 can digitally record up to 12 minutes of messages as well as recording incoming messages. You can operate your answering machine from:

- the base
- the handset
- or remotely, from another telephone.

You will need to set the correct day and time (if you have not already done so) so that you will know when each message was received.

#### Turning the Answering Machine ON/OFF

- Press the **[ON/OFF]** button on the base to turn the Answering machine ON or OFF.

#### From the Handset

- Press the **[ANSWER]** button then scroll down using the **[▼]** key to **ANSWER MACHINE** and press **[F]**.
- Scroll **[▼]** to **VOICE ANSWER** and press **[F]**.
- Use **[▲]** or **[▼]** to select either **ANSWER ONLY**, **RECORD ALSO** or **OFF** then press **[F]** to confirm.

#### Listening to Your Messages (From the Base)

- Press **[▶]** to listen to new messages.
- Press **[▶]** to stop message playback.
- Press **[▶]** to play the next message.
- Press **[▶]** to delete the current message.

#### NOTE: All other messages will be played from left to right.

#### During Playback

- Press **[P]** to stop message playback.
- Press **[F]** to play the next message.
- Press **[F]** to play the previous message.
- Press **[X]** to delete the current message.

#### NOTE: All other messages will be played from left to right.

#### NOTE: The handset's menu you can adjust the base's ring volume or select ringtones - select menu > "Base Settings" > "Ring Tones" or "Ring Volume"

#### NOTE: Resetting your phone to its default settings will delete all entries in the Phonebook and Calls list. All handset and base settings will also be reset.

#### NOTE: Restoring your phone to its default settings, see, "Restoring your phone to default settings"

#### NOTE: All other messages will be played from left to right.

#### NOTE: Restoring your phone to its default settings, see, "Restoring your phone to default settings"

#### NOTE: All other messages will be played from left to right.

#### NOTE: Restoring your phone to its default settings, see, "Restoring your phone to default settings"

#### NOTE: All other messages will be played from left to right.

#### NOTE: Restoring your phone to its default settings, see, "Restoring your phone to default settings"

#### NOTE: All other messages will be played from left to right.

#### NOTE: Restoring your phone to its default settings, see, "Restoring your phone to default settings"

#### NOTE: All other messages will be played from left to right.

#### NOTE: Restoring your phone to its default settings, see, "Restoring your phone to default settings"

#### NOTE: All other messages will be played from left to right.

#### NOTE: Restoring your phone to its default settings, see, "Restoring your phone to default settings"

#### NOTE: All other messages will be played from left to right.

#### NOTE: Restoring your phone to its default settings, see, "Restoring your phone to default settings"

#### NOTE: All other messages will be played from left to right.

#### NOTE: Restoring your phone to its default settings, see, "Restoring your phone to default settings"

#### NOTE: All other messages will be played from left to right.

#### Listening to Your Messages (From the Handset)

- When you have new messages, the display shows X new message(s) and the **[S]** will flash. Press **[F]** to play new messages.
- If you have no new messages, press **[F]**, scroll **[▲]** or **[▼]** to **ANSWER MACHINE** and press **[F]**.
- Select "PLAY" by pressing **[F]**.
- The display will show the number of messages being played along with the date and time when the messages were left.

#### Setting Outgoing Messages (OGMs)

This is the message your callers hear on the answer machine. Choose from two pre-recorded outgoing messages, or you can record your own.

#### A. RECORD ALSO

The preset **RECORD ALSO** outgoing message, that allows your caller to leave a message, is "Hello, your call cannot be taken at the moment, so please leave your message after the tone".

#### B. ANSWER ONLY

The caller can listen to your announcement but cannot leave a message. The pre-recorded message is "Hello, your call cannot be taken at the moment, and you cannot leave a message, so please call later".

#### Record, play or delete your own outgoing message

- Press **[F]**, scroll **[▼]** to **ANSWER MACHINE** and press **[F]**.
- Scroll **[▼]** to **ANNOUNCEMENT** and press **[F]**.
- Scroll **[▲]** or **[▼]** to select either **ANSWER ONLY** or **RECORD ALSO** and press **[F]**.
- Scroll **[▲]** or **[▼]** to select either **PLAY**, **RECORD** or use the default greeting and press **[F]**.
- If you

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>