



In the box

EMP182



Player



Earbuds



Mini USB Cable



User Guide

Charging



1. Insert the smaller end of the Mini USB cable into the player's Mini USB port.
2. Connect the larger end of the Mini USB cable into your computer's USB port.
3. Charge the battery between 3-5 hours. Do not charge for more than 8 hours.

NOTE: Charge the player for at least 4 hours before using it for the first time

Battery level indication:



Indicates that the battery is full.



Indicates low battery; the player should be charged as soon as possible.

Basic Operation


Turning on/off

Make sure the MP3 player is fully charged before turning it on.

- To turn on the player, put the [POWER] switch in the "ON" position.


- To turn off the player, press and HOLD the button until the displays shuts off or slide the [POWER] switch to the "OFF" position.

NOTE: If the [POWER] switch is in the "ON" position but the player has been turned OFF, you can turn the player back on by pressing the [M] button.

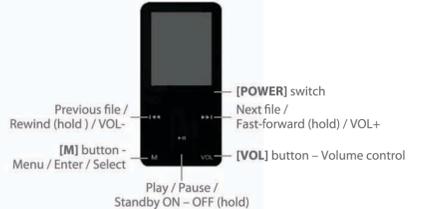

User Guide


Location of controls

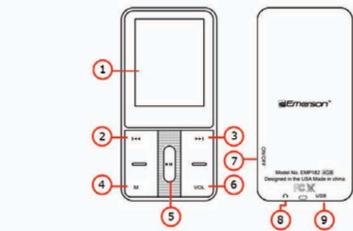

1. LCD screen
2. [M] button - Previous file / Rewind (hold) / VOL-
3. [M] button - Next file / Fast-forward (hold) / VOL+
4. [M] button - Menu / Enter / Select
5. [M] button - Play / Pause / Standby ON - OFF (hold)
6. [VOL] button - Volume control
7. [POWER] ON - OFF switch
8. Headphone jack
9. Mini USB port

Main Menu

After turning on the player, use the [M] and [M] buttons to scroll to the desired option on the main menu and press the [M] button to confirm your choice.

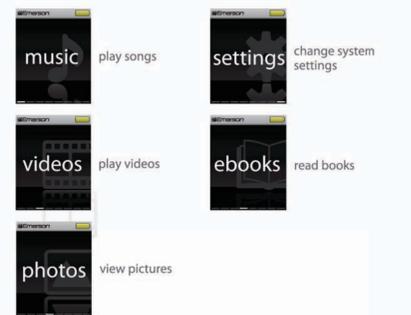

Transferring media files to the player

1. Find music, picture, or video files on your computer.
2. Insert the smaller end of the Mini USB cable into the camera's Mini USB port.
3. Connect the larger end of the Mini USB cable into your computer's USB port.
4. Create folders entitled "Music", "Videos", "Photos", and "Ebooks".
5. Drag or copy your music files into the Music folder, your video files into the Videos folder, your photo files into the Photos folder, and your ebook files into the Ebooks folder as shown below.



NOTE: Make sure you create folders entitled "Music", "Videos", "Photos", and "Ebooks" to keep your files separate. Otherwise the Local Folder for each mode may contain folders from another mode.

When you are done, disconnect your MP3 Player from the computer using the "Safe Device Removal" utility in the taskbar.

NOTE: Screenshots above may be slightly different than your computer's operating system.

Music

- To play music** (MP3 or WMA format only)
1. Select "music" from main menu and press the [M] button to confirm. The music playback screen will be displayed.
 2. Use the [M] and [M] buttons to select a track then press the [M] button to start playing the selected track.

- Pausing playback**
1. While a song is playing, press the [M] button to pause the playback.
 2. Press the [M] button to lower the volume; press the [M] button to raise the volume.

- Skipping Tracks**
1. Press the [M] button to skip forward to the next track.
 2. Press the [M] button to skip back to the previous track.

- Searching backward or forward within a track**
1. Press and HOLD the [M] button to rewind within a track.
 2. Press and HOLD the [M] button to fast forward within a track.

- Adjusting the volume**
1. Press the [VOL] button to open the volume menu.
 2. Press the [M] button to lower the volume; press the [M] button to raise the volume.
 3. To return to the Music Screen, press the [M] button.

- Lyric Display:** This player supports LRC lyric files, which display song lyrics while a song is playing. Below are the steps to use the Lyric Display:
1. Select the song you wish to play with displaying lyrics while in the Music Screen. If the song has a matching lyric file, the color dot beside the "Lyric" icon in the bottom right side of the screen will turn from red to green.
 2. Press the [M] button to begin playing the song; then press and hold the [M] button. This will take you to the Lyric Display screen.
 3. To return to the Music Screen, press the [M] button.

NOTE: An LRC file must be accompanied by an MP3 file of the same song for this function to work.

- Music Menu 1:** While music is PLAYING, press the [M] button to access Music Menu 1 where you can select the following options:
- Repeat: track repeat options
 - Choose between the options of Normal, Repeat one, Folder, Repeat folder, Repeat all, Random, and Intro by scrolling with the [M] and [M] buttons. Press the [M] button to confirm, or press the [M] button to exit back to the music screen.

- Music Menu 2:** While music is PAUSED, press the [M] button to access Music Menu 2 where you can select the following options:
- Local folder: browse music files on the player
 - Choose a music file by using the [M] and [M] buttons to scroll, and then press the [M] button.
 - The player will return to the music screen once a music file is selected. Then press the [M] button to confirm, or press the [M] button to exit back to the music screen.

- Delete file:** delete a single music file
- Choose a music file by using the [M] and [M] buttons to scroll, and then press the [M] button.
 - Use the [M] and [M] buttons to scroll between "Yes" and "No", and press the [M] button to confirm, or press the [M] button to exit back to the music screen.

- Delete all:** delete all music files
- Use the [M] and [M] buttons to switch between "Yes" and "No", and press the [M] button to confirm, or press the [M] button to exit back to the music screen.

- Exit:** exit to music screen
- Press the [M] button to confirm.

Video Converter

Video Converter: Your video files must be converted into AMV files on your computer before you upload them to your player. Only videos in AMV format can be viewed on your player.

1. Insert the smaller end of the Mini USB cable into the camera's Mini USB port.
2. Connect the larger end of the Mini USB cable into your computer's USB port.
3. In the MP3 folder, open the folder entitled "UTILITIES" and then open the folder entitled "VIDEO CONVERSION SOFTWARE".
4. Select "setup" to install the program. After installation is completed, open **AMV Video Converter** (which can be seen below) on your computer.



5. Click the [M] icon to select the video file you wish to convert into an AMV file.
7. Click on the [M] icon to select where you wish to save your AMV file.
7. Click on the [M] icon to select where you wish to save your AMV file.
7. Click on the [M] icon to select where you wish to save your AMV file.

9. Change "Screen width and height" to "160x120" and change "image quality" to "middle". Then click "OK" to confirm.
10. Click the [M] icon to start converting and you will see the screen below:



11. After the video file is converted, the AMV file will play automatically.
12. Now the converted AMV file is ready to be transferred to your player. You can simply copy and paste the converted AMV file into your player's folder.

Videos

1. To play videos (only AMV format is supported), select "videos" from the main menu and press the [M] button to confirm. The video playback screen will be displayed.
2. Use the [M] button or [M] button to select a video, then press the [M] button to start playing the selected video.

- Video controls** (playback screen)
- [M] previous video / rewind (press and HOLD) / decrease volume
 - [M] play / pause video
 - [M] next video / fast-forward (press and HOLD) / increase volume

- Video controls** (menu)
- [M] moves the selection up
 - [M] moves the selection down
 - [M] confirm selection / press and HOLD for main menu
 - [M] return to video playback screen

- Video menu**
- While a video is PAUSED, press the [M] button to access the video menu where you can select from the following options:

- Local folder: browse video files on the player**
- Choose a video file by using the [M] and [M] buttons to scroll, and then press the [M] button.
 - The player will return to the video screen once a video file is selected. Then press the [M] button to confirm, or press the [M] button to exit back to the video screen.

- Delete file: delete a single video file**
- Choose a video file by using the [M] and [M] buttons to scroll, and then press the [M] button.
 - Use the [M] and [M] buttons to scroll between "Yes" and "No", and press the [M] button to confirm, or press the [M] button to exit back to the video screen.

- Delete all: delete all video files**
- Use the [M] and [M] buttons to switch between "Yes" and "No", and press the [M] button to confirm, or press the [M] button to exit back to the video screen.

- Repeat: video file repeat options**
- Choose between the options of Normal, Repeat one, Folder, Repeat folder, Repeat all, Random, and Intro by scrolling with the [M] and [M] buttons. Press the [M] button to confirm, or press the [M] button to exit back to the video screen.

- Exit: exit to video screen**
- Press the [M] button to confirm.
 - Press the [M] button to confirm your choice.

- Volume**
1. Press the [VOL] button to open the volume menu (only available when video is paused).
 2. Use the [M] button or [M] button to lower or raise the volume.
 3. Press the [M] button to return to the video playback screen.

Photos

1. To view photos (in JPEG, BMP, or GIF format only), select "photos" from the main menu and press the [M] button to confirm. The photo list screen will be displayed.
2. Use the [M] button or [M] button to select a photo, then press the [M] button to start playing the selected photo.
3. Use the [M] button or [M] button to scroll through the photos manually.
4. Press the [M] button to return to the ebooks screen.

NOTE: Pictures of any file type that have a high resolution/incorrec format may not be supported by the player, which will display "Format error" when viewing of these files is attempted. If your file has too high of a resolution, then compress your file so it can be viewed. The following are the formats and maximum resolutions that can be supported:

- BMP: 800x600
- JPG: 800x600 (Baseline format only) (Progressive format is not supported)
- GIF: 640x640, 87a and 89a only

- Photo Menu**
1. While viewing the photo list screen, press the [M] button to access the photos menu.
 2. Use the [M] button or [M] button to select a choice, then press the [M] button to confirm.

- Local folder: browse photo files on the player**
- Choose a photo file by using the [M] and [M] buttons to scroll, and then press the [M] button.
 - The player will return to the ebooks screen once a photo file is selected. Then press the [M] button to play the photo file, or press the [M] button to exit back to the photo screen.

- Playback set: slideshow settings**
- After you select Playback set, use the [M] and [M] buttons to scroll and then press the [M] button to select "Manual play" or "Auto play".

- Manual play**
- After you select Manual play, use the [M] and [M] buttons to select an ebook to read in ebook mode.

- Auto play**
- After you select Auto play, choose the amount of time you want there to be before each picture changes in the slideshow by using the [M] and [M] buttons to scroll and then pressing the [M] button. You may choose any amount of time between 2 and 10 seconds.

- Delete file: delete a single photo file**
- Choose a photo file by using the [M] and [M] buttons to scroll, and then press the [M] button.
 - Use the [M] and [M] buttons to scroll between "Yes" and "No", and press the [M] button to confirm, or press the [M] button to exit back to the photo screen.

- Delete all: delete all photo files**
- Use the [M] and [M] buttons to switch between "Yes" and "No", and press the [M] button to confirm, or press the [M] button to exit back to the photo screen.

- Exit: exit to photo screen**
- Press the [M] button to confirm.

- Ebooks submenu**
1. While reading an ebook, press the [M] button to access the ebooks submenu.
 2. Use the [M] button or [M] button to choose between Bookmark select, Bookmark delete, Bookmark add, and Exit.

- Exit: exit to photo screen**
- Press the [M] button to confirm.

Ebooks

1. To view ebooks in TXT format, select "ebooks" from the main menu and press the [M] button to confirm. The ebook screen will be displayed.
2. Use the [M] and [M] buttons to scroll through your bookmarks. When you are on the page you would like to view, press the [M] button. The player will then show that page in the ebook.
3. Use the [M] button to scroll down the page and the [M] button to scroll up the page.
4. Press [M] button to return to the ebooks screen.

- Ebooks menu**
1. While viewing the ebooks screen, press the [M] button to access the ebooks menu.
 2. Use the [M] button or [M] button to select a choice, then press the [M] button to confirm.

- Local folder: browse ebooks files on the player**
- Choose an ebook file by using the [M] and [M] buttons to scroll, and then press the [M] button.
 - The player will return to the ebooks screen once an ebook file is selected. Then press the [M] button to play the ebook file, or press the [M] button to exit back to the ebooks screen.

- Playback set: slideshow settings**
- After you select Playback set, use the [M] and [M] buttons to scroll and then press the [M] button to select "Manual play" or "Auto play".

- Manual play**
- After you select Manual play, use the [M] and [M] buttons to select an ebook to read in ebook mode.

- Auto play**
- After you select Auto play, choose the amount of time you want there to be before each picture changes in the slideshow by using the [M] and [M] buttons to scroll and then pressing the [M] button. You may choose any amount of time between 2 and 10 seconds.

- Delete file: delete a single ebook file**
- Choose an ebook file by using the [M] and [M] buttons to scroll, and then press the [M] button.
 - Use the [M] and [M] buttons to scroll between "Yes" and "No", and press the [M] button to confirm, or press the [M] button to exit back to the ebooks screen.

- Delete file: delete all ebook files**
- Use the [M] and [M] buttons to switch between "Yes" and "No", and press the [M] button to confirm, or press the [M] button to exit back to the ebooks screen.

- Exit: exit to ebooks screen**
- Press the [M] button to confirm.

- Ebooks submenu**
1. While reading an ebook, press the [M] button to access the ebooks submenu.
 2. Use the [M] button or [M] button to choose between Bookmark select, Bookmark delete, Bookmark add, and Exit.

- Exit: exit to photo screen**
- Press the [M] button to confirm.

Troubleshooting

- Memory info:** flash memory capacity
- Press the [M] button to confirm. This screen will show information regarding the player's remaining memory space available and percentage of memory used.

- Firmware version: firmware version information**
- Press the [M] button to confirm. This screen will show information regarding the player's version of firmware.

- Firmware upgrade** (System Utility Tools required): upgrade your firmware
- Press the [M] button to confirm.

- Player not recognized by computer**
- Check the connection between the player and PC, and confirm the USB cable is properly connected.
 - Check that the [POWER] switch is in the ON position.

- No sound from the headphones**
- Please ensure the volume is turned up and the headphones are properly connected.
 - Check if the format of music file is supported by the player.

- Files can not be transferred to the player**
- Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer.
 - Check the connection between the player and PC, and confirm the Mini USB cable is properly connected.

- Player not recognized by computer**
- Check the connection between the player and PC, and confirm the USB cable is properly connected.
 - Check that the [POWER] switch is in the ON position.

- No sound from the headphones**
- Please ensure the volume is turned up and the headphones are properly connected.
 - Check if the format of music file is supported by the player.

- Can not record**
- Check if there is enough memory and battery capacity.

- Display is in the wrong language**
- Please ensure you selected the correct language from the "Settings" menu.

- Cannot power on**
- The battery may be exhausted, please recharge the battery.
 - Check that the [POWER] switch is in the ON position.

- Files can not be transferred to the player**
- Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer.
 - Check the connection between the player and PC, and confirm the Mini USB cable is properly connected.

- Player not recognized by computer**
- Check the connection between the player and PC, and confirm the USB cable is properly connected.
 - Check that the [POWER] switch is in the ON position.

- No sound from the headphones**
- Please ensure the volume is turned up and the headphones are properly connected.
 - Check if the format of music file is supported by the player.

- Can not record**
- Check if there is enough memory and battery capacity.

- Display is in the wrong language**
- Please ensure you selected the correct language from the "Settings" menu.

FCC Information

- FCC Part 15:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning:** Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- NOTE:** This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- TO OBTAIN WARRANTY SERVICE:**
- Provide proof of the date of purchase within the package (Dated bill of sale).
 - Prepare all shipping costs to the authorized service center, and remember to insure your return.
 - Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
 - Describe the defect or reason you are returning the product.

- Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.


- The shipping address of the authorized service center is:
- ☞ Southern Telecom, Inc.
 - Attention: Customer Service (2nd Floor)
 - 14-C 53rd Street
 - Brooklyn, NY 11232

- Should you have any questions or problems concerning this product, please contact our customer service department at:
- Customer Support:
 - ☎ 1-877-768-8483 (Toll Free)
 - ✉ cs@southerntelecom.com

- Monday-Friday: 9AM-10PM (EST)
- www.southerntelecom.com

Settings

- In the settings menu you can customize various player settings such as date and time, language, display settings and more.
1. To view settings, select "settings" from the main menu and press the [M] button to confirm. The settings screen will be displayed.
 2. Use the [M] and [M] buttons to scroll to a setting, then press the [M] button to make changes to the setting.
 3. Press [M] button to confirm changes.

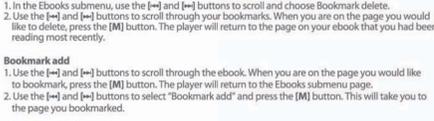

4. Use the [M] button or [M] button to select a setting, then press the [M] button to view this selected setting.
5. Use the [M] button to scroll down the page and the [M] button to scroll up the page.
6. Press [M] button to return to the settings screen.

- LCD set:** set how long the LCD screen will stay on
- Press the [M] button to confirm.
 - Use the [M] button or [M] button to select "Dark Mode" or "Exit".
 - To proceed, select "Dark Mode" and press the [M] button.
 - Use the [M] button or [M] button to decrease/increase the amount of time the LCD screen will stay on.
 - Your options (in seconds) are: 0 / 5 / 10 / 15 / 20 / 25 / 30 / 35 / 40 / 45 / 50. Choose "0" to prevent the LCD screen from turning off (choosing this option decreases the battery life).
 - Press the [M] button to confirm.

- Language:** choose a language
- Use the [M] button or [M] button to select a language. Your option are English, French, and Spanish.
 - Press the [M] button to confirm.

- Power off:** set a sleep timer or shut-off time
- Press the [M] button to confirm.
 - Select "Off time" or "Sleep time" and press the [M] button.

- Off time:**
- Use the [M] button or [M] button to decrease/increase the amount of time between the battery turning itself off when the player is not being operated.
 - Your options are each 10-second interval between zero and 200 seconds.

- Sleep time:**
- Use the [M] button or [M] button to decrease/increase the amount of time between the player turning itself off sleep.
 - Your options (in minutes) are: 0 / 10 / 20 / 30 / 40 / 50 / 60 / 70 / 80 / 90 / 100 / 110 / 120

Legal Information

- FCC Part 15: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning:** Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- NOTE:** This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>