



EVC1800

 


User Guide


In the box



Digital Video Camera

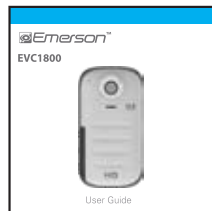


User Guide

 

USB Cable



 Rechargeable
Battery



A/V Cable



CD



Wrist strap

 


Pouch

Setting up your camera

Installing the battery


1. Open the battery cover by pulling the lock with your thumb or fore finger and sliding the cover down. (see “Water resistant covers”)
2. Insert the battery as shown. Be sure the metal contacts on the battery match the contacts in the battery compartment.
3. Slide the battery cover back up until it locks into place.

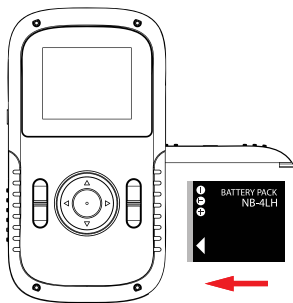

Charging the battery



 PC



USB cable



Camera

 
1. Make sure the battery is installed correctly.
2. Connect the camera to your computer using the included USB cable.
3. The “Charing screen” (shown at right) will appear on the camera’s LCD Screen.
4. The battery incidicator is located on the lower right corner of the camera’s LCD screen.



SD card installation

This camera has no internal memory and requires an SD / SDHC card (not included) to record videos or take pictures. The camera can support SD / SDHC cards up to **32GB**. To install the SD card into the camera, follow the steps below:

1. Turn off the camera.
2. Open the SD card cover by pulling the lock with your thumb or fore-finger and sliding the cover up.
3. Insert the SD card into the card slot (as shown on right) until it locks into place. Make sure the metal contacts are facing the back of the camera.
4. To remove the SD card, gently push it in until it pops out.
5. Slide the SD card cover back down until it locks into place.

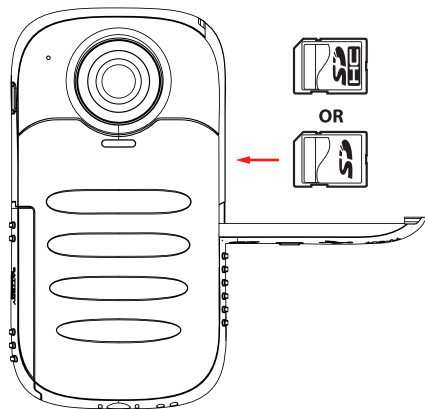

- A card can only be inserted one way; do not use force when inserting the card.
- Inserting or removing a card while camera is on may damage the card or camera.



This camera is water resistant. Before coming into contact with any water, the camera's battery cover and SD card cover must be locked into place. The locks are what create the water tight seals that allow this camera to be water resistant.

Water resistant covers

This camera is water resistant as long as the covers are closed and locked. Be sure to close and lock the battery and SD card covers as shown below before coming into contact with any water.



1. Push the lock in the direction of the arrow while sliding the cover open with your other thumb.



2. Swing the cover open and insert the battery or SD card.

 


3. Slide the cover back on and be sure the lock clicks into place. You will hear a "click" if closed properly.



4. Try sliding the cover(s) open to make sure that they are sealed correctly. If they do slide open then repeat steps 1 - 4.

Location of controls

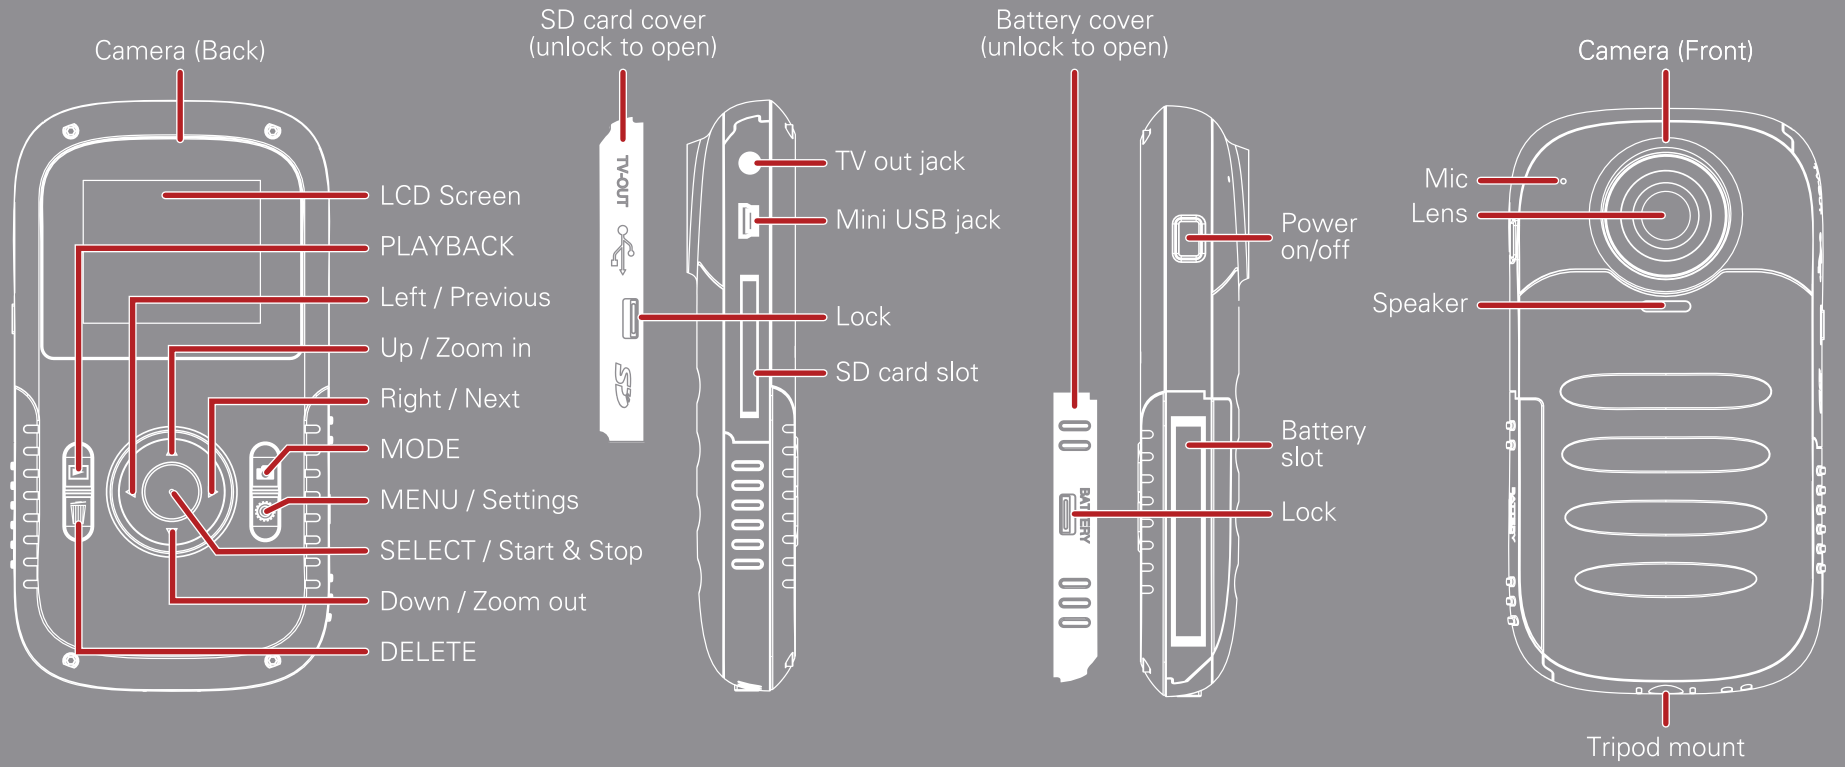

Using your camera

 
Turning the camera on/off

1. To turn the camera on, press and HOLD the **[POWER ⏻]** button until the display turns on.
2. To turn the camera off, press and HOLD the **[POWER ⏻]** button until the display turns off.

Setting the date/time




1. Press the **[MENU ⚙️]** button to open the settings menu.
2. Use the **[◀]** or **[▶]** button to scroll to “Setup”.
3. Use the **[▲]** or **[▼]** button to scroll to “Set Date” and press the **[SELECT ●]** button to confirm.
4. Use the **[▲]** or **[▼]** button to make changes.
5. Use the **[◀]** or **[▶]** button to scroll through settings.
6. Press the **[SELECT ●]** button to confirm the new settings.

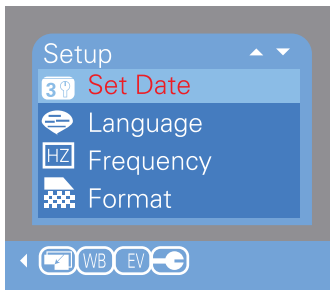
System Setting Display



Camera modes

When you turn on the camera, the default mode is Video Mode.

 
1. Press the **[MODE **] button to switch between Picture Mode  and Video Mode  .

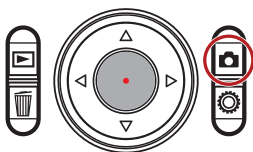


Picture Mode



 Video Mode

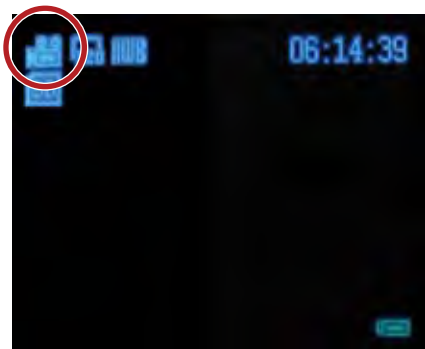

 
2. Press the **[PLAYBACK **] button to switch to picture and video playback mode.

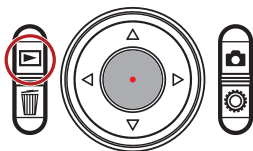




Video Mode


1. Make sure that an SD card is inserted into the camera.
2. Turn on the camera, the Recording Screen is displayed and the camera is in Video Mode .
3. Press the **[SELECT ●]** button to record video (the recording indicator light will flash when recording).
4. To stop recording, press the **[RECORD]** button once again.
5. Press the **[▲]** button to zoom in.
6. Press the **[▼]** button to zoom out.

 Video Mode Screen

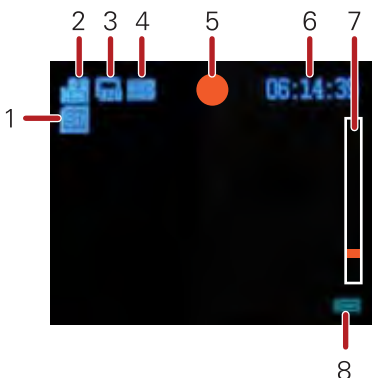

1. SD card indicator
2. Video mode icon
3. Video resolution
4. White balance
5. Recording indicator light
6. Recording timer
7. Zoom level
8. Battery status

 Video Controls

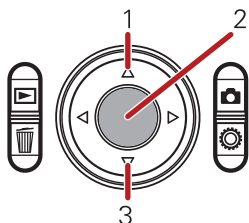

1. Zoom in
2. Start / Stop recording
3. Zoom out

 


To change the recording settings, refer to "video mode settings" below.

Picture Mode


1. Make sure that an SD card is inserted into the camera.
2. Turn on the camera and press the **[MODE 📷]** button. The Picture Mode Screen is displayed and the camera is in Picture Mode 📷.
3. Press the **[SELECT ●]** button to take a picture.
4. Press the **[▲]** button to zoom in.
5. Press the **[▼]** button to zoom out.

Picture Mode Screen

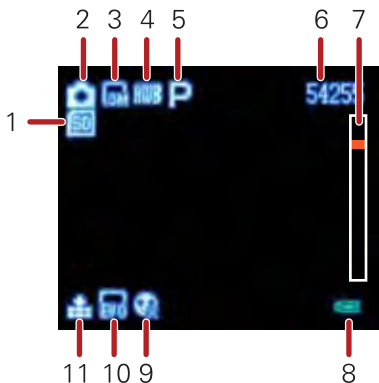

1. SD card indicator
2. Picture mode icon
3. Picture resolution
4. White balance
5. Picture mode
6. Picture counter
7. Zoom level
8. Battery status
9. Face detection
10. Exposure
11. Picture quality

 Picture Controls

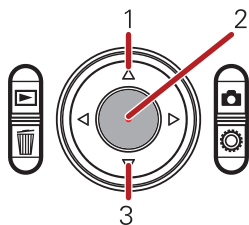





1. Zoom in
2. Take picture
3. Zoom out

Self timer




1. Make sure you are in picture mode.
2. Press the **[MENU ⚙️]** button to open the settings menu.
2. Use the **[◀]** or **[▶]** button to scroll to "Setup".
3. Use the **[▲]** or **[▼]** button to scroll to "Self timer" and press the **[SELECT ●]** button to confirm.
4. Use the **[▲]** or **[▼]** button to select a self timer option.
5. Press the **[SELECT ●]** button to start the self timer.






Playback Mode

1. Turn on the camera and press the **[PLAYBACK **] button. The playback screen is displayed and the camera is in Picture Mode .
2. Use the **[◀]** and **[▶]** buttons to scroll through pictures and videos.
3. Pictures are designated by a  icon in the upper left of the screen.
4. Videos are designated by a  icon on the upper left of the screen.
5. If no files are stored on the SD card, the screen will read “No Image”.

Playing videos

1. Turn on the camera and press the **[PLAYBACK **] button. The playback screen is displayed.
2. Use the **[◀]** and **[▶]** buttons to scroll to a video you would like to view.
3. Use the **[SELECT **] button to start / pause video playback.
4. Press the **[PLAYBACK **] button to return to picture / video mode.



Viewing pictures

1. Turn on the camera and press the **[PLAYBACK **] button. The playback screen is displayed.
2. Use the **[◀]** and **[▶]** buttons to scroll to a picture you would like to view.
3. Press the **[▲]** button to zoom in on a picture.
4. Press and HOLD the **[▼]** button to view a list of thumbnails.
5. Scroll to a thumbnail by using the **[▲]**, **[▼]**, **[◀]**, and **[▶]** buttons then press the **[SELECT **] button to view the picture.
6. Press the **[PLAYBACK **] button to return to video mode.



OR

Press the **[MODE **] button to return to camera mode.

 
Deleting pictures or videos

1. Turn on the camera and press the **[PLAYBACK **] button.
2. Scroll to a picture or video you would like to delete and press the **[DELETE **] button.
3. Choose “Yes” to delete or “No” to return to Playback Mode.

Video Settings

1. Press the [**MODE** ] button to select Video Mode.
2. Press the [**MENU** ] button to access the Video Settings Screen.

Video Settings Screen

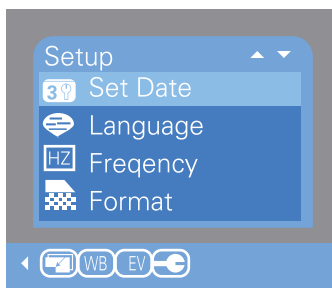

3. Use the [] or [] button to scroll through the following video settings:



Resolution: Choose between 320, 240, 720 widescreen or 1280 High Definition widescreen







White balance: Choose between Auto, Daylight, Cloudy Tungsten, or Flourescent



Exposure: Choose the exposure level



Setup: Make changes to the video settings (see "Video setup" below)

4. Use the [] or [] button to select a video setting and press the [**SELECT** ] button to confirm.
5. Press the [**MENU** ] button to return to Video Mode.

Video setup options:



Set Date: Set the date and time



Language: Set the display language



Frequency: Choose between 50Hz (America) and 60Hz (Europe)



Format: Erase all information on the SD card (if inserted)





Default Setting: Set camera settings to factory default

 


Cancel: Cancel settings and return to Video Mode





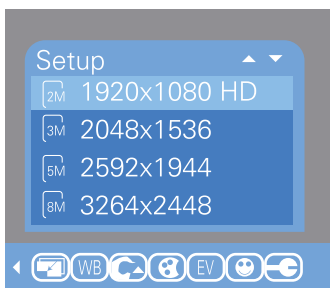


Picture Settings





1. Press the [**MODE** ] button to select Picture Mode.
2. Press the [**MENU** ] button to access the Picture Settings Screen.

Picture Settings Screen



3. Use the [] or [] button to scroll through the following picture settings:

-  **Resolution:** Choose between 3 Megapixels, 5MP, 8MP and 12MP.
-  **White balance:** Choose between Auto, Daylight, Cloudy Tungsten, or Flourescent
-  **Mode Set:** Choose between Auto, Night, Portrait, Scenery, Sport, Party, beach, or High Sensivity
-  **Effect:** Choose between Normal, Black & White, Sephia, Negative, Sun Set
-  **Exposure:** Choose the exposure level
-  **Face Detect:** Turn face detection on or off
-  **Setup:** Make changes to the picture settings (see "Picture setup")

4. Use the [] or [] button to select an option setting and press the [**SELECT** ] button to confirm.
5. Press the [**MENU** ] button to return to Picture Mode.

Picture setup options:

1. Use the [◀] or [▶] button to scroll through the following picture settings:



Self Timer: Set a self timer mode



Image quality: Choose between Super Fine, Fine, and Normal



Shooting: Choose between single burst or triple burst continuous shooting



Imprint: Imprint photos with date and time



Set Date: Set the date and time



Language: Set the display language



Frequency: Choose between 50Hz (America) and 60Hz (Europe)



Format: Erase all information on the SD card (if inserted)



Default Setting: Set camera settings to factory default






Cancel: Cancel settings and return to Picture Mode








2. Use the [▲] or [▼] button to select an option setting and press the [SELECT ●] button to confirm.

3. Press the [MENU ⚙] button to return to Picture Mode.







Playback Settings

1. Press the [**PLAYBACK** ] button to enter Playback Mode.
2. Use the [] or [] button to choose a picture or video and follow the Instructions below for each type.

Picture setup options:

 
1. Choose a picture in Playback mode.
2. Press the [**MENU** ] button to access the picture Playback Settings Screen.
3. Use the [] or [] button to scroll through the following options:
 -  **Rotate:** Choose to Rotate the current picture 90°, 180° or 270°
 -  **Protect:** Lock the picture so it cannot be deleted by mistake
 -  **Delete:** Delete the current picture or all pictures
4. Press the [**MENU** ] button once again to exit the picture Playback Settings Screen.

Video setup options:


1. Choose a video in Playback mode.
2. Press the [**MENU** ] button to access the video Playback Settings Screen.
3. Use the [] or [] button to scroll through the following options:
 -  **Protect:** - Lock the video so it can not be deleted by mistake
 -  **Delete:** Delete the current video or all videos
4. Press the [**MENU** ] button once again to exit the video Playback Settings Screen.

Connecting the camera

Connecting your camera to a TV



Camera

 

A / V Cable



TV

To enjoy and watch or view your videos and pictures on a television, please follow the instructions below:

 
1. Connect the pin of the provided A / V Cable to your camera's TV-OUT jack.
2. Connect the Red, White and Yellow plugs to your television's matching video (yellow) and audio (red and white) inputs.
3. The TV mode menu will appear on the camera's screen. Select **NTSC** for America or **PAL** for Europe.
4. Be sure to set your TV to the correct input.
5. Turn on the camera. Which ever mode you are in, it will be displayed on the TV.
6. Use the [◀] or [▶] button to select a file to view.
7. Press the [SELECT ●] button to begin or stop playback of video files.

Select TV Mode

NTSC >>

PAL

Connect your camera to a computer

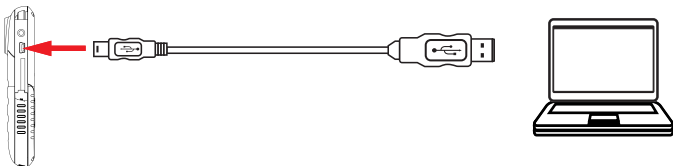

To edit or upload and share your videos and pictures, you must first transfer them to your computer. Follow the steps below to connect the camera to your computer, and use the provided MediaManagerHD software to manage, view, edit and share your videos and pictures.

1. Make sure that an SD / SDHC card is inserted in the camera before connecting it to your computer.
2. Insert the smaller end of the USB cable into the camera's mini USB port.
3. Connect the larger end of the USB cable into your computer's USB port.
4. Look for your camera by clicking on "My Computer", it will appear as "Removable Disk". Picture and video files will be stored in the "DCIM" folder.
5. Select a file on your camera, and move it into your computer in the usual way (drag-and-drop, copy-and-paste). We recommend copying the files into the "My Videos" or "My Pictures" folder of your computer.
6. Before disconnecting the camera, click on the "Safely Remove Hardware" icon usually located on the lower right corner of your Desktop.



You may also manage your files with the included "MediaManagerHD" software (see "MediaManagerHD") OR you can remove the SD card and insert it into your computer's card reader slot.

Vue® MediaManagerHD

Installing

Install the included Vue® MediaManagerHD software before connecting the camera to your computer. With this software you will be able to manage, view, edit, transfer, and easily upload / share your videos and pictures. Follow the instructions below to install the Vue® MediaManagerHD software onto your computer.



Installation CD



Computer

1. Insert the provided CD into the CD-ROM drive of your computer, and click on **“Vue® MediaManagerHD”**.
2. Click **“Install”** and follow the installation procedure.
3. Click **“Next”** when prompted and then click **“Finish”**.
4. To open MediaManagerHD, click on the MediaManager HD icon on your Desktop.

 


Transferring videos and pictures from the camera to your computer

1. Connect the camera to your computer with the included USB cable.
2. Open the Vue® MediaManagerHD software.
3. Select the pictures you would like to save by checking the white box located inside each picture.
4. Click "Save". The save directory will open.



5. Select a destination on your computer where you would like to transfer the videos or pictures. We recommend transferring the files to a folder you have setup before hand (see **“Creating Folders”** below).
6. Click **“OK”** to save your files.

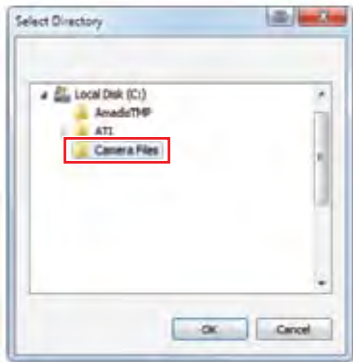

Creating folders

1. Before saving pictures or videos to your computer, we recommend creating a folder that you can save to.
2. Click on the “Windows **Start** button” > select a drive (we recommend C: drive) > then click “File” > “New Folder” and enter the folder name you wish to create. In the example above, we have named the new folder “Camera Files”.
3. Select this folder when saving media from the MediaManager HD software to your computer.

Viewing videos on your computer

1. Connect the camera to your computer with the included USB cable.
2. Open the Vue® MediaManagerHD software.
3. Find and select the video you would like to view.
4. Click the “Play” button located just underneath the video you would like to play. Your computer’s default video program will begin to play the video.



To delete videos using the MediaManagerHD software, select the video(s) by checking the white box located inside the thumbnail then click the “Delete” button.

Managing videos

 
1. Connect the camera to your computer with the included USB cable.
2. Open the Vue® MediaManagerHD software.
3. Find and select the video you would like to manage.
4. Choose from any of the video managing options by clicking the buttons in the tools menu.



To edit videos select the video then click the edit button located just underneath the video thumbnail.

Uploading videos to YouTube™

1. Connect the camera to your computer with the included USB cable.
2. Open the Vue® MediaManagerHD software.
3. Click the “Share Videos” button in the tools menu. Your videos will appear in the selected videos menu.
4. Select a video to upload, then click on the “Online Video Sharing” button. The YouTube Uploader will appear.
5. Sign in to YouTube™, then click the “Upload to YouTube” button.

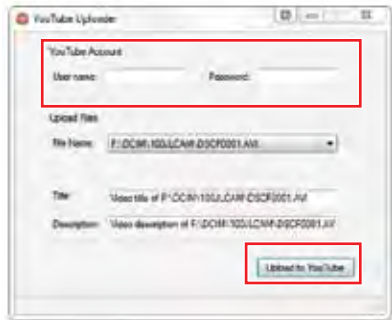

If you do not have a YouTube™ account, go to www.youtube.com and sign up for one, then return to Vue® MediaManagerHD to upload your videos.

Viewing pictures on your computer

1. Connect the camera to your computer with the included USB cable.
2. Open the Vue® MediaManagerHD software.
3. Find and select the picture you would like to view.
4. Click the “Play” button located just underneath the picture you would like to view. Your computer’s default picture program will display the picture.



Managing pictures

1. Connect the camera to your computer with the included USB cable.
2. Open the Vue® MediaManagerHD software.
3. Find and select the picture you would like to manage.
4. Choose from any of the photo managing options by clicking the buttons in the tools menu.



 
Editing pictures

1. Connect the camera to your computer with the included USB cable.
2. Open the Vue® MediaManagerHD software.
3. Find and select the picture you would like to edit.
4. Click the "Edit" button located just underneath the picture you would like to edit. The Vue® Photo Editor will open.
5. Edit the picture as desired, then save it to a folder on your computer.



Webcam feature

Your Digital Video Camera may also be used as a webcam. This feature is quite useful if you would like to utilize the video function on Skype™ and other similar applications. To use the camera as a webcam follow the instructions below.

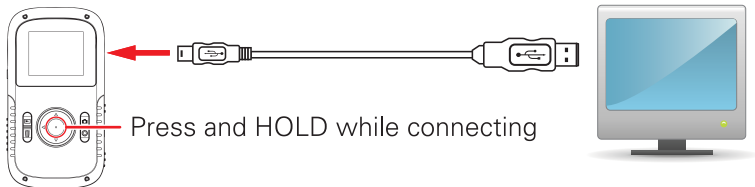

1. Make sure the camera is turned off.
2. Press and HOLD the **[SELECT ●]** button while connecting the camera to your computer with the included USB cable. The camera will be automatically recognized by the computer (no drivers needed).
3. Once the "Driver successfully installed" message appears on your computer screen, release the **[SELECT ●]** button.
4. If you are connected correctly, the camera's LCD screen will show a PC camera image as shown below.

NOTE: For future webcam connections press and HOLD the **[SELECT ●]** button, then release when you see the PC camera Image on the camera. You will only see the "Driver successfully installed" message the first time you connect the camera to a computer.



Troubleshooting

Camera will not turn on

- Check that the battery is properly inserted.
- Make sure that the battery is fully charged.

The display does not light up, or the message “No Card!” is displayed

- Check that the SD card is properly inserted into the card slot.
- Not all SD cards are compatible with every device. Try using another SD card.

My videos / pictures are fuzzy or poor quality

- Try adjusting the “Resolution” and “Quality” from the Video Settings Screen or the “Resolution” and “Quality” from the Picture Settings Screen. Remember that choosing higher quality settings will take up more space on the memory card.
- Make sure to keep the camera steady when filming, and be aware of the lighting environment (the more light the better your pictures and videos will turn out).
- Avoid using the zoom too much, as it will affect the quality of your video and pictures.
- Clean the lens of your camera, and make sure it is free of fingerprints (Clean only with a non abrasive dry cloth and make sure the player is turned off before cleaning).

My videos are jumpy or shaky

- Use a tripod.
- Adjust the video / picture quality to a higher setting.
- Make sure that the frequency is set to “NTSC” mode if you are in America or “PAL” mode if you are in Europe.

Videos do not play on my TV

- Check that you have properly connected the A / V cable to the camera and TV inputs.
- Make sure that the camera is turned on
- Most televisions have several inputs, check on the TV or your TV's remote for the button that controls the inputs on your TV. Scroll through the different inputs until you see the live feed from the video camera.


My computer does not recognize the camera when I connect it to the USB port

- Check the connection of the USB cable, make sure it is properly connected.
- Make sure the webcam logo is displayed on the camera screen when connected to the computer.

While viewing media on a TV the screen is jumpy

- Make sure that the frequency is set to "NTSC" mode if you are in America or "PAL" mode if you are in Europe.

**Still having trouble with your camera?
Please call or email customer support:**

 **1-877-768-8483 (Toll Free)**

Monday - Thursday: 9AM - 5PM (EST)

Friday: 9AM - 3PM (EST)

or

 **via e-mail at cs@southerntelecom.com**

FCC information

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Safety precautions

Always follow these basic safety precautions when using your camera. This will reduce the risk of product damage and personal injury.

- Do not disassemble, repair or modify the camera by yourself. Refer servicing to qualified personnel.
- If the LCD display breaks, do not touch the glass or liquid, and contact customer support.
- The use of a NON- RECOMMENDED accessory may cause fire, electric shock, or injury. For approved accessories, please contact customer support.
- Keep the camera away from direct sunlight and any direct heat source.
- Do not expose the camera to rain or moisture.
- Avoid using the camera in dry environments to avoid static.
- Never apply heavy impact on the camera, or place it on a magnet.
- When connecting the camera to a computer or TV, route the cable so that people and pets are not likely to trip over it.
- Clean only with a dry cloth. Make sure the camera is turned off before cleaning. Do not use a liquid cleanser.

Important Battery Precautions

- Use only the type of battery specified in this user manual.
- Batteries may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged.
- Do not dispose of the battery (ies) in a fire. They may explode. Check with local codes for disposal instructions.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or longer.
- If your product uses more than one battery, do not mix different types of batteries. Make sure you replace the old, with all new batteries. Mixing different types of batteries or inserting them incorrectly, may cause them to leak.
- In the event that the battery is leaking, do not handle the device with your bare hands. Contact the service center for help since the liquid may remain in the player. If your body or clothes had contact with the battery liquid, wash it off thoroughly with water. Also, if some liquid gets into your eyes, do not rub your eyes but immediately wash them with clean water and consult a doctor.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

Warranty information

Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within **90** days from your original date of purchase return it to the authorized service center for repair or exchange.

This camera has water tight seals which if used improperly void the 90 day limited warranty. Please refer to "Water resistant covers" for proper use and handling. If the camera has been damaged by liquid, the service for such liquid damage is not covered by Southern Telecom Inc.

TO OBTAIN WARRANTY SERVICE:

- **Provide proof of the date of purchase within the package (Dated bill of sale).**
- **Prepay all shipping costs to the authorized service center, and remember to insure your return.**
- **Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.**
- **Describe the defect or reason you are returning the product.**

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:



Southern Telecom, Inc.
ATTN: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC. IT'S AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.



Made in China / Designed in the USA
Manufactured by: Southern Telecom, Inc. Brooklyn, NY 11232
© 2011 Southern Telecom, Inc. All rights reserved.

YouTube™ is a registered trademark of YouTube, LLC.
This product is not affiliated with, or endorsed by YouTube™.

Vue® and MediaManagerHD software are trademarks of Vue, Inc.
SD (The SD logo is a trademark of the SD Card Association)
Other trademarks and trade names are those of their respective owners.

All screen images are simulated.

Distributed by: AIT, Inc. Brooklyn NY 11232
© 2010 All rights reserved

Emerson and the G-Clef logo are registered trademarks of
Emerson Radio Corp. Parsippany, New Jersey USA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>