


**EVC720** 

**User Guide** 

# UOS/JUID O

When you turn on the camera, the default mode is Video Mode. To scroll through and select one of the camera modes below, press the [MODE] button until the desired mode is displayed.

Camera modes

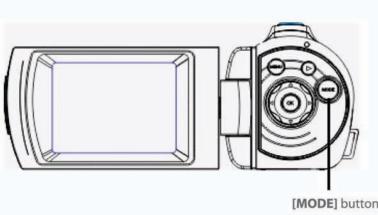

Press the [MODE] button to switch between:

► Video Mode - Record videos

Picture Mode - Take Pictures

System Settings

access the System Settings Screen

the [OK] button.

SOUNDS

**AUTO REVIEW** 

**POWER SAVE** 

LANGUAGE

TV OUT

**FORMAT** 

RESET ALI

POWER FREQUENCY

1. Use the [ ▶ ] button to select [ ⊀ ].

System Settings Options

Playback Mode - Playback videos or view pictures

Press the [ Menu ] button within any mode and follow the steps below to

2. Use the [▲] [▼] buttons to select an option, and confirm by pressing

adjust date & time

PAL / NTSC

Select a display langua

System Settings Screen

shutter(on/off),start-up(1/2/3/none)),Beep(on/off),Volume(0/1/2/3)

Select 1, 3, or 5 minutes. To conserve battery power, the camera

will shut off if no buttons are pressed within the selected time.

Format the SD / SDHC card (Deletes everything on the card).

Reset the camera to factory default settings

3. Press the [ Menu ] button to exit the System Settings Screen.

Video Mode

camera is in the Video Mode.

camera is recording video.

1. Make sure that an SD card is inserted into the camera.

display returns to the Standby Recording Screen.

Standby Recording Screen

1 2 3 4 5

3. Press the [RECORD] button, the Recording Screen is displayed and the

4. To stop recording, press the [RECORD] button once again, and the

In the box

Digital Video Camera

HDMI cable

CD-ROM

(MAGIX Photo and

video suite)

TFT LCD Screen

Location of controls



# **▶** Video Mode Settings

Self timer and continuous shooting

and then press the [RECORD] button.

**Picture Mode** 

Picture Mode Screen

1. Make sure that an SD card is inserted into the camera.

3. Press the [RECORD] button to take a picture.

[■] 📆 1MI =±= 216°

Picture Mode (the Picture Mode Screen is displayed).

1. Picture Mode Icon

Image quality

). SD card indicator

12. Battery indicator

0. Self timer countdown

. Digital zoom indicator

8. Number of photos that can be taken

2. Self timer

# Picture Mode Settings

 Press the [MODE] button until the Picture Mode is selected. 2. Press the [ Menu] button to access the Picture Mode Settings Screen. 3. Use the [▲] [▼] buttons to select an option, and confirm by pressing the [ OK ] button. 4. Press the [ Menu ] button to exit the Picture Mode Settings Screen.

1. Press the [▶] button to select 2 seconds, 10 seconds self timer, or burst,

down from 2 or 10 seconds, and the camera takes a picture; when you

2. When you select 2 or 10 seconds self timer, the timer starts counting

select burst, the camera takes 3 pictures continuously.

3. Press the [RECORD] button to start self timer or burst snapshot.

Press the [▶] button to turn off the self timer or burst feature.

Picture Mode Settings Screen



1. Press the [MODE] button until the Video Mode is selected.


Video Mode Settings Screen

the [OK] button.

2. Press the [ Menu] button to access the Video Mode Settings Screen.

3. Use the [▲] [▼] buttons to select an option, and confirm by pressing

4. Press the [ Menu ] button to exit the Video Mode Settings Screen.

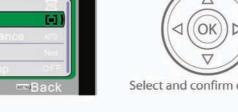

Video Mode Settings Options	
MOVIE SIZE	• 1920 x 1080 (highest quality video/shortest recording time)
	• 1280 x 720 (higher quality video/shorter recording time)
	• 640 x 480 (lowest quality video/longest recording time)

	<ul> <li>640 x 480 (lowest quality video/longest recording time)</li> </ul>
METERING	Center / Multi / Spot
WHITE BALANCE	Auto / Daylight / Cloudy / Fluorescent / Tungsten
EFFECT	• Normal / B&W / Sepia / Negative / Red / Green / Blue
DATE STAMP	off/ date/ date & time

## **Battery Installation**

Storage Pouch

**USB** Cable

(connects to your

computer)

2 AA batteries

[PLAY BACK] button

2. Turn on the camera, the **Standby Recording Screen** is displayed and the 2. Turn on the camera, and press the **[MODE]** button once to enter the

[A] button / Zoom in \_\_\_\_\_ [BUSY INDICATOR] light

[▽] button / Zoom out

. Video Mode Icon 2. White balance

5. Recording time (video)

7. Digital zoom indicator

SD card indicator

8. Battery Indicator

4. Movie size

Audio/Video Cable

(connects to your TV)


4 GB Micro SD Card

[MENU] button

[<] button / flash toggle


Setting up your camera

 Open the battery cover by pushing the battery cover open switch.
 Insert 2 alkaline "AA" size batteries into the compartment. Close the battery cover.

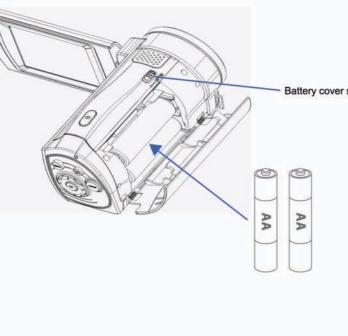

### SD card installation This camera has no internal memory and requires an SD /SDHC card (4 GB SD card included) to record videos or take pictures. The camera can support


SD/SDHC cards up to 32GB To install the SD card into the camera, follow the 1. Turn off the camera. 2. Insert the SD card into the card slot on the buttom of the camera until it clicks and locks into place. 3. To remove the card, gently push it in until it pops out.

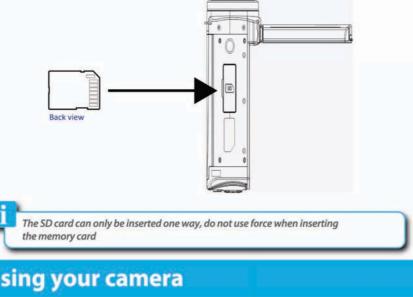

**Using your camera** Turning the camera on/off

## 1. To turn the camera on, press and HOLD the [POWER] button until the display turns on.

2. To turn the camera off, press and HOLD the [POWER] button until the display turns off.

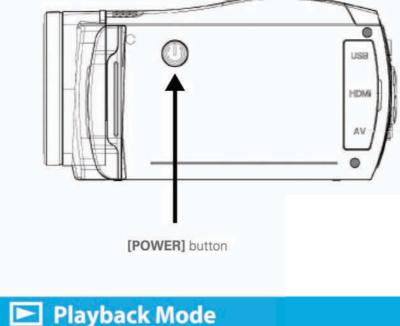

1. Turn on the camera, and press the [MODE] button twice to enter the Playback mode.

Use the [◀] or [▶] button to select a video or picture. 3. If you select a video, press the [OK] button to start or stop the 4. Press the [MODE] button again to return to the Video Mode or Picture


Video Playback Screen

3. File type (video file)

. Playback Mode Icon

2. Number of saved videos

Picture Playback Screen

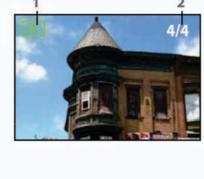

**▶** Playback Settings

the [OK] button.

1. Press the [ ] button to select playback mode.

Playback Mode Settings Screen

2. Press the [ MENU ] button to access the Playback Mode Settings Screen.

4. Press the [ MENU] button to exit the Playback Mode Settings Screen.

Use the [▲] [▼] buttons to select an option, and confirm by pressing

2. Number of saved pictures

1. Playback Mode Icon



Picture Mode Settings Options

RESOLUTION

**OUALITY** 

METERING

**EXPOSURE** 

EFFECT

DATE STAMP

**FACE DETECT** 

**ANTI SHAKE** 

**SMILE CAPTURE** 

**FD METERING** 

DRIVER MODE

WHITE BALANCE



5M (2592x1944)/3M(2048x1536)/1.3M(1280x1024)

Auto / Daylight / Cloudy / Fluorescent / Tungsten

Normal / B&W / Sepia / Negative / Red / Green / Blue

"Off" (disables the Picture Mode), "2" or "10" second options (self

Super fine / Fine / Normal

Center / Multi / Spot

Adjust the exposure

off/ date/ date & time

on / off

on / off

on / off

100 / 200 /400

on / off






### Lock one or all of your picture and video files. When locked they LOCK will not be able to be deleted

"One" (Delete the currently displayed video or picture) or
Start a slide show, and adjust the slide show settings
Add/Delete

## Connect your camera to a computer Connecting your camera to a TV

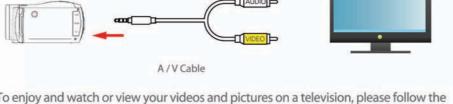

3. Turn on the camera - the display will turn on briefly and shut.

5. Press the [MODE] button to enter the Playback Mode ( ).

Transferring videos from the camera to

4. Click on your televisions "Input" button until you see the live feed from the

6. Use the [4] or [1] button to select a video file, and press the [RECORD]

Select a JPG picture and press the [MENU] button, then select "Slide Show"

"Start" to being a slideshow of all the picture's stored on the camera's sd card.

from the playback mode settings screen. Press the [ > ] button and select

**Connecting the camera** 

(yellow) and audio (red or white) inputs.

7. Use the [◀] or [▶] to rewind and fast forward.

button to begin or stop playback.

nstructions below:



To edit or upload and share your videos and pictures, you must first transfer Connect the black plug of the provided A / V Cable to your camera's A / V OUT jack. 2. Connect the yellow and white plugs to your television's matching video

them to your computer. Follow the steps below to connect the camera to your computer, and use the provided MAGIX software to manage, view, edit and share your videos and pictures. . Make sure the camera is turned off, and that an SD / SDHC card is inserted in the camera before connecting it to your computer.

2. Insert the smaller end of the USB cable into the camera's USB port. . Connect the larger end of the USB cable into your computer's USB port. 4. Turn ON the camera. 5. Look for your camera by clicking on "My Computer", it should usually appear as "Removable Disk". Select a file on your camera, and simply move it into your computer (we recommend copying the files into the "My Videos" or "My Pictures" folder of your computer) in the usual way (drag-and-drop,

copy-paste), OR open the MAGIX software to easily locate your camera and transfer, view, edit, and upload your video and picture files (see "MAGIX photo and video suite"). Before disconnecting the camera, click on the "Safely Remove Hardware" icon usually located on the lower right corner of your desktop. Please do not disconnect the USB cable during loading, as it may cause damage to the

camera and the files on the SD card.

4. Click "Select file(s) from the computer", then locate the videos or pictures

If you camera is connected to the computer, you can located the files by

selecting "Removable Disk" from "My Computer" located in the "Start

Where would you like to import one or multiple video files from

you saved from the camera (see "Connect your camera to a computer").

## Install the included MAGIX Photo and video suite software before connecting

Installing

**MAGIX Photo and video suite** 

the video camera to your computer. With the software you will be able to manage, view, edit, transfer, and easily upload/share your videos and pictures. Follow the instructions below to install the MAGIX Photo and video suite onto



1. Insert the provided CD into the CD-ROM drive of your computer, and click on "Install MAGIX video easy SE".

2. Click "Install", then follow the installation instructions. 3. Click "Next" when prompted and "Finish". 4. To open the MAGIX video easy SE, click the "MAGIX Video Easy SE" icon on your Desktop. Note: Don't forget to install the Quick Time Player during installing the MAGIX video easy SE. "http://www.apple.com/quicktime/

saturation & color

Viewing and editing videos on your computer

4. Edit the video by changing the brightness, contrast, saturation and

5. Title and text: Select this tab to add a title or other text to the object.

**PHOTO** 

**MANAGER** 

. From the main screen click on "Insert video

2. Select a video and click to play.

Within the "Optimize" screen you can:

Adjust the brightness

Adjust the sharpness

Adjust the contrast

Eliminate red eye

Straighten horizon

Black and white effect

· Adjust the saturation

Clipping

color shape.

3. Double click the video to play it in full screen.

# Program registration - Internet connection required **Uploading videos to Youtube**

Register the software on line by clicking on "Program registration"

1. Open MAGIX video easy SE.

Welcome to MAGIX Video easy SE

1. Select a video.

3. Click on the Youtube icon.

Webcam feature

Installing the WebCam Driver

driver and use the webcam feature.

This is the free version of MAGIX Video easy SE.

2. From the main screen click on "Finish movie"

You can try the program for 7 days from the installation date.

# 1. Open MAGIX video easy SE.

your computer

3. Name the project.

Flease enter your login info for this online service:

Forgot your password? Register

Username:

Password:



Enter the required information and click "Upload".

Enter your Youtube username and password, then click "OK".

OK Cancel

Click "Save on computer" to save the video files to your computer.

Using your camera as a web camera

4. You can now use your camera as webcam

USB cable to the computer

**FCC** information

the following two conditions:

that may cause undesired operation.

interference to radio communications.

Reorient or relocate the receiving antenna.

the following measures:

as webcam.

2. Connect the small end of USB cable to the camera and the other end of

6. When you connect the camera, it will be recognized by your computer

You can press the [MODE] button to switch "MSDC" to "PC CAM" when you connect the the

We recommend using a tripod (not included) when using your camera as a webcam.

This device complies with Part 15 of the FCC Rules. Operation is subject to

(1) this device may not cause harmful interference, and(2) this device must accept any interference received, including interference

by the party responsible for compliance could void the user's authority to

requirements for a Class B digital device under Part 15 of the Federal Comm

reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if

not installed and used in accordance with the instructions, may cause harmful

However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or

Connect the equipment into an outlet on a circuit different from that to

Increase the separation between the equipment and receiver.

• Consult the dealer or an experienced radio/TV technician for help.

nications Commission (FCC) rules. These requirements are intended to provide

NOTE: This equipment has been tested and found to comply with the

selecting "USB" and then "MSDC" in the system settings.

When you set the camera to PCCAM, you will not be able to access the files on the card when

connecting the camera to your computer. Make sure to set it back to its default setting by

3. Press the [Mode] button, the camera will display "PC CAM"

5. Press the [Menu] button once again to exit the System Settings.

6. If the video successfully uploaded, you will see the message belows.

# Viewing and editing pictures on your computer

Back Close

1. Insert the provided CD into the CD-ROM drive of your computer, and click on "Install MAGIX Photo Manager MX"

NOTE: You must have an internet connection to download this software

2. Select the language then click "Continue". The sofware will download automatically from the MAGIX website. When finished, click "Next". 3. To open MAGIX Photo Manager 10, click on the MAGIX Photo

Manager MX icon on your desktop. 4. Select the photos from the folder. 5. Select a picture, and click on the "Optimize" icon.

# HDMI

Connecting your camera to an HDMI input 1. Connect the small end of the included HDMI cable to the camera, and the other end to the HDMI display

Turn on the camera and switch to Playback mode, your pictures / videos will be displayed.







# Camera will not turn on

 Check that the batteries are properly inserted. Try replacing the batteries.

Adjust the video / picture quality to a higher setting.

The display does not light up, or the message "No Card!" is displayed Check that the SD card is properly inserted into the card slot. My videos / pictures are fuzzy or poor quality

memory card.

My videos are jumpy or shaky

Use a mini tripod.

**Trouble Shooting** 

### Screen or the "Resolution" and "Quality" from the Picture Mode Settings Screen. Check the connection of the USB cable, make sure it is properly connected. • If you recently used the webcam feature, you must go to the **System Settings** Remember that choosing higher quality settings will take up more space on the Screen and select "USB" and choose the "MSDC" option. Make sure to keep the camera steady when filming, and be aware of the lighting environment (the more light the better your pictures and videos will turn out). Still having trouble with your camera? Please call or email customer support: Avoid using the zoom too much, as it will affect the quality of your video and pictures. Clean the lens of your camera, and make sure it is free of fingerprints (Clean only

with a non abrasive dry cloth and make sure the player is turned off before cleaning).

Try adjusting the "Movie Size" and "Frame Rate" from the Video Mode Settings

**Customer Support:** 2 1-877-768-8483 (Toll Free) ⊠ cs@southerntelecom.com

Videos do not play on my TV

Monday - Thursday: 9AM - 5PM (EST) Friday: 9AM - 3PM (EST)

Warranty service not provided

Limitation of Warranty:

www.southerntelecom.com

center for repair must be suitably packaged.

ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

## TO OBTAIN WARRANTY SERVICE: Warning: Changes or modifications to this equipment not expressly approved

Provide proof of the date of purchase within the package (Dated

remember to insure your return.

Southern Telecom, Inc. Attention: Customer Service (2nd Floor) 14-C 53rd Street Brooklyn, NY 11232

Your product will be repaired or replaced, at our option, for the

center determines this product is defective. Products received

same or similar model of equal value if examination by the service

damaged as a result of shipping will require you to file a claim with

Should you have any questions or problems concerning this product, please contact our customer service department at:

The shipping address of the authorized service center is:

**Customer Support:** 2 1-877-768-8483 (Toll Free) 

OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above mitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

This warranty does not cover damage resulting from accident, misuse, abuse,

improper installation or operation, lack of reasonable care, and unauthorized

modification. This warranty is voided in the event any unauthorized person opens,

alters or repairs this product. All products being returned to the authorized service

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS

PRODUCT, ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL

IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR

PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION

GIVEN BY AIT, INC. IT'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE

REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR

ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS

PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY

CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR

PRODUCT THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE

GOVERNED BY THE LAWS OF THE STATE OF NEW YORK, EXCEPT TO THE EXTENT

# **Limited Warranty**

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

Prepay all shipping costs to the authorized service center, and

 Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.


television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

Describe the defect or reason you are returning the product.

Monday - Thursday: 9AM - 5PM (EST) Friday: 9AM - 3PM (EST)

www.southerntelecom.com

click on the "Install driver". Adjust the temperature 2. Click "Next". 3. Click "Install" and "Finish" when prompted. 7. To view insturctional videos for this software click on "Help" then select "View video tutorials".

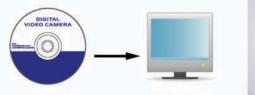

A/V cable to the A/V OUT jack of the camera).

you see the live feed from the video camera.



• Check that you have properly connected the A/V cable to the camera and TV inputs.

• Make sure that the camera is turned on (The display will beoff when you connect the

• Most televisions have several inputs, check on the TV or your TV's remote for the

button that controls the inputs on your TV. Scroll through the different inputs until

My computer does not recognize the camera when I connect it to the USB port

You Digital Video Camera may also be used as a webcam. This feature is

quite useful if you would like to utilize the video function on Skype™ and

other similar applications. To use the camera as a webcam you must first

install the **Webcam** driver. Follow the instructions below to install the

1. Insert the provided CD into the CD-ROM drive of your computer, and

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com