



User's Guide



Multimedia Projector

EB-W28





Notations Used in This Guide

- **Safety indications**

The documentation and the projector use graphical symbols to show how to use the projector safely. Please understand and respect these caution symbols in order to avoid injury to persons or property.

 Warning	This symbol indicates information that, if ignored, could possibly result in personal injury.
 Caution	This symbol indicates information that, if ignored, could possibly result in personal injury.

- **General information indications**

Attention	Indicates procedures which may result in damage or injury if sufficient care is not taken.
	Indicates additional information and points which may be useful to know regarding a topic.
	Indicates a page where detailed information regarding a topic can be found.
	Indicates that an explanation of the underlined word or words in front of this symbol appears in a section of the "Appendix".  "Glossary" p.139
[Name]	Indicates the name of the buttons on the remote control or the control panel. Example: [Esc] button
Menu Name	Indicates Configuration menu items. Example: Select Brightness from Image . Image - Brightness

Contents

Notations Used in This Guide 2

Introduction

Projector Features 8

Quick and Easy Set up, Projection, and Storage	8
Connecting with a USB cable and projecting (USB Display)	8
Detecting projector movements and automatically correcting image distortion	8
Horizontal keystone adjuster	8
Useful Functions for Projecting Images	8
Project two images simultaneously (Split Screen)	8
Increasing projection content in wide (WXGA) screen	9
Connect a USB storage device and project movies or images (PC Free)	9
Various functions for excellent power saving	9
Making the most of the remote control	9
Enlarge and project your files with the Document Camera	9
Enhanced security functions	9
Connecting to a wireless LAN and projecting images	10

Part Names and Functions 11

Front/Top	11
Rear	12
Base	13
Control Panel	14
Remote Control	15
Replacing the remote control batteries	18
Remote control operating range	19

Preparing the Projector

Installing the Projector 21

Installation Methods	21
Installation methods	21
Screen Size and Approximate Projection Distance	22

Connecting Equipment 23

Connecting a Computer	23
Connecting a Smartphone or Tablet D	23
Connecting Image Sources	23
Connecting USB Devices	23
Installing the Wireless LAN Unit	23
Installing the Quick Wireless Conne	23

Basic Usage

Projecting Images 24

From Installation to Projection	24
Automatically Detect Input Signals and	24
Switching to the Target Image by Rem	24
Projecting with USB Display	24
System requirements	24
Connecting for the first time	24
Uninstalling	24

Adjusting Projected Images 25

Correcting Keystone Distortion	25
Correcting automatically	25
Correcting manually	25
Adjusting the Image Size	25
Adjusting the Image Position	25
Adjusting the Horizontal Tilt	25
Correcting the Focus	25
Adjusting the Volume	25
Selecting the Projection Quality (Sele	25
Setting Auto Iris	25
Changing the Aspect Ratio of the Proj	25
Changing methods	25
Changing the aspect mode	25

Contents

Useful Functions

Projection Functions	47
Projecting Two Images Simultaneously (Split Screen)	47
Input sources for split screen projection	47
Operating procedures	47
Restrictions during split screen projection	50
Projecting Without a Computer (PC Free)	50
Specifications for files that can be projected using PC Free	50
PC Free examples	51
PC Free operating methods	51
Projecting the selected images or movies	53
Projecting image files in a folder in sequence (Slideshow)	54
Image file display settings and Slideshow operation settings	55
Projecting Using a QR Code	55
Setting the display method for QR codes	56
Projecting data from a smartphone or tablet device	57
Hiding the Image and Sound Temporarily (A/V Mute)	57
Freezing the Image (Freeze)	58
Pointer Function (Pointer)	58
Enlarging Part of the Image (E-Zoom)	59
Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)	60
Correcting the Color Difference when Projecting from Multiple Projectors	61
Summary of correction procedure	61
Setting an ID and using the remote control	62
Correcting	64
Saving a User's Logo	64
Security Functions	67
Managing Users (Password Protect)	67
Kinds of Password Protect	67
Setting Password Protect	67
Entering the Password	68
Restricting Operation (Control Panel Lock)	69
Anti-Theft Lock	70
Installing the wire lock	70

Monitoring and Controlling

EasyMP Monitor	
Message Broadcasting	
Changing Settings Using a Web Browser	
Projector setup	
Displaying the Web Control screen	
Displaying the Web Remote screen	
Using the Mail Notification Function to	
Reading Error Notification Mail	
Management Using SNMP	
ESC/VP21 Commands	
Before starting	
Command list	
Communications protocol	

About Event ID

Configuration Menu

Using the Configuration Menu

List of Functions

Configuration Menu Table	
Network menu	
Image Menu	
Signal Menu	
Settings Menu	
Extended Menu	
Network Menu	
Notes on operating the Network menu	
Soft keyboard operations	
Basic menu	
Wireless LAN menu	
Security menu	
Mail menu	
Others menu	
Reset menu	

Contents

ECO Menu	94
Info Menu (Display Only)	95
Reset Menu	95

Performing Batch Setup for Multiple Projectors 96

Setup Using a USB Flash Drive	96
Saving settings to the USB flash drive	96
Reflecting saved settings to other projectors	98
Setup by Connecting the Computer and Projector with a USB Cable	99
Saving settings to a computer	100
Reflecting saved settings to other projectors	101
When Setup Fails	102

Troubleshooting

Using the Help 104

Problem Solving 106

Reading the Indicators	106
When the Indicators Provide No Help	110
Problems Relating to Images	111
No images appear	111
Moving images are not displayed	112
Projection stops automatically	112
The message Not supported is displayed	112
The message No Signal is displayed	113
Images are fuzzy, out of focus, or distorted	113
Interference or distortion appear in images	114
The image is truncated (large) or small, the aspect is not suitable, or the image has been reversed	115
Image colors are not right	115
Images appear dark	116
Problems when Projection Starts	117
The projector does not turn on	117
Other Problems	117
No sound can be heard or the sound is faint	117
There is noise in the audio (only when projecting USB display)	118

The remote control does not work
I want to change the language for r
Mail is not received even if a proble
Cannot change settings using a We

Maintenance

Cleaning

Cleaning the Projector's Surface
Cleaning the Lens
Cleaning the Air Filter

Replacing Consumables

Replacing the Lamp
Lamp replacement period
How to replace the lamp
Resetting the lamp hours
Replacing the Air Filter
Air filter replacement period
How to replace the air filter

Appendix

Optional Accessories and Cons

Optional Accessories
Consumables

Screen Size and Projection Dis

Projection Distance

Supported Monitor Displays .

Supported Resolutions
Computer signals (analog RGB)
Component video
Composite video
HDMI Input Signal

Contents

MHL Input Signal	133
Specifications	134
Projector General Specifications	134
Appearance	138
Glossary	139
General Notes	141
About Notations	141
General Notice:	142
Index	143

Introduction

This chapter explains the projector's features and the part names.

Projector Features


Quick and Easy Set up, Projection, and Storage

- Turn the projector on and off by simply plugging in or unplugging.
- Project onto large screens from a short distance.
- Make easy height adjustments with one lever.
- No cool down delay makes it easy to put away.
- Turn on the projector by simply receiving an image signal.

Connecting with a USB cable and projecting (USB Display)

By simply connecting a USB cable, you can project images from a computer's screen without a computer cable.


☛ "Projecting with USB Display" [p.33](#)

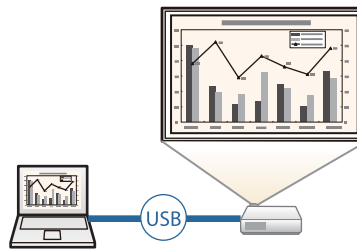

Detecting projector movements and automatically correcting image distortion

This projector automatically corrects vertical keystone distortion which occurs when positioning or moving the projector.


☛ "Correcting automatically" [p.37](#)

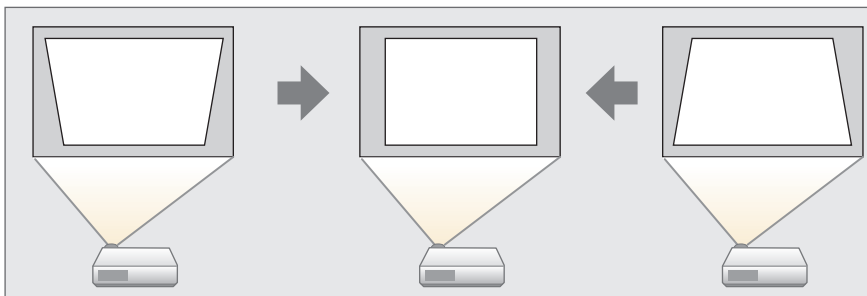

Horizontal keystone adjuster

This allows you to quickly correct horizontal keystone distortion of the image. This is useful if you cannot adjust the projector.

☛ "Correcting manually" [p.38](#)

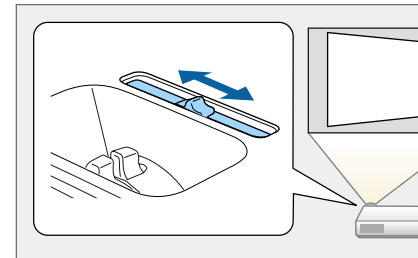

Useful Functions for Projections

Project two images simultaneously

This function divides the projected screen into two and projects two types of image side by side. By simultaneously projecting images from two sources on one screen, you can raise the impact of your message or proposition in video conferences or presentations.


☛ "Projecting Two Images Simultaneously (Split Screen)" [p.47](#)

Projector Features

Increasing projection content in wide (WXGA) screen

With a computer that has a 16:10 WXGA wide LCD display, the image can be projected in the same aspect. You can use whiteboards and other landscape format screens.

☛ "Changing the Aspect Ratio of the Projected Image" [p.44](#)

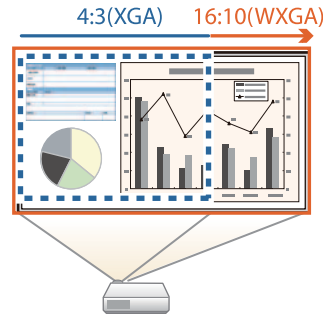

Connect a USB storage device and project movies or images (PC Free)

You can connect USB storage devices or digital cameras to the projector and project saved images.

A wide range of file formats are supported such as movies or images.


☛ "Projecting Without a Computer (PC Free)" [p.50](#)

Various functions for excellent power saving

- Various functions to prevent wasting electricity

The projector comes with a number of built-in functions to save power such as dimming the projected image, an auto power off timer, and adjusting power consumption while the projector is standing by.

☛ "ECO Menu" [p.94](#)

- Function for displaying the power-saving status on the projected screen
When ECO Display is set to **On** from the Configuration menu, leaf icons () that indicate the power-saving status are displayed at the bottom-left of the projected screen when the lamp brightness has switched to low brightness.

☛ ECO - ECO Display [p.94](#)

Making the most of the remote control

You can use the remote control to navigate through the part of the image. You can also use the remote control to draw attention to specific points, or a

☛ "Pointer Function (Pointer)"

☛ "Enlarging Part of the Image"

☛ "Using the Remote Control (Mouse)" [p.60](#)

Enlarge and project your files

You can project paper documents from the projector's Camera.

By connecting to a computer and using the remote control, you can make full use of the projector's

☛ "Optional Accessories" [p.129](#)

Enhanced security functions

- **Password Protect to restrict access**

By setting a Password you can restrict access to the projector.

☛ "Managing Users (Password)"

- **Control Panel Lock to restrict access**

You can use this to prevent unauthorized access to the projector's control panel at events, in schools, etc.

☛ "Restricting Operation (Control Panel Lock)"

Projector Features

- **Equipped with various anti-theft devices**

The projector is equipped with the following types of anti-theft security devices.

- Security slot
- Security cable installation point
- ☛ "Anti-Theft Lock" [p.70](#)

Connecting to a wireless LAN and projecting images

By installing the supplied or optional wireless LAN unit and connecting to a wireless LAN network, the following functions become available.

☛ "Installing the Wireless LAN Unit" [p.28](#)

- **Wirelessly projecting your computer's screen**

You can project your computer's screen over a network by using EasyMP Network Projection.

You can download EasyMP Network Projection from the following Web site.

<http://www.epson.com>




- **Projecting multiple computer screens at the same time**

By using EasyMP Multi PC Projection, you can project up to four screens at the same time from a computer on the network, or from smartphones or tablet devices on which Epson iProjection is installed.

You can download EasyMP Multi PC Projection from the following Web site.

<http://www.epson.com>

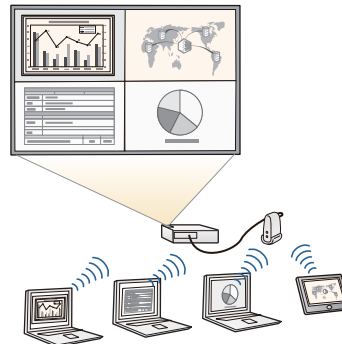

- **Using Quick Wireless Connect**

for your computer (Windows). By simply connecting the optional Quick Wireless Connection USB Key to a computer, you can connect the projector and the computer using the wireless communication and project images from the computer.

☛ "Installing the Quick Wireless Connection USB Key" [p.28](#)


- **Projecting images from portable devices**



If Epson iProjection is installed on your smartphone or tablet device, you can wirelessly project data from the device. Because you can operate these devices from any location, you can vary the way in which conferences or presentations are made.



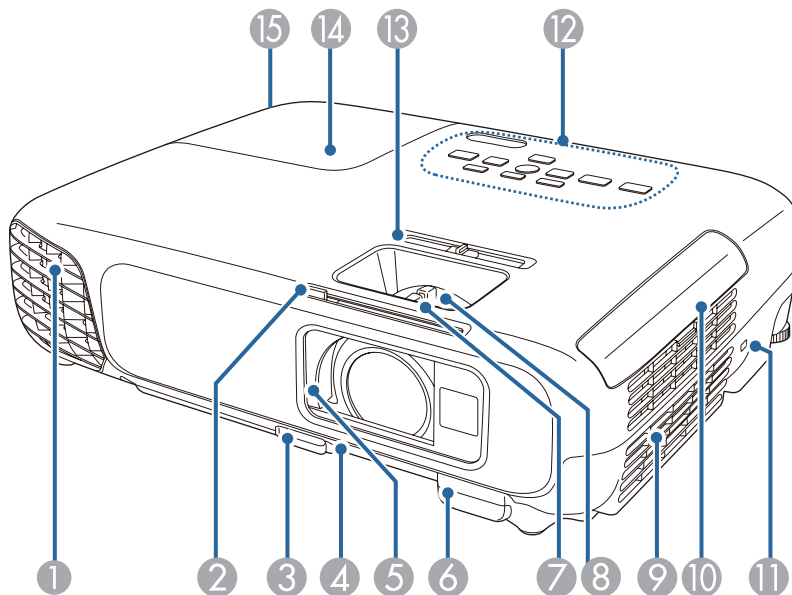


 




You can download Epson iProjection from Google play. Any fees incurred from Google play are the responsibility of the user.

Part Names and Functions

Front/Top




Name	Function
① Air exhaust vent	Exhaust vent for air used to cool the projector internally. <div style="border: 1px solid black; padding: 5px; text-align: center;">  Caution While projecting, do not put your face or hands near the air exhaust vent, and do not place objects that may become warped or damaged by heat near the vent. Hot air from the air exhaust vent could cause burns, warping, or accidents to occur. </div>
② A/V mute slide knob	Slide the knob to open and close the A/V mute slide.
③ Foot adjust lever	Press the foot adjust lever to extend and retract the front adjustable foot.  "Adjusting the Image Position" p.41

	Name	
④	Front adjustable foot	When set to adjust the projector's position.  "Adjusting the Image Position" p.41
⑤	A/V mute slide	Close when projecting to reduce sound.  "Hidden Mute" p.41
⑥	Remote receiver	Receives signals from the remote control.
⑦	Focus ring	Adjusts the focus of the projected image.  "Correcting the Image" p.41
⑧	Zoom ring	Adjusts the zoom of the projected image.  "Adjusting the Image Size" p.41
⑨	Air intake vent (air filter)	Takes in fresh air for the projector's internal fan.  "Cleaning the Air Filter" p.41
⑩	Air filter cover	Opens and closes the air filter cover.  "Replacing the Air Filter" p.41
⑪	Security slot	The security slot for the projector's security lock.  "Anti-theft Security" p.41
⑫	Control panel	Operates the projector's functions.  "Controlling the Projector" p.41
⑬	Horizontal keystone adjuster	Corrects the horizontal keystone distortion of the projected image.  "Correcting the Image" p.41
⑭	Lamp cover	Open when replacing the projector lamp.  "Replacing the Projector Lamp" p.41
⑮	Lamp Cover Fixing Screw	Screw to fix the lamp cover.

Part Names and Functions

Rear

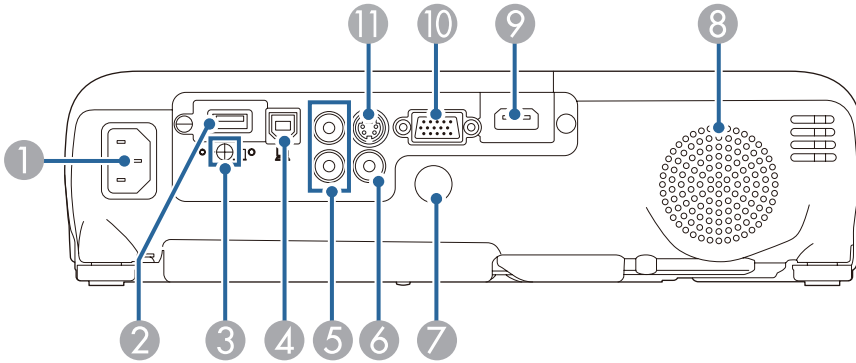


Name	Function
① Power inlet	Connects the power cord to the projector. ☛ "From Installation to Projection" p.31
② USB-A port	<ul style="list-style-type: none"> Connects a USB flash drive or a digital camera and projects movies or images using PC Free. ☛ "Projecting Without a Computer (PC Free)" p.50 Connects the optional Document Camera. Connects the supplied or optional Wireless LAN unit. ☛ "Installing the Wireless LAN Unit" p.28 Connects the optional Quick Wireless Connection USB Key. ☛ "Installing the Quick Wireless Connection USB Key" p.28
③ Wireless LAN unit fixing screw	This screw secures the wireless LAN unit cover.

Name	Function
④ USB-B port	<ul style="list-style-type: none"> Connects the projector to a computer. ☛ "Projecting Without a Computer (PC Free)" p.50 Connects the optional Quick Wireless Connection USB Key. ☛ "Installing the Quick Wireless Connection USB Key" p.28
⑤ Audio port	Inputs audio signal from a computer or other audio source.
⑥ Video port	Inputs composite video signal from a computer or other video source.
⑦ Remote receiver	Receives the infrared signal from the remote control.
⑧ Speaker	Outputs audio signal.
⑨ HDMI/MHL port	<ul style="list-style-type: none"> Inputs high-definition video and audio signals from a computer or other video source. Inputs high-definition video and audio signals from a mobile device. ☛ "Connecting a Mobile Device" p.50
⑩ Computer port	Inputs high-definition video signal from a computer.
⑪ S-Video port	For S-video input.

Part Names and Functions

Base

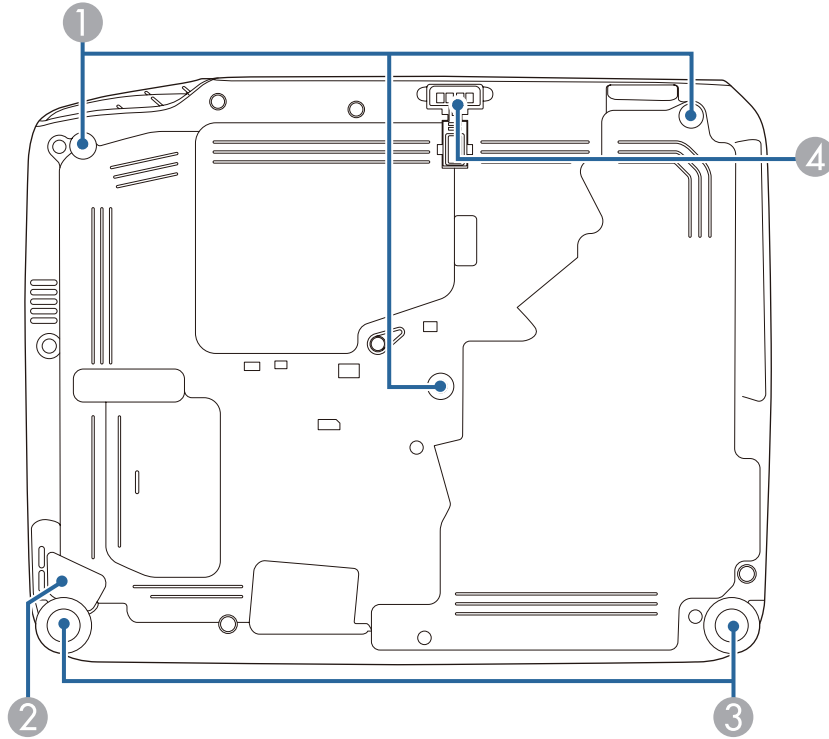


Name		
3	Rear feet	When set to retract to ☛ "Adjust"
4	Front adjustable foot	When set to adjust th ☛ "Adjust"

Name	Function
1 Ceiling mount fixing points (three points)	Attach the optional Ceiling Mount here when suspending the projector from a ceiling. ☛ "Installing the Projector" p.21 ☛ "Optional Accessories" p.129
2 Security cable installation point	Pass a commercially available wire lock through here and lock it in place. ☛ "Installing the wire lock" p.70

Part Names and Functions

Control Panel

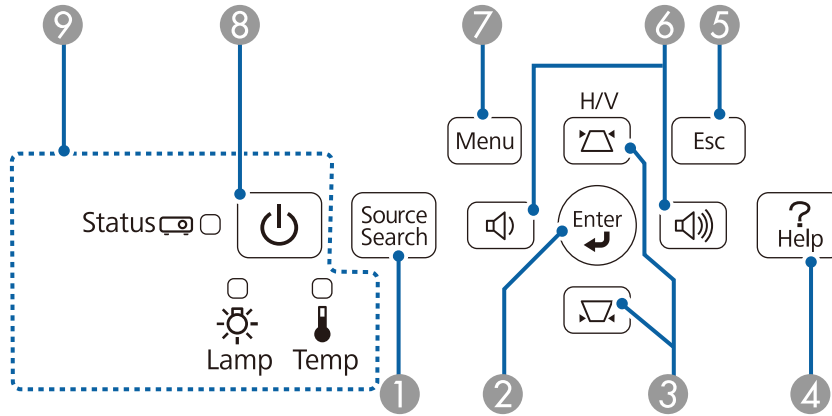


Name	Function
1 [Source Search] button	Changes to the next input source that is sending an image. ☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" p.32
2 [Enter] button [↵]	<ul style="list-style-type: none"> When the Configuration menu or the Help screen is displayed, it accepts and enters the current selection and moves to the next level. If pressed while projecting analog RGB signals from the Computer port, you can automatically optimize Tracking, Sync., and Position.
3 [△][▽] buttons	<ul style="list-style-type: none"> Displays the Keystone screen allowing you to correct keystone distortion in vertical and horizontal directions. ☛ "Correcting manually" p.38 If pressed when the Configuration menu or the Help screen is displayed, these buttons select menu items and setting values. ☛ "Using the Configuration Menu" p.79 ☛ "Using the Help" p.104

Name	Function
4 [Help] button	Displays... to deal w... ☛ "Usin..."
5 [Esc] button	<ul style="list-style-type: none"> Stops t... If press... moves... ☛ "U..."
6 [◀][▶] buttons	<ul style="list-style-type: none"> You ca... [◀] De... [▶] In... ☛ "A..." Correc... when t... ☛ "H..." If press... screen... setting... ☛ "U..." ☛ "U..."
7 [Menu] button	Displays... ☛ "Usin..."
8 Power button [⏻]	Turns th... ☛ "Fron..."
9 Indicators	Indicates... ☛ "Reac..."

Part Names and Functions

Remote Control

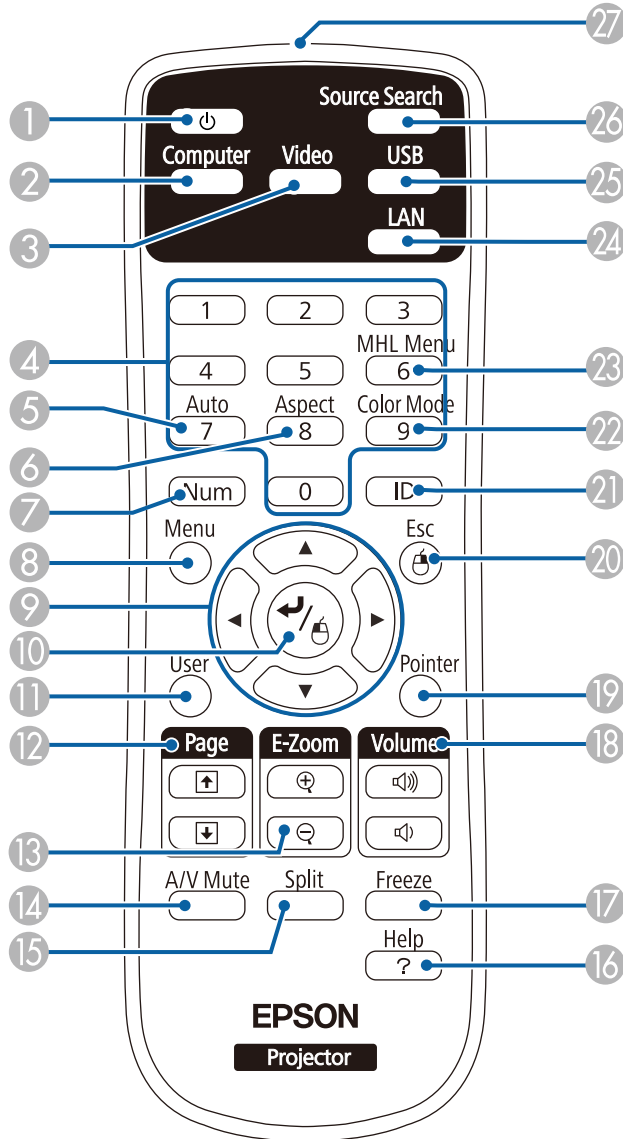


Name		
①	Power button [⏻]	Turns the projector on or off. ☛ "From the Remote Control" p.44
②	[Computer] button	Changes the source to Computer.
③	[Video] button	Each time you press this button, the projector switches between the S-Video and Video inputs.
④	Numeric buttons	Enter the number you want to set. ☛ "Setting the Number" p.44
⑤	[Auto] button	If pressed while the projector is in the Computer menu, it automatically syncs the projector with the computer. ☛ "Computer Sync" p.44
⑥	[Aspect] button	Each time you press this button, the projector changes the aspect ratio. ☛ "Change the Aspect Ratio" p.44
⑦	[Num] button	Hold down this button to enter the password. ☛ "Setting the Password" p.44
⑧	[Menu] button	Displays the menu. ☛ "Using the Menu" p.44
⑨	[Up] [Down] [Left] [Right] buttons	<ul style="list-style-type: none"> When the projector is in the menu, these buttons move the cursor up, down, left, or right. When the projector is in the menu, these buttons scroll the menu up or down. When the projector is in the menu, these buttons scroll the menu so on. ☛ "Page Up" p.44 ☛ "Page Down" p.44 During the menu, these buttons move the cursor up, down, left, or right. ☛ "Using the Menu" p.44 ☛ "Using the Mouse" p.44

Part Names and Functions

	Name	Function
10	[↵] button	<ul style="list-style-type: none"> When the Configuration menu or the Help screen is displayed, it accepts and enters the current selection and moves to the next level. <ul style="list-style-type: none"> "Using the Configuration Menu" p.79 Acts as a mouse's left button when using the Wireless Mouse function. <ul style="list-style-type: none"> "Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)" p.60
11	[User] button	<p>Select any frequently used item from the six available Configuration menu items, and assign it to this button. By pressing the [User] button, the assigned menu item selection/adjustment screen is displayed, allowing you to make one-touch settings/adjustments.</p> <ul style="list-style-type: none"> "Settings Menu" p.84 <p>Power Consumption is assigned as the default setting.</p>
12	[Page] buttons [↶][↷]	<p>Changes pages in files such as PowerPoint files when using the following projection methods.</p> <ul style="list-style-type: none"> When using the Wireless Mouse function <ul style="list-style-type: none"> "Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)" p.60 When using USB Display <ul style="list-style-type: none"> "Projecting with USB Display" p.33 <p>When projecting images using PC Free, pressing these buttons displays the previous/next screen.</p>
13	[E-Zoom] buttons [⊕][⊖]	<p>Enlarges or reduces the image without changing the projection size.</p> <ul style="list-style-type: none"> "Enlarging Part of the Image (E-Zoom)" p.59
14	[A/V Mute] button	<ul style="list-style-type: none"> Turns the video and audio on or off. <ul style="list-style-type: none"> "Hiding the Image and Sound Temporarily (A/V Mute)" p.57 You can change the Projection mode as follows by pressing the button for about five seconds. <ul style="list-style-type: none"> Front ↔ Front/Ceiling Rear ↔ Rear/Ceiling

	Name	
15	[Split] button	<p>Each time you press the button, the screen is split between the left and right sides. Pressing the button again returns the screen to normal.</p> <ul style="list-style-type: none"> "Projecting the Screen" p.50
16	[Help] button	<p>Displays the Help screen to deal with any problems.</p> <ul style="list-style-type: none"> "Using the Remote Control" p.10
17	[Freeze] button	<p>Images are frozen on the screen.</p> <ul style="list-style-type: none"> "Freezing the Screen" p.50
18	[Volume] buttons [⏪][⏩]	<p>[⏪] Decreases the volume. [⏩] Increases the volume.</p> <ul style="list-style-type: none"> "Adjusting the Volume" p.50
19	[Pointer] button	<p>Displays the Mouse Pointer.</p> <ul style="list-style-type: none"> "Projecting with the Mouse Pointer" p.50
20	[Esc] button	<ul style="list-style-type: none"> Stops the projection. If pressing the button while the screen is split, the screen returns to normal. Acts as the mouse's left button when using the Wireless Mouse function. Acts as the mouse's right button when using the Wireless Mouse function.
21	[ID] button	<p>Hold down the button to select the remote control.</p> <ul style="list-style-type: none"> "Settings" p.10
22	[Color Mode] button	<p>Each time you press the button, the screen's color mode is selected.</p> <ul style="list-style-type: none"> "Selecting the Color Mode" p.50

Part Names and Functions

	Name	Function
23	[MHL Menu] button	Displays the settings menu for the device linked to the projector's MHL port.
24	[LAN] button	Switches to the image from the network connected device.
25	[USB] button	Each time the button is pressed, it cycles through the following images: <ul style="list-style-type: none">• USB Display• Images from the device connected to the USB-A port
26	[Source Search] button	Changes to the next input source that is sending an image.  "Automatically Detect Input Signals and Change the Projected Image (Source Search)" p.32
27	Remote control light-emitting area	Outputs remote control signals.


Part Names and Functions

Replacing the remote control batteries

If delays in the responsiveness of the remote control occur or if it does not operate after it has been used for some time, it probably means that the batteries are becoming flat. When this happens, replace them with new batteries. Have two AA size manganese or alkaline batteries ready. You cannot use other batteries except for the AA size manganese or alkaline.


Attention

Make sure you read the following manual before handling the batteries.


 [Safety Instructions](#)

- 1** Remove the battery cover.

While pushing the battery compartment cover catch, lift the cover up.

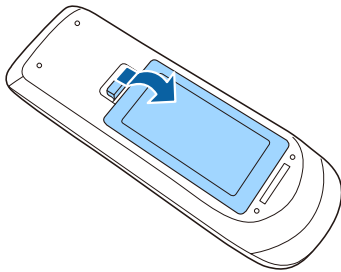


- 2** Replace the old batteries with new batteries.
Slide the batteries in negative side first.

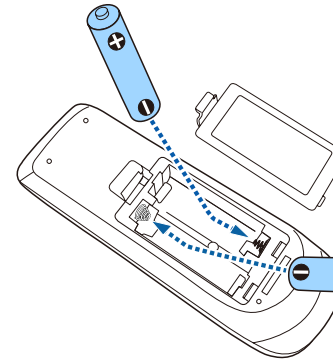

Caution


Check the positions of the () ensure the batteries are inserted correctly.
If the batteries are not used correctly, it may cause a fire, injury, or damage to the remote control.

- 3** Replace the battery cover.
Press the battery compartment cover down.

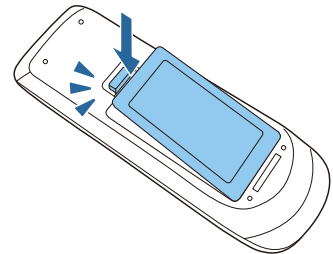

Part Names and Functions

Remote control operating range

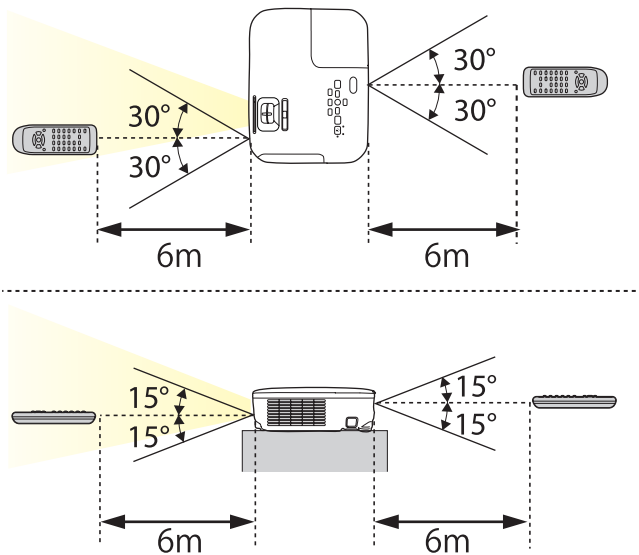

Preparing the Projector



This chapter explains how to install the projector and connect projection sources.

Installing the Projector



Installation Methods

The projector supports the following four different projection methods. Install the projector according to the conditions of the installation location.

- Project images from in front of the screen. (Front projection)
- Project images from behind a translucent screen. (Rear projection)

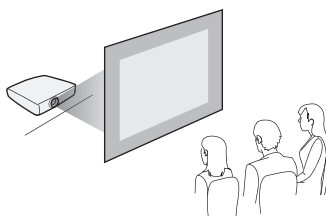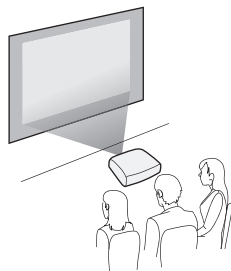

- Suspend the projector from the ceiling and project images from in front of a screen. (Front/Ceiling projection)
- Suspend the projector from the ceiling and project images from behind a translucent screen. (Rear/Ceiling projection)

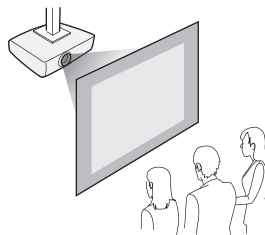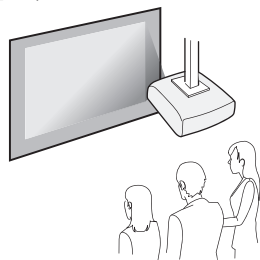



Warning

- A special method of installation from a ceiling (ceiling mount) causing an accident and injury.
- If you use adhesives on the Ceiling projector, the projector case may loosen from loosening, or if you use the projector, the projector case may mount. This could cause serious damage and could damage the projector. When installing or adjusting the projector, prevent the screws from loosening.
- Do not cover the projector's air vents. If the vents are covered, the internal

Attention

Do not use the projector on its side.




- An optional Ceiling mount projector from a ceiling mount.  "Optional Accessories"
- The default Projection mode is set to **Rear** from the Configuration menu.  **Extended - Projection mode**
- You can change the Projection mode by pressing the [A/V Mute] button. **Front ↔ Front/Ceiling**
Rear ↔ Rear/Ceiling

Installation methods


Install the projector as follows.

Installing the Projector

- Install the projector so that it is parallel to the screen.
If the projector is installed at an angle to the screen, keystone distortion occurs in the projected image.

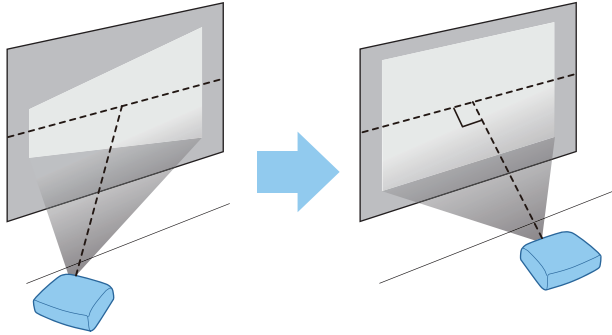

- Place the projector on a level surface.
If the projector is tilted the projected image is also tilted.

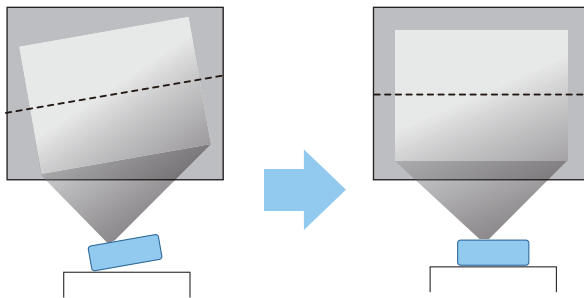

- See the following if you cannot install the projector parallel to the screen.
 - ☛ "Correcting Keystone Distortion" [p.37](#)
- See the following if you cannot install the projector on a level surface.
 - ☛ "Adjusting the Horizontal Tilt" [p.41](#)
 - ☛ "Correcting Keystone Distortion" [p.37](#)

Screen Size and Approx


Projection size is determined by screen. See the illustrations on the to the screen size. The illustration at maximum zoom. See the following projection distance.

☛ "Screen Size and Projection



When you correct keystone reduced.

16:10 Screen Size

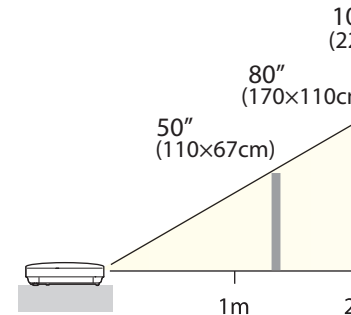

Connecting Equipment

The port name, location, and connector orientation differ depending on the source being connected.

Connecting a Computer

To project images from a computer, connect the computer using one of the following methods.

1 When using the supplied computer cable


Connect the computer's display output port to the projector's Computer port. You can output audio from the projector's speaker by connecting the projector's Audio port to the computer's audio port using a commercially available audio cable.

2 When using the supplied or commercially available USB cable

Connect the computer's USB port to the projector's USB-B port. You can send the computer's audio with the projected image.

3 When using a commercially available HDMI cable

Connect the HDMI port on the computer to the projector's HDMI/MHL port. You can send the computer's audio with the projected image.

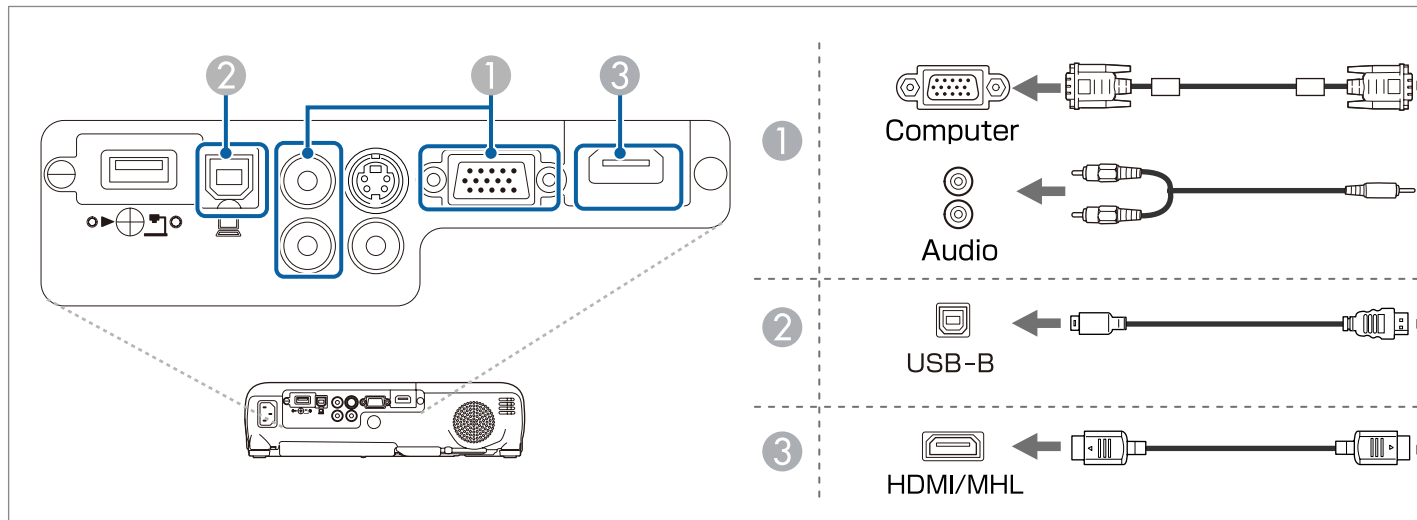


You can use a USB cable to connect the projector to a computer to project images from the computer. This function

👉 "Projecting with USB Display" [p.33](#)

Connecting a Smartphone or Tablet Device

You can connect smartphones and tablet devices. By using a commercially available MHL cable, you can connect to the HDMI/MHL port on the projector. You can send the audio with the projected image.

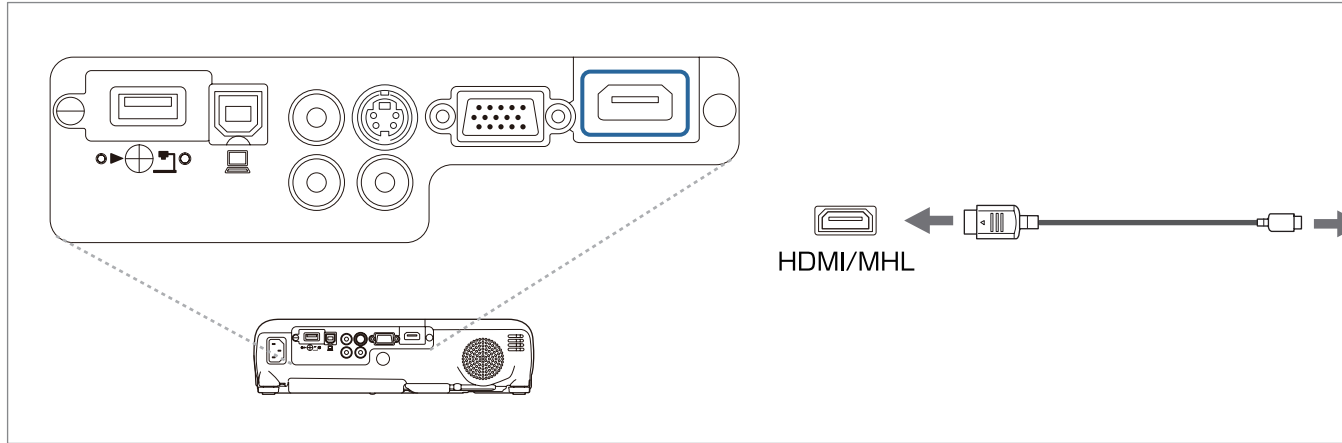

When you connect a smartphone or tablet device to the projector, the device starts charging when images are projected.

Attention

- You may not be able to connect an MHL cable to all devices.
- Make sure the connection cable supports the MHL standards. If you connect a cable that does not support the MHL standards, the cable may become hot, leak, or explode.
- If you connect using an MHL-HDMI conversion adapter, charging the smartphone or tablet device may not work or you may not be able to use the projector's remote control.



- If images are not projected correctly, disconnect and then reconnect the MHL cable.
- You may not be able to project correctly depending on the model and settings of the smartphone or tablet device.

Connecting Equipment

Connecting Image Sources

To project images from DVD players or VHS video and so on, connect to the projector using one of the following

1 When using a commercially available video or S-video cable

Connect the video output port on the image source to the projector's Video port. Or, connect the S-video output port on the image source to the projector's S-video port. Output audio from the projector's speaker by connecting the audio output port on the image source to the projector's Audio port.


2 When using the optional component video cable

☛ "Optional Accessories" p.129

Connect the component output port on the image source to the projector's Computer input port. You can output audio from the projector's speaker by connecting the audio output port on the image source to the projector's Audio port using a commercially available audio cable.

3 When using a commercially available HDMI cable

Connect the HDMI port on the image source to the projector's HDMI/MHL port. You can send the image source's audio with the

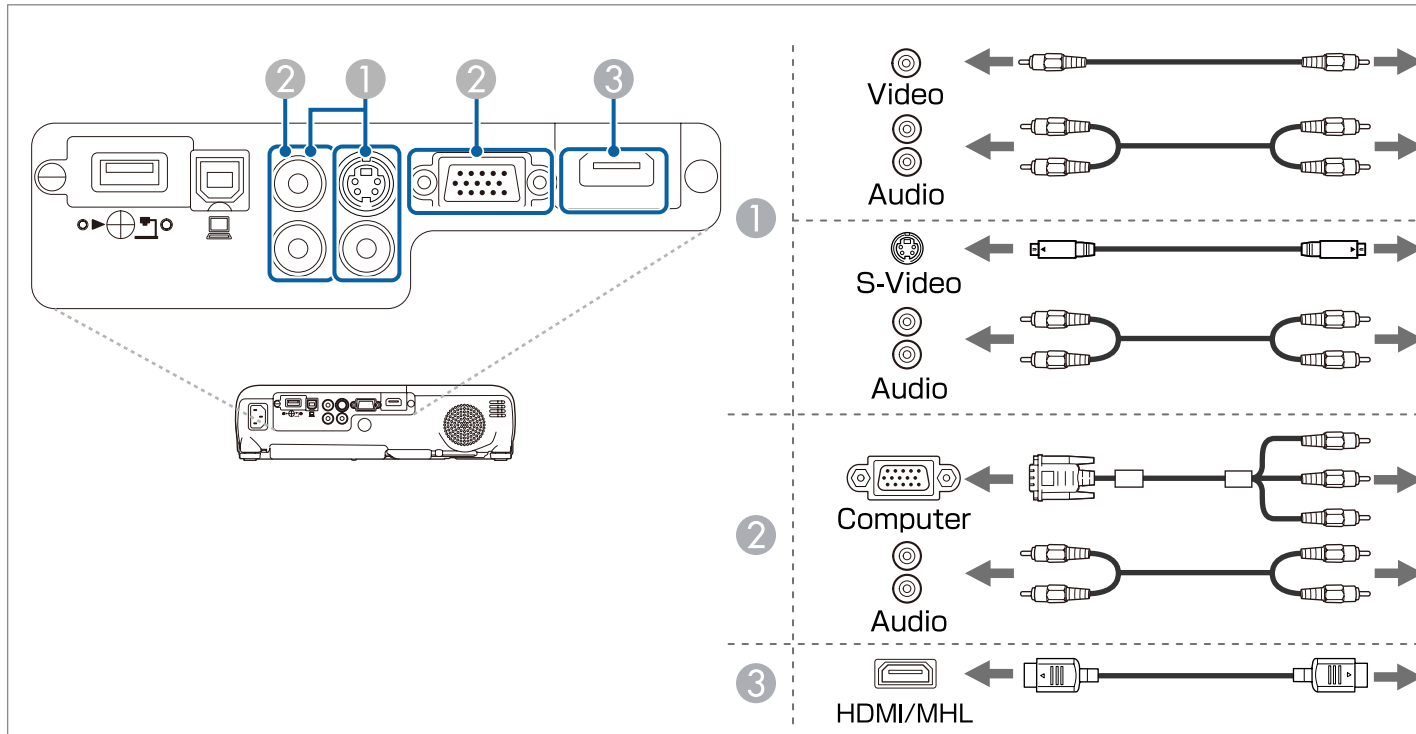

Connecting Equipment

Attention


- Turn off the equipment you want to connect before connecting. If the input source is on when you connect it to the
- If the orientation or shape of the plug differs, do not try to force it in. The device could be damaged or could malfunction.



- If the source you want to connect to has an unusually shaped port, use the cable supplied with the device or an
- When using a commercially available 2RCA(L/R)/stereo mini-pin audio cable, make sure it is labeled "No resist

Connecting USB Devices

You can connect devices such as the optional Document Camera, a USB flash drive, and USB compatible hard drive. Using the USB cable supplied with the USB device, connect the USB device to the USB-A port on the projector.

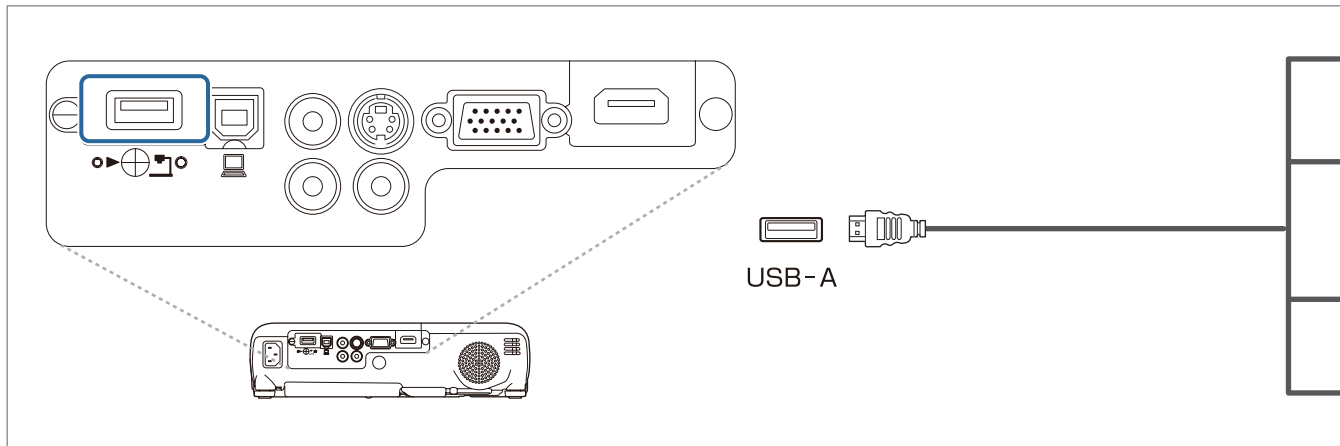

When the USB device is connected, you can project image files on the USB flash drive or digital camera using

☛ "PC Free examples" [p.51](#)

Connecting Equipment

Attention

- If you use a USB hub, the connection may not operate correctly. Devices such as digital cameras and USB devices should be connected directly to the projector.
- When connecting and using a USB-compatible hard disk, make sure you connect the AC adaptor supplied with the hard disk to a power outlet.
- Connect a digital camera or hard disk to the projector using a USB cable supplied with or specified for use with the device.
- Use a USB cable less than three meters in length. If the cable exceeds three meters, PC Free may not function correctly.

Removing USB devices

After finishing projecting, remove USB devices from the projector. For devices such as digital cameras or hard disks, turn off the device before removing it from the projector.

Connecting Equipment

Installing the Wireless LAN Unit


By installing the supplied or optional wireless LAN unit, you can project the computer screen that is connected to the wireless LAN over a network.

Connect the wireless LAN unit to the projector's USB-A port.




- When connecting to the network using wireless LAN, make sure you make network settings from the Configuration menu.
 - ☛ "Wireless LAN menu" [p.89](#)
- If you normally leave the wireless LAN unit installed, make sure you attach the supplied wireless LAN unit cover as a theft deterrent.
- When moving the projector, make sure you remove the wireless LAN unit and cover for safety reasons.


- 1** Use a cross-head screwdriver to remove the screw that secures the wireless LAN unit cover.

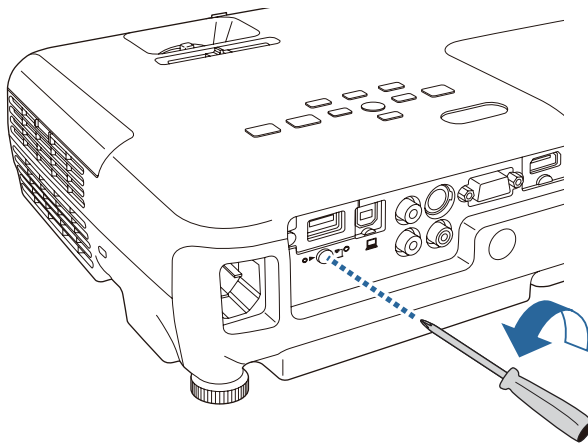

- 2** Connect the wireless LAN unit to the USB-A port.

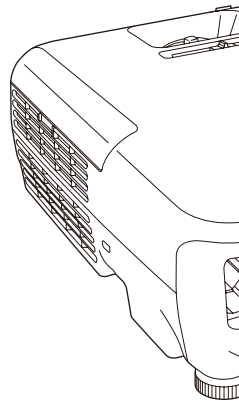

- 3** Attach the wireless LAN unit cover and secure it with the screw.

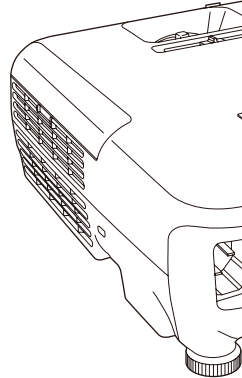


Installing the Quick Wireless Connection USB Key

When installing the optional Quick Wireless Connection USB Key, you need to remove the Wireless LAN unit cover. For more information, see the Quick Wireless Connection USB Key user manual.

Connecting Equipment

- 1** If the Wireless LAN unit is installed on the projector, press the [LAN] button on the remote control.
The LAN standby screen is displayed.
- 2** Check that the SSID and IP address information are displayed on the LAN standby screen, and then remove the Wireless LAN unit.
- 3** Connect the Quick Wireless Connection USB Key to the USB-A port.

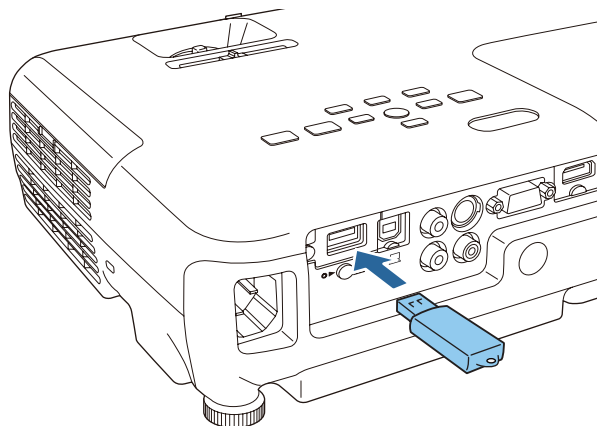

- 4** When the message "Network information update complete. Remove the Quick Wireless Connection USB Key Adapter." is displayed, remove the Quick Wireless Connection USB Key.
- 5** Reinstall the Wireless LAN unit on the projector.
- 6** Connect the Quick Wireless Connection USB Key to the computer you are using.
For the steps from here on, see the User's Guide supplied with the Quick Wireless Connection USB Key.

Basic Usage

This chapter explains how to project and adjust images.


Projecting Images

From Installation to Projection

This section explains the procedure for connecting the projector to a computer with the computer cable and projecting images.

Attention

Make sure you connect the cable from the source to the projector first, and then connect the power cord to the projector.

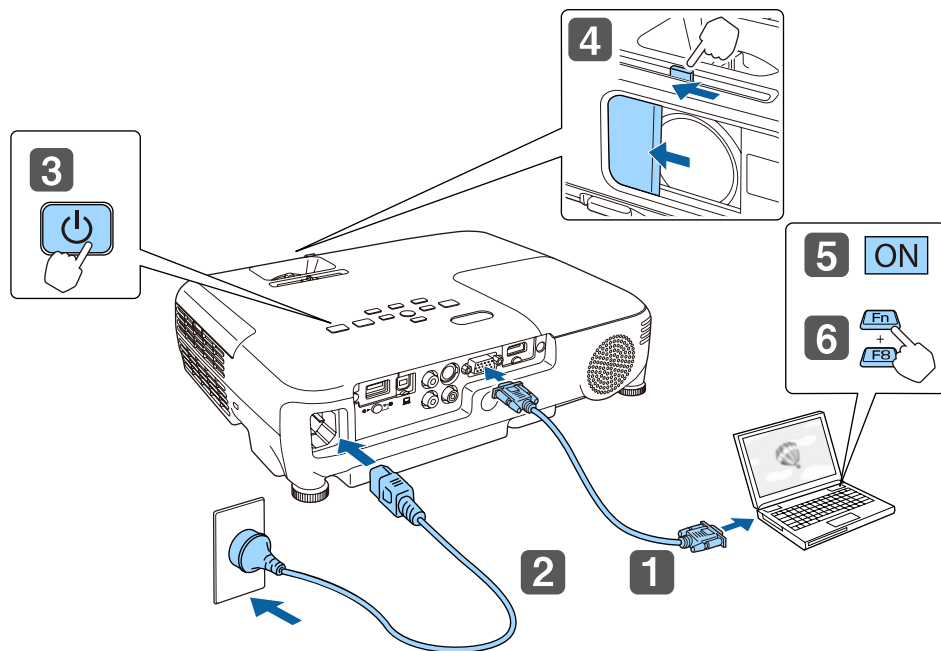

- 1** Connect the projector to the computer with the computer cable.
- 2** Connect the projector to an electrical outlet with the power cord.
- 3** Turn on the projector.

- 4** Open the A/V mute slide.
- 5** Turn on your computer.
- 6** Change the computer's source. When using a laptop computer, output from the computer. Hold down the Fn key (f)



- The method for being used. See computer.
- When turning of twice.

If the image is not projected, you of the following methods.

- Press the [Source Search] button control.
 - ➡ "Automatically Detect Input (Source Search)" [p.32](#)
- Press the button for the target.
 - ➡ "Switching to the Target Input"




- After projecting the image
 - ➡ "Correcting Keystone"
 - ➡ "Correcting the Focus"

Projecting Images



Automatically Detect Input Signals and Change the Projected Image (Source Search)

Press the [Source Search] button to project images from the port currently receiving an image.

Using the remote control

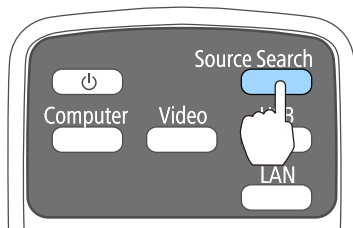

Using the control panel

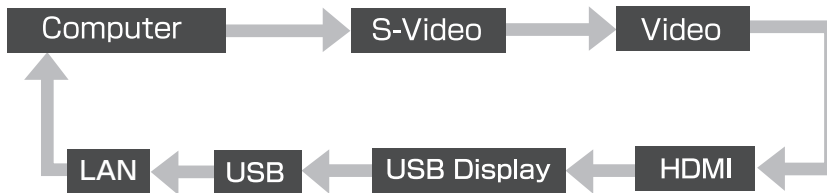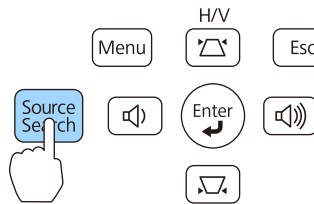

When two or more image sources are connected, press the [Source Search] button until the target image is projected.

When your video equipment is connected, start playback before beginning this operation.



The following screen is shown.




Projecting Images

Switching to the Target Image by Remote Control

You can change directly to the target image by pressing the following buttons on the remote control.

Remote control

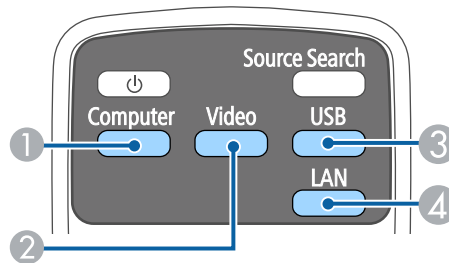

- ① Switches to images from the Computer port.
- ② Each time the button is pressed, it cycles through the images being input from the following sources.
 - S-Video port
 - Video port
 - HDMI/MHL port
- ③ Each time the button is pressed, it cycles through the images being input from the following sources.
 - USB Display
 - Images from the device connected to the USB-A port
- ④ Switches to the image from the network connected device.

Projecting with USB Di

You can use a USB cable to connect images from the computer.

You can project images and send

To start USB Display, set **USB Configuration** menu.

☛ **Extended - USB Type B p.**

System requirements

For Windows

OS	Windows 200
	Windows XP
	Windows Vis
	Windows 7
Windows 8	

Projecting Images

	Windows 8.1	Windows 8.1 32/64 bit Windows 8.1 Pro 32/64 bit Windows 8.1 Enterprise 32/64 bit
CPU	Mobile Pentium III 1.2 GHz or faster Recommended: Pentium M 1.6 GHz or faster	
Amount of Memory	256 MB or more Recommended: 512 MB or more	
Hard Disk Space	20 MB or more	
Display	Resolution of no less than 640x480 and no higher than 1600x1200. Display color in 16-bit color or greater	

*1 Service Pack 4 only

*2 Except for Service Pack 1

For OS X

OS	Mac OS 10.5.x 32 bit Mac OS 10.6.x 32/64 bit OS X 10.7.x 32/64 bit OS X 10.8.x OS X 10.9.x
CPU	Power PC G4 1GHz or faster Recommended: Core Duo 1.83GHz or faster
Amount of Memory	512 MB or more
Hard Disk Space	20 MB or more
Display	Resolution of no less than 640x480 and no higher than 1680x1200. Display color in 16-bit color or greater

Connecting for the first time

The first time you connect the projector to the computer using a USB cable, the driver needs to be installed on the computer. This is done in Windows and OS X.



- You do not need to install the driver on the projector.
- When inputting images from a camera or other image source to USB Display, the projector will automatically start the driver installation.
- If you use a USB hub, connect the USB cable to the projector.
- You cannot change options during the driver installation.

For Windows

- 1 Connect the computer's projector to the projector using a USB cable.



For Windows 2000, you want to restart the computer. No.

For Windows 2000

Double-click **Computer**, then **EMP_UDSE.EXE**.

For Windows XP

Driver installation starts automatically.

For Windows Vista/Windows 7

When the dialog box is displayed, click **Yes**.




When the License Agreement is displayed, click **Yes**.

Projecting Images

- Computer images are projected.
It may take a while before computer images are projected. Until computer images are projected, leave the equipment as it is and do not disconnect the USB cable or turn off the power to the projector.
- Disconnect the USB cable when you finish projection.
When disconnecting the USB cable, there is no need to use **Safely Remove Hardware**.



- If it is not installed automatically, double-click **My Computer - EPSON_PJ_UD - EMP_UDSE.EXE** on your computer.
- If nothing is projected for some reason, click **All Programs - EPSON Projector - Epson USB Display - Epson USB Display Vx.xx** on your computer.
- When using a computer running Windows 2000 under user authority, a Windows error message is displayed and you may not be able to use the software. In this case, try updating Windows to the latest version, restart, and then try to connect again.
For more details, contact your local dealer or the nearest address provided in the following document.
 [Epson Projector Contact List](#)

For OS X

- Connect the computer's USB port to the projector's USB-B port using a USB cable.
The Setup folder of USB Display is displayed in the Finder.
- Double-click the **USB Display Installer** icon.
- Follow the on-screen instructions to install.

- When the License Agreement is displayed, click **Agree**.
Enter the administrator password.
When the installation is complete, click **Done** in the Dock and menu bar.
- Computer images are projected.
It may take a while before computer images are projected. Do not disconnect the USB cable.
- When you finish projecting, click the **Display** icon menu on the Dock to disconnect the USB cable.



- If the USB Display icon is not displayed in the Finder, double-click **USB Display Installer** on your computer.
- If nothing is projected, click the **Display** icon in the Dock.
- If there is no USB Display icon in the Dock, click **USB Display** from the Dock menu.
- If you select **Exit** from the Dock, USB Display will disconnect the USB cable.

Uninstalling

For Windows 2000

- Click **Start**, select **Settings**.
- Double-click **Add/Remove Programs**.
- Click **Change or Remove**.
- Select **Epson USB Display**.

Projecting Images

For Windows XP

- 1 Click **Start**, and then click **Control Panel**.
- 2 Double-click **Add or Remove Programs**.
- 3 Select **Epson USB Display** and click **Remove**.

For Windows Vista/Windows 7

- 1 Click **Start**, and then click **Control Panel**.
- 2 Click **Uninstall a program** under **Programs**.
- 3 Select **Epson USB Display** and click **Uninstall**.

For Windows 8/Windows 8.1

- 1 Open Charms, and then select **Search**. Right-click (press and hold) **Epson USB Display Ver.XXX**.
- 2 Select **Uninstall** from the app bar.
- 3 Select **Epson USB Display**, and then select **Uninstall**.
- 4 Follow the on-screen instructions to uninstall.

For OS X


- 1 Open the **Applications** folder, double-click **USB Display**, and then double-click **Tool**.
- 2 Run **USB Display UnInstaller**.

Adjusting Projected Images


Correcting Keystone Distortion

You can correct keystone distortion using one of the following methods.


- **Correcting automatically (Auto V-Keystone)**
Automatically corrects vertical keystone distortion.
- **Correcting manually (H-Keystone Adjuster)**
Manually corrects horizontal keystone distortion using the horizontal keystone adjuster.

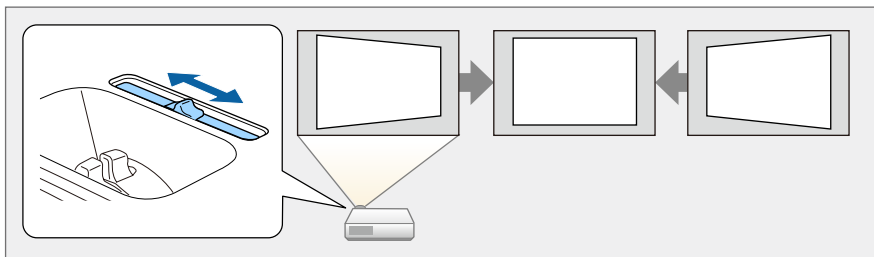

- **Correcting manually (H/V-Keystone)**
Manually correct distortion in the horizontal and vertical directions independently.

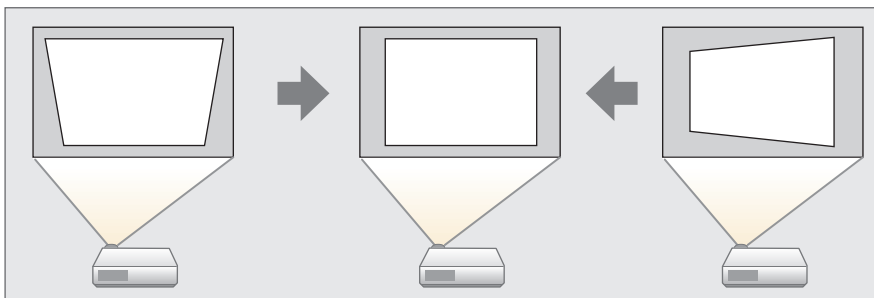

- **Correcting manually (Quick C)**
Manually correct the four corners.

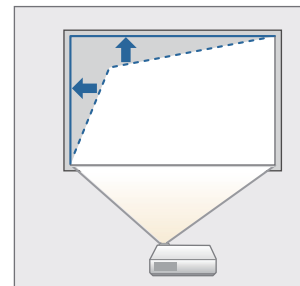

When you correct keystone distortion, the correction angle is reduced.

Correcting automatically

Auto V-Keystone

When the projector detects any movement, or is tilted, it automatically corrects the image. This function is called Auto V-Keystone.

When the projector is moved, it automatically corrects the projected image.

You can use Auto V-Keystone to correct the following conditions.

Correction angle: approx. 30° up

Adjusting Projected Images



- Auto V-Keystone works only when **Projection** is set to **Front** from the Configuration menu.
 - ☛ **Extended - Projection** p.85
- If you do not want to enable Auto V-Keystone, set **Auto V-Keystone** to **Off**.
 - ☛ **Settings - Keystone - H/V-Keystone - Auto V-Keystone** p.84



- When using horizontal to **On**.
 - ☛ **Settings - Keystone** p.84
- You can also correct ke using H/V-Keystone.

Correcting manually


You can manually correct keystone distortion.

You can use H/V-Keystone to correct the projected image under the following conditions.

Correction angle: approx. 30° right and left/approx. 30° up and down

H-Keystone Adjuster

Move the horizontal keystone adjuster to the right or left to perform horizontal keystone correction.

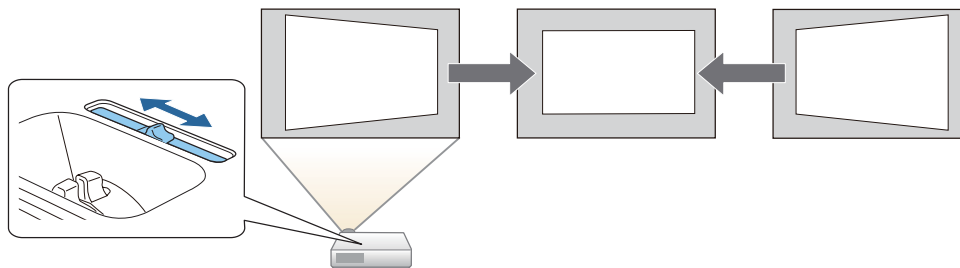

H/V-Keystone

Manually correct distortion in the projected image independently.

- 1 Press the [↶] or [↷] button to display the H/V-Keystone menu.

[Keystone]


V-Keystone

H-Keystone


[↶]:V-Keystone [↷]:H-Keystone

- 2 Press the following buttons to adjust the projected image.
Press the [↶] or [↷] button to adjust the projected image.

Adjusting Projected Images

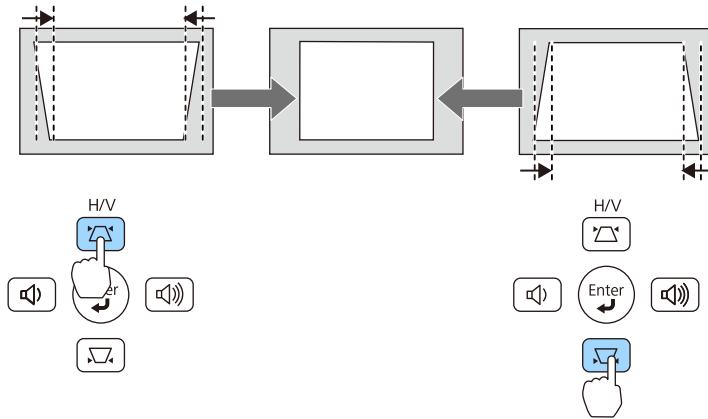

Press the [◀]/[▶] buttons to correct horizontal distortion.

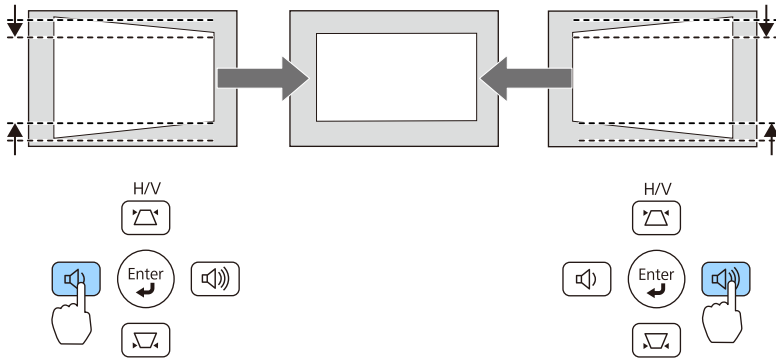

You can also set H/V-Keystone from the Configuration menu.


☛ **Settings - Keystone - H/V-Keystone** [p.84](#)

Quick Corner


This allows you to manually correct each of the four corners of the projected image separately.

- 1 Press the [Menu] button
☛ "Using the Configuration menu"

Using the remote control

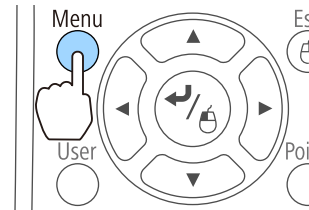


- 2 Select **Keystone** from **Settings**

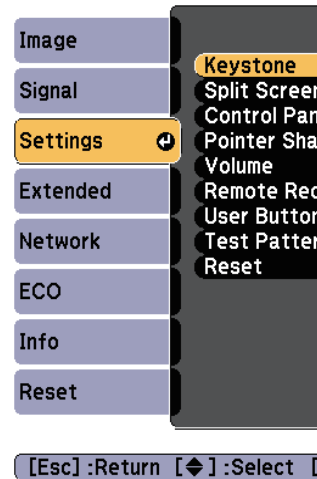


- 3 Select **Quick Corner**, and

Adjusting Projected Images

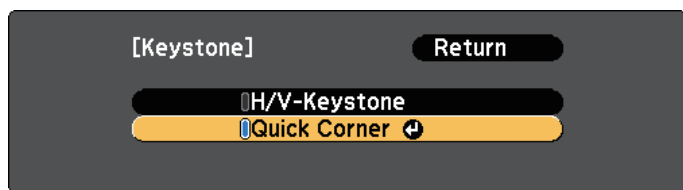


[Esc] :Return [◀] :Select [↵] :Enter [Menu] :Exit

- 4** Using the [↶], [↷], [↸], and [↹] buttons on the remote control, or the [↶], [↷], [↸], and [↹] buttons on the control panel, select the corner to correct, and then press the [↵] button.

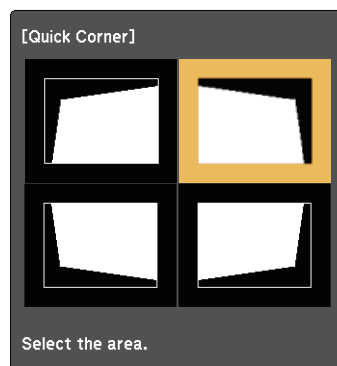

[◀ / ▶] :Select
[↵] :Enter
[Esc] :Return (press for 2 seconds to reset/switch)

- 5** Using the [↶], [↷], [↸], and [↹] buttons on the remote control, or the [↶], [↷], [↸], and [↹] buttons on the control panel, select the position of the corner to correct. When you press the [↵] button, the selected corner is highlighted. If the message "Cannot adjust any further," is displayed, the corner cannot be adjusted, as indicated by the gray triangle.

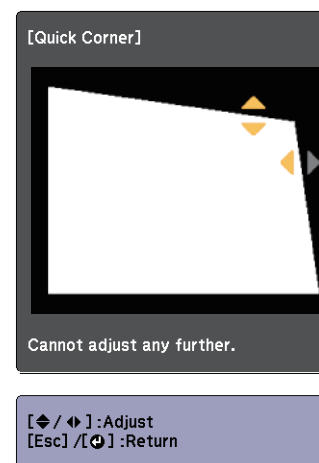

- 6** Repeat procedures 4 and 5 for the other corners.
- 7** When you are done, press the [Return] button to exit the menu.


Because **Keystone** was chosen, the selection screen shown in step 4 is displayed. Press the [↶] or [↷] button on the control panel to select **H/V-Keystone** if you want to correct the projected image using the [↶] button.

Settings - Keystone -

Adjusting Projected Images



If the [Esc] button is held down for about two seconds while the corner selection screen from step 4 is displayed, the following screen is displayed.

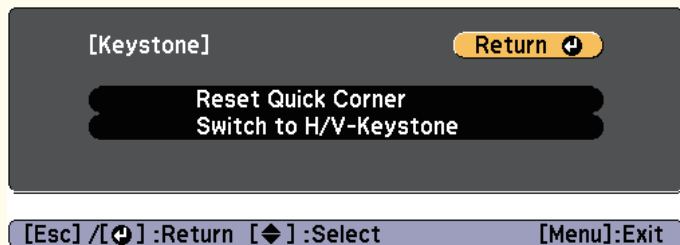


Reset Quick Corner: Resets the result of Quick Corner corrections.

Switch to H/V-Keystone: Switches the correction method to H/V-Keystone.

☛ "Settings Menu" p.84

Adjusting the Image Position


Press the foot adjust lever to extend and retract the rear foot to adjust the position of the image.

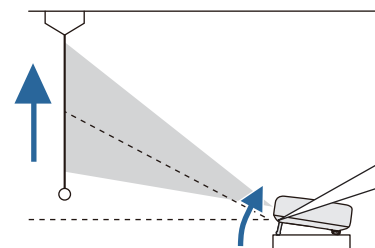

The larger the angle of tilt of the projector so that it only


Adjusting the Image Size

Turn the zoom ring to adjust the size of the projected image.

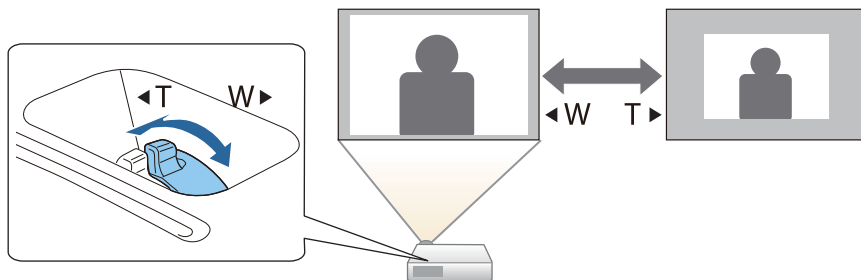

Adjusting the Horizontal Position

Extend and retract the rear feet to adjust the horizontal position of the image.

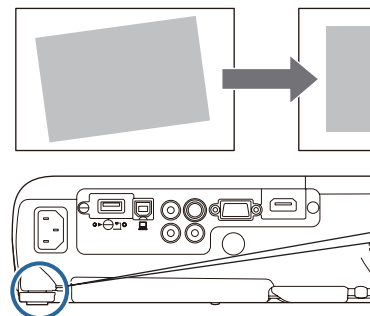


- 1 Extend the rear foot.
- 2 Retract the rear foot.

Adjusting Projected Images

Correcting the Focus

You can correct the focus using the focus ring.

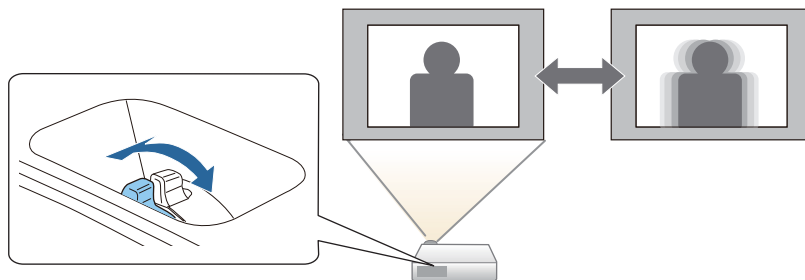


Adjusting the Volume


You can adjust the volume using one of the following methods.

- Press the [Volume] button on the control panel or the remote control to adjust the volume.
 - [🔊] Decreases the volume.
 - [🔊] Increases the volume.

Using the remote control

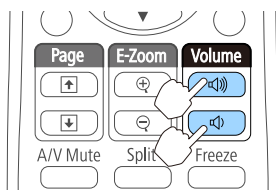

Using the control panel

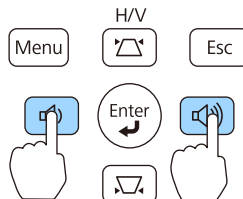

- Adjust the volume from the Control Panel.
 - 🖱️ Settings - Volume p.84



Caution

Do not start at high volume. A sudden excessive volume may cause hearing damage before powering off, so that you can adjust the volume.

Selecting the Projection Mode)

Sets the Color Mode according to the image varies depending on the image.

Mode	
Dynamic	Ideal for standard mode,
Presentation	Ideal for use in a bright room.
Theatre	Ideal for dark images.
Photo*1	Ideal for a bright image into color.
Sports*2	Ideal for a bright room.
sRGB	Ideal for standard color.
Blackboard	Even if the image is green/blue, it shows natural colors.

Adjusting Projected Images



Mode	Application
Whiteboard	Ideal for making presentations using a whiteboard.

*1 This selection is only available when the input signal is RGB or when the source is USB Display, USB, or LAN.

*2 This selection is only available when the input signal is component video, or when the input source is Video or S-Video.

Each time you press the [Color Mode] button, the Color Mode name is displayed on the screen and the Color Mode changes.

Remote control

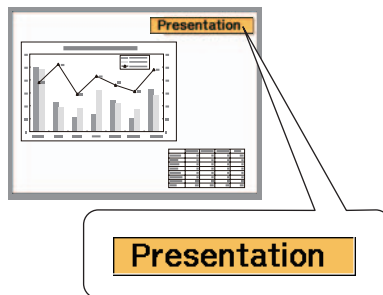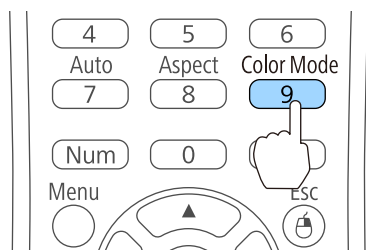

You can set Color Mode from the Configuration menu.

🖱️ Image - Color Mode [p.82](#)

Setting Auto Iris


By automatically setting the luminance according to the brightness of the displayed image, it lets you enjoy deep and rich images.

1

Press the [Menu] button.


🖱️ "Using the Configuration menu"

Using the remote control

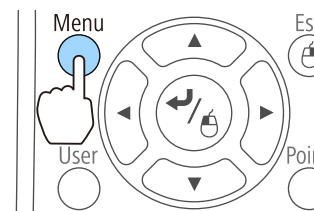

2

Select **Auto Iris** from Image

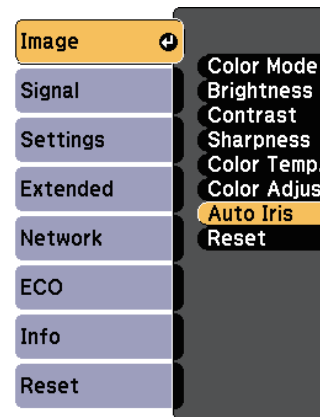

[Esc] :Return [↕] :Select

3

Select **Normal** or **High S**

The setting is stored for



When set to **High** adjusted as soon a

4

Press the [Menu] button

Adjusting Projected Images



Auto Iris can only be set when the **Color Mode** is **Dynamic** or **Theatre**.



Changing the Aspect Ratio of the Projected Image

You can change the **Aspect Ratio** of the projected image to suit the type, the ratio of height and width, and the resolution of the input signals.

Available aspect modes vary depending on the image signal currently being projected.

Changing methods

Each time you press the [Aspect] button on the remote control, the aspect mode name is displayed on the screen and the aspect ratio changes.

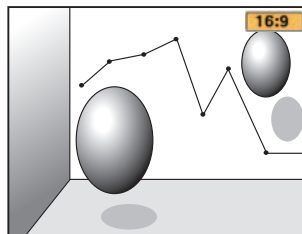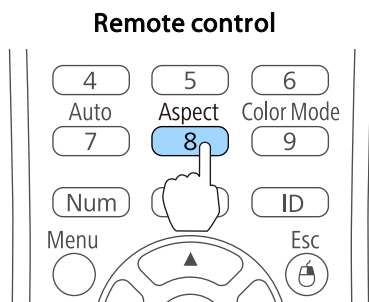

You can set the aspect ratio from the Configuration menu.


🖱️ **Signal - Aspect** p.82

Changing the aspect mode

Projecting images from video equipment

Each time the [Aspect] button is pressed, the aspect mode changes in the order **Normal** or **Auto**, **16:9**, **Full**, **Zoom**, and **Native**.

Example: 1080p signal input (resolution)










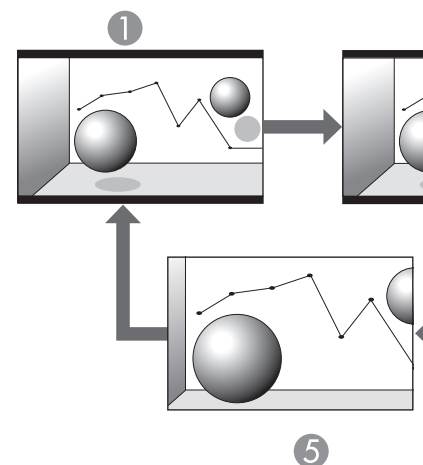


- 1 Normal or Auto
- 2 16:9
- 3 Full
- 4 Zoom
- 5 Native

Adjusting Projected Images

Projecting images from a computer

The following shows projection examples for each aspect mode.

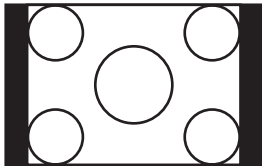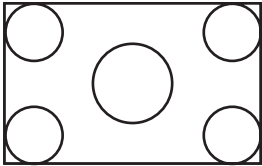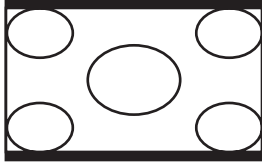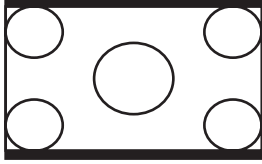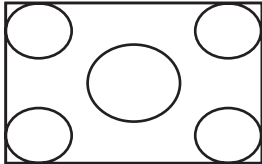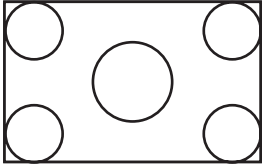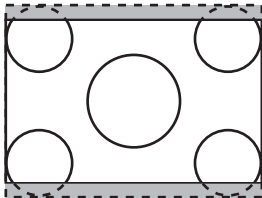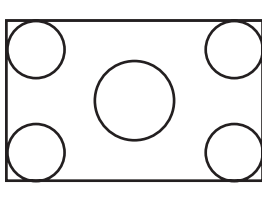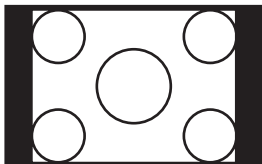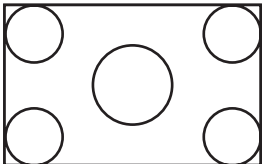Aspect Mode	Input Signal	
	XGA 1024X768(4:3)	WXGA 1280X800(16:10)
Normal		
16:9		
Full		
Zoom		
Native		



If parts of the image are or **Normal** from the Com computer panel.

🖱️ **Signal - Resolution**


Useful Functions

This chapter explains useful tips for giving presentations, and the Security functions.

Projection Functions

Projecting Two Images Simultaneously (Split Screen)

You can simultaneously project images from two sources on the right and left of the screen.

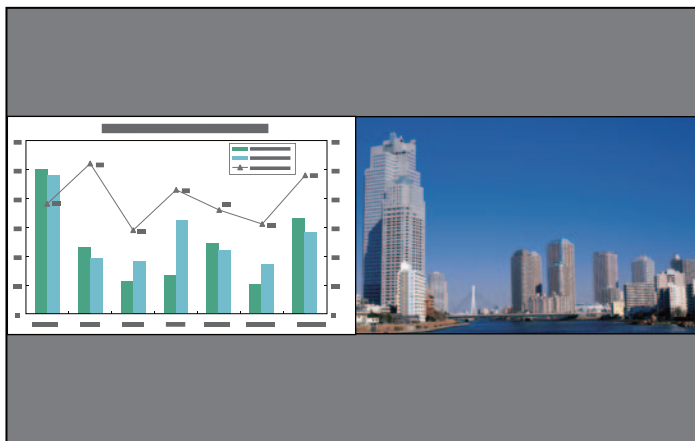

Input sources for split screen projection

The combinations of input sources that can be projected on a split screen are listed below.

Left Screen	Right Screen						
	Com-puter	S-Vid-eo	Video	HDMI	USB Dis-play	USB	LAN
Computer	-	-	-	✓	✓	✓	✓
S-Video	-	-	-	✓	✓	✓	✓
Video	-	-	-	✓	✓	✓	✓
HDMI	✓	✓	✓	-	✓	✓	✓


Left Screen	Right Screen		
	Com-puter	S-Vid-eo	V
USB Dis-play	✓	✓	
USB	✓	✓	
LAN	✓	✓	

Operating procedures

Projecting on a split screen

- 1 Press the [Split] button on the remote control. The currently selected input source is projected on the left screen.

Remote control

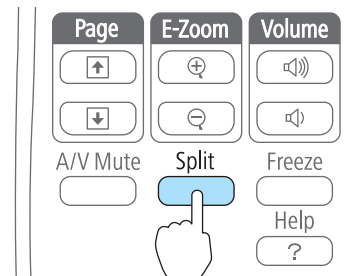


You can perform the following operation from the menu.

Settings - Split


Projection Functions

- 2** Press the [Menu] button.
The Split Screen Setup screen is displayed.

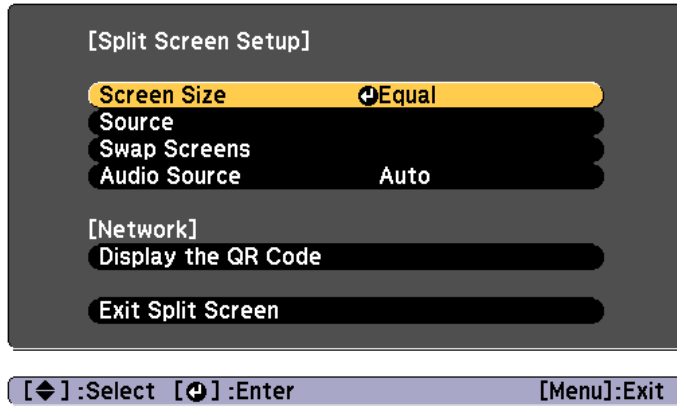

- 3** Select **Source**, and then press the [Enter] button.

- 4** Select each input source

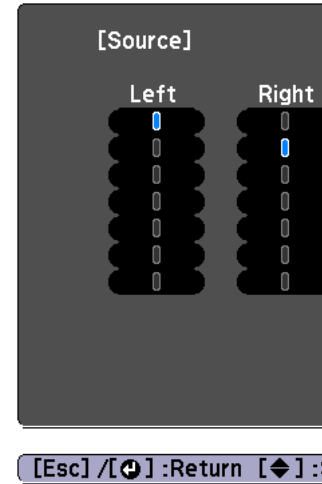

Only input sources that are available are displayed.
☞ "Input sources for split screen"



The Source screen is displayed when the [Source] button is pressed during the Split Screen Setup procedure.

- [Source Search] button
- [Computer] button
- [Video] button
- [USB] button
- [LAN] button

- 5** Select **Execute**, and then press the [Enter] button.
To switch the source during the Split Screen Setup procedure from step 2.

Projection Functions

Switching the left and right screens


Use the following procedure to switch the projected images displayed on the left and right screens.

- 1 Press the [Menu] button during split screen projection.
- 2 Select Swap Screens, and then press the [↵] button.
The projected images on the left and right are swapped.




Switching the left and right image sizes

- 1 Press the [Menu] button during split screen projection.
- 2 Select the **Screen Size**, and then press the [↵] button.
- 3 Select the screen size you want to display, and then press the [↵] button.

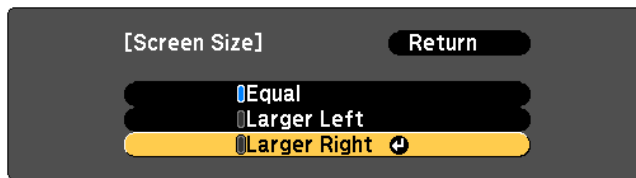


The projected images will appear in the same size.

Equal

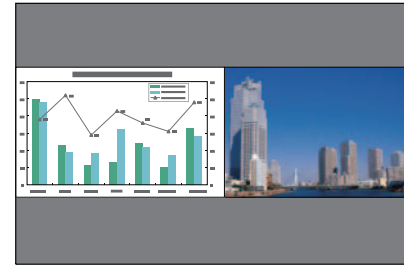

Larger Right

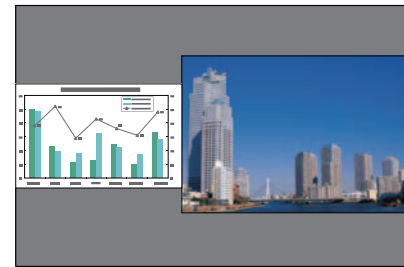

- You cannot enlarge both the same time.
- When one image is enlarged, the other image will be smaller.
- Depending on the video content, the left and right images may not appear perfectly aligned.

Ending the split screen

To end split screen, press the [Split] button on the remote control.

The following steps can also be used to end split screen.

- Press the [Split] button on the remote control.

Projection Functions

- Select **Exit Split Screen** from the Configuration menu.
 - ☛ **Settings - Split Screen - Split Screen Setup** p.84

Restrictions during split screen projection

Operating restrictions

The following operations cannot be performed during split screen projection.

- Setting the Configuration menu
- E-Zoom
- Switching the aspect mode (**Normal** is used for the aspect mode.)
- Operations using the [User] button on the remote control
- Auto Iris

Help can be displayed only when image signals are not input or when an error or warning notification is displayed.

Restriction relating to images

- The default values for the **Image** menu are applied to the image on the right screen. However, the settings for the image projected on the left screen are applied to the image on the right screen for **Color Mode**, **Color Temp.**, **Color Adjustment**, **Brightness**, **Contrast**, **Color Saturation**, and **Tint**.
- The setting value **Off** for **Progressive** and **Noise Reduction** is applied to the image on the right screen.
 - ☛ "Signal Menu" p.82
- When there is no image signal being input, the display screen is the color that is set in Display Background. When **Logo** is selected, the display is **Blue**.
- When A/V Mute is performed, the display is **Black**.

Projecting Without a C

By connecting a USB storage device or hard disk to the projector, you can project without using a computer. This



- You may not be able to use security functions.
- You cannot correct key input even if you press the [

Specifications for files that can

Type	File Type (Extension)	No
Image	.jpg	The - C - P - In Du not too
	.bmp	Car tha
	.gif	• C th • C
	.png	Car tha

Projection Functions

Type	File Type (Ex-tension)	Notes
Movie	.avi (Motion JPEG)	<ul style="list-style-type: none"> • Cannot project images with a resolution greater than 1280x720. • The audio format can only playback linear PCM and ADPCM. • Supports AVI 1.0. You cannot project files over 2 GB.



- When connecting and using a USB-compatible hard disk, make sure you connect the AC adaptor supplied with the hard disk.
- The projector does not support some file systems, so use media that has been formatted in Windows.
- Format the media in FAT16/32.

PC Free examples

Projecting images stored on USB storage



- ☛ "Projecting the selected images or movies" [p.53](#)
- ☛ "Projecting image files in a folder in sequence (Slideshow)" [p.54](#)

PC Free operating methods

Although the following steps are for PC Free, you can perform the same operation for other modes.

Starting PC Free

- 1** Change the source to USB.
 - ☛ "Switching to the Target Source" [p.47](#)
- 2** Connect the USB storage device.
 - ☛ "Connecting USB Devices" [p.48](#)

PC Free starts and the files are displayed.

 - The following files are displayed as small images.
 - JPEG files
 - AVI files (displays the first frame)
 - Other files or folders are not displayed. See the following table.


Icon	File
	JPEG files*
	GIF files
	AVI (Motion JPEG) files*

* When it cannot be displayed as a small image.

Projection Functions



- You can also insert a memory card into a USB card reader and then connect the reader to the projector. However, some commercially available USB card readers may not be compatible with the projector.
- If the following screen (Select Drive screen) is displayed, press the [Left Arrow], [Down Arrow], [Right Arrow], or [Up Arrow] buttons to select the drive you want to use, and then press the [Enter] button.

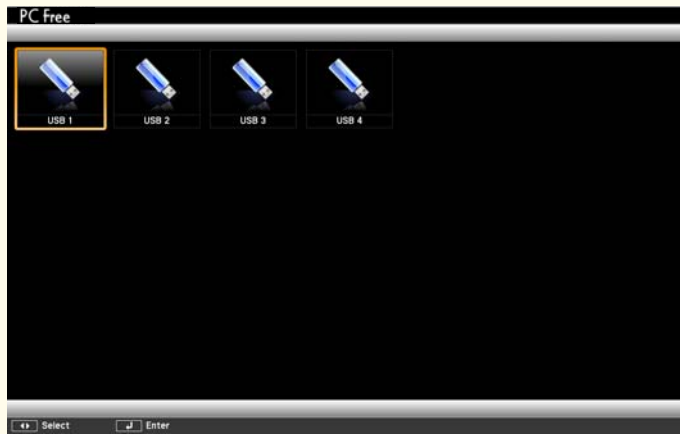

- To display the Select Drive screen, position the cursor on **Select Drive** at the top of the file list screen, and then press the [Enter] button.

Projecting images

1

Press the [Up Arrow], [Down Arrow], [Left Arrow], or [Right Arrow] buttons to select the image you want to project.



If not all of the images are displayed on the screen, press the [Page Down] button to move the cursor on **Next Page**, and then press the [Enter] button.

To return to the previous screen, press the [Page Up] button on the remote control, or press the [Back] button on the top of the screen.

2

Press the [Enter] button.

The selected image is displayed on the projector screen.

When a folder is selected, the folder's contents are displayed. To return to the previous screen, press the [Back] button.


Back to Top and press the [Enter] button.

Projection Functions

Rotating images

You can rotate the played images in 90° increments. The rotating function is also available during Slideshow.

- 1 Play images, or run Slideshow.
- 2 While projecting, press the [▲] or [▼] button.

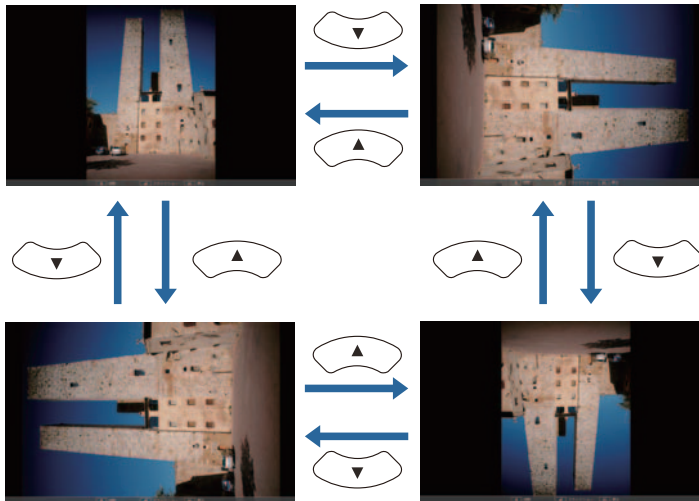

Stopping PC Free

To close PC Free, disconnect the USB device from the USB port on the projector. For devices such as digital cameras or hard disks, turn off the device and then remove it from the projector.

Projecting the selected images

Attention

Do not disconnect the USB storage device while projecting. The projector may not operate correctly.

- 1 Start PC Free.
The file list screen is displayed.
☞ "Starting PC Free" p.5
- 2 Use the [▲], [▼], [↶], [↷] buttons to select the image you want to project.



- 3 Press the [↶] button.
The image is displayed on the projector.

Projection Functions



Press the [◀] [▶] buttons to move to the next or previous image file.

4 To finish projecting, perform one of the following operations.

- Projecting an image: Press the [Esc] button.
- Projecting a movie: Press the [Esc] button to display the message screen, select **Exit**, and then press the [↵] button.

When projection is finished, you are returned to the file list screen.

Projecting image files in a folder in sequence (Slideshow)

You can project the image files in a folder in sequence, one at a time. This function is called Slideshow. Use the following procedure to run Slideshow.



To change files automatically when you run Slideshow, set **Screen Switching Time** from **Option** to anything other than **No**. The default setting is 3 seconds.

☛ "Image file display settings and Slideshow operation settings" [p.55](#)

1 Start PC Free.

The file list screen is displayed.

☛ "Starting PC Free" [p.51](#)

2

Press the [△], [▽], [◀], [▶] buttons over the folder for the Slideshow, and then press the [↵] button.

3

Select **Slideshow** at the bottom of the screen, and then press the [↵] button. The Slideshow starts, and the image files are projected in sequence, one at a time. When the last file is projected, the Slideshow ends automatically. If you set **Screen Switching Time** to **Option**, projection starts with the next file at the end.

☛ "Image file display settings and Slideshow operation settings" [p.55](#)

You can proceed to the next file by pressing the [▶] button to stop playback while projecting.



If **Screen Switching Time** is set to **Option**, the screen does not change automatically. Pressing the [▶] button, the [↵] button, or the [Esc] button will project the next file.

You can use the following functions while projecting. For details, see [p.55](#).

- Freeze
☛ "Freezing the Image (Freeze)" [p.55](#)
- A/V Mute
☛ "Hiding the Image and Sound" [p.55](#)
- E-Zoom
☛ "Enlarging Part of the Image" [p.55](#)


Projection Functions

- Pointer
 ☞ "Pointer Function (Pointer)" p.58

Image file display settings and Slideshow operation settings

You can set the file display order and Slideshow operations on the Option screen.

- 1** Select **Option** at the bottom of the file list screen, and then press the [↵] button.
- 2** When the following Option screen is displayed, set each of the items.
 Select any of the options as necessary and press the [↵] button.
 The following table shows the details for each item.

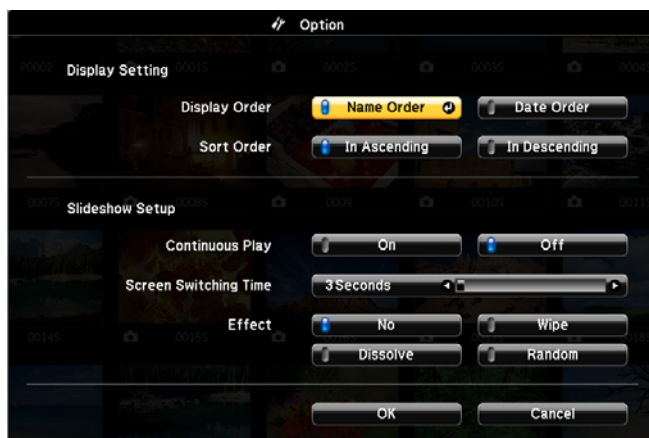

Display Order	You can select to display the files in Name Order or Date Order .
Sort Order	You can select to sort the files In Ascending or In Descending order.

Continuous Play	You can
Screen Switching Time	You can Slideshow Seconds.
Effect	You can

- 3** When you have finished reading the QR code, press the [⏪] or [⏩] buttons to position the slide, and then press the [↵] button.
 The settings are applied.
 If you do not want to apply the settings, press the **Cancel**, and then press the

Projecting Using a QR Code

By reading a QR code displayed on the iProjection (V1.3.0 or later), you can project the content of a tablet device.

Check the following points before projecting.

- The supplied or optional wireless LAN adapter is connected to the tablet device.
- **Wireless Power** is set to **Wireless Power** in the **Projection** menu



You can download Epson iProjection from Google play. Any from the App Store or Google play.

Projection Functions


Setting the display method for QR codes

Set the QR code display from the Configuration menu.


- 1 Press the [Menu] button.

☞ "Using the Configuration Menu" p.79


Using the remote control

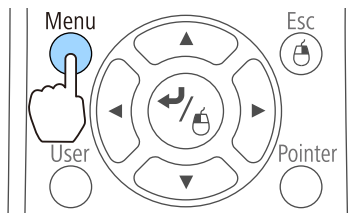


Using the control panel

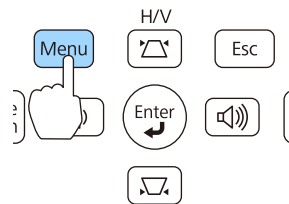



- 2 Select **Network Configuration** from **Network**.

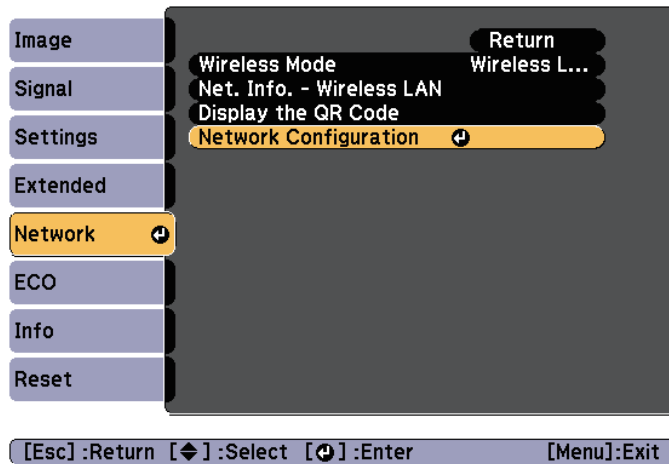

- 3 Select **Display LAN Info.** from **Basic**.

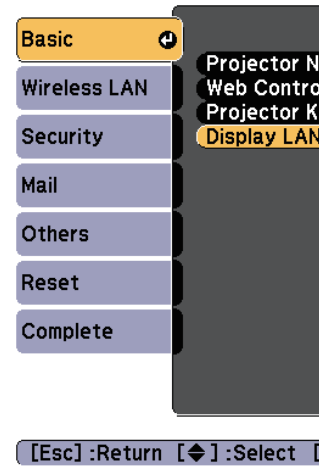

- 4 Select **Text & QR Code.**

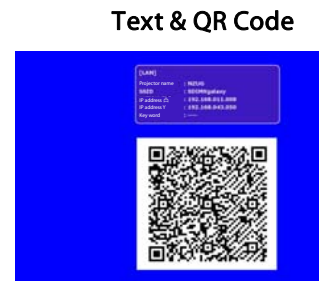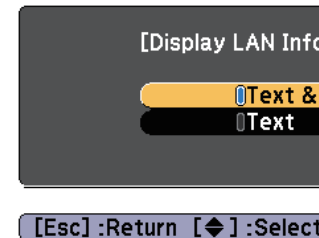


Projection Functions

Projecting data from a smartphone or tablet device

Project data from your device using Epson iProjection.

- 1** Start Epson iProjection on your smartphone or tablet device.
- 2** Tap **Projector** on the application screen.
The projector's search screen is displayed.
- 3** Tap **Read QR code** on the application screen.
The camera starts and the preview screen is displayed.
- 4** Press the [LAN] button on the remote control, or select **Display the QR Code** from the **Network** menu to display the QR code.

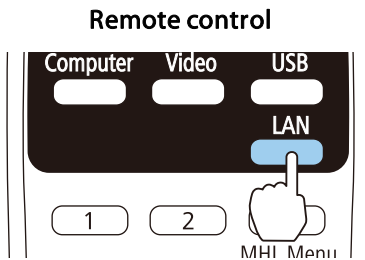

- When the projector is already receiving an image signal over the network, the QR code is not displayed even if you press the [LAN] button. Press the [Enter] button on the remote control or the control panel (only when the source is LAN), or select **Display the QR Code** from the **Network** menu to display the QR code.
- To hide the QR code, press the [Esc] button on the remote control or the control panel.


- 5** Read the projected QR code on your smartphone or tablet device.

Make sure you read the QR code correctly. If you cannot read it, it may not be read.

When the connection is established, the image of the device is displayed. Tap the image to select the file you want to project.


Hiding the Image and Mute)

You can use this when you want to hide the image of the device you are saying, or if you do not want to change between files during presentation.

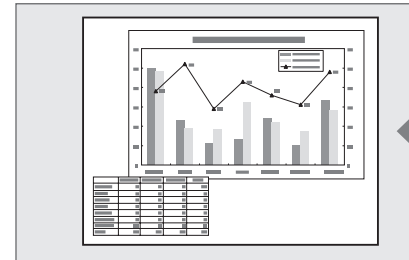

Projection Functions

Each time you press the [A/V Mute] button or open/close the lens cover, A/V Mute turns on or off.

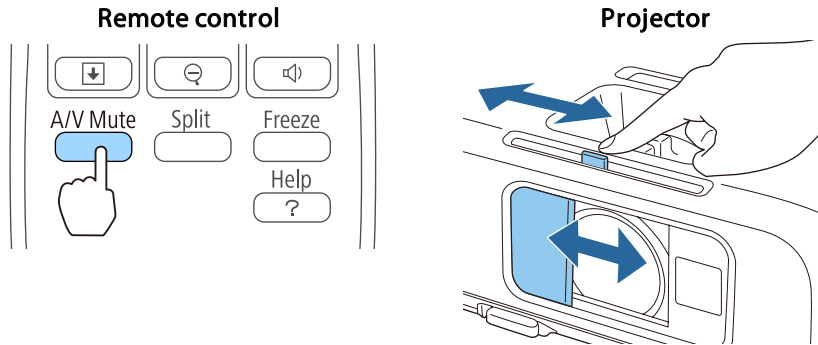


- When projecting moving images, the images and sound continue to be played back while A/V Mute is on. It is not possible to resume projection from the point where A/V Mute was activated.
- You can select the screen displayed when the [A/V Mute] button is pressed from the Configuration menu.
 - ☛ **Extended - Display - A/V Mute** p.85
- When A/V mute is enabled with the [A/V Mute] button, **A/V Mute Timer** activates and the power is automatically turned off after approximately 30 minutes. If you do not want to enable **A/V Mute Timer**, set **A/V Mute Timer** to **Off**.
 - ☛ **ECO - A/V Mute Timer** p.94
- When the A/V mute slide is closed for approximately 30 minutes, **Lens Cover Timer** activates and the power is automatically turned off. If you do not want **Lens Cover Timer** to activate, set **Lens Cover Timer** to **Off**.
 - ☛ **ECO - Lens Cover Timer** p.94
- The lamp is still lit during A/V Mute, so the lamp hours continue to accumulate.

Freezing the Image (Freeze)

When Freeze is activated on moving images, the images are frozen on the screen, so you can take a still photo. Also, you can move between files during presentation of images if the Freeze function is activated.

Each time you press the [Freeze]

Remote control

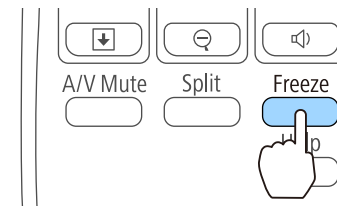


- Audio does not stop.
- When projecting moving images, the images are frozen on the screen, so you can take a still photo.
- If the [Freeze] button is pressed during presentation, the Help screen is displayed and the screen is closed.
- Freeze still works while the screen is closed.


Pointer Function (Pointer)

This allows you to move a Pointer on the screen. This allows you to draw attention to the area of interest.


Projection Functions

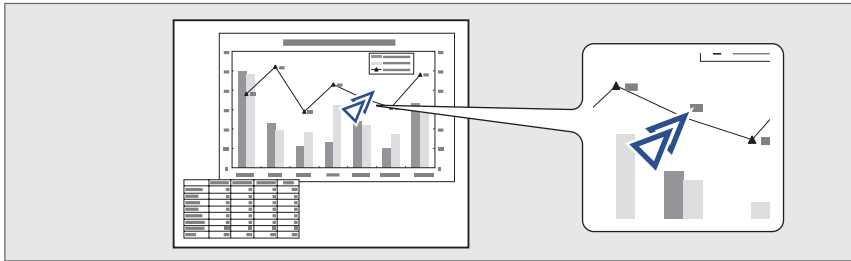

- 1** Display the Pointer.
Each time you press the [Pointer] button, the pointer appears or disappears.

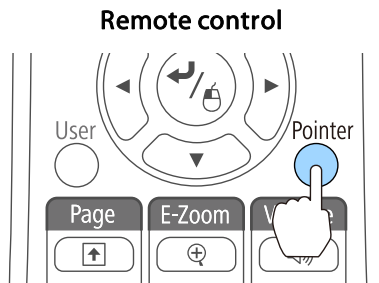

- 2** Move the Pointer icon (↗).

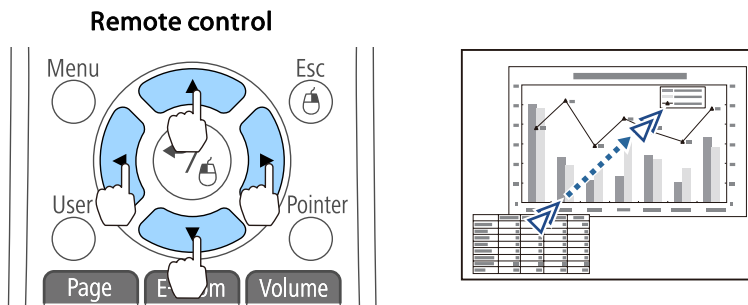

When any pair of adjacent [↶], [↷], [↵], or [↶] buttons are pressed at the same time, the pointer can be moved diagonally.




You can select the Configuration menu.

Settings - Poi


Enlarging Part of the Image

This is useful when you want to view details, such as graphs and tables.

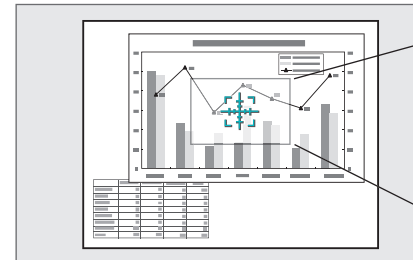


- 1** Start E-Zoom.

Press the [⊕] button to

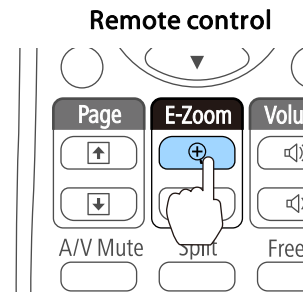


Projection Functions

- 2** Move the Cross (⊕) to the area of the image that you want to enlarge.

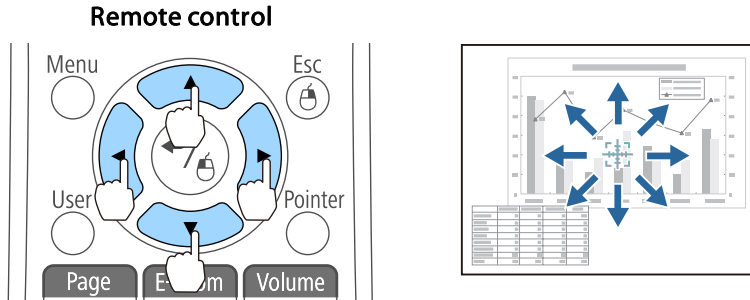

When any pair of adjacent [⏪], [⏩], [⏴], or [⏵] buttons are pressed at the same time, the pointer can be moved diagonally.

- 3** Enlarge.

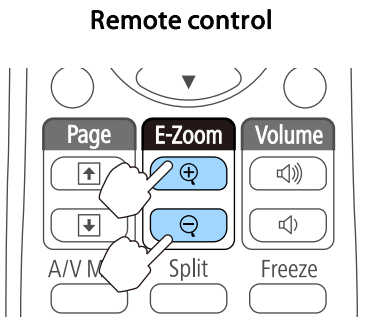

[⊕] button: Expands the area each time it is pressed. You can expand quickly by holding the button down.

[⊖] button: Reduces images that have been enlarged.

[Esc] button: Cancels E-Zoom.



- The enlargement ratio appears on the screen. The selected area can be enlarged to between 1 to 4 times in 25 incremental steps.
- During enlarged projection, press the [⏪], [⏩], [⏴], or [⏵] buttons to scroll the image.

Using the Remote Control Pointer (Wireless Mouse)

You can control the computer's mouse with the remote control. This function is called Remote Control Pointer.

The following operating systems are supported.

	Windows
OS	Windows 2000 Windows XP Windows Vista Windows 7 Windows 8 Windows 8.1

* It may not be possible to use older versions of the operating system.



Use the following procedure to use the Remote Control Pointer.

- 1** Connect the projector to the computer.
 - "Connecting a Computer"
- 2** Change the source to the projector.
 - USB Display
 - Computer
 - HDMI
 - "Switching to the Target Source"

Projection Functions


Once set, the mouse pointer can be controlled as follows.

Moving the mouse pointer

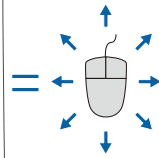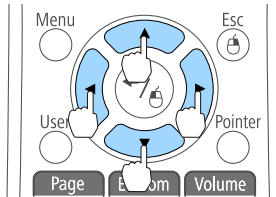


[Up], [Down], [Left], [Right] buttons:
Moves the mouse pointer.

Mouse clicks

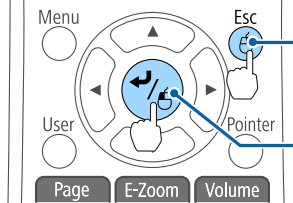


[Esc] button: Right click.
[Left] button: Left click. Press quickly twice to double-click.

Drag and drop

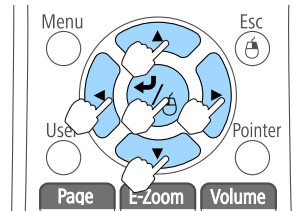

While holding down the [Left] button, press the [Up], [Down], [Left], or [Right] button.
Release the [Left] button to drop at the desired location.

Page Up/Down

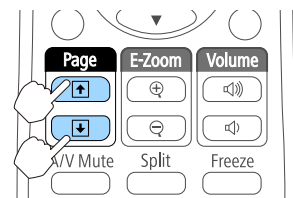

[Page Up] button: Moves to the previous page.
[Page Down] button: Moves to the next page.



- When any pair of adjacent buttons is pressed at the same time...
- If the mouse button settings are changed during the operation of the remote control...
- The Wireless Mouse function is not available under the following conditions:
 - When projecting images from a computer using the HDMI/MHL port using the Wireless Mouse function.
 - When the Configuration menu is displayed.
 - When operating functions such as adjusting the brightness or contrast (such as adjusting the brightness or contrast).However, when using the mouse, the up or down function is available.

Correcting the Color Distortion from Multiple Projectors

When lining up multiple projectors, use the **Image** menu to adjust the difference between each image.



- In some cases the brightness may not be even after correction.
- After some time has elapsed, the image may become more noticeable. Make adjustments.

Summary of correction procedure

When multiple projectors are set up, follow the following procedure to correct color distortion.

Projection Functions

1. Set the projector ID.

Set a unique projector ID for each of the target projectors so that you can limit which projector is being corrected.

2. Correct the color difference.



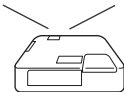

You can carry out color correction when projecting from multiple projectors.



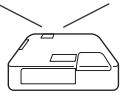

Setting an ID and using the remote control

By setting an ID for each projector, you can limit which projector is operated from the remote control.


You can set an ID for the projector within a range of "1" to "9". The default value is Off.

On the remote control, select the Projector ID from 0 to 9 for the projector you want to operate. The following examples show the combination of IDs for the Projector ID and the ID selected with the remote control.

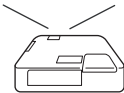
Operation	Combinations		Descriptions
Possible		Projector ID: 1	When the Projector ID and the ID selected with the remote control match, you can operate the projector from the remote control.
		ID selected with remote control: 1	
Possible		Projector ID: Off	When the Projector ID is set to Off, you can operate the projector regardless of the ID selected with the remote control.
		ID selected with remote control: 1	

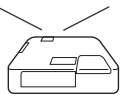Operation	Combinations	
Possible		Projector ID: 1
		ID selected with remote control: 1
Not possible		Projector ID: Off
		ID selected with remote control: 1

Setting the Projector ID


- 1 Press the [Menu] button  "Operating the Configuration" menu.

Control panel

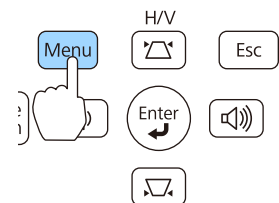


Projection Functions

- 2** Select **Projector ID** from **Extended**.

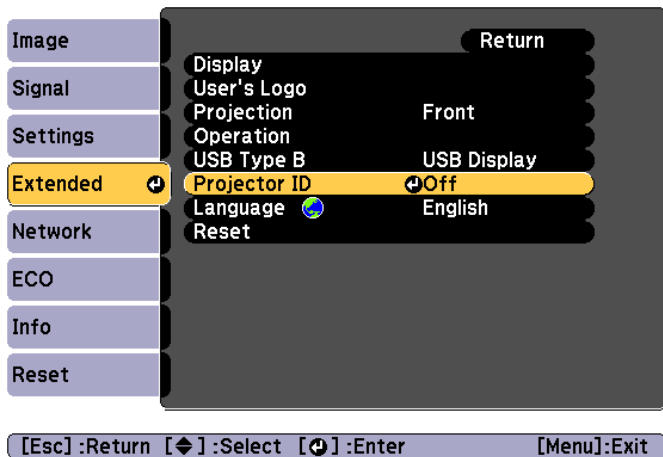

- 3** Choose the ID you want to set and press the [↵] button.

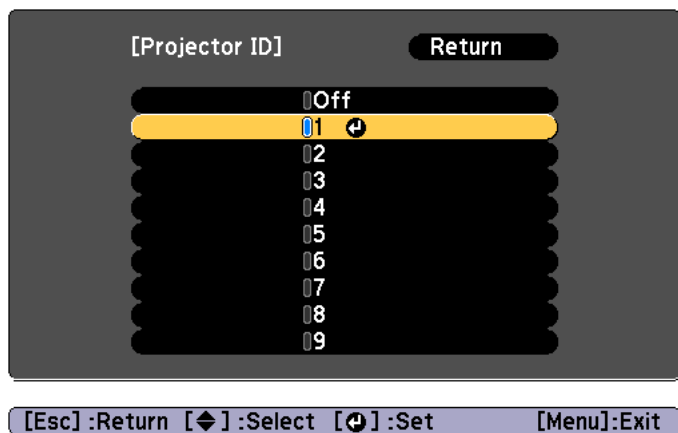

- 4** Press the [Menu] button to finish making settings.
Perform steps 1 to 4 for all projectors and set a unique ID for each one.


Selecting the ID for the projector you




Select the ID each time you is turned on, the ID set

- 1** Point the remote control projector and press the When you press the [ID] displayed on the projection seconds.

Remote control

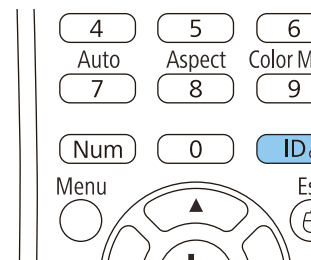

- 2** While holding the [ID] button matches the ID of the p

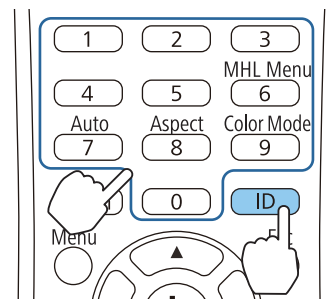

Projection Functions

Correcting


After setting up the projectors, correct the brightness and tone for each projector to reduce the differences.

Correcting color differences

Operate using the remote control with the ID set according to the projector being used.

1 Press the [Menu] button.
☛ "Using the Configuration Menu" p.79

2 Select the item you want to set from **Image**, and then make each setting.

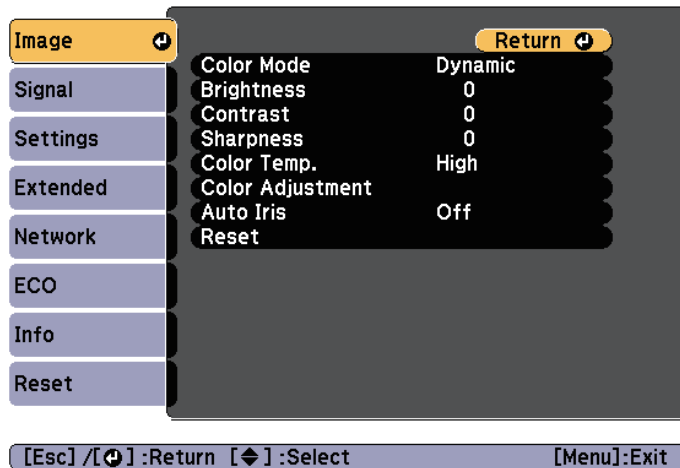

3 When all corrections are finished, press the [Menu] button to finish making settings.

After matching the ID for the remote control to the projector, perform steps 1 to 3 for all projectors that need to be corrected.

Saving a User's Logo

You can save the image that is o




- Once a User's Logo has the factory default.
 - If the content of the C projector using the batc is set for the other pro information and so on
- ☛ "Performing Batch

1 Project the image you wa press the [Menu] button.


☛ "Operating the Configur

Using the remote contr

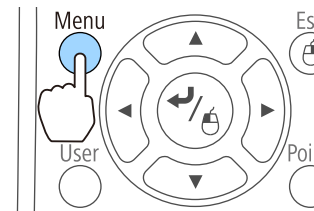

2 Select **User's Logo** from

Projection Functions

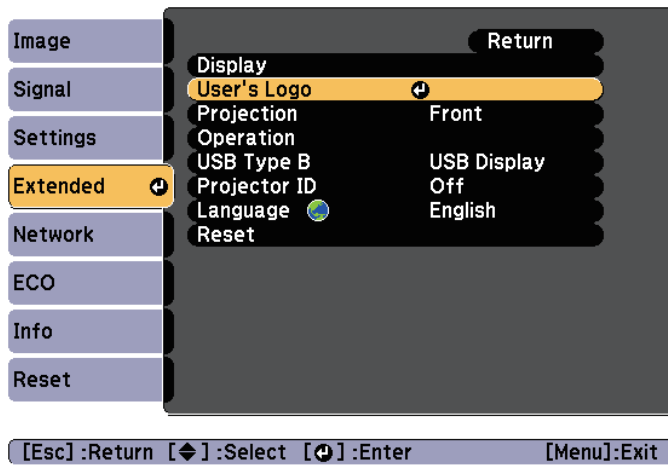

- When **User's Logo Protection** from **Password Protection** is set to **On**, a message is displayed and the User's Logo cannot be changed. You can make changes after setting **User's Logo Protection** to **Off**.
 - ☛ "Managing Users (Password Protect)" [p.67](#)
- If **User's Logo** is selected when Keystone, E-Zoom, Aspect, or Adjust Zoom are being performed, the function currently being performed is temporarily cancelled.

3

When the message "Choose this image as the User's Logo?" is displayed, select **Yes**.




When you press the [↵] button on the remote control or the control panel, the screen size may change depending on the signal to match the actual resolution of the image signal.

4

Move the box to select the User's Logo.

You can perform the same operation on the control panel.

Remote control

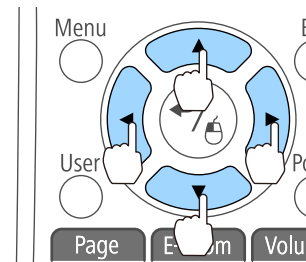


You can save at 4

5

When you press the [↵] button, the message "Choose this image as the User's Logo?" is displayed, select **Yes**.

6

Select the zoom factor from the zoom factor menu.

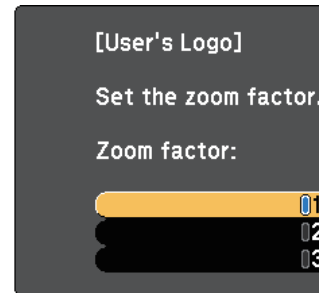

[Esc] :Return [↓] :Select

Projection Functions

- 7** When the message "Save this image as the User's Logo?" is displayed, select **Yes**.

The image is saved. After the image has been saved, the message "Completed." is displayed.



- When a User's Logo is saved, the previous User's Logo is erased.
- It takes a while to save. Do not operate the projector or any connected equipment while it is saving, otherwise malfunctions may occur.

Security Functions

The projector has the following enhanced security functions.

- **Password Protect**
You can limit who can use the projector.
- **Control Panel Lock**
You can prevent people changing the settings on the projector without permission.
☛ "Restricting Operation (Control Panel Lock)" [p.69](#)
- **Anti-Theft Lock**
The projector is equipped with the following anti-theft security device.
☛ "Anti-Theft Lock" [p.70](#)

Managing Users (Password Protect)

When Password Protect is activated, people who do not know the password cannot use the projector to project images even if the projector power is on. Furthermore, the user's logo that is displayed when you turn on the projector cannot be changed. This acts as an anti-theft function as the projector cannot be used even if it is stolen. At the time of purchase, Password Protect is not activated.

Kinds of Password Protect

The following two kinds of Password Protect settings can be made according to how the projector is being used.

- **Power On Protect**
When **Power On Protect** is **On**, you need to enter a preset password after the projector is plugged in and turned on (this also applies to Direct Power On). If the correct password is not entered, projection does not start.

- **User's Logo Protection**

Even if someone tries to change the user's logo on the projector, it cannot be changed. The following setting changes for the user's logo are prohibited.

- Capturing a User's Logo
- Setting **Display Background**
Display
☛ **Extended - Display**
- **Network Protection**
When **Network Protect** is set to **On**, the following is prohibited.
☛ "Network Menu" [p.87](#)


Setting Password Protect

Use the following procedure to set Password Protect.

- 1 During projection, hold the **Freeze** button for 3 seconds.

The Password Protect setting screen appears.

Remote control

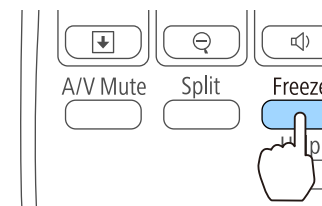


Security Functions



- If Password Protect is already activated, you must enter the password.
If the password is entered correctly, the Password Protect setting menu is displayed.
 - ☛ "Entering the Password" p.68
- When the password is set, stick the password protect sticker in a visible position on the projector as a further theft deterrent.
 - ☛ *Password Protect Sticker*

- 2** Select the type of Password Protect you want to set, and then press the [**↵**] button.

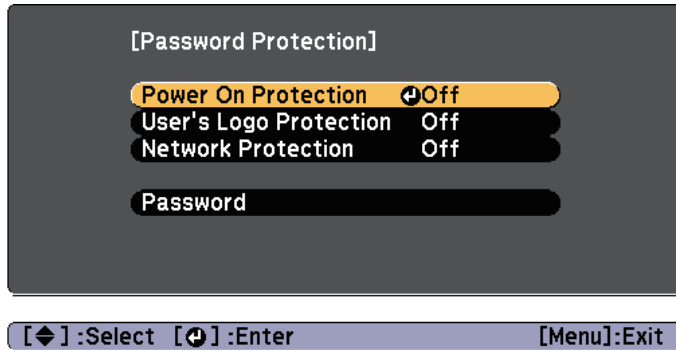

- 3** Select **On**, and then press the [**↵**] button.
Press the [Esc] button, the screen displayed in step 2 is displayed again.
- 4** Set the password.
- (1) Select **Password**, and then press the [**↵**] button.

- (2) When the message "Cha" then press the [**↵**] butt
this to your own desired
in step 2 is displayed ag
- (3) While holding down the
the numeric buttons. Th
you enter the fourth dig


- (4) Re-enter the password.
The message "Password
If you enter the passwor
you to re-enter the pass

Entering the Password

When the password entry screen
remote control.

While holding down the [Num]
numeric buttons.

Security Functions

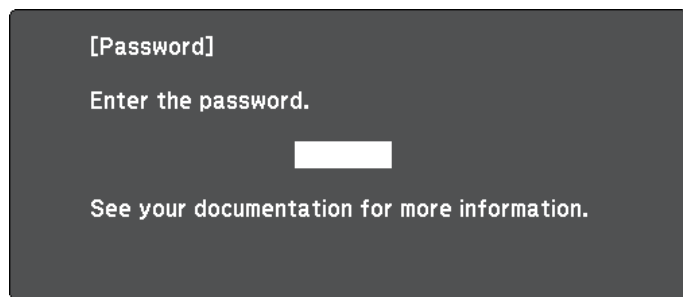

[0-9] :Enter

When you enter the correct password, Password Protect is temporarily released.

Attention

- If an incorrect password is entered three times in succession, the message "The projector's operation will be locked." is displayed for approximately five minutes, and then the projector switches to standby mode. If this happens, disconnect the power plug from the electrical outlet and then reinsert it and turn the projector's power back on. The projector displays the password entry screen again so that you can enter the correct password.
- If you have forgotten the password, make a note of the "Request Code: xxxxx" number that appears on the screen and contact the nearest address provided in the Epson Projector Contact List.
☛ [Epson Projector Contact List](#)
- If you continue to repeat the above operation and enter the wrong password thirty times in succession, the following message is displayed and the projector does not accept any more password entries. "The projector's operation will be locked. Contact Epson as described in your documentation."
☛ [Epson Projector Contact List](#)

Restricting Operation (


Perform one of the following to restrict operation of the projector control panel.

- Full Lock
All of the buttons on the control panel are locked, and no operations from the control panel are possible.
- Partial Lock
All of the buttons on the control panel are locked, except for the Power Off button.

This is useful at events or shows where the projector is used during projection or at schools where the projector is used for instruction. The projector can still be operated using the remote control.


- 1 Press the [Menu] button on the remote control.
☛ "Using the Configuration Menu"

Using the remote control

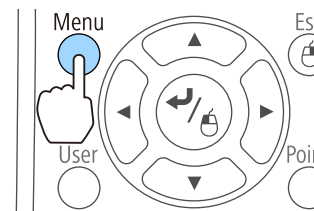


- 2 Select **Control Panel Lock** from the menu.

Security Functions

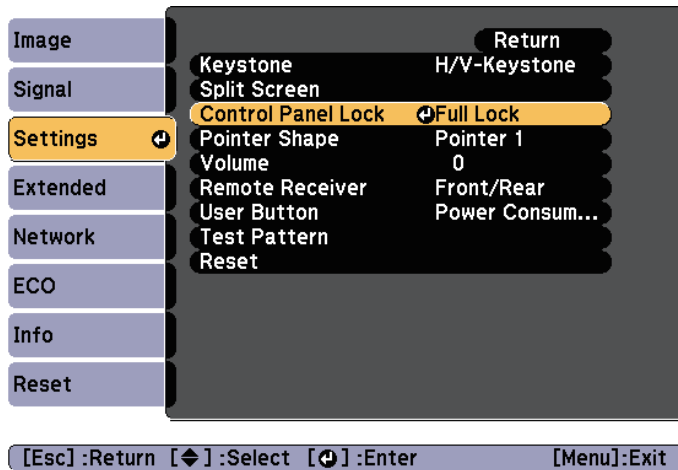

- 3** Select either **Full Lock** or **Partial Lock** according to your purpose.

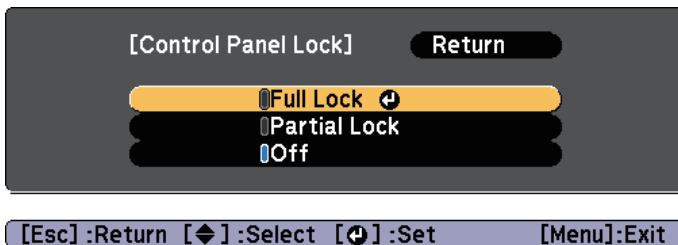

- 4** Select **Yes** when the confirmation message is displayed.
The control panel buttons are locked according to the setting you chose.



You can release the two methods.

- Select **Off** from **Settings - Control Panel Lock**
- Press and hold **Control Panel Lock** for about seven seconds. The lock is released.

Anti-Theft Lock


The projector is equipped with the following security devices.

- Security slot
The security slot is compatible with the lock manufactured by Kensington. See the following for more details.
<http://www.kensington.com>
- Security cable installation point
A commercially available theft-resistant cable can be inserted through the installation point to lock the projector.

Installing the wire lock

Pass an anti-theft wire lock through the installation point.
See the documentation supplied with the lock for details.

Security Functions

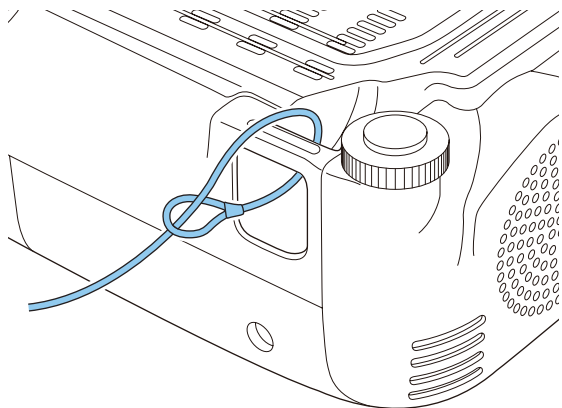

Monitoring and Controlling

EasyMP Monitor

EasyMP Monitor lets you carry out operations such as checking the status of multiple Epson projectors that are connected to a network at a computer monitor, and controlling the projectors from the computer.

You can download EasyMP Monitor from the following Web site.

<http://www.epson.com>

The following provides descriptions of the monitoring and control functions that can be carried out using EasyMP Monitor.

- Registering projectors for monitoring and control
- Group registration for registered projectors
- Monitoring the status of registered projectors
- Controlling registered projectors
- Mail Notification settings
- Sending messages to registered projectors

Message Broadcasting

Message Broadcasting is plugin software for EasyMP Monitor. Message Broadcasting can be used to send a message (JPEG file) to project on all Epson projectors or specified projectors connected on the network.

The data can be sent manually, or sent automatically using Timer Settings of EasyMP Monitor.

Download the Message Broadcasting software from the following Web site.

<http://www.epson.com>

Changing Settings Using a Web Browser (Web Control)

By using a Web browser of a computer connected to the projector on a network, you can make settings and control the projector. This function

allows you to perform setup and since you can use the computer's the setup is easier.

Use Microsoft Internet Explorer 8 for OS X.



If you set **Standby Mode** Web browser to make se projector is in standby m

☛ **ECO - Standby Mode**

Projector setup

In a Web browser, you can set i Configuration menu. The settings There are also items that can o

Items in the Configuration menu that

- Settings Menu - Pointer Shape
- Settings Menu - Test Pattern
- Settings Menu - User Button
- Extended Menu - User's Logo
- Extended Menu - Language
- Reset Menu - Reset Lamp Ho

The settings for items on each Configuration menu.

☛ "Configuration Menu" p.78

Items that can only be set with a Web

- SNMP Community Name (up
- Monitor Password (up to 16 s
- Add Port

Monitoring and Controlling

- Port Number

Displaying the Web Control screen

Use the following procedure to display the Web Control screen.

Make sure the computer and projector are connected to the network. When communicating with a wireless LAN, connect in Advanced mode.



If your Web browser is set up to connect via a proxy server, the Web Control screen cannot be displayed. To display Web Control, you need to make settings so that a proxy server is not used for a connection.

- 1** Start a Web browser on the computer.
- 2** Enter the IP address of the projector in the address input box of the Web browser, and press the Enter key on the computer's keyboard.

The Web Control screen is displayed.

When Web Control Password is set from the Configuration menu, the password entry screen is displayed.

- 3** Enter the user ID and password.
Enter "EPSONWEB" as the user ID.
The initial password is "admin".



- Enter the user ID even if a password has not been set. You cannot change the user ID.
- You can change the password in Network menu from the Configuration menu.

🖱️ **Network - Basic - Web Control Password** [p.89](#)


Displaying the Web Remote screen

The Web Remote function allows you to perform various operations with a Web browser.

- 1** Display the Web Control screen.
- 2** Click **Web Remote**.



- 3** The Web Remote screen is displayed.

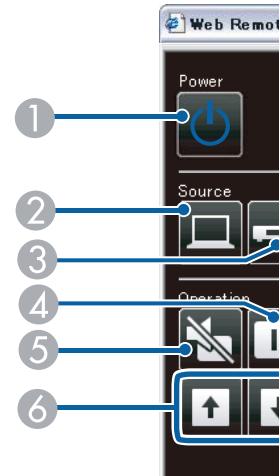

	Name	
1	Power button [⏻]	Turns the projector on or off. 🖱️ "From the Web Remote screen"

Monitoring and Controlling

Name	Function
② [Computer] button	Changes to images from the Computer port.
③ [Video] button	Each time the button is pressed, the image cycles through the Video, S-Video, and HDMI/MHL ports.
④ [Freeze] button	Images are paused or unpaused. ☛ "Freezing the Image (Freeze)" p.58
⑤ [A/V Mute] button	Turns the video and audio on or off. ☛ "Hiding the Image and Sound Temporarily (A/V Mute)" p.57
⑥ [Page] buttons [↑][↓]	Changes pages in files such as PowerPoint files when using the following projection methods. <ul style="list-style-type: none"> • When using the Wireless Mouse function ☛ "Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)" p.60 • When using USB Display ☛ "Projecting with USB Display" p.33 • During a network connection When projecting images or scenarios using PC Free, pressing these buttons displays the previous/next screen.
⑦ [Source Search] button	Changes to the next input source that is sending an image. ☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" p.32
⑧ [LAN] button	Changes to the image projected with EasyMP Network Projection. When projecting using the optional Quick Wireless Connection USB Key, this button switches to that image. ☛ "Switching to the Target Image by Remote Control" p.33
⑨ [USB] button	Each time the button is pressed, it cycles through the following images: <ul style="list-style-type: none"> • USB Display • Images from the device connected to the USB port ☛ "Switching to the Target Image by Remote Control" p.33

Name	Function
⑩ [Volume] buttons [⏪][⏩]	[⏪] Decr [⏩] Incr ☛ "Adj
⑪ [Display the QR Code] button	Displays

Using the Mail Notification Problems

When you set Mail Notification, you can register email addresses when a problem occurs. This will enable the operator to be notified at various locations away from the projector.

☛ Network - Mail - Mail Notification



- Up to a maximum of 10 email addresses can be registered, and notifications are sent to all registered destinations at once.
- If a projector develops a problem while working, it may not be possible to notify you at all of the problem.
- If you set **Standby Mode** to **ECO**, the projector will be in standby mode even if it is in a problem state (off).
☛ ECO - Standby Mode

Reading Error Notification Mail

When the Mail Notification function is set, an error notification mail is sent when a problem occurs in the projector, the following information is included:

Monitoring and Controlling

Mail sender: Address for Address 1

Subject: EPSON Projector

Line 1: The projector name where the problem has occurred

Line 2: The IP address set for the projector where the problem has occurred.

Line 3 and on: Details of the problem

The details of the problem are listed line by line. The messages are listed below.

- Internal error
- Fan related error
- Sensor error
- Lamp cover is open
- Lamp timer failure
- Lamp out
- Internal temperature error
- High-speed cooling in progress
- Lamp replacement notification
- No-signal
No Signal is input to the projector. Check the connection status or check that the power for the signal source is turned on.
- Auto Iris Error
- Power Err. (Ballast)

See the following to deal with problems or warnings.

☛ "Reading the Indicators" [p.106](#)

Management Using SNMP

By setting **SNMP** to **On** in the **Network** menu, messages are sent to the specified computer. This function will enable the operator to be notified of error locations away from the projector.

☛ **Network - Others - SNMP**



- SNMP should be managed by a computer operator who is familiar with the network.
- To use the SNMP function, you must first install the SNMP management software on the computer.
- The SNMP Agent for the projector must be installed (SNMPv1).
- The managing function must be set to **LAN** in **Quick mode**.
- Up to two destination IP addresses can be set.

ESC/VP21 Commands

You can monitor and control the projector using the following commands. Connect the device and the projector to the computer using the communication commands (ESC/VP21).

Before starting

To control and monitor the projector, the following preparations must be completed.

- 1 Install the USB communication software on your computer. For information, see the user manual.

Monitoring and Controlling

contact your local dealer or the nearest address provided in the Epson Projector Contact List.

☛ [Epson Projector Contact List](#)

2 Set **USB Type B** to **Link 21L** from the projector's Configuration menu.

☛ **Extended - USB Type B** [p.85](#)

3 Connect the computer's USB port to the projector's USB-B port with a USB cable.

Start from step 2 from the second time.

Command list

When the power ON command is transmitted to the projector, the power turns on and it enters warm-up mode. When the projector's power has turned on, a colon ":" (3Ah) is returned.

When a command is input, the projector executes the command and returns a ":", and then accepts the next command.

If the command being processed terminates abnormally, an error message is output and a ":" is returned.

Item		Command	
Power ON/OFF	On	PWR ON	
	Off	PWR OFF	
Signal selection	Computer	Auto	SOURCE 1F
		RGB	SOURCE 11
		Component	SOURCE 14
	HDMI		SOURCE 30
	Video		SOURCE 41
	S-Video		SOURCE 42

Item	
	USB Display
	USB
	LAN
A/V Mute On/Off	On
	Off
A/V Mute selection	Black
	Blue
	Logo

Add a Carriage Return (CR) code transmit.




Communications protocol

- Default baud rate setting: 9600
- Data length: 8 bit
- Parity: None
- Stop-bit: 1 bit
- Flow control: None

About Event ID

Check the numbers and then apply the following countermeasures. If you cannot resolve the problem, contact your nearest dealer or the nearest address provided in the Epson Projector Contact List.

[Epson Projector Contact List](#)

Event ID	Cause	
0432 0435	Failed to startup EasyMP Network Projection.	Restart the projector.
0434 0481 0482 0485	Network communication is unstable.	Check the network communication while.
0433	Cannot play transferred images.	Restart EasyMP Network Projection.
0484	Communication was disconnected from the computer.	
0483 04FE	EasyMP Network Projection ended unexpectedly.	Check the network communication.
0479 04FF	A system error occurred in the projector.	Restart the projector.
0891	Cannot find an access point with the same SSID.	Set the computer, the access point.
0892	The WPA/WPA2 authentication type does not match.	Check that the wireless LAN security type matches.  Security p.91
0893	The WEP/TKIP/AES encryption type does not match.	
0894	Communication was disconnected because the projector connected to an unauthorized access point.	Contact your network administrator.
0898	Failed to acquire DHCP.	Check that the DHCP server is on and turn off the DHCP setting.  Wireless LAN - IP Settings p.91
0899	Other communication errors	If restarting the projector or the computer does not solve the problem, contact your local dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List

Configuration Menu


This chapter explains how to use the Configuration menu and its functions.

Using the Configuration Menu


This section explains how to use the Configuration menu.

Although steps are explained using the remote control as an example, you can perform the same operations from the control panel. Check the guide under the menu for the available buttons and their operations.



1 Display the Configuration menu screen.

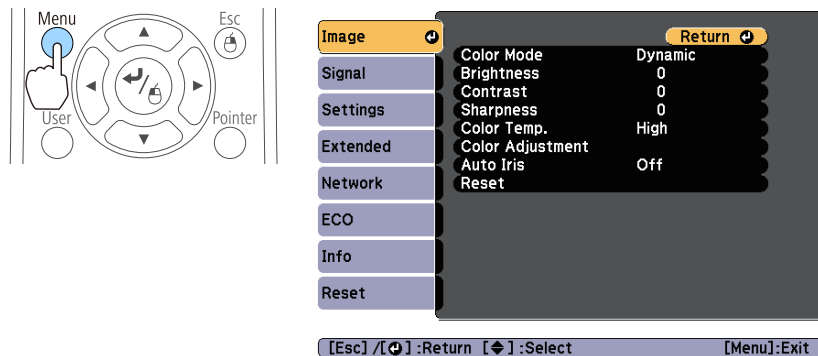



2 Select a top menu item.

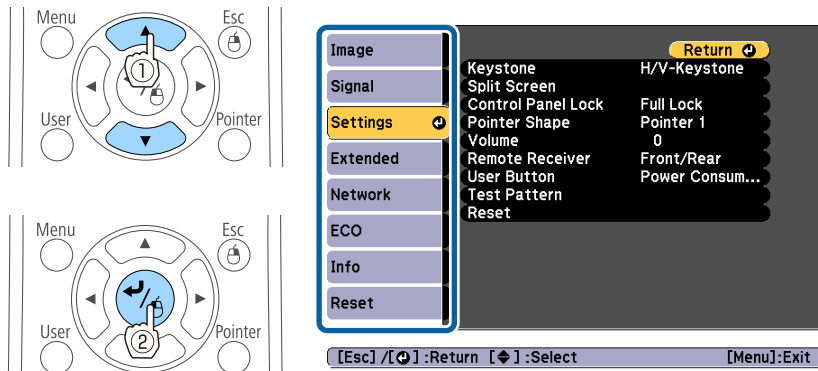

3 Select a submenu item.

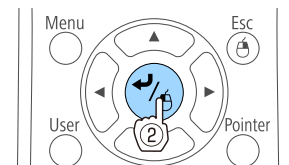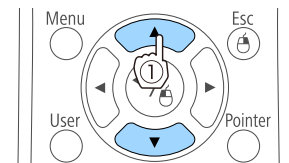

4 Change settings.

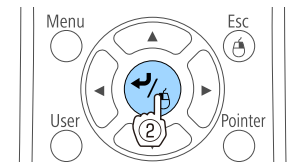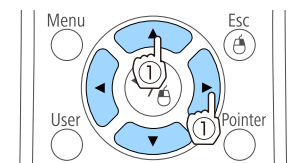

5 Press the [Menu] button

List of Functions

Configuration Menu Table

Settable items vary depending on the model being used and the image signal and source being projected.

Top Menu Name	Submenu Name	Items or Setting Values
Image menu ☛ p.82	Color Mode	Dynamic, Presentation, Theatre, Photo, Sports, sRGB, Blackboard, and Whiteboard
	Brightness	-24 to 24
	Contrast	-24 to 24
	Color Saturation	-32 to 32
	Tint	-32 to 32
	Sharpness	-5 to 5
	Color Temp.	High, Medium, and Low
	Color Adjustment	Red: -16 to 16 Green: -16 to 16 Blue: -16 to 16
Auto Iris	Off, Normal, High Speed	
Signal menu ☛ p.82	Auto Setup	On and Off
	Resolution	Auto, Wide, and Normal
	Tracking	-
	Sync.	0 to 31
	Position	Up, Down, Left, and Right
	Progressive	Off, Video, and Film/Auto
	Noise Reduction	Off, NR1, and NR2
	HDMI Video Range	Auto, Normal, and Expanded
	Input Signal	Auto, RGB, and Component

Top Menu Name	Submenu Name
	Video Signal
	Aspect
	Overscan
Settings menu ☛ p.84	Keystone
	Split Screen
	Control Panel
	Pointer Share
	Volume
	Remote Rec
	User Buttons
	Test Pattern
Extended menu ☛ p.85	Display
	User's Logo
	Projection
	Operation
	USB Type 1
	Projector ID
Language	
ECO menu ☛ p.94	Power Cons
	Light Optim

List of Functions

Top Menu Name	Submenu Name	Items or Setting Values
	Sleep Mode	On and Off
	Sleep Mode Timer	1 to 30
	Lens Cover Timer	On and Off
	A/V Mute Timer	On and Off
	Standby Mode	Communication On and Communication Off
	ECO Display	On and Off
Info menu ☛ p.95	Projector Info	Lamp Hours, Source, Input Signal, Resolution, Video Signal, Refresh Rate, Sync Info, Status, Serial Number, Event ID
	Version	-
Reset menu ☛ p.95	Reset All	-
	Reset Lamp Hours	-

* The number of supported languages differs depending on the region where the projector is used.

Network menu


Top Menu Name	Submenu Name	Setting Values
Basic menu ☛ p.89	Projector Name	-
	Web Control Password	-
	Projector Keyword	On and Off
	Display LAN Info.	Text & QR Code, Text
Wireless LAN menu ☛ p.89	Connection Mode	Quick, Advanced
	Channel	1ch, 6ch, 11ch
	SSID Auto Setting	On and Off
	SSID	-

Top Menu Name	Submenu Name
	Search Access
	IP Settings
	SSID Display
	IP Address D
Security menu ☛ p.91	Security
	Passphrase
Mail menu ☛ p.92	Mail Notific
	SMTP Serve
	Port Number
	Address 1 Se dress 2 Sett dress 3 Sett
Others menu ☛ p.93	SNMP
	Trap IP Add Trap IP Add
	Bonjour
	Message Bro

List of Functions

Image Menu

Settable items vary depending on the image signal and source currently being projected. Setting details are saved for each image signal.

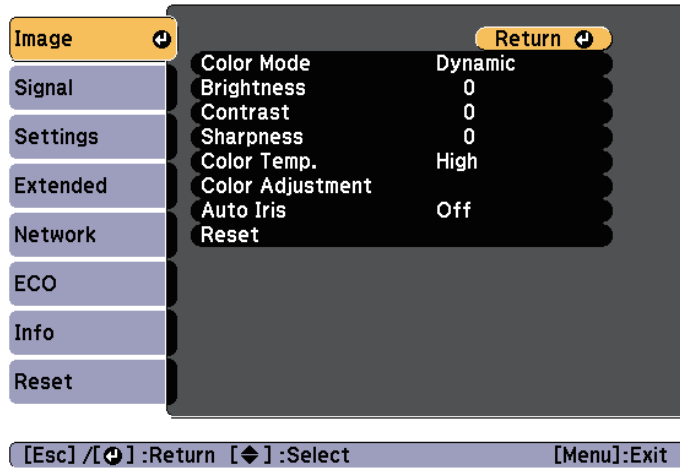

Submenu	Function
Color Mode	You can select the quality of the image to suit your surroundings. "Selecting the Projection Quality (Selecting Color Mode)" p.42
Brightness	You can adjust the image brightness.
Contrast	You can adjust the difference between light and dark in the images.
Color Saturation	You can adjust the color saturation for the images.
Tint	(Adjustment is possible when a component video signal is being input. If a composite video or S-video signal is input, adjustment is only possible when NTSC signals are being input.) You can adjust the image tint.
Sharpness	You can adjust the image sharpness.


Submenu	
Color Temp.	(This item cannot be set.) Adjusts the tint of the image from High , Medium , Normal , Low , and High is selected.
Color Adjustment	(This item cannot be set.) You can adjust the color saturation and color temperature individually.
Auto Iris	(This item cannot be set.) Theatre. Set to Normal or Theatre to make the iris adjust to the optimum light for the room to make faster iris adjustments. The setting is stored in memory. "Setting Auto Iris"
Reset	You can reset all settings to their default settings. "Reset Menu"

Signal Menu

Settable items vary depending on the image signal and source currently being projected. Setting details are saved for each image signal.

List of Functions

You cannot make settings on the Signal menu when the source is USB Display, USB, or LAN.

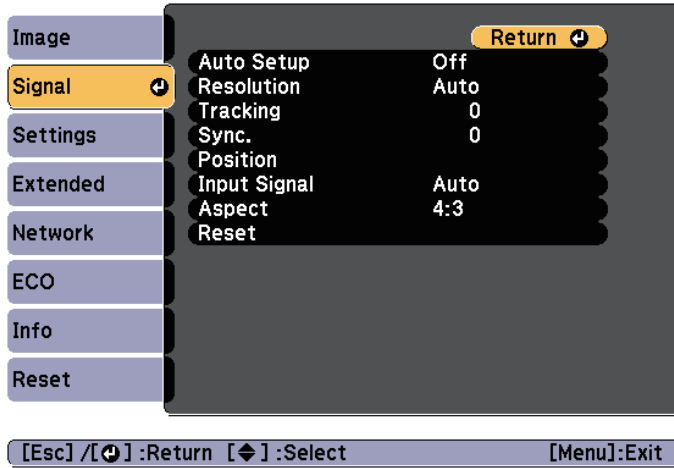


Submenu	Function
Auto Setup	Set to On to automatically adjust Tracking, Sync., and Position to the optimum state when the input signal changes.
Resolution	Set to Auto to automatically identify the resolution of the input signal. If images are not projected correctly when set to Auto , for example if some of the image is missing, adjust to Wide for wide screens, or set to Normal for 4:3 or 5:4 screens depending on the connected computer.
Tracking	You can adjust computer images when vertical stripes appear in the images.
Sync.	You can adjust computer images when flickering, fuzziness, or interference appear in the images.
Position	You can adjust the display position up, down, left, and right when a part of the image is missing so that the whole image is projected.

Submenu	
Progressive	(When a computer setting can only interlaced signal, digital RGB signal Interlace (i) s conversion) Off : Ideal for image Video : Ideal for Film/Auto : This animation.
Noise Reduction	(This cannot be projecting an image. Smooths out r favorite setting. viewing image s DVDs.
HDMI Video Range	When the projector player, set the p player's video range
Input Signal	You can select i If set to Auto , t the connected e If colors do not appropriate signal
Video Signal	You can select th video signals ar appears in the i being projected according to the
Aspect	You can set the ☞ "Changing

List of Functions



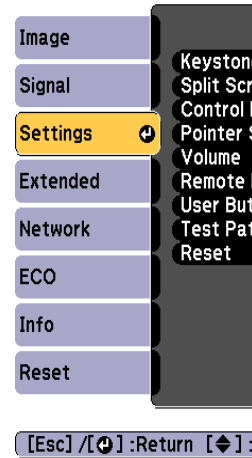

Submenu	Function
Overscan	Changes the output image ratio (the range of the projected image). You can set the cropping range to Off , 4% , or 8% . When the source is HDMI, Auto is available. When Auto is selected, it automatically changes to Off or 8% according to the input signal.
Reset	You can reset all adjustment values on the Signal menu to their default settings, except for Input Signal . See the following to return all menu items to their default settings. ☛ "Reset Menu" p.95


Settings Menu




Submenu	Function
Keystone	You can correct keystone distortion. <ul style="list-style-type: none"> When H/V-Keystone is selected, you can adjust horizontal and vertical keystone. You can also select Quick Keystone to correct keystone quickly. When Quick Keystone is selected, you can select and correct keystone quickly. ☛ "Quick Keystone" p.95
Split Screen	Switches to split screen mode. ☛ "Projecting" p.47
Control Panel Lock	You can use the control panel to restrict settings. ☛ "Restricting" p.95

List of Functions



Submenu	Function
Pointer Shape	<p>You can select the shape of the pointer.</p> <p>Pointer 1: </p> <p>Pointer 2: </p> <p>Pointer 3: </p> <p> "Pointer Function (Pointer)" p.58</p>
Volume	<p>You can adjust the volume. Setting values are saved for each source.</p>
Remote Receiver	<p>You can limit the reception of the operation signal from the remote control.</p> <p>When set to Off, you cannot perform any operations from the remote control. If you want to make operations from the remote control, hold down the [Menu] button on the remote control for at least 15 seconds to reset the setting to its default value.</p>
User Button	<p>You can select and assign an item from the Configuration menu with the remote control's [User] button. Pressing the [User] button directly displays the assigned menu item selection/adjustment screen, allowing you to make one-touch changes to settings/adjustments. You can assign one of the following items to the [User] button.</p> <p>Power Consumption, Info, Progressive, Test Pattern, Resolution, Display the QR Code</p>
Test Pattern	<p>You can display a test pattern to adjust the projection without connecting other equipment when you set up the projector.</p> <p>While the test pattern is displayed, zoom, focus adjustments, and keystone correction can be performed. To cancel the test pattern, press the [Esc] button on the remote control or the control panel.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Attention</p> <p>If a pattern is displayed for a long time, a residual image may be visible in projected images.</p> </div>



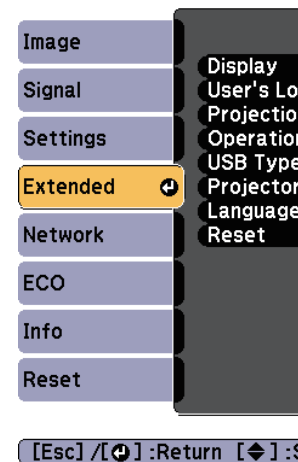

Submenu	Function
Reset	<p>You can reset all default settings.</p> <p>See the following settings.</p> <p> "Reset Menu"</p>

Extended Menu



List of Functions

Submenu	Function
Display	<p>You can make settings related to the projector's display.</p> <p>Messages: When set to Off, the following items will not be displayed.</p> <p>Item names when the Source, Color Mode, or Aspect Ratio is changed, messages when no signal is being input, and warnings such as High Temp Warning.</p> <p>Display Background*1: You can set the screen background to Black, Blue, or Logo when no image signal is available.</p> <p>Startup Screen*1: Set to On to display the User's Logo when projection starts.</p> <p>A/V Mute*1: You can set the screen displayed when the remote control's [A/V Mute] button is pressed to Black, Blue, or Logo.</p>
User's Logo *1	<p>You can change the user's logo that is displayed as a background during Display Background, A/V Mute, and so on.</p> <p> "Saving a User's Logo" p.64</p>
Projection	<p>Select from one of the following projection methods depending on how the projector is installed.</p> <p>Front, Front/Ceiling, Rear, and Rear/Ceiling</p> <p>You can change the setting as follows by pressing down the [A/V Mute] button on the remote control for about five seconds.</p> <p>Front ↔ Front/Ceiling</p> <p>Rear ↔ Rear/Ceiling</p> <p> "Installation Methods" p.21</p>

Submenu	Function
Operation	<p>Direct Power can be turned off simply by plugging the power cord out. When the power is turned on automatically, the power is being restored.</p> <p>High Altitude can be set to Off above an altitude of 10,000 feet.</p> <p>Startup Source can be set to the port currently in use when the projector starts. Set to Off to return to the last time the projector was started.</p> <p>Auto Power Off can be set to Communicate to Communicate when the projector receives a signal when it is in standby.</p>
USB Type B	<p>USB Display:</p> <p> "Projecting to USB Display"</p> <p>Link 21L: Enable</p> <p> "ESC/VP21"</p>
Projector ID	<p>When you want to change the control operation, the Off indicates that the projector is in the Off state.</p> <p> "Setting the Projector ID"</p>
Language	<p>You can set the language of the projector's display.</p>
Reset	<p>You can reset the projector's Operation*2 from the settings.</p> <p>See the following table for the settings.</p> <p> "Reset Menu"</p>

*1 When **User's Logo Protect** is set to **On**, the setting to user's logo cannot be changed. Set **User's Logo Protect** to **Off**.

List of Functions


☛ "Managing Users (Password Protect)" p.67

*2 Except for High Altitude Mode and Startup Source Search.

Network Menu

When **Network Protect** is set to **On** in **Password Protect**, a message is displayed and the network settings cannot be changed. Set **Network Protect** to **Off** and then configure the network.

☛ "Setting Password Protect" p.67

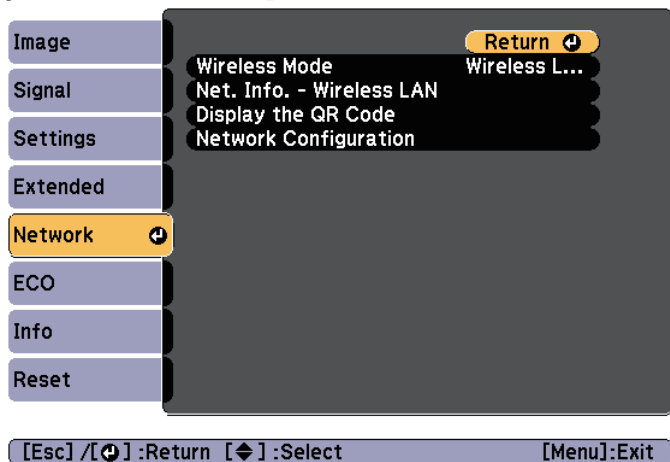

Submenu	Function
Wireless Power	Set Wireless LAN On when connecting the projector to the computer over wireless LAN. If you do not want to connect via wireless LAN, turn it Off to prevent unauthorized access by others. The default value is Wireless LAN On .

Submenu	
Net. Info. - Wireless LAN	Displays the following information: <ul style="list-style-type: none"> • Connection • Wireless LAN • Antenna Level • Projector Name • SSID • DHCP • IP Address • Subnet Mask • Gateway Address • MAC Address • Region Code
Display the QR Code	Displays the QR Code.
Network Configuration	The following information is displayed: Basic, Wireless LAN Setup completed

* Displays available region information. For more details, contact your local Epson Projector Contact List.

☛ [Epson Projector Contact List](#)




- By using a Web browser on a network, you can access the Web Settings function. This function is called Web Settings. For more details, see "Changing Settings" p.72
- Contact your network administrator for more details.

List of Functions

Notes on operating the Network menu

Selecting from the top menu and sub menus, and changing selected items is the same as making operations from the Configuration menu.

When done, make sure you go to the **Complete** menu, and select **Yes**, **No**, or **Cancel**. When you select **Yes** or **No**, you are returned to the Configuration menu.

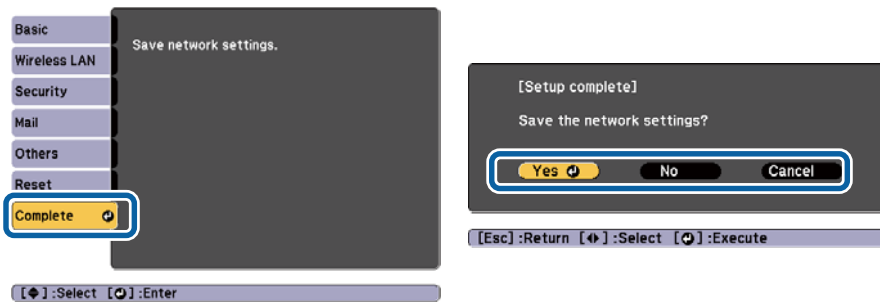

Yes: Saves the settings and exits the Network menu.


No: Does not save the settings and exits the Network menu.

Cancel: Continues displaying the Network menu.

Soft keyboard operations

The Network menu contains items that require input of alphanumerics during setup. In this case, the following software keyboard is displayed.

Press the [Left Arrow][Right Arrow][Up Arrow][Down Arrow] buttons on the remote control or the [Left Arrow][Right Arrow] buttons on the control panel. Use the buttons to move the cursor to the desired key, and then press the [Enter] button to enter the selected character. Enter figures by holding down the [Num] button on the remote control, and pressing the numeric buttons. After inputting, press **Finish** on the keyboard to confirm your input. Press **Cancel** on the keyboard to cancel your input.

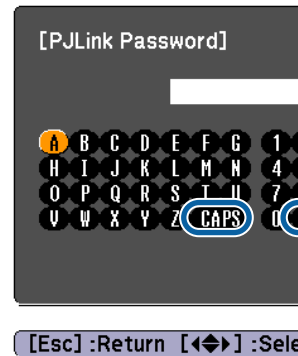

- Each time the **CAPS** key is selected, the keyboard sets and changes between upper and lower case letters.
 - Each time the **SYM1/2** key is selected, the keyboard sets and changes the symbol keyboard.
- The following text can be entered:


Numbers	0123456789
Alphabet	ABCDEFGHIJKLMNOPQRSTUVWXYZ abcdefghijklmnopqrstuvwxyz
Symbols	! # \$ % & ' () * + , - . : ;



- Except for the SSID, characters are entered in the Network menu.
- Some symbols (" * , ;) are not displayed on the keyboard. Use your Windows keyboard.
- "Changing Settings U" (partially visible)


List of Functions

Basic menu

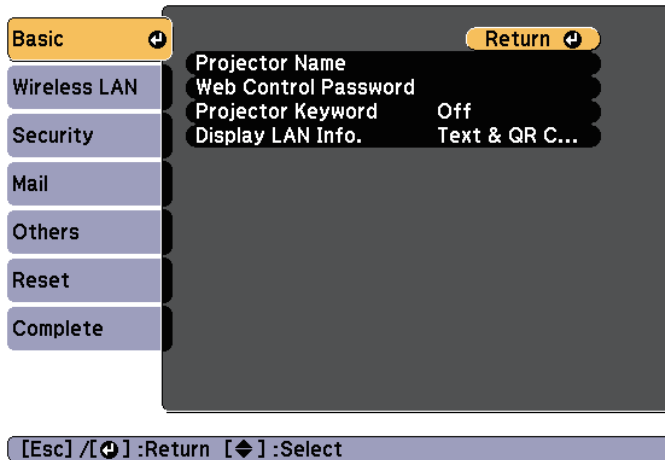

Submenu	
Display LAN Info.	Set the display mode. When a QR code is scanned, simply reading the value is Text & QR Code. "Projecting"


Wireless LAN menu

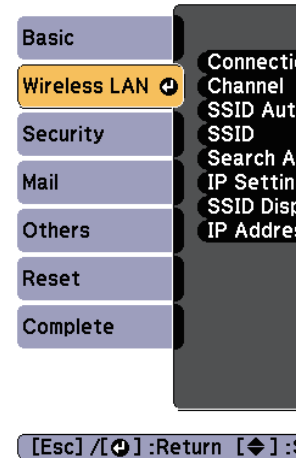

Submenu	
Connection Mode	Set the connection mode and a computer. If you select Quick Projection, the projector automatically starts Projection. If Standard Projection becomes an easy-to-use mode created in Advanced Settings. If you select Advanced Infrastructure mode

Submenu	Function
Projector Name	Displays the projector name used to identify the projector when connected to a network. When editing, you can enter up to 16 single-byte alphanumeric characters. The following characters cannot be used: " * + , / ; < = > ? [\] ` `
Web Control Password	Set a password to use when making settings and controlling the projector using Web Control. You can enter up to eight single-byte alphanumeric characters (* cannot be used). Web Control is a computer function that allows you to set up and control the projector by using the Web browser on a computer connected on a network. "Changing Settings Using a Web Browser (Web Control)" p.72
Projector Keyword	When set to On , you have to enter the keyword when you try to connect the projector to a computer via a network. As a result, you can prevent presentations from being interrupted by connections from other computers. Normally this should be set to On .

List of Functions


Submenu	Function
Channel	(This can only be set if Connection Mode is set to Quick .) Select the frequency band used by the wireless LAN from 1ch , 6ch , or 11ch . The default value is 11ch .
SSID Auto Setting	(This can only be set if Connection Mode is set to Quick .) When you set this to On , you can search for the projector more quickly from among multiple projectors. SSID is set automatically. When connecting to multiple projectors from one computer in Quick mode, set this to Off , and set the same SSID in all the projectors that will connect.
SSID	(This item can only be set when SSID Auto Setting is set to Off .) Enter an SSID  . When an SSID is provided for the wireless LAN system in which the projector participates, enter the SSID. You can enter up to 32 single-byte alphanumeric characters (: ^ can only be entered from the Web browser).
Search Access Point	(This item can be set only if Wireless Power is set to Wireless LAN On , and Connection Mode is set to Advanced .) The projector searches for a local access point. This allows you to perform wireless LAN setup by simply selecting the connection location of the wireless LAN.

Submenu	Function
IP Settings	(This item can only be set when Connection Mode is set to Advanced .) You can make network settings for the projector. DHCP: Set to On to use DHCP. If set to Off , you must set the IP Address , Subnet Mask , and Gateway Address . IP Address: You can enter an IP address for the projector. You can enter 0.0.0.0, 127.x.x.x, and 127.0.0.0, but not 0.0.0.0, 127.x.x.x, or 127.0.0.0. The last octet number from 0 to 255 is valid. Subnet Mask: You can enter a subnet mask for the projector. You can enter 0.0.0.0, 255.255.255.255, and 255.x.x.x, but not 0.0.0.0, 255.255.255.255, or 255.x.x.x. The last octet number from 0 to 255 is valid. Gateway Address: You can enter a gateway address for the projector. You can enter 0.0.0.0, 127.x.x.x, and 127.0.0.0, but not 0.0.0.0, 127.x.x.x, or 127.0.0.0. The last octet number from 0 to 255 is valid.
SSID Display	To prevent the SSID from being displayed on the Standby screen, set this to Off .
IP Address Display	To prevent the IP address from being displayed on the Standby screen, set this to Off .

List of Functions

Security menu

Available when the Wireless LAN unit is installed.

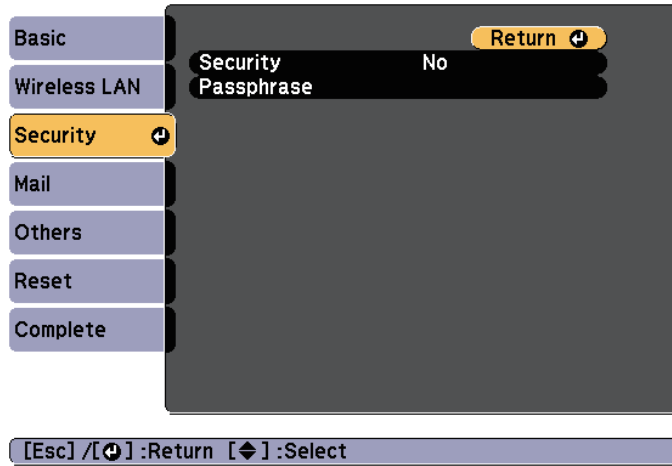

Submenu	Function
Security	Select the security type from the items that are displayed. When setting up Security, follow the instructions from the administrator of the network system you are about to access.

Submenu	
Passphrase	Enter the passphrase (8 to 31 byte alphanumeric characters). When using it with WPA, you need to input the passphrase (default) passphrase. In the interests of security, the passphrase periodically changes. When the passphrase returns to the initial state, the "Reset menu" is displayed. You can enter the passphrase. When entering the passphrase, you need to enter the text "Change the passphrase" (p.72). In Quick mode,

Type of security

When the Wireless LAN unit is installed, you set security.

WPA is an encryption standard for wireless networks. The projector supports WPA.

WPA also includes user authentication. The projector provides two methods: using an authentication key between a computer and an access point. The projector supports the latter method.




For setting details, follow the instructions from the administrator of your network system.

List of Functions

Mail menu

When this is set, you receive an email notification if a problem or warning occurs in the projector.

☛ "Using the Mail Notification Function to Report Problems" p.74

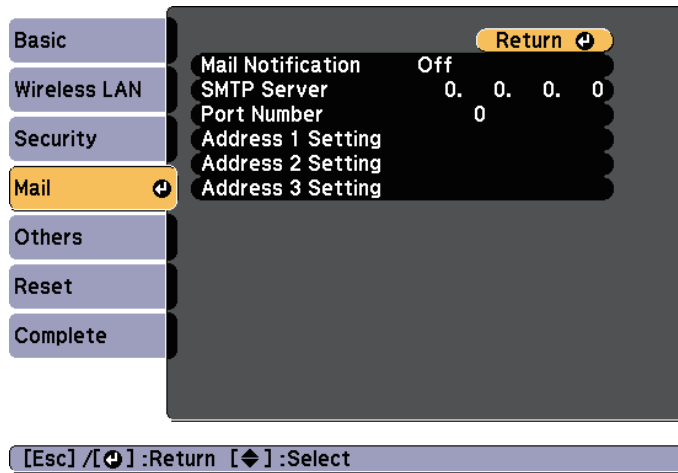


Submenu	
Address 1 Setting/Address 2 Setting/Address 3 Setting	You can input the notification email address. You can enter up to 30 characters for the email address. Allowed characters: < > [\] You can select the notification email address. When the projector detects a problem, an error message is displayed on the projector, and an email is sent notifying that a problem has occurred. You can select multiple items.

Submenu	Function
Mail Notification	Set to On to send an email to the preset addresses when a problem or warning occurs with a projector.
SMTP Server	You can input the <u>IP address</u> for the SMTP server for the projector. You can enter a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)
Port Number	You can input the port number for the SMTP server. The default value is 25. You can input numbers between 1 to 65535.


List of Functions

Others menu

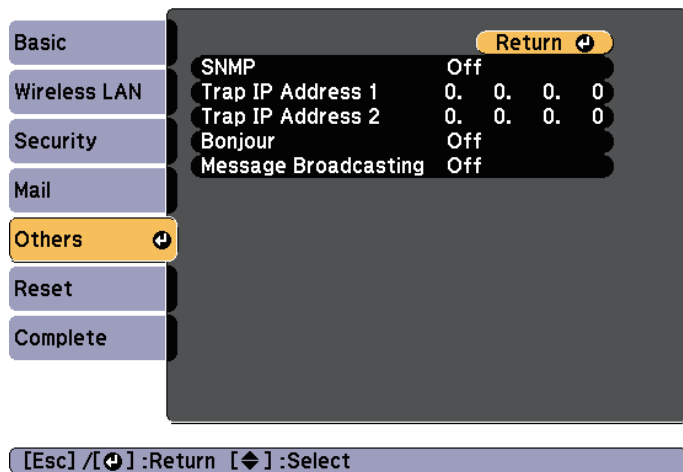

Reset menu

Resets all of the network settings.

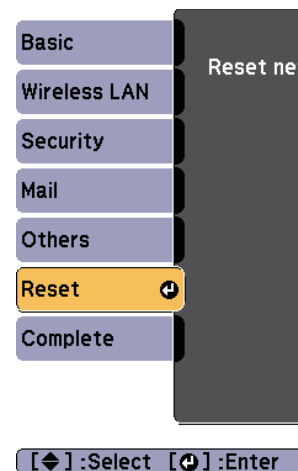


Submenu	Function
SNMP	Set to On to monitor the projector using SNMP. To monitor the projector, you need to install the SNMP manager program on your computer. SNMP should be managed by a network administrator. The default value is Off .
Trap IP Address 1/Trap IP Address 2	You can register up to two IP addresses for the SNMP trap notification destination. You can enter a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)
Bonjour	Set this to On when connecting to the network using Bonjour. See Apple's Web site for more information on the Bonjour service. http://www.apple.com/
Message Broadcasting	You can switch the EPSON Message Broadcasting function to enable or disable.

Submenu	
Reset network settings.	To reset all of the

List of Functions

ECO Menu

When you make ECO menu settings, the projector performs functions to save power. When power saving settings have been enabled, a leaf icon is displayed next to each submenu.

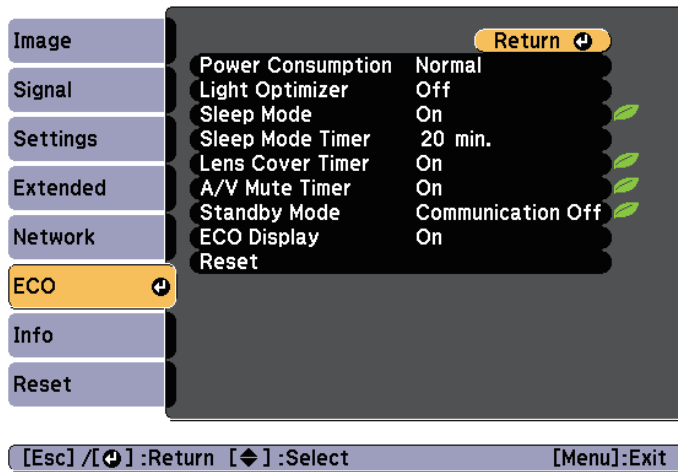

Submenu	Function
Power Consumption	You can set the lamp brightness to one of two settings. Select ECO if the images being projected are too bright, such as when projecting images in a dark room or onto a small screen. When ECO is selected, power consumption during projection decreases, and fan rotation noise is reduced. When using at high altitude or in locations subject to high temperatures, you may not be able to change settings.
Light Optimizer	(This item can only be set when Power Consumption is set to Normal .) When set to On , the lamp brightness is adjusted according to the image being projected. This helps to reduce the amount of electricity being used by lowering the lamp's brightness according to the scene being projected. The setting is stored for each Color Mode.


Submenu	
Sleep Mode	When set to On , the projector automatically turns off the image signal by the specified length of time (approximately 10 minutes) after the projector is turned off. When an image signal is input, the projector returns to normal operation.
Sleep Mode Timer	When Sleep Mode is set to On , the projector automatically turns off after the specified number of minutes.
Lens Cover Timer	When set to On , the projector automatically turns off the power after the specified number of minutes after the lens cover is closed for approximately 10 minutes. When power turns off, the projector returns to normal operation.
A/V Mute Timer	When set to On , the projector automatically turns off the power after the specified number of minutes after A/V Mute is selected. When the lamp dims or the A/V Mute is disabled, the projector returns to normal operation.
Standby Mode	When set to Communication Off , the projector automatically turns off the power after the specified number of minutes after the projector is turned off. When the projector is turned on, the projector returns to normal operation. ☛ "Monitoring Mode"
ECO Display	When set to On , the projector automatically turns off the power after the specified number of minutes after the projector is turned off. When the projector is turned on, the projector returns to normal operation. ☛ "Reset Menu"
Reset	You can reset a submenu to its default settings. When the projector is turned on, the projector returns to normal operation. ☛ "Reset Menu"

List of Functions

Info Menu (Display Only)

Lets you check the status of the image signals being projected and the status of the projector. Items that can be displayed vary depending on the source currently being projected. Depending on the model used, some input sources are not supported.

☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" p.32

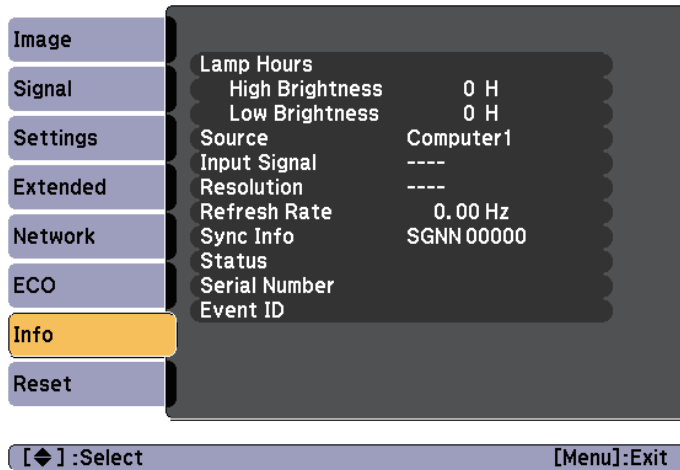


Submenu	Function
Projector Info	<p>You can display the following information.</p> <ul style="list-style-type: none"> • Lamp Hours* • Source • Input Signal • Resolution • Video Signal • Refresh Rate • Sync Info • Status • Serial Number • Event ID

Submenu	
Version	Displays the p

* The cumulative use time is disp and above is displayed as "10H

Reset Menu

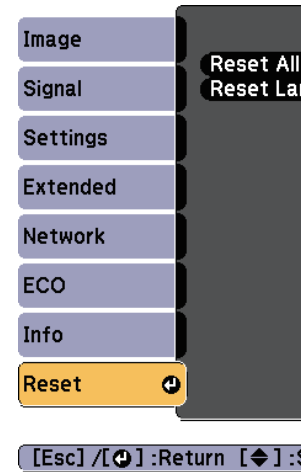

Submenu	
Reset All	<p>You can reset al settings.</p> <p>The following i</p> <p>User's Logo, La</p> <p>and all items on</p>
Reset Lamp Hours	<p>Clears the cumu</p> <p>replace the lam</p>

Performing Batch Setup for Multiple Projectors

Once the Configuration menu content has been set for one projector, you can use it to perform batch setup for multiple projectors (batch setup function). The batch setup function is only for projectors with the same model number.

Use one of the following methods.

- Setup using a USB flash drive.
- Setup by connecting the computer and projector with a USB cable.

This manual explains the USB flash drive and the USB cable methods.



- The following content is not reflected by the batch setup function.
 - Settings in the Network menu (except for the Mail menu and the Others menu)
 - Lamp Hours and status from the Info menu
- Perform batch setup before adjusting the projected image. Adjustment values for the projected image, such as H/V-Keystone correction, are reflected by the batch setup function. If batch setup is performed after adjusting the projected image, the adjustments you made may change.
- By using the batch setup function, the registered User's Logo is set for the other projectors. Do not register confidential information and so on as the User's Logo.



Caution

Performing batch setup is the customers responsibility. If batch setup fails due to a power failure, communication error, and so on, the customer is responsible for any repair costs incurred.

Setup Using a USB Flash Drive

This section explains how to perform batch setup using a USB flash drive.



- Use a FAT format USB flash drive.
- The batch setup function does not incorporate security functions for USB flash drives.
- The batch setup function does not incorporate security functions for USB hard disks.


Saving settings to the USB flash drive

1

Disconnect the power cord from the projector's indicator lamp.

2

Connect the USB flash drive to the projector's USB port.

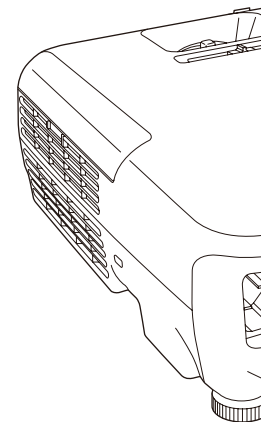


Performing Batch Setup for Multiple Projectors



- Connect the USB flash drive directly to the projector. If the USB flash drive is connected to the projector through a USB hub, the settings may not be saved correctly.
- Connect an empty USB flash drive. If the USB flash drive contains data other than the batch setup file, the settings may not be saved correctly.
- If you have saved a batch setup file from another projector to the USB flash drive, delete the file or change the file name. The batch setup function cannot overwrite a batch setup file.
- The file name for the batch setup file is PJCONFDATA.bin. If you need to change the file name, add text after PJCONFDATA. If you change the PJCONFDATA section of the file name, the projector may not be able to recognize the file correctly.
- You can only use single-byte characters for the file name.

3

While holding down the [Esc] button on the remote control or the control panel, connect the power cord to the projector.

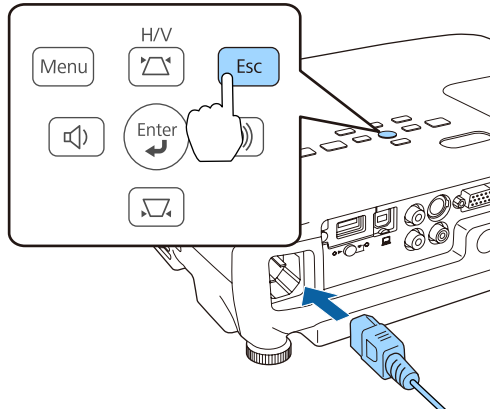

When the projector's indicator button.

Status

Power: Blue - On / Status: Blue - On

When all of the indicators written.




Caution

- Do not disconnect the power cord while the projector is being written. If the power cord is disconnected, the projector will not start correctly.
- Do not disconnect the USB flash drive while the batch setup file is being written. If the USB flash drive is disconnected, the projector may not start correctly.

Performing Batch Setup for Multiple Projectors

When writing completes normally, the projector enters standby status.

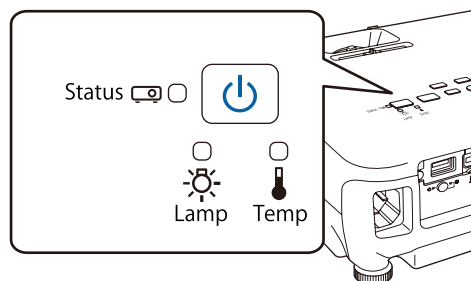


Power: Blue - On

When the projector is in standby status, remove the USB flash drive.

Reflecting saved settings to other projectors


- 1** Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off.
- 2** Connect the USB flash drive containing the saved batch setup file to the projector's USB-A port.

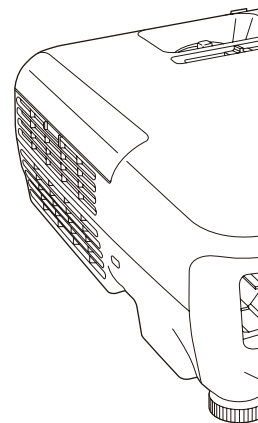


- When the USB flash drive contains batch setup files, the file name must include the projector's model number. If the projector is not the same model number, the batch setup will not be performed correctly.
- When there are multiple projectors, use a different USB flash drive for each projector.
- Do not store any other files on the USB flash drive. Only the batch setup file should be stored on the USB flash drive.

Performing Batch Setup for Multiple Projectors

- 3** While holding down the [Menu] button on the remote control or the control panel, connect the power cord to the projector.

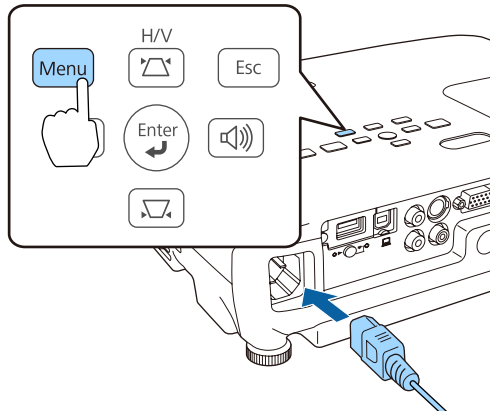

When the projector's indicators turn on as follows, release the [Menu] button.

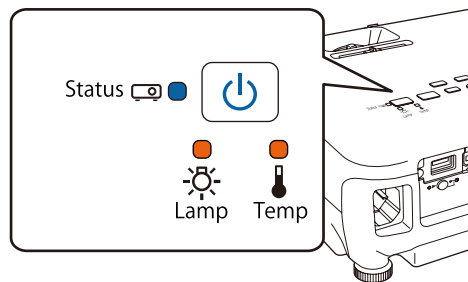

Power: Blue - On / Status: Blue - On / Lamp: Orange - On / Temp: Orange - On

The indicators remain on for about 75 seconds.

When all of the indicators start flashing, the settings are being written.

Caution

- Do not disconnect the power cord while the projector settings are being written. The projector may not start correctly.
- Do not disconnect the USB cable while the projector settings are being written. The projector may not start correctly.

- 4** When writing completes, the projector returns to its normal status.

Status 

Power 

When the projector is in normal drive.

Setup by Connecting the Projector with a USB Cable




The following operating systems are supported:

- Windows Vista or later
- Mac OS X 10.5.3 or later


Performing Batch Setup for Multiple Projectors

Saving settings to a computer


- 1** Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off.
- 2** Connect the computer's USB port to the projector's USB-B port with a USB cable.

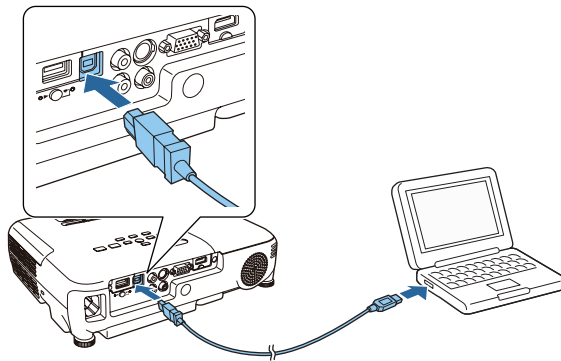

- 3** While holding down the [Esc] button on the remote control or the control panel, connect the power cord to the projector.

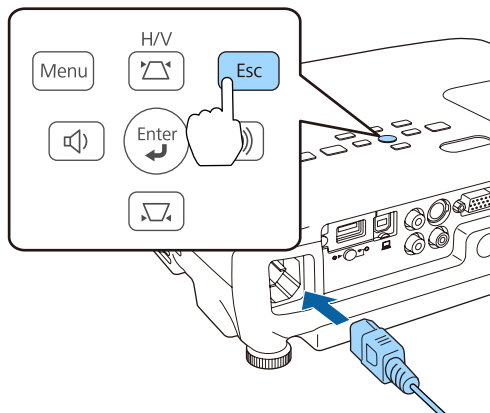

When the projector's indicator button.

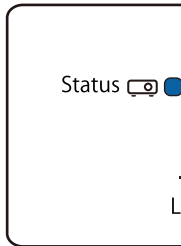

Power: Blue - On / Status: Blue - On

The projector is recognized.

- 4** Open the removable disk (PJCONFDATA.bin) to the



If you need to change after PJCONFDATA.bin of the file name, the file correctly.

- 5** Perform "Remove USB device" and disconnect the USB cable.




When using OS X

The projector enters stand-by mode.


Performing Batch Setup for Multiple Projectors

Reflecting saved settings to other projectors


- 1** Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off.
- 2** Connect the computer's USB port to the projector's USB-B port with a USB cable.

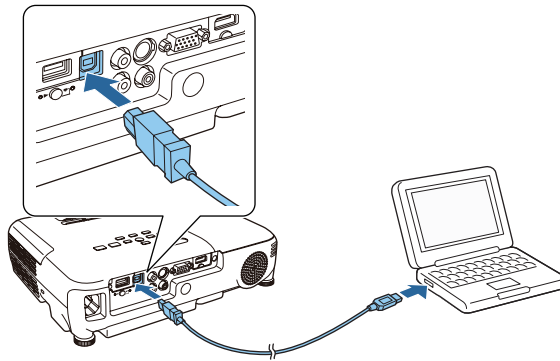

- 3** While holding down the [Menu] button on the remote control or the control panel, connect the power cord to the projector.

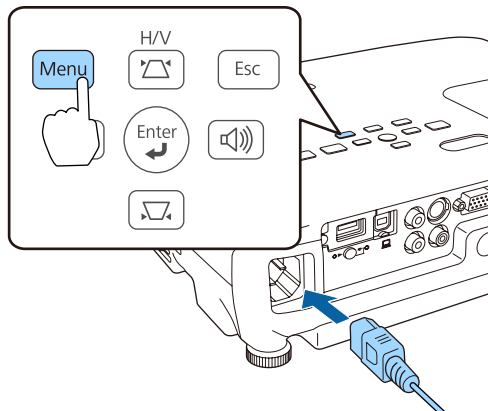

When the projector's indicators are off, press the [Menu] button.

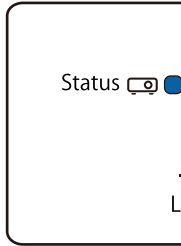

Power: Blue - On / Status: Blue - On

The projector is recognized.

Performing Batch Setup for Multiple Projectors

- 4 Copy the batch setup file (PJCONFDATA.bin) that you saved to your computer to the top level folder of the removable disk.



Do not copy any files or folders other than the batch setup file to the removable disk.

- 5 Perform "Remove USB device" on your computer, and then disconnect the USB cable.



When using OS X, perform "Remove EPSON_PJ".

When all of the indicators start flashing, the settings are being written.











Caution

Do not disconnect the power cord from the projector while the settings are being written. If the power cord is disconnected, the projector may not start correctly.

When writing completes normally, the projector enters standby status.

When Setup Fails

The indicators notify you if an error occurs. The following table shows the indicators and their status.

Status of the Indicators	
<p>Status  </p> <p>  Lamp Temp</p> <p>Lamp: Orange - flashing fast Temp: Orange - flashing fast</p>	T fl co U p
<p>Status  </p> <p>  Lamp Temp</p> <p>Power: Blue - flashing fast Status: Blue - flashing fast Lamp: Orange - flashing fast Temp: Orange - flashing fast</p>	W m St fr de p

Troubleshooting


This chapter explains how to identify problems and what to do if a problem is found.

Using the Help


If a problem occurs with the projector, the Help screen is displayed to assist you by pressing the Help button. You can solve problems by answering the questions.

- 1** Press the [Help] button.
The Help screen is displayed.

Using the remote control

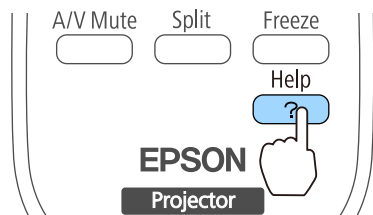

Using the control panel

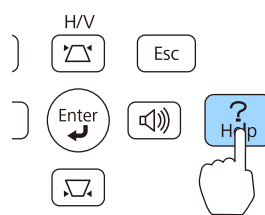


- 2** Select a menu item.

[Help]

The image is small. ↩
The image is projected as
The color tone is unusual.
You cannot see the video
There is no audio or it is t


[◀▶]:Select [↩]:Enter

Using the remote control

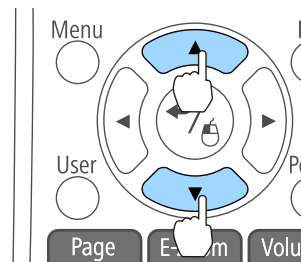

- 3** Confirm the selection.

Using the remote control

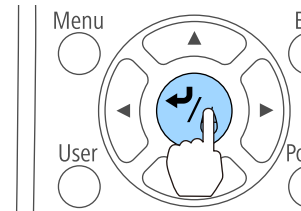

Questions and solutions are
Press the [Help] button to

Using the Help

The image is small.

- ❓ Is zoom set to minimum?
· Use the zoom ring to change the size of the image.
- ❓ Is the projector too close to the screen?
· Move the projector away from the screen.

[Esc] :Return

[Help] :Exit



See the following if the Help function does not provide a solution to the problem.

☞ "Problem Solving" [p.106](#)


Problem Solving

If you are having a problem with the projector, first check the projector's indicators and refer to "Reading the Indicators". See the following if the indicators do not show clearly what the problem might be.

☞ "When the Indicators Provide No Help" [p.110](#)

Reading the Indicators

The projector is provided with the following four indicators. The color and lit status of the indicators shows the

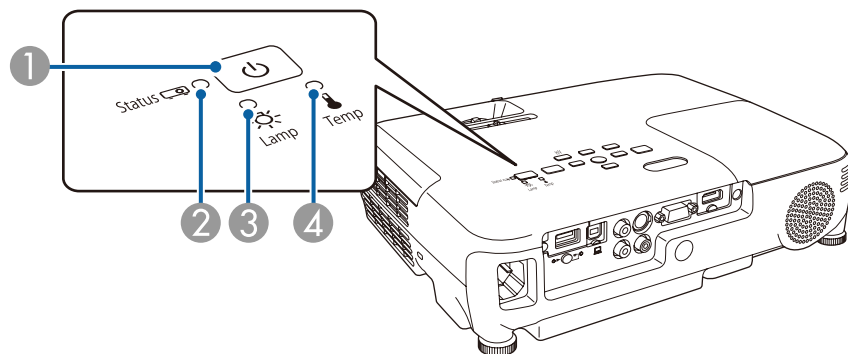




- ① Power indicator
- ② Status indicator
- ③ Lamp indicator
- ④ Temp indicator

Indicates the projector's status.





Indicates the projector's status.

Indicates the projection lamp status.


















Indicates the internal temperature status.

Indicators		Status	Explanation
Power supply	Status		
 Blue - Lit	<input type="checkbox"/> Off	Standby condition	Power is being supplied to the projector. When the [⏻] power button is pressed, the projector starts.
			Network monitoring status
 Blue - Lit	 Blue - Flashing	Warm-up status	This is the status immediately after turning on the projector. The lamp turns on. In this status you cannot turn off the projector.

















Problem Solving

Indicators		Status	Explanation
Power supply	Status		
 Blue - Lit	 Blue - Flashing	Cool down status	This is the status immediately after turning off the projector.
 Blue - Lit	 Blue - Lit	Normal status	The projector is projecting.






Refer to the following table to see what the indicators mean and how to remedy problems that they indicate. If all indicators are off, check that the power cord is connected correctly and that the power is being supplied properly. Sometimes, when the power cord is unplugged, the [⏻] power indicator remains lit for a short period, but this

Indicators				Cause	Remedy or
Power supply	Status	Lamp	Temperature		
 Off	 Blue - Flashing	 Orange - Flashing	 Off	Internal Error	Stop using the projector, remove the power plug from the electrical outlet, and contact your local Epson dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List
 Off	 Blue - Flashing	 Off	 Orange - Flashing	Fan Error Sensor Error	Stop using the projector, remove the power plug from the electrical outlet, and contact your local Epson dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List
 Off	 Blue - Flashing	 Off	 Orange - Lit	High Temp Error (Overheating)	The lamp turns off automatically and projection stops. After 30 minutes the projector switches to standby mode, so you can use it again. <ul style="list-style-type: none"> • Check that the air filter and air exhaust vent are not blocked and are not against a wall. • If the air filter is clogged, clean or replace it.  "Cleaning the Air Filter" p.121, "Replacing the Air Filter" p.121 If the error continues after checking the points above, remove the power plug from the electrical outlet, and contact your local Epson dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List
					When using at an altitude of 1500 m or more, set the altitude in the menu.  "Extended Menu" p.85



Problem Solving

Indicators				Cause	Remedy or
Power supply	Status	Lamp	Temperature		
 Off	 Blue - Flashing	 Orange - Lit	 Off	Lamp Error Lamp Failure	<p>Check the following two points.</p> <ul style="list-style-type: none"> • Take out the lamp and check if it is cracked. ☞ "Replacing the Lamp" p.123 • Clean the air filter. ☞ "Cleaning the Air Filter" p.121 <p>If the lamp is not cracked: Reinstall the lamp and power on the projector. If the error continues: Stop using the projector, remove the power plug from the power outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List. ☞ Epson Projector Contact List</p> <p>If the lamp is cracked: Contact your local dealer or the nearest address provided in the Epson Projector Contact List. (Images cannot be projected.) ☞ Epson Projector Contact List</p> <p>When using at an altitude of 1500 m or more, set the projector to High Temperature mode. ☞ "Extended Menu" p.85</p>
				Lamp Cover Open	<p>Check that the lamp and the lamp cover are secured properly. The lamp does not turn on if the lamp and the lamp cover are not secured properly. ☞ "Replacing the Lamp" p.123</p>
 Off	 Blue - Flashing	 Orange - Flashing	 Orange - Flashing	Auto Iris Error	<p>Stop using the projector, remove the power plug from the power outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List. ☞ Epson Projector Contact List</p>
 Off	 Blue - Flashing	 Orange - Lit	 Orange - Lit	Power Err.	
 Blue - Flashing	 State dependant indication	 State dependant indication	 Orange - Flashing	High Temp Warning	<p>(This is not an abnormality. However, if the temperature continues to rise, the projector will stop automatically.)</p> <ul style="list-style-type: none"> • Check that the air filter and air exhaust vent are not blocked or placed against a wall. • If the air filter is clogged, clean or replace it. ☞ "Cleaning the Air Filter" p.121, "Replacing the Air Filter" p.123

Problem Solving

Indicators				Cause	Remedy or
Power supply	Status	Lamp	Temperature		
 Blue - Flashing	 State dependant indication	 Orange - Flashing	 State dependant indication	Replace Lamp	Replace it with a new lamp.  "Replacing the Lamp" p.123 If you continue to use the lamp after the replacement may explode increases. Replace it with a new lamp













- See the following if the projector is not operating properly, even though the indicators are all showing normal.
 "When the Indicators Provide No Help" [p.110](#)
- If the indicators are in a state not shown in this table, stop using the projector, remove the power plug from the electrical outlet, and contact the nearest address provided in the Epson Projector Contact List.
 [Epson Projector Contact List](#)

When the Indicators Provide No Help

If any of the following problems occur and the indicators do not offer a solution, refer to the pages given for each problem.

Problems Relating to Images

<ul style="list-style-type: none">• No images appear Projection does not start, the projection area is completely black, or the projection area is completely blue.	 p.111
<ul style="list-style-type: none">• Moving images are not displayed Moving images being projected from a computer appear black and nothing is projected, or no moving images are played back on the computer.	 p.112
<ul style="list-style-type: none">• Projection stops automatically	 p.112
<ul style="list-style-type: none">• The message "Not supported" is displayed	 p.112
<ul style="list-style-type: none">• The message "No Signal" is displayed	 p.113
<ul style="list-style-type: none">• Images are fuzzy, out of focus, or distorted	 p.113
<ul style="list-style-type: none">• Interference or distortion appear in images	 p.114
<ul style="list-style-type: none">• The image is truncated (large) or small, the aspect ratio is not suitable, or the image has been reversed Only part of the image is displayed, the height and width ratios of the image are not correct, or the image may appear reversed from top to bottom or left to right.	 p.115
<ul style="list-style-type: none">• Image colors are not right The whole image appears purplish or greenish, images are black & white, or colors appear dull.	 p.115
<ul style="list-style-type: none">• Images appear dark	 p.116

Problems when projection starts

<ul style="list-style-type: none">• The projector does not turn on	 p.117
---	---

Other Problems

- **No sound can be heard or the sound is distorted**
- **There is noise in the audio (only with video)**
- **The remote control does not work**
- **I want to change the language for the menu**
- **Mail is not received even if a problem occurs**
- **Cannot change settings using a Web browser**

Problems Relating to Images

No images appear

Check	Remedy
Did you press the [⏻] power button?	Press the [⏻] power button to turn the power on.
Are the indicators switched off?	The power cord is not connected correctly or power is not being supplied. Connect the projector's power cord correctly. ☛ "From Installation to Projection" p.31 Check that your electrical outlet or power source is functioning correctly.
Is A/V Mute active?	Press the [A/V Mute] button on the remote control to cancel A/V Mute. ☛ "Hiding the Image and Sound Temporarily (A/V Mute)" p.57
Is the A/V mute slide closed?	No images are displayed if the lens cover is closed even a little. Open the lens cover. ☛ "Front/Top" p.11
Are the Configuration menu settings correct?	Reset all of the settings. ☛ Reset - Reset All p.95 When using USB Display, set USB Type B to USB Display . ☛ Extended - USB Type B p.85
Is the image to be projected completely black? (Only when projecting computer images)	Some input images, such as screen savers, may be completely black.
Is the image signal format setting correct? (Only when projecting images from a video source)	Change the setting according to the signal for the connected equipment. ☛ Signal - Video Signal p.82
Is the USB cable connected correctly? (Only when projecting USB Display)	Check that the USB cable is connected correctly. Reconnect it if it is not connected.
Is Windows Media Center displayed in full screen? (Only when projecting using USB Display or network connection)	When Windows Media Center is displayed at full screen, you cannot project images. Reduce the screen size.
Is an application using the Windows DirectX function displayed? (Only when projecting using USB Display or network connection)	Applications using the Windows DirectX function may not display images.

Problem Solving

Moving images are not displayed

Check	Remedy
Is the computer's image signal being output to the LCD and the monitor? (Only when projecting images from a laptop computer or a computer with a built-in LCD screen)	Change the image signal from the computer to external output only. Check the computer's manufacturer.
Are the contents of the moving image you are trying to project copyright protected?	The projector may not be able to project copyright protected moving images. For more details, see the user's guide supplied with the player.

Projection stops automatically

Check	Remedy
Are Sleep Mode , Lens Cover Timer , or A/V Mute Timer set to On ?	If any of these are set to On , the power turns off automatically in the following cases: <ul style="list-style-type: none">• When Sleep Mode is set to On: If no operations are performed for a certain period of time with no image being input.• When Lens Cover Timer is set to On: If approximately 30 minutes have passed since the lens cover was closed.• When A/V Mute Timer is set to On: If approximately 30 minutes have passed since the projector was last used. To prevent the projector from switching off automatically, make sure the projector is in the ECO Menu p.94 .
Is the computer in power-saving mode?	If the computer is in power-saving mode and no operations are performed, the image will disappear. Perform an operation on the computer to display the image.

The message "Not supported" is displayed

Check	Remedy
Is the image signal format setting correct? (Only when projecting images from a video source)	Change the setting according to the signal for the connected equipment. ☛ Signal - Video Signal p.82
Do the image signal resolution and the refresh rate correspond to the mode? (Only when projecting computer images)	Refer to the computer's documentation for how to change the image signal format on the computer. ☛ "Supported Monitor Displays" p.132

Problem Solving

The message "No Signal" is displayed

Check	Remedy
Are the cables connected correctly?	Check that all the cables required for projection are securely connected. ☛ "From Installation to Projection" p.31
Is the correct port selected?	Change the image by pressing the [Source Search] button on the remote control. ☛ "Automatically Detect Input Signals and Change the Projected Image" p.31
Is the power for the computer or video source turned on?	Turn the power on for the equipment.
Are the image signals being output to the projector? (Only when projecting images from a laptop computer or a computer with a built-in LCD screen)	If the image signals are only being output to the computer's LCD monitor, change the output to an external destination as well as the computer's own monitor. If the image signals are output externally, they no longer appear on the LCD monitor. If the connection is made while the power of the projector or computer is off, the computer's image signal may not be output to the projector. A key combination that changes the computer's image signal to external output may not work. Turn the projector off and then back on again. ☛ "From Installation to Projection" p.31 ☛ Computer's documentation
Is the computer in power-saving mode?	If the computer is in power-saving mode and no operations are performed for a certain period of time, the image may disappear. Perform an operation on the computer to display the image.

Images are fuzzy, out of focus, or distorted

Check	Remedy
Is Auto V-Keystone set to Off ?	Setting it to On enables Auto V-Keystone. ☛ Settings - Keystone - H/V-Keystone - Auto V-Keystone p.84 If you are using the projector with this setting off, manually adjust the image. ☛ "Correcting manually" p.38
Is the focus adjusted correctly?	Turn the focus ring to adjust the focus. ☛ "Correcting the Focus" p.42
Is the projector at the correct distance?	Is it projecting outside of the recommended projection distance range? Setup within the recommended range. ☛ "Screen Size and Projection Distance" p.130

Problem Solving

Check	Remedy
Is the Keystone adjustment value too large?	Lower the projection angle to reduce the amount of Keystone correction. ☛ "Adjusting the Image Position" p.41
Has condensation formed on the lens?	If the projector is suddenly taken from a cold environment to a warm one, changes occur, condensation may form on the surface of the lens, and the projector up in the room about one hour before it is used. If condensation has formed, wait for the condensation to disappear.

Interference or distortion appear in images

Check	Remedy
Is the image signal format setting correct? (Only when projecting images from a video source)	Change the setting according to the signal for the connected equipment. ☛ Signal - Video Signal p.82
Are the cables connected correctly?	Check that all the cables required for projection are securely connected. ☛ "Connecting Equipment" p.23
Is an extension cable being used?	If an extension cable is used, electrical interference may affect the signal. check if the cables you are using may be causing the problem.
Is the correct resolution selected? (Only when projecting computer images)	Set the computer so that the signals being output are compatible with the projector. ☛ "Supported Monitor Displays" p.132 ☛ Computer's documentation
Are the Sync and Tracking settings adjusted correctly? (Only when projecting computer images)	Press the [Auto] button on the remote control or the [↶] button on the projector. If the images are not adjusted correctly even after performing automatic adjustment from the Configuration menu. ☛ Signal - Tracking, Sync. p.82
Is Transfer layered window selected? (Only when projecting USB Display)	Click All Programs - EPSON Projector - Epson USB Display - Epson Projector - Transfer layered window check box.
The mouse cursor flickers (only when projecting USB Display)	Is Make the movement of the mouse pointer smooth. selected? Click All Programs - EPSON Projector - Epson USB Display - Epson Projector - Make the movement of the mouse pointer smooth. (This is not available for Windows Vista/7, Windows Aero is disabled when this is selected)

Problem Solving


The image is truncated (large) or small, the aspect is not suitable, or the image has been reversed

Check	Remedy
Is a wide panel computer image being projected? (Only when projecting computer images)	Change the setting according to the signal for the connected equipment. ☛ Signal - Resolution p.82
Is the image still being enlarged by E-Zoom?	Press the [Esc] button on the remote control to cancel E-Zoom. ☛ "Enlarging Part of the Image (E-Zoom)" p.59
Is the image position adjusted correctly?	Press the [Auto] button on the remote control or the [↶] button on the projector. You can only adjust the display position from the Configuration menu. ☛ Signal - Position p.82
Is the computer set for dual display? (Only when projecting computer images)	If dual display is activated in the Display Properties of the computer's Control Panel, the entire image on the computer screen is projected. To display the entire image on the projector screen, deactivate dual display. ☛ Computer video driver documentation
Is the correct resolution selected? (Only when projecting computer images)	Set the computer so that the signals being output are compatible with the projector. ☛ "Supported Monitor Displays" p.132 ☛ Computer's documentation
Is the projection mode correct?	Depending on how the projector is installed, set the projection mode from the Configuration menu to Front , Rear , Rear/Ceiling , or Front/Ceiling . ☛ Extended - Projection p.85 ☛ "Installation Methods" p.21


Image colors are not right

Check	Remedy
Do the input signal settings match the signals from the connected device?	Change the following settings according to the signal for the connected device. <ul style="list-style-type: none"> • When the image is from a device connected to the Computer port ☛ Signal - Input Signal p.82 • When the image is from a device connected to the Video or S-Video port ☛ Signal - Video Signal p.82
Is the image brightness adjusted correctly?	Adjust the Brightness setting from the Configuration menu. ☛ Image - Brightness p.82

Problem Solving

Check	Remedy
Are the cables connected correctly?	Check that all the cables required for projection are securely connected. Check that no cables are disconnected and that there are no poor connections. ☛ "Connecting Equipment" p.23
Is the <u>contrast</u>  adjusted correctly?	Adjust the Contrast setting from the Configuration menu. ☛ Image - Contrast p.82
Is the color adjustment set correctly?	Adjust the Color Adjustment setting from the Configuration menu. ☛ Image - Color Adjustment p.82
Are the color saturation and tint adjusted correctly? (Only when projecting images from a video source)	Adjust the Color Saturation and Tint settings from the Configuration menu. ☛ Image - Color Saturation, Tint p.82

Images appear dark

Check	Remedy
Is the image brightness set correctly?	Adjust the Brightness and Power Consumption settings from the Configuration menu. ☛ Image - Brightness p.82 ☛ ECO - Power Consumption p.94
Is the <u>contrast</u>  adjusted correctly?	Adjust the Contrast setting from the Configuration menu. ☛ Image - Contrast p.82
Is it time to replace the lamp?	When the lamp is nearly ready for replacement, the images become darker. When this happens, replace the lamp with a new lamp. ☛ "Replacing the Lamp" p.123
Are you using the projector at a high altitude or in a location subject to high temperatures?	The screen may become dark when using at high altitude or in a location with high temperatures. If you cannot make Power Consumption settings at this time, you can continue to use the projector.
Is it projecting outside of the recommended projection distance range?	The image becomes darker if the projection distance is too large. Set up the projector within the recommended projection distance. ☛ "Screen Size and Projection Distance" p.130

Problem Solving

Problems when Projection Starts

The projector does not turn on

Check	Remedy
Did you press the [⏻] power button?	Press the [⏻] power button to turn the power on.
Are the indicators switched off?	The power cord is not connected correctly or power is not being fully supplied. Disconnect and then reconnect the power cord. ☛ "From Installation to Projection" p.31 Check that your electrical outlet or power source is functioning correctly.
Do the indicators turn on and off when the power cord is touched?	There is probably a poor contact in the power cord, or the power cord is not connected correctly. If this does not solve the problem, stop using the projector, disconnect the power cord, and contact your local dealer or the nearest address provided in the Epson Projector Contact List. ☛ Epson Projector Contact List
Is the Control Panel Lock set to Full Lock ?	Press the [⏻] power button on the remote control. If you do not want to turn the projector Off. ☛ Settings - Control Panel Lock p.84
Is remote control operation restricted?	Check the Remote Receiver from the Configuration menu. ☛ Settings - Remote Receiver p.84

Other Problems

No sound can be heard or the sound is faint

Check	Remedy
Check that the audio/video cable is securely attached to both the projector and audio source.	Disconnect the cable from the Audio port, and then reconnect the cable.
Is the volume for the projector or the connected equipment set to the minimum?	Adjust the volume so that sound can be heard. ☛ Settings - Volume p.84 ☛ "Adjusting the Volume" p.42

Problem Solving

Check	Remedy
Is A/V Mute active?	Press the [A/V Mute] button on the remote control to cancel A/V Mute. ☛ "Hiding the Image and Sound Temporarily (A/V Mute)" p.57
Is the audio cable's specification "No resistance"?	When using a commercially available audio cable, make sure it is labeled "No resistance".
Is it connected with an HDMI cable?	If no audio is output when connecting via an HDMI cable, set the connection mode to "HDMI".
Is Output audio from the projector selected? (Only when projecting USB Display)	Click All Programs - EPSON Projector - Epson USB Display - Epson USB Display - Output audio from the projector.

There is noise in the audio (only when projecting USB display)

Check	Remedy
Is the volume for the computer set to the minimum while the projector is set to the maximum?	If the volume for the computer is set to the minimum while the projector is set to the maximum, turn up the computer's volume and turn down the projector's volume.

The remote control does not work

Check	Remedy
Is the remote control light-emitting area pointing towards the remote receiver on the projector during operation?	Point the remote control towards the remote receiver. ☛ "Remote control operating range" p.19
Is the remote control too far from the projector?	The operating range for the remote control is about six meters. ☛ "Remote control operating range" p.19
Is direct sunlight or strong light from fluorescent lamps shining onto the remote receiver?	Set the projector up in a location where strong light does not shine onto the remote receiver. ☛ Settings - Remote Receiver p.84
Is the correct setting for the Remote Receiver selected?	Check the Remote Receiver from the Configuration menu. ☛ Settings - Remote Receiver p.84
Are the batteries dead or have the batteries been inserted correctly?	Make sure the batteries are inserted correctly or replace the batteries with new ones. ☛ "Replacing the remote control batteries" p.18

Problem Solving

I want to change the language for messages and menus

Check	Remedy
Change the Language setting.	Adjust the Language setting from the Configuration menu. ☛ Extended - Language p.85

Mail is not received even if a problem occurs in the projector

Check	Remedy
Is Standby Mode set to Communication On ?	To use the Mail Notification function when the projector is in standby, set the Configuration menu. ☛ ECO - Standby Mode p.94
Did a fatal abnormality occur and the projector come to a sudden stop?	If the abnormal state continues, contact your local dealer or the nearest Epson Service Center. ☛ Epson Projector Contact List
Is power being supplied to the projector?	Check that your electrical outlet or power source is functioning correctly.
Is the Mail Notification function set correctly in the Configuration menu?	An error notification email is sent according to the Mail settings in the Configuration menu. ☛ "Mail menu" p.92

Cannot change settings using a Web browser

Check	Remedy
Are the user ID and password correct?	Enter "EPSONWEB" as the user ID. This cannot be changed. Enter "admin" as the password. Enter the characters set for the Web Control Password in the Configuration menu.

Maintenance

This chapter provides information on maintenance procedures to ensure the best level of performance from the p

Cleaning

You should clean the projector if it becomes dirty or if the quality of projected images starts to deteriorate.



Caution

Turn off the projector's power before cleaning. Otherwise, it could cause an electric shock.

Cleaning the Projector's Surface

Clean the projector's surface by wiping it gently with a soft cloth.

If the projector is particularly dirty, moisten the cloth with water containing a small amount of neutral detergent, and then firmly wring the cloth dry before using it to wipe the projector's surface.

Attention

Do not use volatile substances such as wax, alcohol, or thinner to clean the projector's surface. The quality of the case may change or become discolored.

Cleaning the Lens

Use a commercially available cloth for cleaning glasses to gently wipe the lens.



Warning

Do not use sprays that contain flammable gas to remove dust and lint from the lens. The projector may catch fire due to the high internal temperature of the lamp.

Attention

Do not rub the lens with harsh materials. The lens can easily become damaged.


Cleaning the Air Filter

Clean the air filter and the air intake fan. If the air filter is dirty, the projector will display a message.

"The projector is overheating. Maintenance is required." The projector will stop projecting and clean or replace the air filter.

Attention

- If dust collects on the air filter, the projector will stop projecting and the projector to rise, and this can lead to a decrease in the optical engine's service life. A message is displayed.
- Do not rinse the air filter in water.

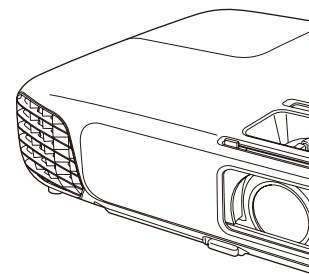

Cleaning



- If a message is frequently displayed, even after cleaning, it is time to replace the air filter. Replace it with a new air filter.
 - ☛ "Replacing the Air Filter" [p.126](#)
- It is recommended that you clean these parts at least once every three months. Clean them more often than this if using the projector in a particularly dusty environment.

Replacing Consumables


This section explains how to replace the lamp and the air filter.

Replacing the Lamp

Lamp replacement period


It is time to replace the lamp when:

- The following message is displayed.
"Time to replace the lamp. Please contact your Epson projector reseller or visit www.epson.com to purchase."

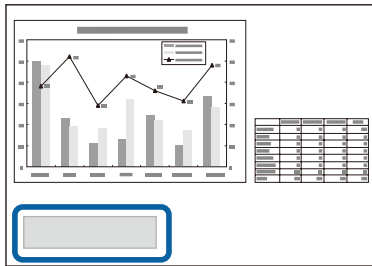

The message is displayed for 30 seconds.

- The power indicator is flashing blue, and the lamp indicator is flashing orange.

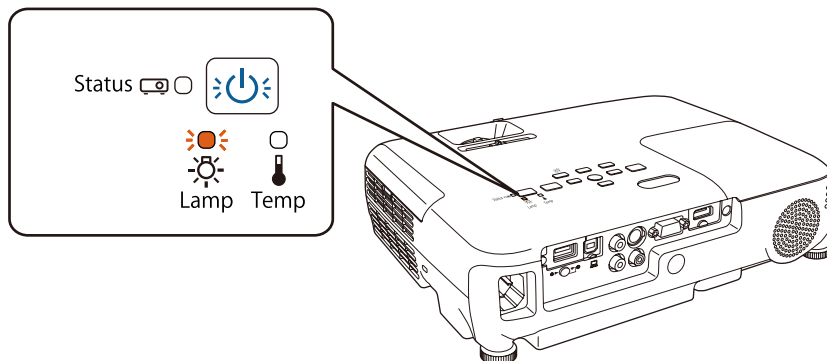

- The projected image gets dark.

Attention

- The lamp replacement message appears during certain periods in order to maintain the quality of the projected images.
When **Power Consumption** is high, the lamp life is shorter.
When **Power Consumption** is low, the lamp life is longer.
☛ **ECO - Power Consumption**
- If you continue to use the lamp after the replacement message appears, there is a possibility that the lamp may explode. If the replacement message appears, replace the lamp immediately, even if it is still working.
- Do not repeatedly turn off the projector power and turn it on and off frequently many times.
- Depending on the characteristics of the lamp, the lamp may become darker or the projected image may become blurry. If the replacement message appears, you should always replace the lamp as needed.
- We recommend the use of genuine Epson lamps. The use of non-genuine lamps may affect projector performance and may void the Epson's warranty.

How to replace the lamp

The lamp can be replaced even if the projector is on the ceiling.

Replacing Consumables

Warning


- When replacing the lamp because it has stopped illuminating, there is a possibility that the lamp may be broken. If replacing the lamp of a projector which has been installed on the ceiling, you should always assume that the lamp is cracked, and you should stand to the side of the lamp cover, not underneath it. Remove the lamp cover gently. Be careful when removing the lamp cover as shards of glass may fall out and could cause an injury. If any shards of glass get into your eyes or mouth, contact your local physician immediately.
- Never disassemble or remodel the lamp. If a modified or disassembled lamp is installed in the projector and used, it could cause a fire, electric shock, or an accident.

Caution


Wait until the lamp has cooled down sufficiently before removing the lamp cover. If the lamp is still hot, burns or other injuries may result. It takes about one hour after the power has been turned off for the lamp to be cool enough.

- 1** After you turn off the projector's power and the confirmation buzzer beeps twice, disconnect the power cord.
- 2** Wait until the lamp has sufficiently cooled down, and then remove the lamp cover at the top of the projector.
Loosen the Lamp cover fixing screw with the screwdriver supplied with the new lamp unit or a cross-head screwdriver. Then slide the lamp cover straight forward and lift it to remove.

- 3** Loosen the two lamp fix

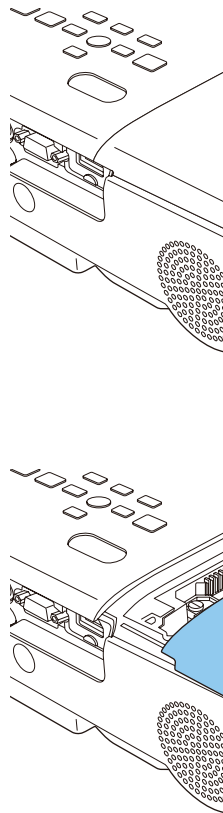


Replacing Consumables

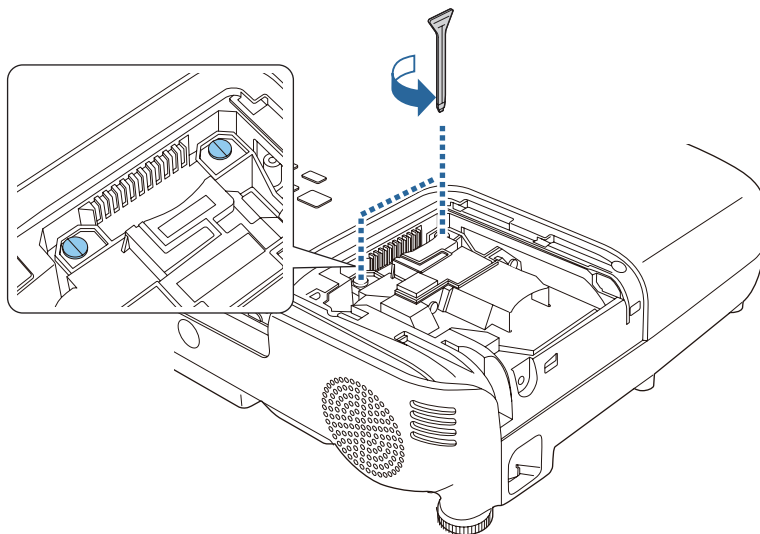

4 Grip the raised section of the old lamp and remove it.



If the Lamp is cracked, replace it with a new lamp, or contact your local dealer for further advice.

☛ [Epson Projector Contact List](#)

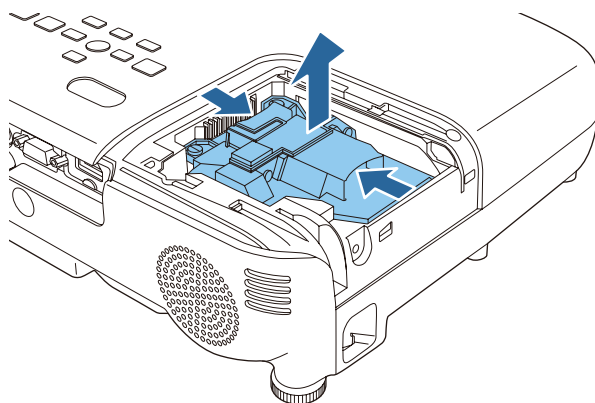


5 Install the new lamp.

Insert the new Lamp along the guide rails until it fits in place, push down on the lamp housing, and tighten the two screws.

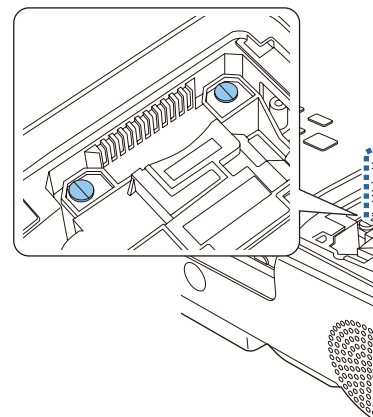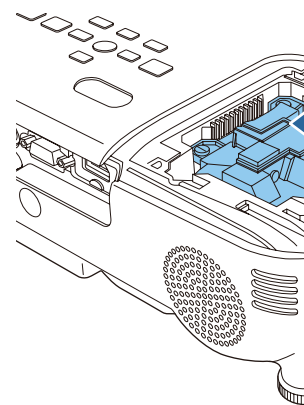

Replacing Consumables

- 6** Replace the lamp cover.

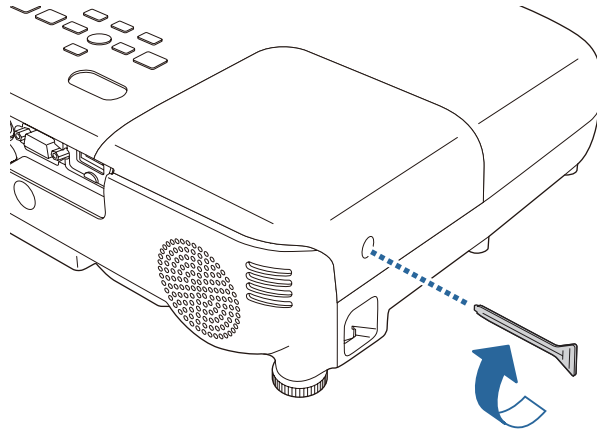

Attention

- Make sure you install the lamp securely. If the lamp cover is removed, the lamps turn off automatically as a safety precaution. If the lamp or the lamp cover is not installed correctly, the lamp will not turn on.
- This product includes a lamp component that contains mercury (Hg). Please consult your local regulations regarding disposal or recycling. Do not dispose of it with normal waste.

Resetting the lamp hours

The projector records how long the lamp is turned on and a message and indicator notify you when it is time to replace the lamp. After replacing the lamp, make sure you reset the Lamp Hours from the Reset menu.

☛ **Reset - Reset Lamp Hours** p.95



Only reset the **Lamp Hours** after the lamp has been replaced. Otherwise the lamp replacement period is not indicated correctly.

Replacing the Air Filter


Air filter replacement period

If the message is displayed frequently after the air filter is cleaned, replace the air filter.

How to replace the air filter


The air filter can be replaced even when the projector is on the ceiling.

- 1** After you turn off the projector, the power indicator buzzer beeps twice, disconnect the power cord.
- 2** Open the air filter cover.

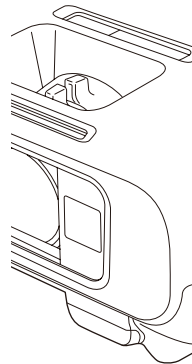


- 3** Remove the air filter. Grip the air filter cover to pull it out.

Replacing Consumables

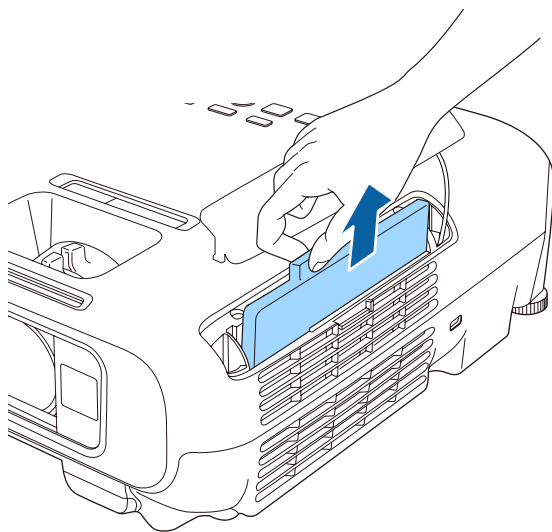

4 Install the new air filter.

Slide the air filter from the outside and press in until it firmly clicks into place.

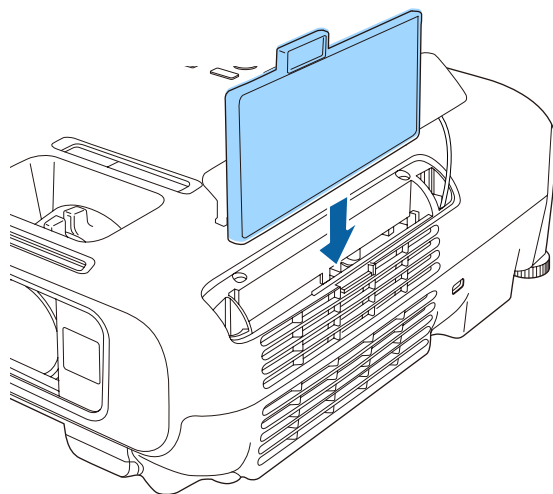

5 Close the air filter cover.



Dispose of used air filter according to local regulations.
Filter frame: ABS
Filter: Polyurethane

Appendix

Optional Accessories and Consumables

The following optional accessories and consumables are available. Please purchase these products as and when needed. The following list of optional accessories and consumables is current as of: May 2014. Details of accessories are subject to change without notice and availability may vary depending on the country of purchase.

Optional Accessories

Interactive Unit ELPIU01

Use when operating the computer screen on the projection surface.

Wireless LAN unit ELPAP07

Use this to project images from a computer via a wireless communication.

Quick Wireless Connection USB Key ELPAP09

Use when you want to quickly establish one-to-one connection between the projector and a computer with Windows installed.

Document Camera ELPDC06/ELPDC11/ELPDC12/ELPDC20

Use when projecting images such as books, OHP documents, or slides.

Soft carrying case ELPKS63

A soft case to carry the projector.

50" portable screen ELPSC32

A compact screen that can be carried easily. ([Aspect Ratio](#)▶▶ 4:3)

60" portable screen ELPSC27

80" portable screen ELPSC28

100" screen ELPSC29

Portable roll-type screens. (aspect ratio 4:3)

70" portable screen ELPSC23

80" portable screen ELPSC24

90" portable screen ELPSC25

Portable roll-type screens. (aspect ratio 16:10)

53" portable screen ELPSC33

64" portable screen ELPSC34

Portable magnetic screens. (aspect ratio 4:3)

Multi-aspect screen ELPSC26

This is a portable multi-aspect screen.

Computer cable ELPKC02

(1.8 m - for mini D-Sub15-pin)

Computer cable ELPKC09

(3 m - for mini D-Sub15-pin)

Computer cable ELPKC10

(20 m - for mini D-Sub15-pin)

Component video cable ELPKC03

(3 m - for mini D-Sub 15-pin)

Use to connect a [component video](#) device.

Ceiling pipe (450 mm)* ELPMB21

Ceiling pipe (700 mm)* ELPMB22

Use when installing the projector.

Ceiling mount* ELPMB23

Use when installing the projector.

* Special expertise is required to install these accessories. Please contact your local dealer or the nearest Epson Service Center for details. Contact List.

 [Epson Projector Contact List](#)

Consumables

Lamp unit ELPLP78



Use as a replacement for used lamps.

Air filter ELP AF32

Use as a replacement for used air filter.

Screen Size and Projection Distance

Projection Distance

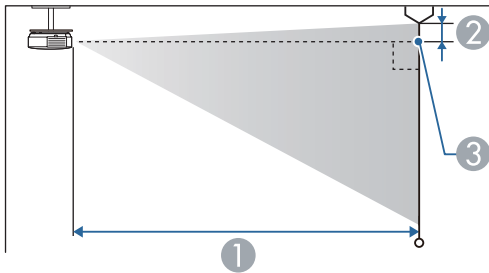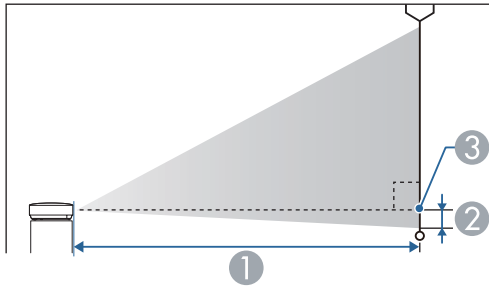

- ① Projection distance
- ② Distance from the center of the receiver's lens to the base of the screen (or to the top of the screen, if suspended from a ceiling)
- ③ Center of lens

Unit: cm

4:3 Screen Size		①	②
		Minimum (Wide) to Maximum (Tele)	
30"	61x46	94 - 113	-4
40"	81x61	126 - 152	-5
50"	100x76	158 - 190	-7

4:3 Screen Size		Min
60"	120x91	
70"	142x107	
80"	160x120	
100"	200x150	
150"	300x230	
200"	410x300	
280"	570x430	

16:9 Screen Size		Min
35"	78x44	
40"	89x50	
50"	110x62	
60"	130x75	
70"	155x87	
80"	180x100	
100"	220x120	
150"	330x190	
200"	440x250	
310"	690x390	

Screen Size and Projection Distance

Unit: cm

16:10 Screen Size		①	②
		Minimum (Wide) to Maximum (Tele)	
35"	76x47	97 - 117	-4
40"	86x54	111 - 134	-5
50"	110x67	139 - 168	-6
60"	130x81	168 - 202	-7
80"	170x110	225 - 270	-10
100"	220x130	281 - 338	-12
150"	320x200	424 - 509	-18
200"	430x270	566 - 680	-24
320"	690x430	907 - 1089	-39

Supported Monitor Displays

Supported Resolutions

Computer signals (analog RGB)

Signal	Refresh Rate (Hz)	Resolution (dots)
VGA	60/72/75/85	640x480
SVGA	56/60/72/75/85	800x600
XGA	60/70/75/85	1024x768
WXGA	60	1280x768
	60	1366x768
	60/75/85	1280x800
WXGA+	60/75/85	1440x900
WXGA++	60	1600x900
SXGA	70/75/85	1152x864
	60/75/85	1280x1024
	60/75/85	1280x960
SXGA+	60/75	1400x1050
WSXGA+*	60	1680x1050
UXGA	60	1600x1200
MAC13"	67	640x480
MAC16"	75	832x624
MAC19"	75	1024x768
	59	1024x768
MAC21"	75	1152x870

* Only compatible when **Wide** is selected as the **Resolution** from the Configuration menu.

Even when signals other than the supported signals are input, the image can be projected if the resolution is supported.

Component video

Signal	Refresh Rate (Hz)
SDTV (480i)	
SDTV (576i)	
SDTV (480p)	
SDTV (576p)	
HDTV (720p)	
HDTV (1080i)	

Composite video

Signal	Refresh Rate (Hz)
TV (NTSC)	
TV (SECAM)	
TV (PAL)	

HDMI Input Signal

Signal	Refresh Rate (Hz)
VGA	
SVGA	
XGA	
WXGA	

Supported Monitor Displays

Signal	Refresh Rate (Hz)	Resolution (dots)
WXGA+	60	1440x900
WXGA++	60	1600x900
SXGA	60	1280x960
	60	1280x1024
SXGA+	60	1400x1050
UXGA	60	1600x1200
WSXGA+	60	1680x1050
SDTV (480i/480p)	60	720x480
SDTV (576i/576p)	50	720x576
HDTV (720p)	50/60	1280x720
HDTV (1080i)	50/60	1920x1080
HDTV (1080p)	24/30/50/60	1920x1080

MHL Input Signal

Signal	Refresh Rate (Hz)	Resolution (dots)
VGA	60	640x480
SDTV (480i/480p)	60	720x480
SDTV (576i/576p)	50	720x576
HDTV (720p)	50/60	1280x720
HDTV (1080i)	50/60	1920x1080
HDTV (1080p)	24/30	1920x1080

Specifications

Projector General Specifications

Product name		EB-W28
Dimensions		297 (W) x 79 (H) x 234 (D) mm
LCD panel size		0.59" Wide
Display method		Polysilicon TFT active matrix
Resolution		1,024,000 WXGA (1280 (W) x 800 (H) dots) x 3
Focus adjustment		Manual
Zoom adjustment		Manually (1-1.2)
Lamp		UHE lamp, 200 W Model No.: ELPLP78
Max. audio output		2 W
Speaker		1
Power supply		100 - 240 V AC±10%, 50/60 Hz 2.9-1.3 A
Power consumption	100 to 120 V area	Operating: 283 W Standby power consumption (Communication On): 2 Standby power consumption (Communication Off): 0
	220 to 240 V area	Operating: 270 W Standby power consumption (Communication On): 3 Standby power consumption (Communication Off): 0
Operating altitude		Altitude 0 to 3,000 m
Operating temperature		+5 to +35°C (No condensation) (Altitude 0 to 2,286) +5 to +30°C (No condensation) (Altitude 2,287 to 3,000)
Storage temperature		-10 to +60°C (No condensation)
Mass		Approx. 2.4 kg

Connectors	Computer port	1	M
	Video port	1	

Specifications

S-Video port	1	
Audio port	1	
HDMI/MHL port	1	HDMI (Au
USB-A port*1	1	U
USB-B port*1, 2	1	U


*1 Supports USB 2.0. However, USB ports are not guaranteed to operate all devices that support USB.

*2 USB 1.1 is not supported.

Specifications

This product is also designed for IT power distribution system with phase-to-phase voltage 230V.

Angle of tilt

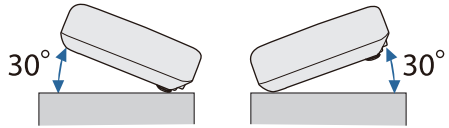

If you use the projector tilted at an angle of more than 30° it could be damaged and cause an accident.

Specifications

DECLARATION of CONFORMITY

According to 47CFR, Part 2 and 15
Class B Personal Computers and Peripherals; and/or
CPU Boards and Power Supplies used with Class B Personal Computers

We: Epson America, Inc.
Located at: 3840 Kilroy Airport Way
MS: 3-13
Long Beach, CA 90806
Tel: 562-981-3840

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR 2.909. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: EPSON
Type of Product: LCD Projector
Model: H654C/H664C


FCC Com
For Un

This equipment has been tested as a Class B digital device, pursuant to the FCC rules, and is designed to provide reasonable protection against radio frequency interference in a residential installation. This equipment may radiate radio frequency energy and, if not properly installed and used in accordance with the instructions, may cause harmful interference to radio and television reception. However, there is no guarantee of interference in any particular installation. If this equipment causes interference to radio and television reception, which can be determined by turning the equipment off and on, the user is advised to take the following steps to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.

The connection of a non-shielded cable to this equipment will invalidate the FCC certification of this device and may cause interference to other equipment by the FCC for this equipment. If the equipment is used and use a shielded equipment in a residential installation, the equipment has more than one interface connected to unused interfaces. The user is advised to use equipment approved by the manufacturer of the equipment.

Appearance

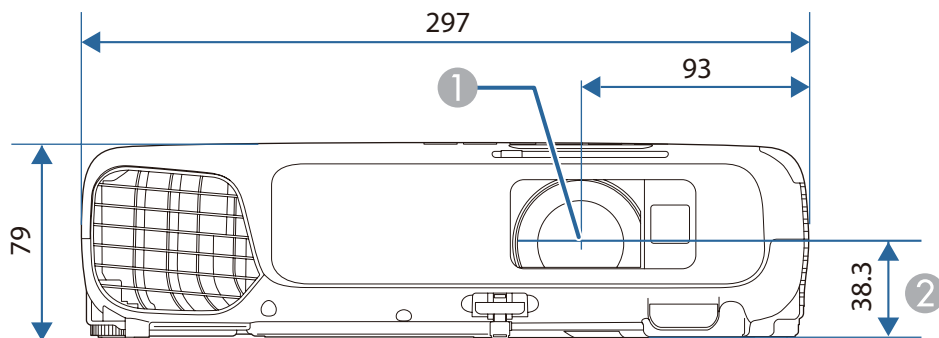

- ① Center of lens
- ② Distance from center of lens to suspension bracket fixing point

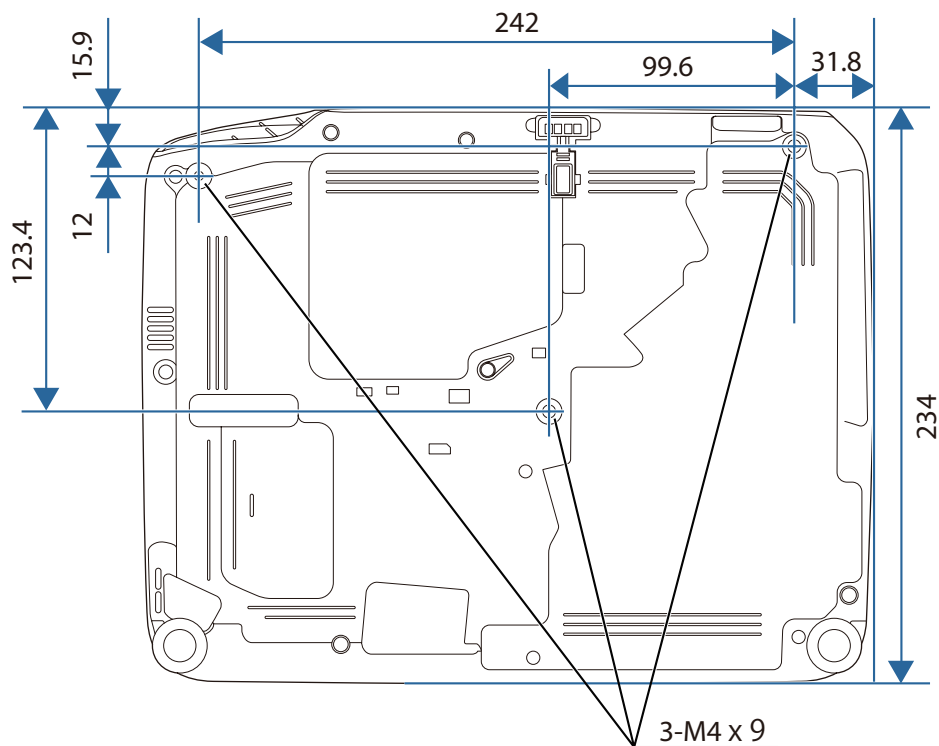


Glossary

This section briefly explains the difficult terms that are not explained in the text of this guide. For details, refer to

Ad hoc mode	A method of wireless LAN connection that communicates with wireless LAN clients without using an access point.
Aspect Ratio	The ratio between an image's length and its height. Screens with a horizontal:vertical ratio of 16:9, such as HDTV and general computer displays have an aspect ratio of 4:3.
Component Video	A method that separates the video signal into a luminance component (Y), and a blue minus luminance component (Pb) and a red minus luminance component (Pr).
Composite video	A method that combines the video signal into a luminance component and a color component for transmission.
Contrast	The relative brightness of the light and dark areas of an image can be increased or decreased to make the image appear sharper or softer. Adjusting this particular property of an image is called contrast adjustment.
DHCP	An abbreviation of Dynamic Host Configuration Protocol, this protocol automatically assigns an IP address to a computer on a network.
Gateway Address	This is a server (router) for communicating across a network (subnet) divided according to subnets.
HDCP	HDCP is an abbreviation for High-bandwidth Digital Content Protection. It is used to prevent illegal copying of digital signals sent over DVI and HDMI ports. Because the HDMI/MHL port on this projector supports HDCP technology. However, the projector may not be able to project images protected with HDCP.
HDTV	An abbreviation for High-Definition Television that refers to high-definition systems which satisfy the following conditions: <ul style="list-style-type: none">• Vertical resolution of 720p or 1080i or greater (p = Progressive, i = Interlace)• Screen aspect ratio of 16:9
Infrastructure mode	A method for wireless LAN connection in which devices communicate through access points.
Interlace	Transmits information needed to create one screen by sending every other line, starting from the top. Images are more likely to flicker because one frame is displayed every other line.
IP Address	A number to identify a computer connected to a network.
MHL	An abbreviation for Mobile High-definition Link, a standard for connection interfaces aimed at mobile devices. Images can be transferred at high quality and at high speeds without compressing the digital signal.
Progressive	Projects information to create one screen at a time, displaying the image for one frame. Even though there is a risk of flicker in images decreases because the volume of information has doubled compared with an interlaced image.
Refresh Rate	The light-emitting element of a display maintains the same luminosity and color for an extremely short period of time, scanned many times per second to refresh the light-emitting element. The number of refresh operations per second is expressed in hertz (Hz).
SDTV	An abbreviation for Standard Definition Television that refers to standard television systems which have a resolution of 480 lines. Standard Definition Television.

Glossary

SNMP	An abbreviation for Simple Network Management Protocol, which is the protocol for monitoring computers connected to a TCP/IP network.
sRGB	An international standard for color intervals that was formulated so that colors that are reproduced on computer operating systems (OS) and the Internet. If the connected source has an sRGB mode, set the mode to sRGB.
SSID	SSID is identification data for connecting to another device on a wireless LAN. Wireless communication uses the SSID.
Subnet Mask	This is a numerical value that defines the number of bits used for the network address on a divided network.
SVGA	A screen size standard with a resolution of 800 (horizontal) x 600 (vertical) dots.
S-Video	A method that separates the video signal into a luminance component (Y) and a color component (C).
SXGA	A screen size standard with a resolution of 1,280 (horizontal) x 1,024 (vertical) dots.
Sync.	The signals output from computers have a specific frequency. If the projector frequency does not match, the image quality is poor. The process of matching the phases of these signals (the relative position of the crests) is called Synchronization. If the signals are not synchronized, flickering, blurriness, and horizontal interference occur.
Tracking	The signals output from computers have a specific frequency. If the projector frequency does not match, the image quality is poor. The process of matching the frequency of these signals (the number of crests in the signal) is called Tracking. If the signals are not tracked out correctly, wide vertical stripes appear in the signal.
Trap IP Address	This is the <u>IP address</u>  for the destination computer used for error notification in SNMP.
VGA	A screen size standard with a resolution of 640 (horizontal) x 480 (vertical) dots.
XGA	A screen size standard with a resolution of 1,024 (horizontal) x 768 (vertical) dots.

General Notes

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice.

Illustrations in this guide and the actual projector may differ.

Restriction of Use

When this product is used for applications requiring high reliability/safety such as transportation devices related to aviation, rail, marine, automotive etc.; disaster prevention devices; various safety devices etc; or functional/precision devices etc, you should use this product only after giving consideration to including fail-safes and redundancies into your design to maintain safety and total system reliability. Because this product was not intended for use in applications requiring extremely high reliability/safety such as aerospace equipment, main communication equipment, nuclear power control equipment, or medical equipment related to direct medical care etc, please make your own judgment on this product's suitability after a full evaluation.

About Notations

Microsoft® Windows® 2000 oper
Microsoft® Windows® XP oper
Microsoft® Windows® Vista op
Microsoft® Windows® 7 operati
Microsoft® Windows® 8 operati
Microsoft® Windows® 8.1 opera

In this guide, the operating syst
2000", "Windows XP", "Windows
"Windows 8.1". Furthermore, the
refer to Windows 2000, Window
Windows 8, and Windows 8.1,
referred to as, for example, Win
notation omitted.

Mac OS X 10.3.x
Mac OS X 10.4.x
Mac OS X 10.5.x
Mac OS X 10.6.x
OS X 10.7.x
OS X 10.8.x
OS X 10.9.x

In this guide, the operating syst
10.3.9", "Mac OS X 10.4.x", "Mac
10.7.x", "OS X 10.8.x", and "OS X
"Mac OS" is used to refer to th

General Notice:

EPSON and ELPLP are trademarks or registered trademarks of the SEIKO EPSON CORPORATION.

Mac, Mac OS, and OS X are trademarks of Apple Inc.

App Store is a service mark of Apple Inc.

Google play is a trademark of Google Inc.

Microsoft, Windows, Windows Vista, PowerPoint, and Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

WPA™ and WPA2™ are registered trademarks of Wi-Fi Alliance.

HDMI and High-Definition Multimedia Interface are the trademarks or registered trademarks of HDMI Licensing LLC. The HDMI logo consists of the letters "HDMI" in a bold, sans-serif font. Below the letters, the text "HIGH DEFINITION MULTIMEDIA INTERFACE" is written in a smaller, all-caps font.

MHL, the MHL logo, and Mobile High-Definition Link are the trademarks or registered trademarks of MHL and LLC in the United States and/or other countries.

"QR Code" is a registered trademark of DENSO WAVE INCORPORATED.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

©SEIKO EPSON CORPORATION 2014. All rights reserved.

Index

A

A/V Mute	57
A/V Mute Timer	94
Air exhaust vent	11
Air filter replacement period	126
Aspect	44, 83
Auto Iris	43, 82
Auto Setup	83
Auto V-Keystone	84

B

Basic menu	89
Blackboard	42
Brightness	82

C

Ceiling	21, 86
Ceiling mount fixing points	13
Cleaning	121
Cleaning the air filter and air intake vent	121
Cleaning the Projector's Surface	121
Color Adjustment	82
Color Mode	42, 82
Color Saturation	82
Color Temp.	82
Computer port	12
Configuration menu	79
Connection mode	89
Consumables	129
Continuous play	55
Contrast	82

Control panel	14
Control Panel Lock	69
Control panel lock	84
Cross	60

D

Direct Power On	86
Display	86
Display Background	86
Display order	55
Display settings	55
Document Camera	129
Dynamic	42

E

EasyMP Monitor	72
ECO Display	94
ECO menu	94
Email Address	92
ESC/VP21	75
Extended menu	85
E-Zoom	59

F

Focus ring	11
Foot adjust lever	11
Freeze	58
Front	21, 86
Front adjustable foot	11
Full Lock	69

G

Gatev

H

HDM
HDM
Help
High
H-Ke
Horiz
How
How

I

ID (p
ID (r
Image
Indic
Info r
Input
IP Ac

K

Keyst

L

Lamp
Lamp
Lamp
Lamp
Lang
Lens

Index

Light Optimizer 94

M

Mail Notification 74, 92
Mail Notification menu 92
Message Broadcasting 72
Messages 86
Monitor Displays 132
Mouse pointer 60

N

Network Configuration 87
Network information 87
Network Menu 87
Network Protection 67
Noise Reduction 83

O

Operating temperature 134
Operation 86
Optional accessories 129
Overheating 107

P

Part Names and Functions 11
Password protect 67
Password Protect Sticker 68
PC Free 51, 54
Photo 42
Pointer 58
Pointer shape 85
Port Number 92

Position 83
Power indicator 106
Power inlet 12
Power On Protect 67
Presentation 42, 50
Problem Solving 106
Progressive 83
Projection 86
Projection distance 130
Projector ID 63
Projector keyword 89
Projector Name 89
Projector Setup 72

Q

Quick Corner 84
Quick Wireless Connection USB Key 129

R

Reading Mail 74
Rear 21, 86
Rear feet 13
Rear screen 21
Remote control 15
Remote receiver 11, 12
Replacing batteries 18
Reset all 95
Reset menu 93, 95
Resetting the lamp operating time
..... 95, 126
Rotating images 53

S

Screen
Screen
Security
Select
Setting
Sharp
Signal
Sleep
Sleep
SMT
SNM
Soft k
Source
Speak
Speci
Sport
sRGB
SSID
Stand
Startu
Stora
Subn
Supp
S-Vic
Sync.

T

Temp
Test I
Theat
Tint
Track

Index

U

USB Type B	86
USB-A port	12
USB-B port	12
User button	85
User's Logo	64
User's Logo Protection	67

V

Video port	12
Video signal	83
Volume	85
Volume buttons	14

W

Web Browser	72
Web Control	73
Web Control Password	89
Web Remote	73
Whiteboard	43
Wireless LAN menu	89
Wireless LAN unit	129
Wireless mouse function	60

Z

Zoom ring	11
-----------------	----

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>