

Instructions for use

WASHING MACHINE

GB

English

WIXL 1200 OT

Contents

Installation, 2-3

Unpacking and levelling
Electric and water connections
Technical details

Washing machine description, 4-5

Detergent dispenser
Control panel

Running a wash cycle, 6

Programme table, 7

Detergents and laundry, 8

Preparing your laundry
Special items
Load-balancing system

Precautions and advice, 9

General safety
Disposal
Saving energy and respecting the environment

Care and maintenance, 10

Cutting off the water or electricity supply
Cleaning your appliance
Cleaning the detergent dispenser
Caring for your appliance door and drum
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 11

Service, 12

Before calling for Assistance

GB

 **INDESIT**

Installation

GB


! Keep this instruction manual in a safe place for future reference. Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features.

! Read these instructions carefully: they contain vital information on installation, use and safety.

Unpacking and levelling

Unpacking

1. Unpack the washing machine.
2. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer.

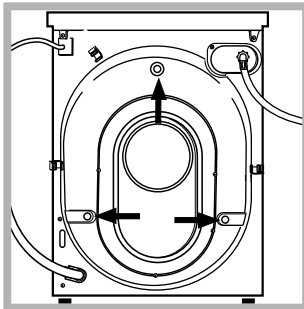

3. Remove the 3 protective screws and the rubber washer with the respective spacer, situated on the rear of the appliance (see figure).


4. Seal the gaps using the plastic plugs provided.
5. Keep all the parts: you will need them again if the washing machine needs to be moved to another location.

! Packaging materials are not children's toys.

Levelling

Your machine may make a considerable amount of noise if the two front feet have not been adjusted correctly.

1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or other.

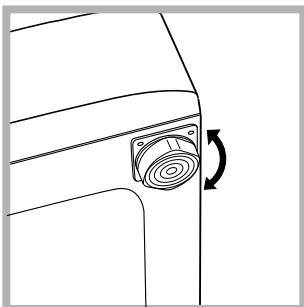


2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°.

Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine.


Electric and water connections

Connecting the water inlet hose

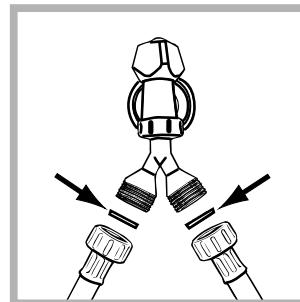

1. Connect the supply pipe to the water mains using a gas 3/4 attachment, fitting the rubber gasket and the filter supplied with the appliance and ensuring that they are firmly tightened to the taps. The water supply marked

C must be connected to the cold water tap; the pipe marked **H** must be connected to the hot water tap. Both pipes may be connected to the cold water tap using the special **Y** connection with multiple attachments, supplied with the appliance (see figure). Before making the connection, allow the water to run freely until it is perfectly clear.

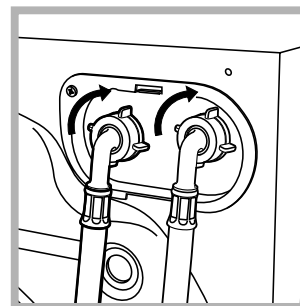


2. Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure).

3. Make sure there are no kinks or bends in the hose.


! The water pressure at the tap must be within the values indicated in the Technical details table (on the next page).

! If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman.

Connecting the drain hose

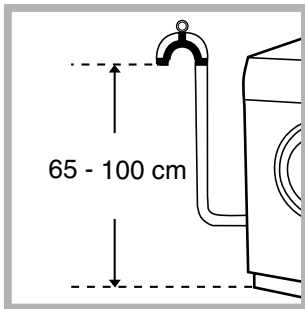

Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor;

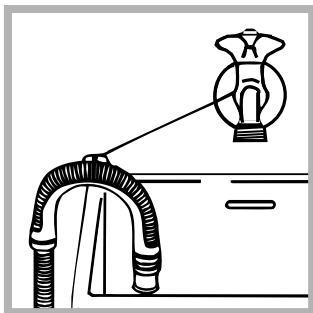

alternatively, place it over the edge of a basin, sink or tub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater.

! We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length.

Electric connection

Before plugging the appliance into the mains socket, make sure that:

- the socket is earthed and in compliance with the applicable law;
- the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (*on the right*);
- the supply voltage is included within the values indicated on the Technical details table (*on the right*);
- the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug.

! The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms.

! When the washing machine is installed, the mains socket must be within easy reach.

! Do not use extensions or multiple sockets.

! The power supply cable must never be bent or dangerously compressed.

! The power supply cable must only be replaced by an authorised serviceman.

Warning! The company denies all liability if and when these norms are not respected.

Technical details

Model WIXL 1200 OT


Dimensions
59.5 cm wide
85 cm high
56.5 cm deep

Capacity from 1 to 6 kg

Electric connections voltage 230/240 Volts 50 Hz
maximum absorbed power 1850 W

Water connections maximum pressure 1 MPa (10 bar)
minimum pressure 0.05 MPa (0.5 bar)
drum capacity 52 litres

Spin speed up to 1200 rpm


Control programmes according to IEC456 directive programme ; TIMER knob "auto"; run with a load of 6 kg.



This appliance is compliant with the following European Community Directives:
- 73/23/CEE of 19/02/73 (Low Voltage) and subsequent amendments
- 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments
- 2002/96/CE


Washing machine description

GB

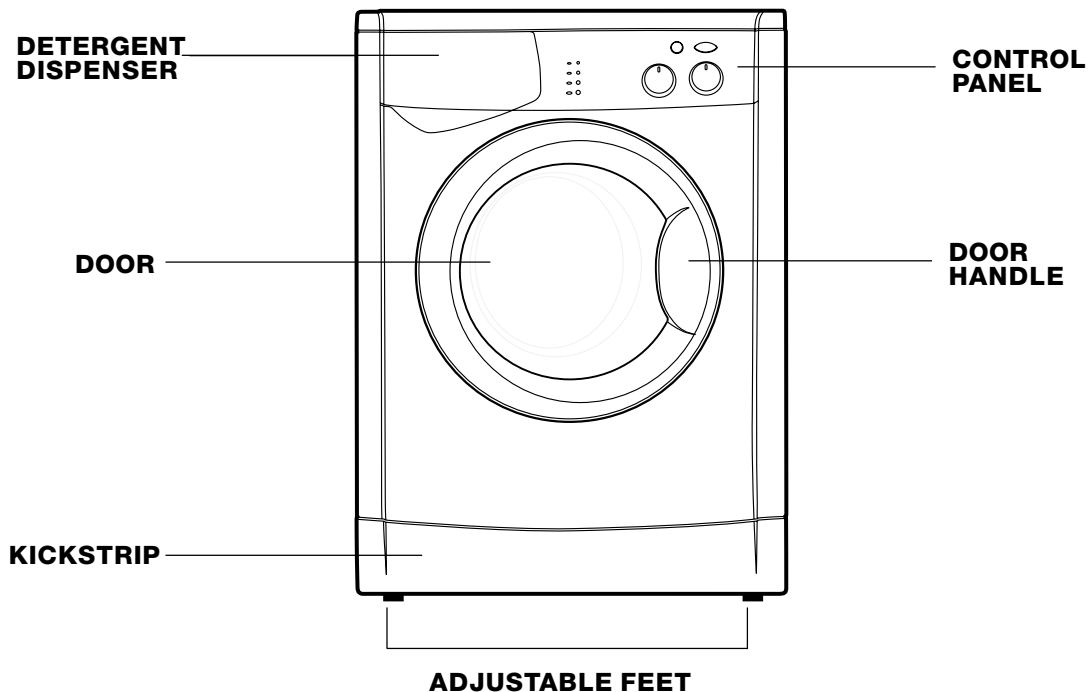


Detergent dispenser

Good washing results also depend on the correct dose of detergent: adding too much detergent won't necessarily make for a more efficient wash, and may in fact cause build up on the interior of your appliance and even pollute the environment.

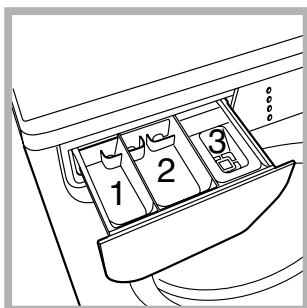

Open up the detergent dispenser and pour in the detergent and fabric softener, as follows.

compartment 1: Detergent for pre-wash (powder)

Pre-wash detergent should only be used with the sportswear programme , while setting the timer knob to the "auto" position or to one of the "3h" to "24h" positions (see "Detergents and laundry").

compartment 2: Detergent for the wash cycle (powder or liquid)


Liquid detergent should only be poured in immediately prior to the wash cycle start.

compartment 3: Additives (fabric softeners, etc.)

The fabric softener should not overflow from the grid.

! Do not use hand wash detergent because it may form too much foam.

Control panel

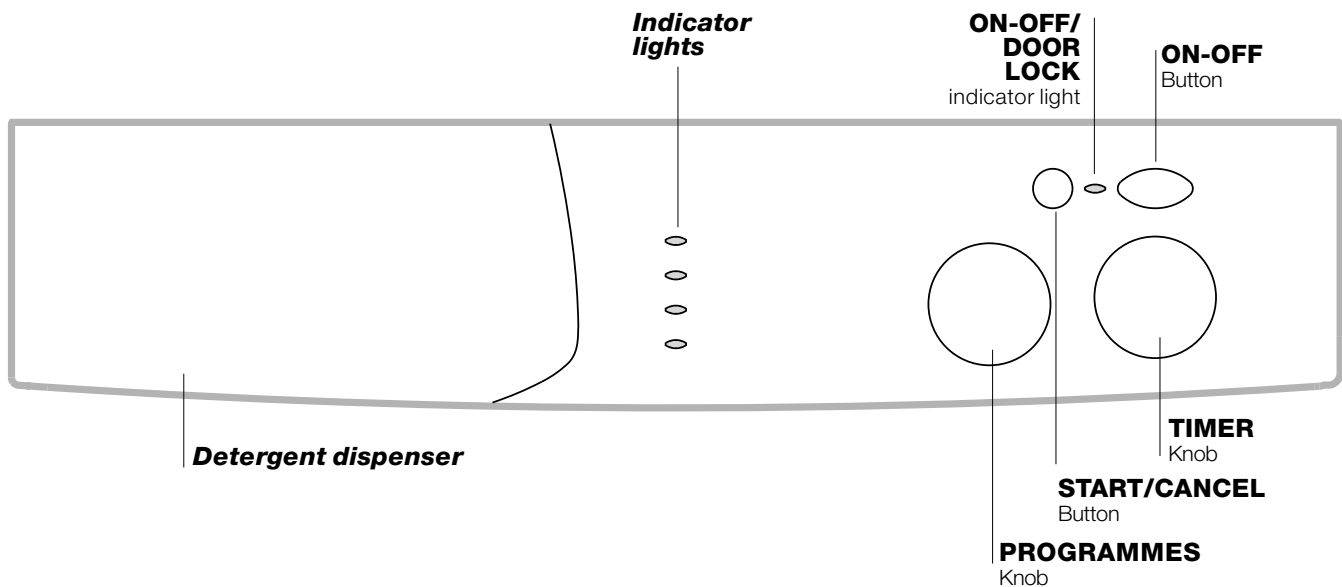

Detergent dispenser: to add detergent and fabric softener (see “Washing machine description”).

Indicator lights: show that the programme has started and give an indication of the time remaining until the end of the programme (see “Running a wash cycle”).

PROGRAMME knob: to select the wash programmes. The knob stays still during the cycle.

START/CANCEL button: starts the cycle after the programme and required time have been set. To cancel the programme and set a different one, press and hold the button for at least 3 seconds.

ON-OFF/DOOR LOCK indicator light:

If the indicator light is switched on, this shows that the door has been locked in order to prevent it being opened accidentally; to avoid damaging the machine, wait until the indicator light begins to flash after the cycle has finished before opening the door. The waiting time is approximately 2 minutes.

! If the ON-OFF/DOOR LOCK indicator light flashes extremely rapidly it has experienced a problem (see “Troubleshooting”).


ON/OFF button: to turn the washing machine on and off.




TIMER knob: sets the required duration of the programme.


In the “auto” position the duration is controlled automatically by the machine.

Running a wash cycle

GB



Note: After installing the machine and before using it for the first time, run an empty wash cycle using detergent, setting the  programme and ensuring the timer knob is in the "auto" position.

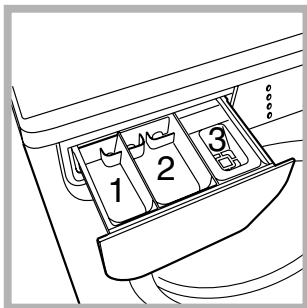


1. Switch the washing machine on by pressing ON/OFF button . All the LEDs will light up for a few seconds and the ON-OFF/DOOR LOCK indicator light  will begin to flash.
2. **LOADING LAUNDRY.** Open the door. Load the laundry, making sure that the maximum load quantity indicated in the table of programmes (below) is not exceeded.
3. **MEASURING OUT DETERGENT/WASHING ADDITIVES**
Remove the drawer completely and pour the detergent into the compartment marked with the number 2. If required, pour fabric softener and other additives into the compartment marked with the number 3. The softener must not rise above the level of the grille. If you wish to run the washing programme especially for sportswear  (by setting the timer knob to "auto" or to one of the positions between "3h and 24h" - see "Detergents and laundry"), it is also possible to use powder detergent in compartment 1 for the pre-wash phase.




4. CLOSE THE DOOR.
5. SELECT THE WASH FABRIC by turning the PROGRAMME KNOB right or left until the correct fabric or the "Rinse" programme is selected.
6. SET THE WASHING END TIME by turning the TIMER KNOB right or left.
The following settings may be used:
 - Positions "30 min - 45 min - 60 min": by selecting one of these times, the duration of the programme is set.
 - Positions between "3h" and "24h": by selecting one of these times the user selects the number of hours after which the programme should finish. The effective duration of the wash is equivalent to the "auto" cycle duration (see table of programmes below), but the machine will delay the start of the cycle automatically to ensure it ends within the set time period.

 
- Whenever it is not necessary to set a specific time for washing to end, select the "AUTO" position: the machine automatically controls the duration of the programme, based on the fabric selected (see table of programmes below).



Regardless of the position selected for the TIMER KNOB, the "Rinse"  programme lasts 15 minutes and begins as soon as the START/CANCEL  button is pressed.

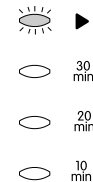7. **START THE PROGRAMME** by pressing the START/CANCEL  button. The "on-off/door lock"  and "programme in progress"  indicator lights will illuminate and remain lit constantly.



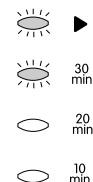








During the cycle, the indicator lights provide information relating to the amount of time remaining until the end of the programme. When there are 30, 20 and 10 minutes respectively remaining until the end of the programme, the corresponding indicator lights will illuminate.



8. **PROGRAMME END**
At the end of the wash programme, all the indicator lights will switch off. Wait for the door to become unlocked (the "on-off/door lock"  indicator light flashes), remove the laundry and leave the door ajar in order to let the drum dry out. Switch off the machine by pressing the ON/OFF  button.

Programme table

Nature of fabrics and soiling	Programmes	Times	Maximum Load (kg)	Maximum temperature	Wash cycle description
White cotton		auto (125 min.)	6	60°	Wash, rinse, intermediate and final spins
		30 min.	3,5	40°	
		45 min.	3,5	60°	
		60 min.	3,5	60°	
		3h - 24h	6	60°	
Coloured cotton		auto (70 min.)	6	40°	Wash, rinse, intermediate and final spins
		30 min.	3,5		
		45 min.	3,5		
		60 min.	3,5		
		3h - 24h	6		
Dark/delicate cotton		auto (60 min.)	6	30°	Wash, rinse, intermediate and final spins
		30 min.	3		
		45 min.	3		
		60 min.	3		
		3h - 24h	6		
Synthetics		auto (60 min.)	2,5	40°	Wash, rinse, gentle spin
		30 min.	1,5		
		45 min.	2,5		
		60 min.	2,5		
		3h - 24h	2,5		
Wool		auto (60 min.)	1,5	40°	Wash, rinse, gentle spin
		30 min.	1,5		
		45 min.	1,5		
		60 min.	1,5		
		3h - 24h	1,5		
Delicates		auto (60 min.)	2	30°	Wash, rinse, drain
		30 min.	2		
		45 min.	2		
		60 min.	2		
		3h - 24h	2		
Special Sport		auto (60 min.)	2	30°	Prewash, wash, rinse, intermediate and final spins
		30 min.	2		
		45 min.	2		
		60 min.	2		
		3h - 24h	2		
Rinse		*	2,5		Rinse and spin

* **Note:** regardless of the position of the "TIMER knob", the Rinse cycle begins immediately after the ON/CANCEL  button is pressed, and lasts for 15 minutes.

Important:

- the quick wash programmes "30 min" and "45 min" (regardless of the type of fabric) are recommended for refreshing lightly soiled garments in a short time.
- the "60 min" programmes (regardless of the type of fabric) are recommended for washing lightly soiled garments.
- Wash times do not include the 2 minutes at the end of the cycle when the user must wait for the door to unlock.

Detergents and laundry

GB


Preparing your laundry

- Divide your laundry according to:
 - the type of fabric/the symbol on the label.
 - the colours: separate coloured garments from whites.
- Empty all pockets and check for loose buttons.
- Do not exceed the maximum load values shown in the "Programme table".

How much does your laundry weigh?


- 1 sheet 400-500 g
- 1 pillow case 150-200 g
- 1 tablecloth 400-500 g
- 1 bathrobe 900-1200 g
- 1 towel 150-250 g

Special items

Curtains: fold curtains and place them in a pillow case or mesh bag. Wash them separately without exceeding half the appliance load. Use programme  which excludes the spin cycle automatically.

Quilted coats and windbreakers: if they are padded with goose or duck down, they can be machine-washed. Turn the garments inside out and load a maximum of 3 kg, repeating the rinse cycle once or twice.

Wool: for best results, use a specific detergent, taking care not to exceed a load of 1,5 kg.

Sportswear: use the "Special Sport"  programme. It is possible to run an initial pre-wash phase, which is useful for removing soil or mud residues from the garments. To use this phase, pour powder detergent into compartment 1 of the detergent drawer (see "Washing machine description").

The pre-wash phase will not run if the timer knob is set to a duration between 30 minutes and 1 hour (inclusive).

Load-balancing system

To avoid excessive vibrations, before every spin cycle the machine distributes the load in a uniform manner by continuously rotating the drum at a speed which is slightly faster than the normal washing speed.

When, despite repeated attempts, the load is still not evenly distributed, the machine spins at a lower speed than the set frequency.

If the load is excessively unbalanced, the machine attempts to distribute it instead of spinning. The balancing attempts may extend the total duration of the cycle, up to a maximum of 10 minutes.

! The washing machine was designed and built in compliance with the applicable international safety regulations. The following information is provided for your safety and should consequently be read carefully.

General safety

- This appliance has been designed for non-professional, household use and its functions must not be changed.
- This washing machine should only be used by adults and in accordance with the instructions provided in this manual.
- Never touch the washing machine when barefoot or with wet or damp hands or feet.
- Do not pull on the power supply cable to unplug the appliance from the electricity socket. Pull the plug out yourself.
- Do not open the detergent dispenser while the appliance is in operation.
- Do not touch the drain water as it could reach very high temperatures.
- Never force the washing machine door: this could damage the safety lock mechanism designed to prevent any accidental openings.
- In the event of a malfunction, do not under any circumstances touch internal parts in order to attempt repairs.
- Always keep children well away from the appliance while in operation.
- The appliance door tends to get quite hot during the wash cycle.
- Should it have to be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy.
- Before loading your laundry into the washing machine, make sure the drum is empty.

Disposal

- Disposing of the packaging material: observe local regulations, so the packaging can be re-used.
- The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce

the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Saving energy and respecting the environment

Environmentally-friendly technology

If you only see a little water through your appliance door, this is because thanks to the latest Indesit technology, your washing machine only needs less than half the amount of water to get the best results: an objective reached to respect the environment.

Saving on detergent, water, energy and time

- To avoid wasting resources, the washing machine should be used with a full load. A full load instead of two half loads allows you to save up to 50% on energy.
- Treating stains with a stain remover or leaving them to soak before washing will cut down the need to wash them at high temperatures.
- Use the correct quantity of detergent depending on the water hardness, how soiled the garments are and the amount of laundry you have, to avoid wastage and to protect the environment: despite being biodegradable, detergents do contain ingredients that alter the natural balance of the environment. In addition, avoid using fabric softener as much as possible.
- If you use your washing machine from late in the afternoon until the early hours of the morning, you will help reduce the electricity board's peak load.

Care and maintenance

GB


Cutting off the water or electricity supply

- Turn off the water tap after every wash. This will limit the wear of your appliance's water system and also prevent leaks.
- Unplug your appliance when cleaning it and during all maintenance operations.

Cleaning your appliance

The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives.

Cleaning the detergent dispenser

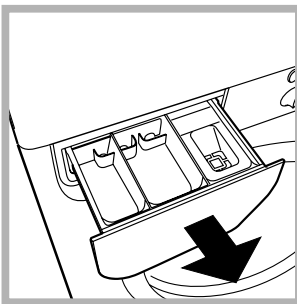

Remove the dispenser by pulling it out (see figure). Wash it under running water; this operation should be repeated frequently.

Caring for your appliance door and drum


- Always leave the appliance door ajar to prevent unpleasant odours from forming.

Cleaning the pump


The washing machine is fitted with a self-cleaning pump that does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber that protects the pump, situated in the lower part of the same.

! Make sure the wash cycle has ended and unplug the appliance.

To access the pre-chamber:

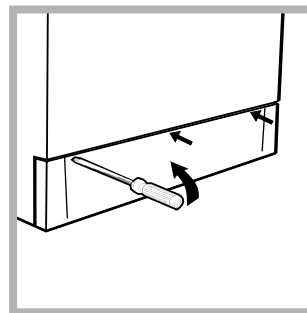

1. using a screwdriver, remove the cover panel on the lower front of the washing machine (see figure);

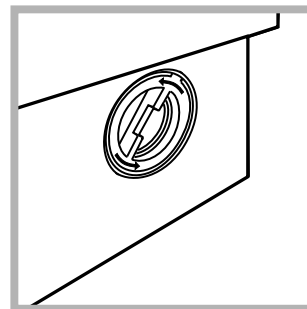

2. unscrew the lid rotating it anti-clockwise (see figure): a little water may trickle out. This is perfectly normal;

3. clean the interior thoroughly;
4. screw the lid back on;
5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance.

Checking the water inlet hose

Check the water inlet hose at least once a year. If you see any cracks, replace it immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open.

! Never use hoses that have already been used.

Your washing machine could fail to work. Before calling for Assistance (see "Service"), make sure the problem can't easily be solved by consulting the following list.

GB

Problem

Possible causes/Solution:

The washing machine won't start.

- The appliance is not plugged into the socket, or not enough to make contact.
- There has been a power failure.

The wash cycle won't start.

- The appliance door is not shut properly.
- The ON/OFF button (⏻) has not been pressed.
- The START/CANCEL button (▶) has not been pressed.
- The water tap is not turned on.
- A washing end time between "3h" and "24h" has been set (see "Running a wash cycle").

The washing machine fails to load water.

- The water inlet hose is not connected to the tap.
- The hose is bent.
- The water tap is not turned on.
- There is a water shortage.
- The water pressure is insufficient.
- The START/CANCEL button (▶) has not been pressed.

The washing machine continuously loads and unloads water.

- The drain hose is not fitted between 65 and 100 cm from the floor (see "Installation").
- The free end of the hose is underwater (see "Installation").
- The wall drainage system doesn't have a breather pipe.

If the problem persists even after these checks, turn off the water tap, switch the appliance off and call for Assistance. If the dwelling is on one of the upper floors of a building, there may be drain trap problems causing the washing machine to load and unload water continuously. In order to avoid such an inconvenience, special anti-drain trap valves are available in shops.

The washing machine does not drain or spin.

- The drain hose is bent (see "Installation").
- The drain duct is clogged.

The washing machine vibrates too much during the spin cycle.

- When the machine is installed, the locking screws for the oscillating assembly are still in place. Remove the screws (see "Installation").
- The washing machine is not level (see "Installation").
- The washing machine is closed in between furniture cabinets and the wall (see "Installation").

The washing machine leaks.

- The water inlet hose is not screwed on correctly (see "Installation").
- The detergent dispenser is obstructed (to clean it, see "Care and maintenance").
- The drain hose is not secured properly (see "Installation").

The ON-OFF/DOOR LOCK indicator light flashes extremely rapidly.

- This means there is a problem with the machine. Before calling Assistance, please follow the set of instructions below:
 1. Switch off the machine by pressing the (⏻) button.;
 2. Remove the plug connecting the appliance to the mains supply and wait for at least 40 seconds;
 3. Place the plug back into the socket;
 4. Switch on the machine by pressing the (⏻) button again;
 5. If the problem is still evident after this process has been carried out, contact Assistance.

There is too much foam.

- The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like).
- You used too much detergent.

Before calling for Assistance:

- Check whether you can solve the problem on your own (see “*Troubleshooting*”);
- Restart the programme to check whether the problem has been solved;
- If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate.

- ! If the machine has been installed or used incorrectly, you may be charged for the maintenance callout service.
- ! Always request the assistance of authorised servicemen.

Notify the operator of:

- the type of problem;
- the appliance model (Mod.);
- the serial number (S/N).

This information can be found on the data plate situated on the rear of the washing machine.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>