

 
Congratulations on your purchase of a high-quality Insignia product. Your DVD and CD+G Karaoke Player/Recorder is designed for reliable and trouble-free performance. Use this guide for initial setup. See your *User Guide* for more information.

Package contents

- DVD and CD+G Karaoke Player/Recorder
- Remote
- Microphone
- AC/DC Adaptor
- A/V cable (RCA type)
- User Guide
- Quick Setup Guide


Features

Front

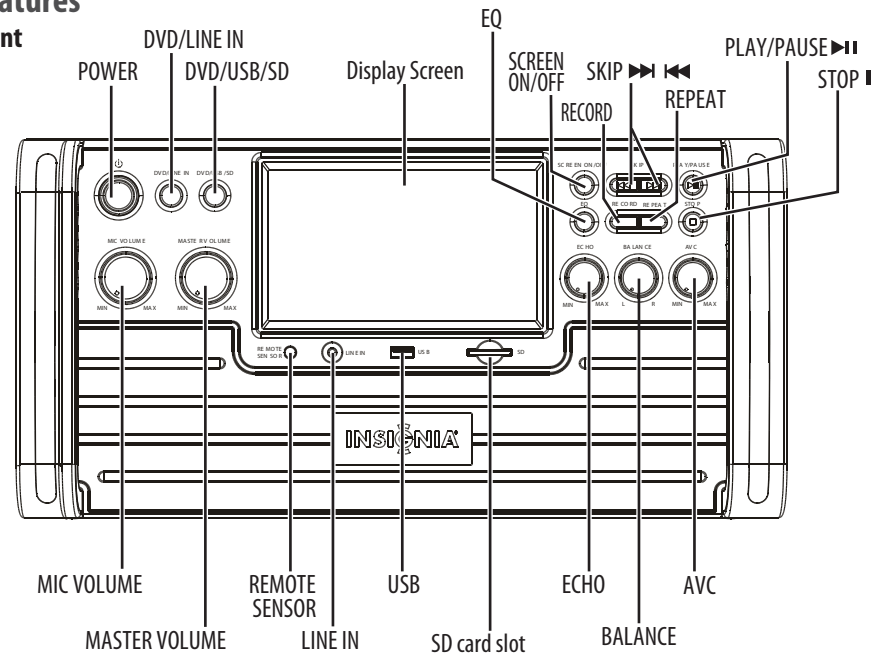


Connecting the AC/DC Adaptor

 
Insert the DC plug into the DC IN jack on the back of your karaoke system and plug the AC/DC adaptor into the wall outlet.

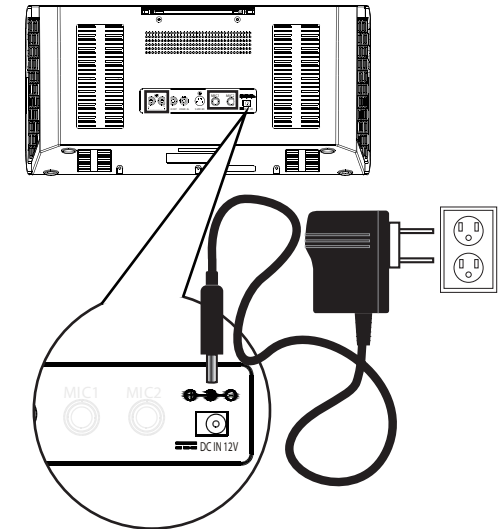

Top

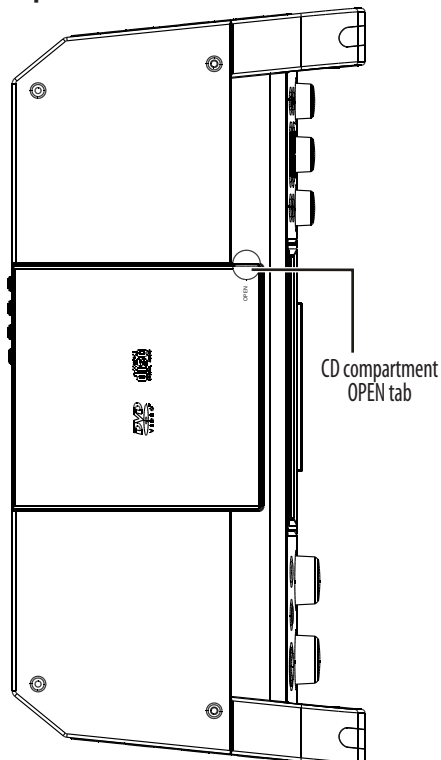 

Back

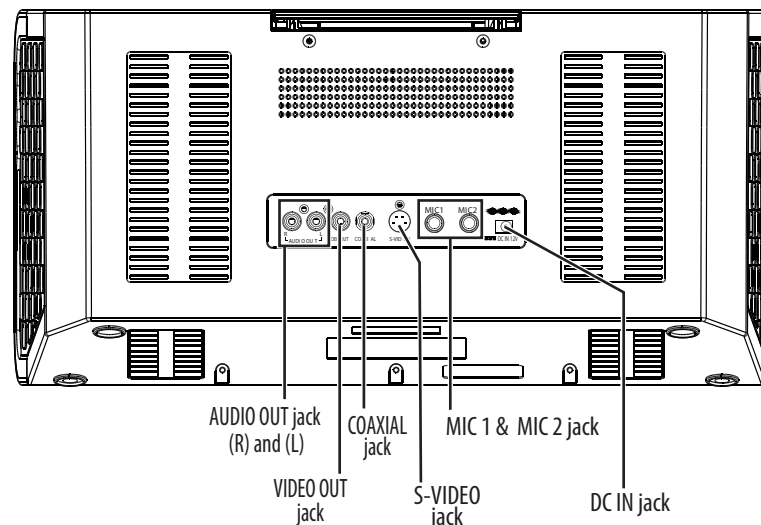 

Playing a disc

- 1 Lift the **OPEN** tab on the top of your karaoke system to open the disc compartment.
- 2 Place a disc in the tray, then close the compartment cover.
- 3 Using remote, press **DVD/USB/SD**, **▲** or **▼** to select **DVD**, then press **ENTER**.

Playing from a USB flash drive

- 1 Insert a USB flash drive into the USB port on the front of your karaoke system.
- 2 Using remote, press **DVD/USB/SD**, **▲** or **▼** to select **USB**, then press **ENTER**.

Playing from an SD memory card

- 1 Insert an SD memory card into the SD card slot on the front of your karaoke system.
- 2 Using remote, press **DVD/USB/SD**, press **▲** or **▼** to select **SD**, then press **ENTER**.

 
Adjusting the volume

- Rotate the **MIC VOLUME** knob to adjust the microphone volume.
- Rotate the **MASTER VOLUME** knob to adjust the overall volume.


Playing an external audio input device

- 1 Connect an audio cable to the **LINE IN** jack on the front of your karaoke system and to the **LINE OUT** jack on the external device.
- 2 Press **DVD/LINE IN** to select the **LINE IN** mode.


Front Connections

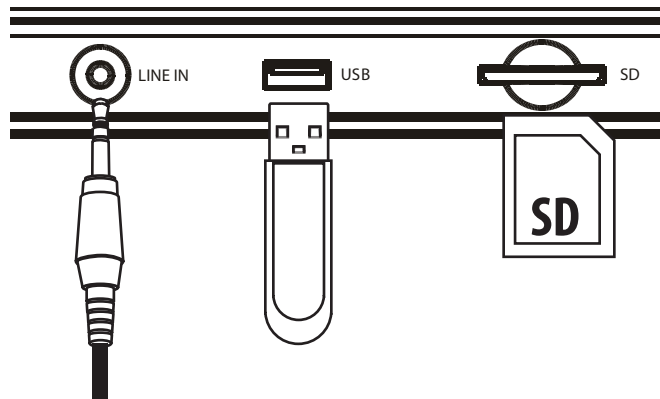

Back Connections

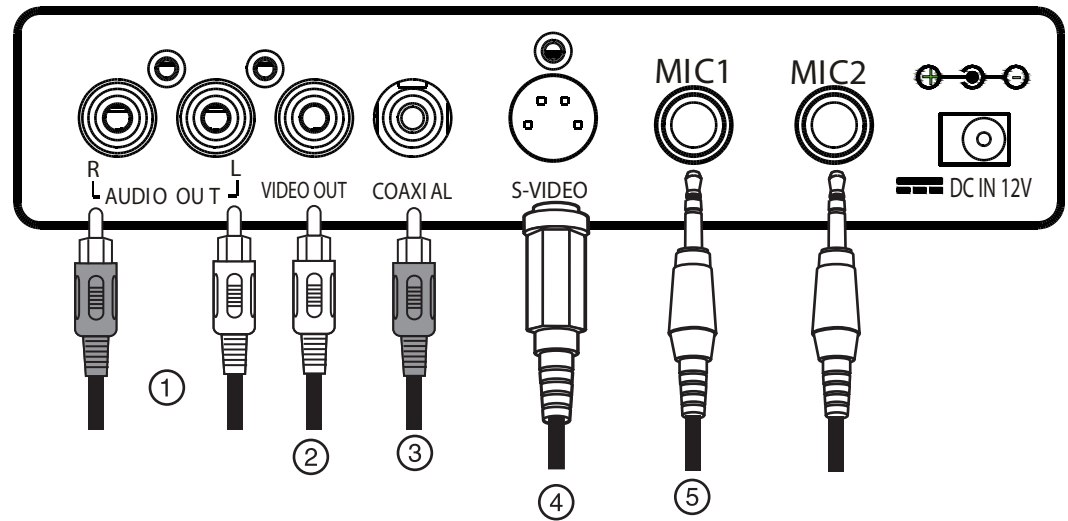 

Selecting the audio output mode for a connected sound system

- 1 Press **SETUP**.
- 2 Press ◀ or ▶ to highlight .
- 3 Press ▼ to highlight **AUDIO OUT**, then press ▶.
- 4 If you connected a sound system to the **COAXIAL** jack, press ▲ or ▼ to select **SPDIF/RAW** or **SPDIF/PCM**.
OR
If you connected a sound system to the **AUDIO OUT** jack, press ▲ or ▼ to select **SPDIF/OFF**.
- 5 Press **ENTER**.



1 Playing the audio through an analog sound system

- Connect an audio cable with RCA connectors to the **AUDIO OUT L/R** jacks on the back of your karaoke system and to the **AUDIO IN L/R** jacks on the sound system.

2 Playing the video through an external AV display device

- Connect a standard AV video cable to the **VIDEO OUT** jack on the back of your karaoke system and to the **VIDEO IN** jack on the display device.

3 Playing the audio through a digital coaxial sound system

- Connect a digital coaxial cable to the **COAXIAL** jack on the back of your karaoke system and to the **COAXIAL IN** jack on the sound system.

4 Playing the video through an external S-Video display device

- Connect an S-Video cable to the **S-VIDEO** jack on the back of your karaoke system and to the **S-VIDEO IN** jack on the S-Video device.

5 Singing along with a multiplex recording

- 1 Plug a microphone into the **MIC1** jack on the back of your karaoke system.
- 2 Load a CD+G disc with a multiplex recording.
- 3 When the singer starts to sing, rotate the **AVC** knob to mute the recorded vocals.
When the singer stops singing, the recorded vocals will resume playing.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>