

User Guide



CD Clock Radio

NS-CL02

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Insignia NS-CL02 CD Clock Radio

Contents

Welcome	3
Safety information	3
Important safeguards	4
Features	6
Setting up your clock radio	11
Using your clock radio	13
Troubleshooting	18
Legal notices	19
90-Day Limited Warranty	21

Welcome

Congratulations on your purchase of a high-quality Insignia product. Your NS-CL02 represents the state of the art in clock radios and is designed for reliable and trouble-free performance.

Safety information

To prevent fire or shock hazard, do not plug the power adapter into an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure. To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.</p>		



The lightning flash with arrowhead symbol within a triangle is intended to alert you to the presence of uninsulated dangerous voltage within your clock radio's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



The exclamation point within a triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying your clock radio.



Danger - Invisible and hazardous laser radiation when the CD compartment is open and the interlock fails or is defeated. Avoid direct exposure to beam.

Caution

Any change or modification to your clock radio not expressly approved by Insignia or its authorized parties could void your authority to operate your shelf system.

Caution

Your clock radio should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on it.

Important safeguards

- **Read instructions**—Read all the safety and operating instructions before operating your clock radio.
- **Retain instructions**—Retain the safety and operating instructions for future reference.
- **Follow warnings**—Follow all warnings on your clock radio and in the operating instructions.
- **Follow instructions**—Follow all operating and use instructions.
- **Cleaning**—Unplug your clock radio's AC power adapter from the power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- **Attachments**—Do not use attachments not recommended by Insignia because they may cause hazards.
- **Water and moisture**—Do not use your clock radio near water. Such as near a bath tub, in a wet basement, or near a swimming pool.
- **Ventilation**—To ensure reliable operation of your clock radio and to protect it from overheating, ventilation slots and openings are provided in the cabinet back. Do not block these openings. Your clock radio should never be placed near or over a radiator or heat register. Do not place your clock radio in a built-in installation such as a bookcase or rack unless correct ventilation is provided or the manufacturer's instructions have been adhered to.

- **Power sources**—Use only the type of power source indicated on the label. If you are not sure of the type of power supply to your home, consult Insignia Technical Support or your local power company. For clock radios intended to operate from battery power or other sources, refer to the operating instructions.
- **Grounding or polarization**—Your clock radio's AC power adapter may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- **Power cord protection**—Route power supply cords so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from your clock radio.
- **Surge protector**—We recommend the use of a surge protector for the AC power adapter connection. Lightning and power surges ARE NOT covered under warranty for this product.
- **Lightning**—For added protection for your clock radio during a lightning storm, or when it is left unattended and unused for long periods of time, unplug the AC power adapter from the power outlet. This will prevent damage to your clock radio due to lightning and power line surges.
- **Overloading**—Do not overload power outlets and extension cords, because this can result in a risk of fire or electric shock.
- **Object and liquid entry**—Never insert objects of any kind into your clock radio through openings, because they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on your clock radio.
- **Servicing**—Do not attempt to service your clock radio yourself, because opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- **Damage requiring service**—Unplug your clock radio's AC power adapter from the power outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled, or objects have fallen into your clock radio.
 - If your clock radio has been exposed to rain or water.

- If your clock radio does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, because incorrect adjustment of other controls may result in damage and often requires extensive work by a qualified technician to restore your clock radio to its normal operation.
- If your clock radio has been dropped or damaged in any way.
- When your clock radio exhibits a distinct change in performance.
- **Replacement parts**—When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, injury to persons, or other hazards.
- **Safety check**—Upon completion of any service or repairs to your clock radio, ask the service technician to perform routine safety checks to determine that your clock radio is in correct operating condition.
- **Heat**—Place your clock radio away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Caution

To prevent electric shock, match the wide blade of the AC power adapter plug to the wide slot in the power outlet and fully insert the plug.

The AC power adapter plug is used as the disconnect device. It should remain readily accessible and should not be obstructed during use. To completely disconnect the clock radio from electric power, the AC power adapter plug should be disconnected from the AC power outlet completely.

 
The marking plate of the AC power adapter is located on the bottom of the adapter.

Features


Package contents:

- Clock radio
- AC power adapter
- Line-in cable
- AAA batteries (2)
- User Guide


Top panel

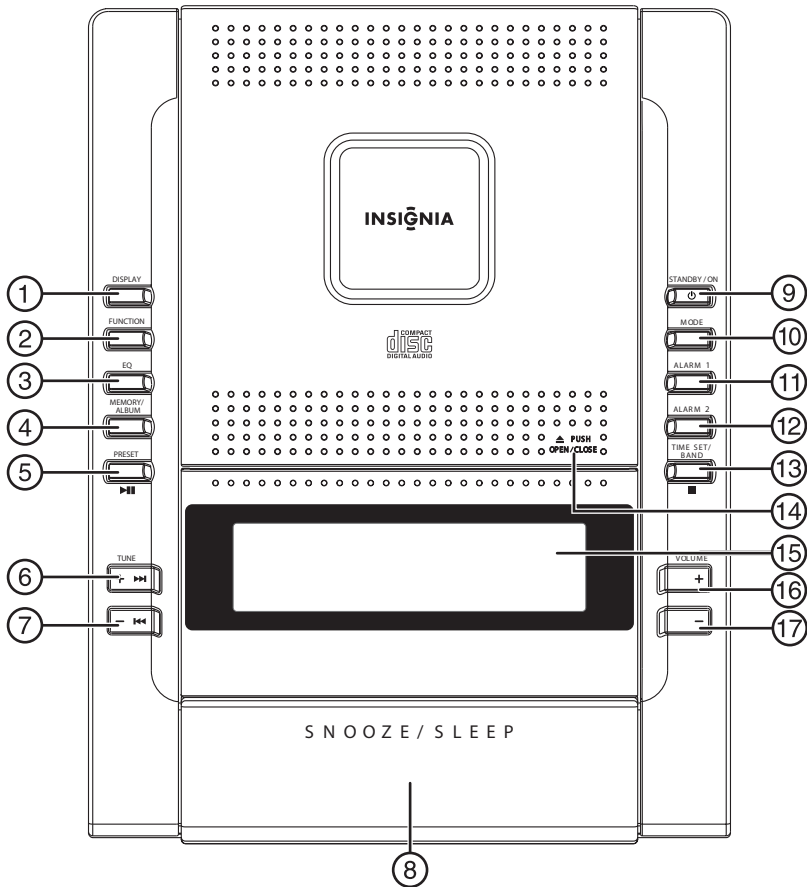


#	Description	Function
1	DISPLAY button	Press to show the current function, such as CD, radio, or line-in mode.
2	FUNCTION button	Press to select AM , FM , Line-in , or CD .
3	EQ button	Press to select a preset equalization setting. Selections include Flat , Jazz , Pop , Classic , and Rock .
4	MEMORY/ALBUM button	In radio mode, press to set radio presets and press to recall radio presets. In CD (MP3) mode, press to skip forward to the next album.

#	Description	Function
5	PLAY/PAUSE/PRESET button	In CD mode, press to begin CD playback. Press again to pause playback. In radio mode, press repeatedly to cycle through preset stations.
6	SKIP+/FF/TUNE UP button	In CD mode, press to skip forward a track. Press and hold to search forward through a track. In radio mode, press to tune or scan the radio to a higher frequency. In alarm mode, press to select Buzzer, Radio, or CD.
7	SKIP- /FR/TUNE DOWN button	In CD mode, press to skip backward a track. Press and hold to search backward through a track. In radio mode, press to tune or scan the radio to a lower frequency.
8	SNOOZE/SLEEP button	Press to temporarily turn off the alarm or to set the sleep timer when playing the radio or CD. In alarm mode, press to select Buzzer, Radio, or CD.
9	 Standby/ON button	Press to turn on the clock radio. Press again to return the clock radio to standby mode.
10	MODE button	In FM radio mode, press to choose between FM MONO and FM STEREO . In CD mode, press to select One Repeat Play, Repeat Album, All Repeat Play, Intro Play, or Random Play mode.
11	ALARM 1 button	Press to select and change settings for Alarm mode 1.
12	ALARM 2 button	Press to select and change settings for Alarm mode 2.
13	STOP/BAND/TIME SET button	In CD mode, press to stop playback. In radio mode, press to select the radio frequency band to listen to (AM or FM). In standby mode, press and hold to enter time set mode.
14	OPEN/CLOSE button	Press to open the CD compartment. Press again to close the CD compartment.
15	LCD display	Displays the current time, as well as information about the radio or CD.
16	VOL + button	Press to increase the volume of the radio or CD.
17	VOL – button	Press to decrease the volume of the radio or CD.

 Side panel

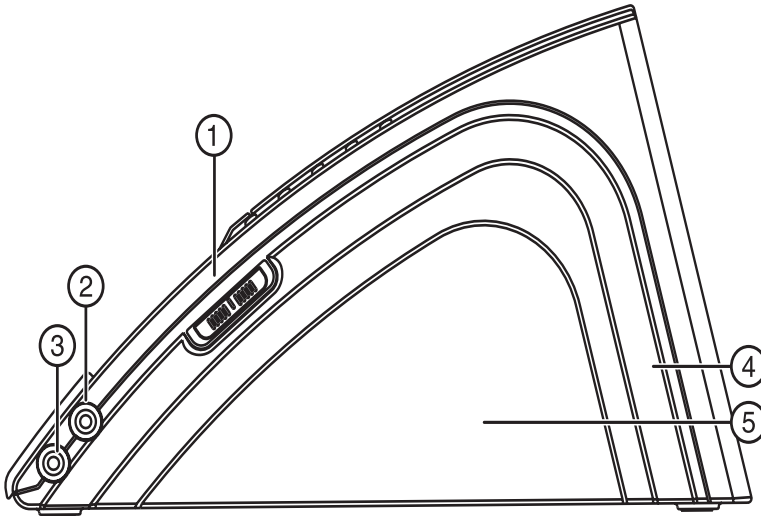


#	Description	Function
1	Dimmer	Move this switch to set the LCD backlight level to High , Mid , or Low .
2	Headphone jack	Connect a headphone plug to this jack to listen to the radio or a CD through headphones. Note: Plugging in a headphone automatically mutes the speaker.
3	Line in jack	Connect a cable from an external audio source to this input jack to hear the sound through your clock radio.
4	DC IN jack	Insert the small connector from the AC power adapter here.
5	Speaker	Provides audible sound from the radio or CD player.

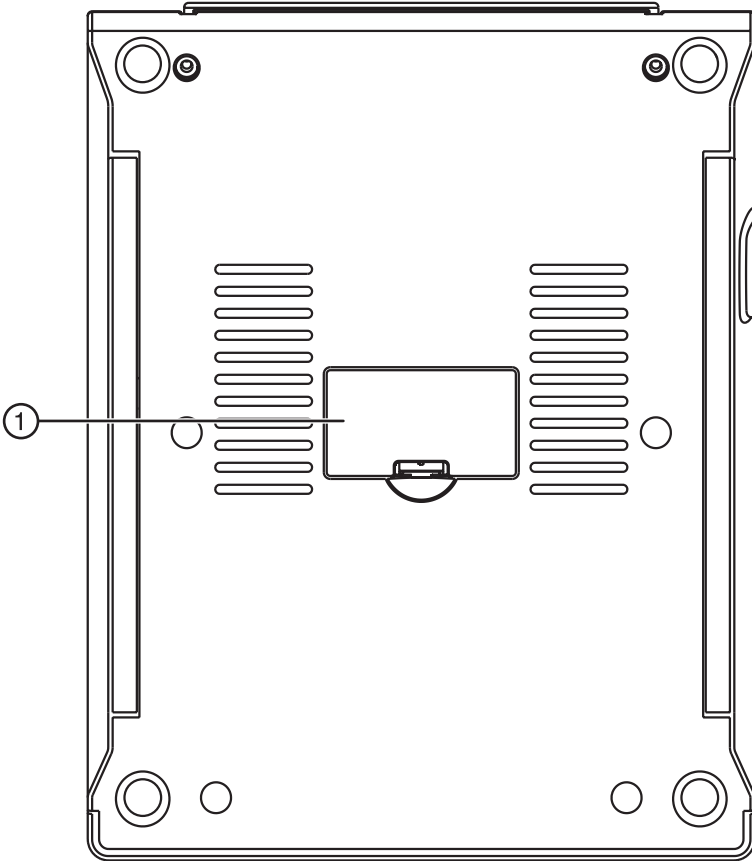 Bottom

#	Description	Function
1	Battery compartment door	Open this door to install backup batteries for your clock radio.

 LCD Display

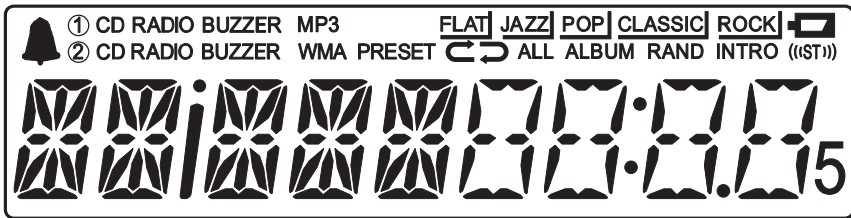


Setting up your clock radio

Using the AC power adapter

To use the AC power adapter:

- 1 Insert the small connector at the end of the AC power adapter cable into the **DC IN** jack on the back of your clock radio.
- 2 Plug the AC power adapter into a wall power outlet.

 
Note

Only use the supplied AC power adapter, which has the following specifications: DC=9.0 V 
 Unplug both the DC plug and the adapter when not in use.

Installing backup batteries


To install backup batteries:

- 1 Turn your clock radio over, then open the door to the battery compartment (1).

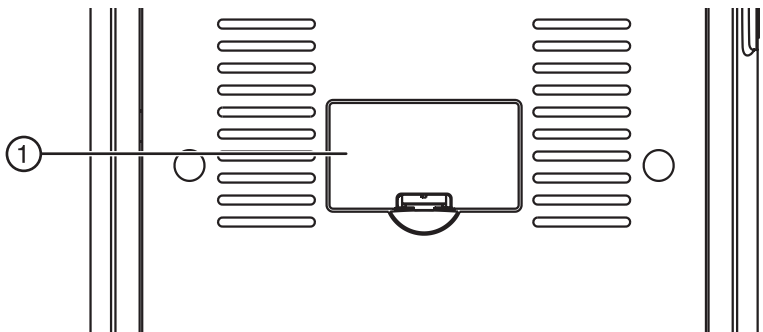

- 2 Insert two (2) AAA batteries into the battery compartment. Make sure that you match the + and – symbols on the batteries with the + and – symbols in the battery compartment.

 Insert batteries as shown

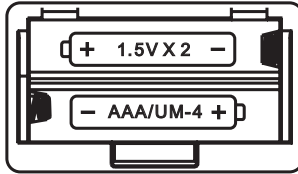

- 3 Reinstall and close the battery compartment and return your clock radio to the upright position.

Caution

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Make sure that you follow the correct polarity as indicated in the battery compartment when installing batteries. Reversed batteries may cause damage to the clock radio.
3. Do not mix different types of batteries together (for example, alkaline, rechargeable, and carbon zinc), or semi-used batteries with fresh ones.
4. If your clock radio is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged, because they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Do not throw batteries into a fire. Dispose of used batteries as hazardous waste.

Note

The batteries are used to provide backup for your clock when AC power adapter is disconnected or there is a power failure.

When the battery indicator  appears in the display, you need to replace the batteries.

Connecting the power cord

To prepare your clock radio for use:

- 1 Make sure that your local AC power source matches the voltage shown on the plate located on the AC power adapter. If it does not, consult your dealer or service center.

- 2 Plug the small connector on the power cable into the **DC IN** jack on the back of the clock radio and the AC power adapter itself into an AC power outlet.

Caution

To protect your clock radio during thunderstorms, unplug the AC power adapter from the AC power outlet.

Using your clock radio


 
Dimmer Setting

To set the backlight level:

 
- 1 Make sure the AC adapter is connected and the clock radio is turned on.
- 2 Slide the dimmer switch to set the display backlight to a comfortable level. Your choices include **High**, **Mid**, or **Low**.

Playing the radio


To play the radio:

- 1 Press  (Standby/on) to turn on the clock radio.
 - To select the radio band you want to listen to, press **STOP/BAND/TIME SET** repeatedly.
 - To tune the radio up or down and select the station you want, press **SKIP +/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN**.
 - To adjust the volume to a comfortable level, press either the **VOLUME UP** or **VOLUME DOWN** button.
 - To scan to a higher or lower frequency, press and hold **SKIP +/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN** for more than two seconds, then release the button to search for the next strong station.
 - To select **FM MONO** or **FM STEREO**, press **MODE** .
- 2 Press  (Standby/on) to turn off the clock radio.

To use presets:

- 1 Press  (Standby/on) to turn on the clock radio.
- 2 Press **STOP/BAND/TIME SET** repeatedly to select the radio band you want to listen to.
- 3 Press **SKIP +/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN** to tune the radio up or down and select the station you want.

 - 4 To save the station as a preset, press the **MEMORY/ALBUM** button. “PRESET” and the preset number blinks on the display.

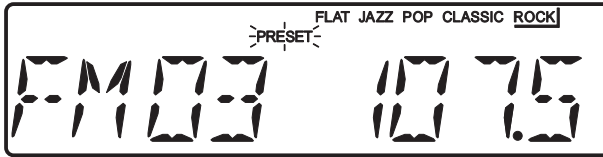

- 5 Press **SKIP +/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN** to select the preset number you want to designate for that station.
- 6 Press **MEMORY/ALBUM** to confirm the setting. The station is stored in memory.
- 7 Repeat Steps 3 to 6 to store as many as 10 AM presets and 10 FM presets.
- 8 To select a preset station, briefly press **PLAY/PAUSE/PRESET** repeatedly until you reach the station you want. “PRESET” appears on the LCD display, along with the preset number selected.

To recall presets to make changes:

- 1 Press **MEMORY/ALBUM** in radio mode. The preset frequency appears on the LCD display, the radio is tuned to the preset frequency, and “PRESET” blinks for five seconds.
- 2 Press **SKIP +/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN** while “PRESET” is blinking to change the preset station.

To listen to another audio device:

- 1 Make sure the clock radio is turned off.
- 2 Plug one end of the auxiliary line-in cable into the **LINE-IN** jack on the side of the radio.
- 3 Plug the other end of the cord into the **LINE-OUT** jack on the audio device.
- 4 Turn on the radio.
- 5 Press **FUNCTION** one or more times until “LINE-IN” appears on the display.



- 6 Use the controls on the audio device to control playback.

Playing a CD

This clock radio plays music CDs, MP3 CDs, and WMA CDs.

To play a CD:

- 1 Press **⏻** (Standby/on) to turn on the clock radio.
- 2 Press **CD OPEN/CLOSE** to open the CD compartment door.
- 3 Insert a CD disc with the label side up, then close the CD compartment door.
- 4 Press **FUNCTION** repeatedly to select CD mode.
- 5 Press **VOL +** or **VOL -** to set the volume to a comfortable level.
- 6 Press **EQ** to cycle through the available equalization presets. Choices include **FLAT, JAZZ, POP, CLASSIC,** or **ROCK**. A bar appears under your choice on the display.
- 7 If you are playing a CD in MP3 format, press **MEMORY/ALBUM** to skip to the next album and play the first track. Press and hold **MEMORY/ALBUM** to skip forward tracks one-by-one within an album.
- 8 Press **STOP/BAND/TIME SET** to stop playback.

To select the playback mode:

- 1 While in CD mode, press **MODE** repeatedly to cycle through the available playback modes. Choices include the following:

One Repeat Play:	Repeats the current track
Repeat Album:	Repeats all tracks within the current album (MP3/WMA only)
All Repeat Play:	Repeats all tracks
Intro Play:	Plays a 10 second intro for each track
Random Play:	Plays all tracks in random order

Setting the clock and the alarm

To set the clock:

- 1 Hold **STOP/BAND/TIME SET** two seconds or more. The hour blinks on the display.
- 2 Within 10 seconds, press **SKIP+/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN** to set the hour and select the correct AM/PM setting.
- 3 Press **STOP/BAND/TIME SET** again. The minute blinks on the display.

- 4 Press **SKIP +/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN** to set the minute. Make sure that you set the correct AM/PM setting.
- 5 Press **STOP/BAND/TIME SET** again. The clock is set.



To set the alarm:

- 1 Press and hold **ALARM 1** or **ALARM 2** (depending on the alarm mode you want) until the hour blinks.
- 2 While the hour is blinking, press **SKIP+/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN** to set hour (AM/PM) you want to wake up.
- 3 Press **ALARM 1** or **ALARM 2** again. The minutes begin to blink.
- 4 While the minutes are blinking, press **SKIP+/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN** to set the minute you want to wake up. Make sure that you set the correct AM/PM setting.
- 5 Within 10 seconds, press **SKIP+/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN** repeatedly to select **CD**, **RADIO**, or **BUZZER** as the alarm source. Make sure that the corresponding indicator appears on the display. If you select **RADIO**, the frequency of last setting will display on display
- 6 Press **ALARM 1** or **ALARM 2** again to confirm the setting.
- 7 To turn on the alarm, press **ALARM 1** or **ALARM 2** in standby mode.
- 8 To cancel the alarm, press **ALARM 1** or **ALARM 2** until the alarm indicator disappears from the display. The alarm will not come on until it is reset.

Notes

In Standby mode, press **ALARM 1** or **ALARM 2** to activate the alarm. **ALARM 1** (or **ALARM 2**) and **BUZZER** appear on the display. Press **SKIP+/FF/TUNE UP** or **SKIP-/FR/TUNE DOWN** to cycle through the alarm options (**BUZZER**, **CD**, **RADIO**, or **OFF**).

The alarm automatically changes to **BUZZER** if the **CD** cannot play.

The alarm automatically switches off after 60 minutes if no key is pressed during the alarm set.

To turn the alarm off:

- 1 Press **ALARM 1**, **ALARM 2**, **STANDBY ON** (except **SNOOZE/SLEEP**) to turn off the alarm. The alarm will be set for the next day.
- 2 If you do not want to set the alarm for the next day, press **ALARM 1** or **ALARM 2** until "ALARM 1" or "ALARM 2" disappears from the display.

To use the snooze:

- 1 While the alarm is sounding, press **SNOOZE/SLEEP**. The **SNOOZE** indicator appears on the display and "10" appears in the display for five seconds, then it reverts back to the real time. The alarm turns back on automatically 10 minutes later.
- 2 If you press **SNOOZE/SLEEP** within those five seconds, each time you press the **SNOOZE/SLEEP** button, the snooze time increases by ten minutes up to 60 minutes.
After you set snooze, the real time will display. Press **SNOOZE/SLEEP** again to view the remaining snooze time for five seconds.
- 3 To cancel snooze (the alarm will not turn back on), press **ALARM 1** or **ALARM 2** or **standby on** (depending on the alarm that was set). The **SNOOZE** indicator disappears from the display.


To set the sleep timer:

- 1 Make sure the clock radio is turned on.
- 2 Press **SNOOZE/SLEEP** once. The "SLEEP" indicator appears in the display, and "90" appears (blinking) on the display (indicating that the clock radio will turn off after 90 minutes).
- 3 Repeatedly press **SNOOZE/SLEEP** to decrease the sleep timer in 10 minute increments.
- 4 After you set the sleep timer, the real time displays. Press **SNOOZE/SLEEP** again to view the remaining sleep time for five seconds.
- 5 To cancel the sleep function, repeatedly press **SNOOZE/SLEEP** until "0" shows on the display.

Troubleshooting

Caution

Do not try to repair the clock radio yourself. Doing so will invalidate your warranty.

Problem	Possible cause	Solution
The CD does not play	The disc may be inserted incorrectly.	Check the disc and insert it correctly.
	The disc may be dirty or defective.	Check the disc and make sure that is clean and not bent or scratched.
	The pickup lens may be dirty.	Clean the pickup lens.
	There is moisture or condensation in the player.	Let the player warm up to room temperature for 60 minutes, then try again.
	The source is not set to CD.	Set the source to CD.
Intermittent sound	The disc may be dirty or defective.	Check the disc and make sure that is clean and not bent or scratched.
	The pickup lens may be dirty.	Clean the pickup lens.
	The player is being subjected to excessive vibration or shock.	Place the player on a stable surface.
	Poor headphone connection.	Make sure that the headphones are firmly plugged in.
Noise or sound distorted on AM or FM radio broadcasts	FM—The antenna wire is not extended.	Extend the FM antenna.
	AM—The radio is not positioned correctly.	Rotate the radio until the best reception is obtained.
No sound	The volume control is turned down.	Increase the volume.
	The AC power adapter is unplugged.	Plug in the AC power adapter and press  (Standby/on) to turn on the radio.
No sound from headphones	The headphone plug is not inserted fully into the headphone jack.	Plug in the headphone connector firmly.
No sound in Line-in mode	The external device is not connected correctly.	Make sure that the connection is correct.
The alarm does not turn on	The alarm is not activated or set correctly.	Set and activate the alarm as described in “Setting the clock and the alarm” on page 15.
	The clock is not set.	Set the clock.

Legal notices

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

90-Day Limited Warranty

Insignia Products (“Insignia”) warrants to you, the original purchaser of this new **NS-CL02** (“Product”), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of 90 days from the date of your purchase of the Product (“Warranty Period”). This Product must be purchased from an authorized dealer of Insignia brand products and packaged with this warranty statement. This warranty does not cover refurbished Product. If you notify Insignia during the Warranty Period of a defect covered by this warranty that requires service, terms of this warranty apply.

How long does the coverage last?

The Warranty Period lasts for 90 days from the date you purchased the Product. The purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a retail store location, take your original receipt and the Product to the store you purchased it from. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from an online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain in-home warranty service for a television with a screen 25 inches or larger, call 1-888-BESTBUY. Call agents will diagnose and correct the issue over the phone or will have an Insignia-approved repair person dispatched to your home.

Where is the warranty valid?

This warranty is valid only to the original purchaser of the product in the United States, Canada, and Mexico.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as lightning strikes
- Accident
- Misuse
- Abuse
- Negligence
- Commercial use

- Modification of any part of the Product, including the antenna
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).

This warranty also does not cover:

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage supply
- Attempted repair by anyone other than a facility authorized by Insignia to service the Product
- Products sold as is or with all faults
- Consumables, such as fuses or batteries
- Products where the factory applied serial number has been altered or removed

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insignia-products.com

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2008 Best Buy Enterprise Services, Inc.

All rights reserved. INSIGNIA is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.



www.insignia-products.com

(877) 467-4289

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA 55423-3645

© 2008 Best Buy Enterprise Services, Inc.

All rights reserved. INSIGNIA is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries.
All other products and brand names are trademarks of their respective owners.

iPod® is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

ENGLISH
08-1466

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>