

INSIGNIA™

CD Boombox with FM Radio

NS-BIPCD03



NS-BIPCD03 CD Boombox with FM Radio

Contents

Introduction2

Safety information2

Features4

Setting up your boombox7

Using your boombox.....9

Troubleshooting13

Specifications.....15

Legal notices.....16

ONE-YEAR LIMITED WARRANTY - INSIGNIA17

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-BIPCD03 represents the state of the art in boomboxes and is designed for reliable and trouble-free performance.

Safety information

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
---	---	---



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your boombox. This label is located on the back of your boombox.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your boombox.



Your boombox utilizes a Class 1 laser to read Compact Discs. Your boombox is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD door is open and the system's interlock has failed or been defeated. You should avoid direct exposure to the laser beam at all times. Do not attempt to defeat or bypass the safety switches. **Do not stare into the beam.**

Important safety instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

 
- 14** To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.
- 15** The wall plug is the disconnecting device. The plug must remain readily operable.
- 16** Batteries should not be exposed to excessive heat such as sunshine, fire, or the like.

Features

Package contents

- Boombox
- AC Power Adapter
- *Quick Setup Guide*
- *User Guide*


Top view

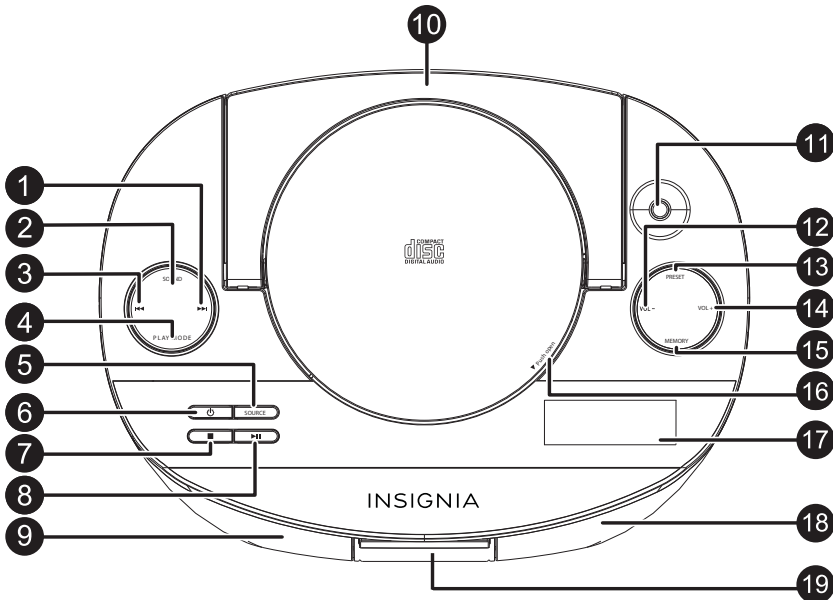

#	Item	Description
1	▶▶ (skip forward/tune up) button	In radio mode, press to tune to the next higher radio frequency. Press and hold to automatically tune to the next higher radio station. In CD or iPod mode, press to go to the next track or song. Press and hold for fast forward.
2	SOUND button	Press to select a preset sound equalization setting. Choices include JAZZ, POP, CLASSIC, ROCK, or FLAT.
3	◀◀ (skip back/tune down) button	In radio mode, press to tune to the next lower radio frequency. Press and hold to automatically tune to the next lower radio station. In CD mode, if the current track has been played for less than two seconds, press to go to the previous track. If the current track has been played for more than two seconds, press to go to the beginning for the current track. Press and hold this button for fast reverse.
4	PLAY MODE button	In CD playback mode, press to cycle through repeat / repeat all / random options.
5	SOURCE button	Press repeatedly to select the mode you want. Options include FM, CD, iPod DOC, iPod USB, or AUX.
6	⏻ (power) button	Press to turn your boombox on or off.
7	■ (stop) button	Press to stop playback.
8	▶▶ (play/pause) button	Press to start playback. Press again to pause playback. Press again to resume playback.


#	Item	Description
9	Left speaker	Produces sound from the left stereo channel.
10	Handle	Unfolds so you can carry your boombox.
11	FM antenna	Extend the FM antenna to improve the FM radio reception.
12	VOL- button	Press to lower the volume.
13	PRESET button	In radio mode, press to select a preset station.
14	VOL+ button	Press to raise the volume.
15	MEMORY button	In radio mode, press and hold to enter channel save mode. "P01" appears on the LCD screen. Press PRESET to select the channel number, then press MEMORY to confirm the save operation. You can save up to 10 FM presets.
16	CD compartment	Push to open the CD compartment. Place a CD, label side up, into this compartment to begin playback.
17	LCD display	Displays mode, frequency, and playback information.
18	Right speaker	Produces sound from the right stereo channel.
19	Lightning connector dock	Docking station for an iPhone 5 or other device with a lightning connector port.

 Back

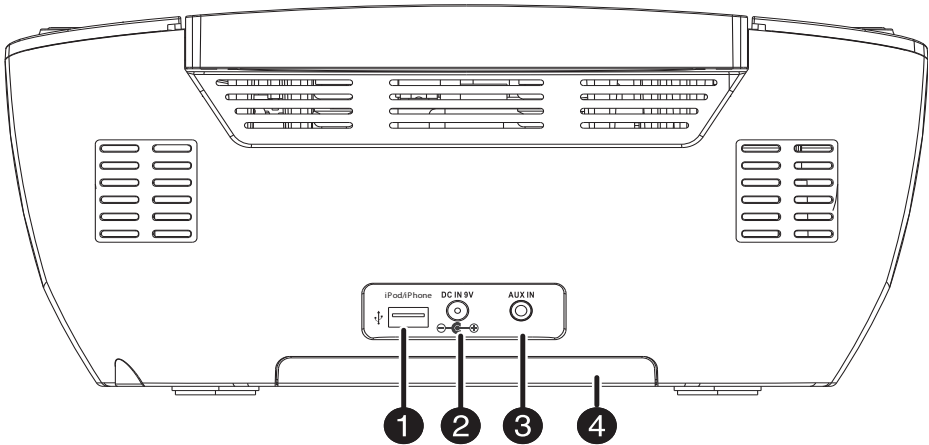

#	Item	Description
1	iPhone/iPod jack	A USB jack for connecting an iPhone or iPod for charging or playback. Can also charge other devices that use a USB cable. The charging voltage is 5V at 1A.
2	DC IN jack	Connect the AC Adapter to this jack.
3	AUX IN jack	Connect an external sound source, such as an MP3 player, to this connector.
4	Battery compartment	Install six "C" size batteries into this compartment.

 LCD display

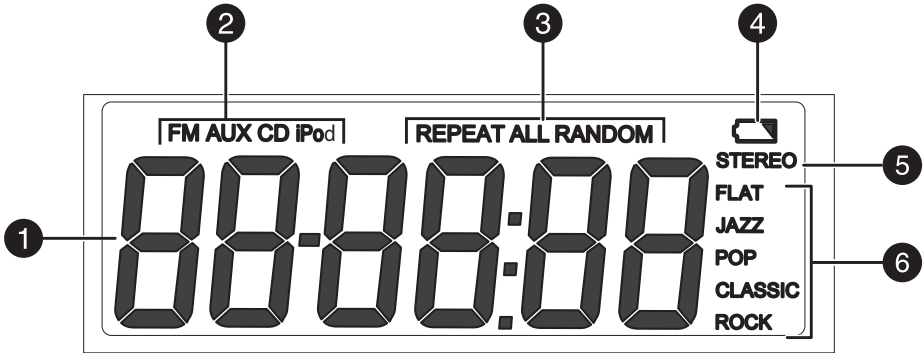

#	Item	Description
1	Track or file number, playing time, and operating information	Displays the currently playing track or file number, elapsed playing time, and other operating information.
2	Sound source	Displays the current sound source that is playing on your boombox.
3	Play mode indicator	Displays the play mode selected: REPEAT, REPEAT ALL, RANDOM.
4	Low battery indicator	Lights when the batteries are low and need to be replaced.
5	Stereo indicator	Lights when your boombox detects a strong FM signal when you are tuning to radio stations.
6	Sound mode	Lights to indicate the currently selected sound mode.

Setting up your boombox

Powering your boombox

Your boombox can be powered by either the included AC Adapter, or by using six “C” sized alkaline batteries (not included). Your boombox only operates on batteries if the AC adapter is unplugged.

Installing the batteries


To install the batteries:

- 1 Open the battery compartment on the bottom of your boombox.
- 2 Place six “C” size alkaline batteries (not included) into the battery compartment. Make sure to match the + and - on each battery to the + and - signs in the battery compartment.

- 3 Close the battery compartment until it clicks into place.

Note

The AC power adapter must be disconnected from the **DC IN** jack on the back of your boombox in order for your boombox to operate on battery power.

When the battery indicator  appears in the display, you need to replace the batteries.

Caution

Follow these precautions when using batteries in this device:

- Use only the size and type of batteries specified.
- Make sure that you follow the correct polarity as indicated in the battery compartment when installing batteries. Reversed batteries may cause damage to your boombox.
- Do not mix different types of batteries together (for example, alkaline, rechargeable, and carbon zinc), or semi-used batteries with fresh ones.
- If your boombox is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged, because they can overheat and rupture. (Follow battery manufacturers directions.).
- Do not throw batteries into a fire. Dispose of used batteries as hazardous waste.

Connecting the AC adapter


To use the AC power adapter:

- 1 Make sure that your local AC power source matches the voltage shown on the plate located on the AC power adapter. If it does not, do not use that power source.
- 2 Insert the small connector at the end of the AC power adapter cable into the **DC IN** jack on the back of your boombox.
- 3 Plug the AC power adapter into a wall power outlet.

Caution

To protect your boombox during thunderstorms, unplug the AC power adapter from the AC power outlet.

Note

Only use the supplied AC power adapter, which has the following specifications: DC 9V 2.2A 

Unplug both the DC plug and the adapter when not in use.

The batteries are automatically bypassed when the AC power adapter is used.

Using your boombox

Turning on your boombox

To turn on your boombox:

- Press **⏻** (power) on the top of your boombox.

Selecting the mode (source)

To select the mode (sound source):

- Press **SOURCE** repeatedly on the top of your boombox to select **FM**, **CD**, **iPod DOC**, **iPod USB**, **CD**, or **AUX**. The source you select appears on the display.

Volume control

After you select the mode you want, press **VOL+** or **VOL-** to set the volume to a comfortable level.

Using Radio mode

Radio mode is the default mode on your boombox the first time you turn it on. Thereafter, your boombox will turn on to the last mode selected when you turned it off.

Tuning to a station



To play the radio:

- 1 Press **⏻** (power) to turn on the boombox.
- 2 Press **SOURCE** repeatedly to select **FM** mode.
- 3 Press **⏪** or **⏩** to tune the radio up or down and select the station you want. When a strong FM signal is received, **Stereo** appears on the display.
- 4 Adjust the volume to a comfortable level by pressing either the **VOL+** or **VOL-** button.
- 5 To scan to a higher or lower frequency, press and hold **⏪** or **⏩** for one second. The radio automatically scans to the next station.
- 6 Press **⏻** (power) to turn off the boombox.

To improve FM reception:

- For FM reception, raise and extended the FM antenna. You may have to reposition the antenna for best reception.

To use presets:

- 1 Press  (power) to turn on your boombox.
- 2 Press **SOURCE** repeatedly to select **FM** radio mode.
- 3 Press  to tune the radio up or down and select the station you want.
- 4 To save the station as a preset, press and hold **MEMORY**. "P01" blinks on the display.
- 5 Press **PRESET** repeatedly to select the preset number (P01-P10) you want.
- 6 Press **MEMORY** to store the preset.
- 7 Repeat Steps 3 to 6 to store as many as ten FM presets.
- 8 To select a preset station, briefly press **PRESET** repeatedly until you reach the station you want.



Using the CD player

You can play audio CDs, CD-Rs, and CD-RWs.

Caution




Do not attempt to play DVDs, VCDs, or data CDs in your boombox. You may damage your unit.

To use the CD player:

- 1 Press  (power) to turn on your boombox.
- 2 Press **SOURCE** repeatedly to select **CD** mode.
- 3 Press the **OPEN** area on the CD door to open the lid.
- 4 Insert a CD, label side up.
- 5 Press the **OPEN** area on the CD door to close it. The total number of tracks appears on the display.
- 6 Press  (play/pause) to begin playback. The current track appears on the display. The CD stops when finished.

Note

If the door is opened during playback, playback stops immediately and any repeat mode setting is reset.

- 7 Control CD playback as follows:
 - Press  (play/pause) to pause playback. Press again to resume playback.
 - Press  (stop) to stop playback.
 - Press  once to skip to the next track.

- If the current track has played more than two seconds, press **⏮** to go the beginning of the currently playing track. Press **⏮** again to go to the previous track. If the current track has played for less than two seconds, press **⏮** to go the previous track directly.
- Press **⏭** and hold to fast forward. Release to stop the search.
- Press **⏪** and hold to fast reverse. Release to stop the search.
- Press **PLAY MODE** once to repeat the current track. "Repeat" appears on the display.
- Press **PLAY MODE** twice to repeat the entire CD. "Repeat All" appears on the display.
- Press **PLAY MODE** three times to randomly play the tracks on the CD. "Random" appears on the display.
- To return to normal playback, press **PLAY MODE** until the play mode indicators disappear from the display.

Note

- If a CD is inserted incorrectly, is dirty or damaged, is not present, or is a non-compatible format, "NO DISC" appears on the display.
- To prevent damage to the CD, never open the CD door while the CD is rotating and never touch the lens.
- Do not use the carrying handle when playing a CD. The CD player should only be used on a steady surface.
- Your CD boombox plays standard CDs and 3" CDs.

Selecting the sound equalization

To select the sound equalization:

- Press **SOUND** to select the sound equalization you want. Choose one of the following preset options: **JAZZ**, **POP**, **CLASSIC**, **ROCK**, or **FLAT** (no equalization).

Using an iPod/iPhone

You can connect an iPod or iPhone (not included) to your boombox to listen to the songs stored on the device.

To connect a newer iPod or iPhone to your boombox:

- 1 Insert an iPod Nano 7th, iPod Touch 5th, or iPhone 5, into the lightning connector on the front of the boombox.
- 2 Press **SOURCE** until "iPod DOC" appears on the display, then press the play button on either the iPod or your boombox to begin playback. If your iPod/iPhone is playing when you dock it with your boombox, it will automatically play without pressing the play button.
- 3 Control playback using the controls on the boombox.

To connect an older iPod or iPhone to your boombox:

- 1 For older iPod or iPhone, such as an iPhone 4, 4S, Touch 4th, Nano 6, or earlier, use an iPod or iPhone USB cable to connect to the iPod/iPhone USB jack on the back of your boombox.
- 2 Press **SOURCE** until "iPod USB" appears on the display, then press ►|| (play/pause) to start playback.
- 3 Adjust the volume to a comfortable level by pressing either the **VOL+** or **VOL-** button.
- 4 Press ◀◀ or ▶▶ to skip to the beginning of the current, last, or next track.

To charge the iPod/iPhone battery:

 
- Insert the iPod by lightning connector or iPod / iPhone USB Jack. The battery charging indicator appears on the iPod display.

Note

- When your iPod/iPhone is docked using the Lightning connector or USB, it will be charged only when your boombox is connected to AC power.
- When there is more than one iPod/iPhone connected to the boombox via Lightning connector and USB, both devices will be charged using AC power.

Playing music from an external sound source**To play music from an external sound source:**

- 1 Make sure that your boombox is turned off.
- 2 Connect an external sound source, such as an MP3 player, by plugging one end of an audio cable with a 3.5 mm plug (not included) into the **AUX In** jack on the back of your boombox and the other end into your playback device.

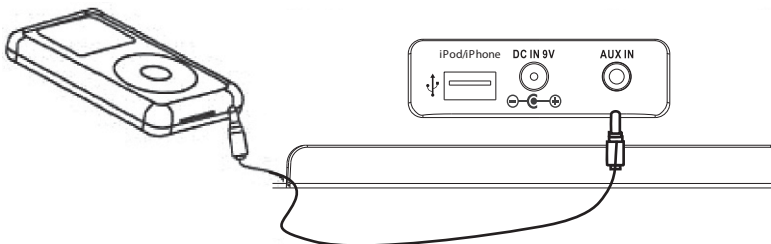

- 3 Press **SOURCE** repeatedly on the top of your boombox to select **AUX In**. "AUX" lights up on the display.

- 4 Start playback on the external device.
- 5 Press **VOL+** or **VOL-** to adjust the volume. You can also use the volume controls on the device to adjust the volume, but the volume knob on the boombox provides the best control.
- 6 Control playback using the controls on the external device.

Troubleshooting

Problem	Solution
My boombox won't turn on.	<ul style="list-style-type: none"> • Make sure that the power cord is fully inserted in the power outlet and firmly connected to the DC IN jack on the back. • If running on batteries, make sure the batteries are not dead.
No sound.	<ul style="list-style-type: none"> • Make sure that power is connected and your boombox is turned on. • Make sure that your external device is turned on and is playing. • Make sure that the volume on your external device is turned up and is not set to mute. • Make sure that the volume is not extremely low.
My boombox will not play in FM mode.	<ul style="list-style-type: none"> • Repeatedly press the SOURCE button to select FM mode. • Make sure that the radio is correctly tuned to an FM station. • Make sure that the FM antenna is extended.
My boombox will not play in CD mode.	<ul style="list-style-type: none"> • Repeatedly press the SOURCE button to select CD mode. • Make sure that the CD is correctly inserted with the label facing up. • Make sure that the CD is not a DVD. • Make sure that the CD is a compatible format (CD R/RW). • Make sure that the CD is clean.
The CD skips while playing.	<ul style="list-style-type: none"> • Make sure that the CD is not dirty or scratched. Clean the CD. • Make sure that you are using a standard CD (normal size and shape) or 3" CD. • Make sure your CD is a compatible format.
My iPod/iPhone won't play.	<ul style="list-style-type: none"> • Make sure that your iPod/iPhone is on and charged. • Repeatedly press the SOURCE button to select iPod DOC or iPod USB mode, whichever is correct. • Make sure that your iPod/iPhone is not paused. • Make sure that your iPod/iPhone is properly docked. • Make sure that there are songs in your iPod/iPhone. • Make sure that the hold function is not activated on your iPod/iPhone. • Make sure that your iPod/iPhone is working properly before you dock it into your boombox. • Remove your iPod/iPhone from the docking compartment. Clean the connectors in the docking compartment and on your iPod/iPhone, then replace it in the docking compartment. • Your iPod/iPhone software may be outdated. Upgrade its software. For details, visit www.apple.com. • Make sure your iPod/iPhone volume is turned up and it is not muted.

Problem	Solution
My external audio device (MP3 player) won't play.	<ul style="list-style-type: none"> • Make sure that your external device is on and charged. • Repeatedly press the SOURCE button to select AUX In mode. • Make sure that your external device is not paused. • Make sure that the audio cable is fully inserted into the external device and the AUX IN jack on the boombox. • Make sure that there are songs in your external device. • Make sure that your external device is working properly before you connected it to your boombox. • Make sure your external device volume is turned up and it is not muted. • Make sure your audio cable is not damaged or broken.
My iPod won't charge when it's docked.	<ul style="list-style-type: none"> • Make sure that your iPod is properly docked or connected to the USB jack and your boombox is set to iPod DOC or iPod USB mode, whichever is correct. • Make sure that your iPod battery is not faulty. • Make sure that the power cord is plugged in. An iPod will not charge from battery power.
What happens when I receive a phone call on my iPhone when it's docked?	<ul style="list-style-type: none"> • You must pick up the call on your iPhone, then your boombox is muted until the call is completed, at which time it resumes playing music. • After the call, your boombox stays in iPod mode and resumes playing music.

Maintaining

Handling discs

- To keep a disc clean, do not touch the play side (non-label side) of the disc.
- Do not attach paper or tape to the disc.



Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat, and never leave discs in a parked car exposed to direct sunlight.

Cleaning discs

- Before playback, wipe the disc outwards from the center (not in a circle) with a clean cloth.



- If you cannot clean the disc with a dry cloth, wipe the disc with a slightly moistened, soft cloth, then dry it with a soft cloth.
- Do not use any solvents, such as paint thinner, benzene, commercially available cleaners, or anti-static spray designed for vinyl records.

Cleaning your boombox

To prevent fire or shock hazard, disconnect your boombox from the AC power source when cleaning.

The finish on your boombox may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.

Mild soap and a damp cloth may be used on the front panel.

Specifications

Dimensions (WxHxD)	11.8 x 5.4 x 8.9 in. (299.7 x 137 x 266.7 mm)
Weight	5.5 lbs. (2.5 kg)
Power source	Adapter - DC 9V 2.2 A Batteries - 6 "C" size
Output power	3W x 2 RMS
Speaker	3" ferrite x 2
CD compatibility	CD, CD-R/RW
FM frequency	87.5 - 107.9 MHz
Radio presets	10
iPod/iPhone dock	Lightning connector
USB jack	USB 2.0 (to play and charge iPod/iPhones) Charging current 5V at 1A
AUX In jack	3.5 mm

Legal notices

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canadian Notice

CAN ICES-3 (B)/NMB-3(B).

ONE-YEAR LIMITED WARRANTY - INSIGNIA

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded or Future Shop branded retail store or online at www.bestbuy.com, www.bestbuy.ca, or www.futureshop.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy or Future Shop retail store location, please take your original receipt and the Product to any Best Buy or Future Shop store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy or Future Shop online web site (www.bestbuy.com, www.bestbuy.ca, or www.futureshop.ca), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY for Future Shop call 1-800-663-2275. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy or Future Shop branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence

- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 Best Buy. All rights reserved.

Made in China

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 Best Buy. All rights reserved.

Made in China.

V4 ENGLISH
14-0997

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>