


Congratulations on your purchase of a high-quality Insignia product. Your Insignia digital camera is designed for reliable and trouble-free performance. Use this guide for initial setup of your camera. If you have questions, see your *User Guide* on the enclosed CD for more information.

Package contents

- 10 mp digital camera
- USB cable
- Quick Setup Guide*
- Li-ion battery (1)
- Battery charger
- CD with *User Guide*
- Wrist strap

Features


Front

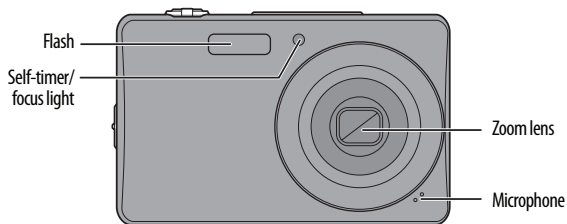


Back




Top

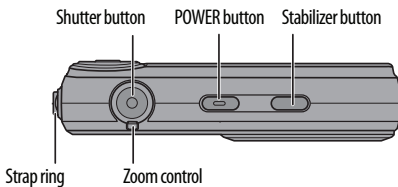

Bottom



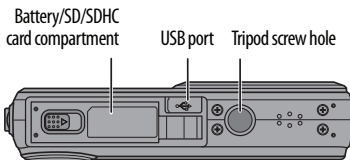


Left

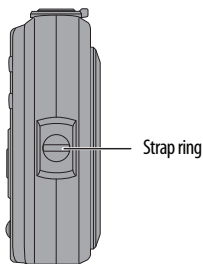


Installing the battery

- 1 Slide the lock to the unlocked position, then open the battery/SD/SDHC card compartment on the bottom of your camera.
- 2 Insert the battery matching the + and - symbols on the battery with the + and - symbols in the compartment.
- 3 Close the compartment cover, then slide the lock into the locked position.

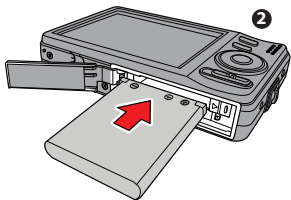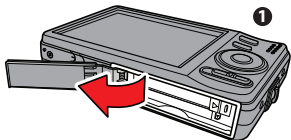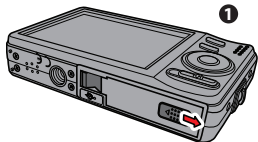

Inserting a memory card

- 1 Slide the lock to the unlocked position, then open the battery/SD/SDHC card compartment on the bottom of your camera.
- 2 Insert an SD or SDHC card into the card slot with the card's metal contacts facing the front of the camera.
- 3 Close the compartment cover, then slide the lock into the locked position.

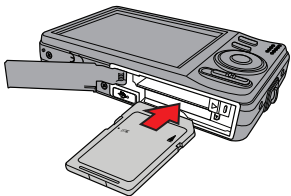

Note: To remove the card, gently press on the edge of the card and release it. Pull the card out, then close and lock the battery cover.


Turning the power on and off


- 1 Press and hold the **POWER** button until the startup image displays. If sounds are enabled, the startup sound plays and the zoom lens extends.
- 2 Press the **POWER** button again to turn the camera off.

Taking photos

NOTE: The zoom lens does not extend if the mode slider is set to Playback mode when the camera is on.

To take a photo:

- 1 Turn the camera on, then slide the mode slider to  (Photo mode).
- 2 Press the **POWER** button to turn the camera on.
- 3 Frame the shot using the focus bracket on the LCD screen.
- 4 Press the shutter button halfway. The camera automatically adjusts the focus and exposure. When the camera is ready to capture the image, the focus bracket turns green, and the aperture value, shutter speed, and ISO setting are displayed.
- 5 Press the shutter button to capture the image.




NOTE: If the shake warning icon () appears, hold the camera steady, with your arms at your side, or use a tripod to stabilize the camera and prevent blurred images.




Recording videos

You can record videos with your camera. The available recording time depends on the available capacity of the internal memory or the memory card in use. Videos can be recorded until the maximum memory capacity has been reached. In VGA mode, about 15 minutes of video can be recorded for every gigabyte of memory space.

To record video:

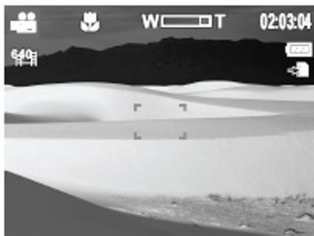



- 1 Turn the camera on, then slide the mode slider to  (Video mode).
- 2 Focus your camera on the subject that you want to record.
- 3 Press the shutter button to start recording.
- 4 Press  to pause recording.
- 5 Press  again to continue recording.
- 6 Press the shutter button to stop recording.



Viewing photos and videos

Slide the mode slider to **Playback** mode to view images and videos. When your camera is in Playback mode, images and videos are displayed on the LCD screen one by one. If the file is a video, the first frame of the video is displayed.

 To view photos and videos:


- 1 Switch the camera to  (Playback mode). The LCD screen displays an image.
- 2 Press  or  to see the next/previous image or video.
- 3 Press  to play a video.


Using menus

Your camera has four menus.

Record menu 




Setup menu 

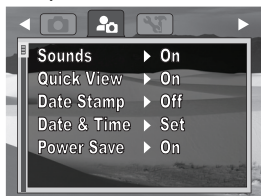

Tools menu 





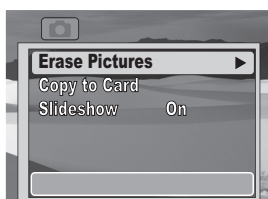






Playback menu 



NOTE: screens shown with Simple Mode set to Off

To use a menu:

- 1 To use the record, setup, or tools menus, slide the mode slider to  (Photo mode) or  (Video mode).
Or,
To use the playback menu, slide the mode slider to  (Playback mode).
- 2 Press . The on-screen menu opens.
- 3 To access the setup or tools menu, press  or .
- 4 Press  or  to select a setting, then press **SET** to open the sub-menu.

- 5 Press ▲ or ▼ to select an option, then press **SET** to save your selection.
- 6 Press  to close the menu.

One-year limited warranty

See the *User Guide* on the included CD-ROM or visit www.insigniaproducts.com for details.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>