



Congratulations on your purchase of a high-quality Insignia product. Your Insignia digital camera is designed for reliable and trouble-free performance. Use this guide for initial setup of your camera. If you have questions, see your *User Guide* for more information.

Package contents

AV cable

USB cable

 
Quick Start Guide

2 AA alkaline batteries

CD with *User Guide*

Wrist strap

Getting to know your camera

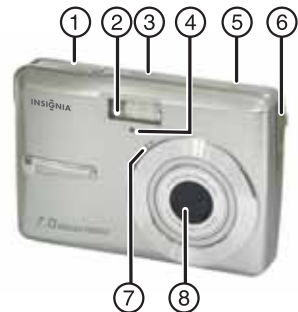


- 1 Shutter button
- 2 Flash
- 3 Power button
- 4 Self-timer lamp
- 5 Speaker
- 6 USB/AV terminal
- 7 Microphone
- 8 Lens



- 9 Strap ring
- 10 Zoom button
- 11 Playback button
- 12 Menu button
- 13 Four-way control

 - Flash button
- Macro button
- SET/DISP button



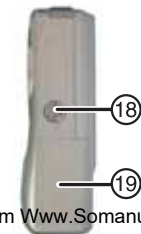


- 14 LCD screen
- 15 Power Indicator
- 16 ASM/Delete button
- 17 Mode button
- 18 Tripod socket
- 19 Battery and memory card cover

Note: The memory card slot is located behind the

Installing batteries

   
- 1 Open the battery cover by sliding it in the direction indicated by the arrow.
- 2 Insert two AA batteries with the positive (+) and negative (-) terminals matching the directions indicated inside the battery compartment.
- 3 Close the battery cover.

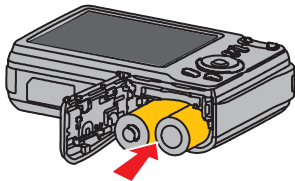

Inserting the memory card


- 1 Open the battery cover.
- 2 Insert the card with the label facing up and with the arrow pointing in.
- 3 Close the battery cover.

 Note: To remove the card, gently press on the edge of the card and release it. Pull the card out and close the battery cover.

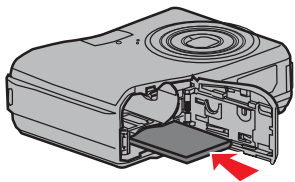

Turning the power on and off

 - 1 Press **POWER** ① to turn the camera on in *REC* mode.
- OR -
Press **PLAYBACK** ② to turn the camera on in *PLAYBACK* mode.
- 2 Press **POWER** ① again to turn the camera off.

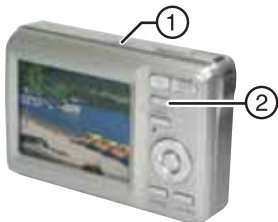

Power-saving function

To save battery power, the LCD monitor automatically turns off one minute after the last control has been accessed. Press any button except **POWER** to turn on the display. You can change the power save setting in the *Setup* menu.

After the power-saving function has been active for one minute, power turns off completely. Press **POWER** or **PLAYBACK** to restore power.

The power save feature will not activate while you are:

- Recording or playing movie clips or audio files
- Playing a slideshow
- Connecting the camera to a computer or printer with the USB cable

Changing the mode

You can record images and voices in *REC* mode. Use *PLAYBACK* mode ① to replay, delete, or edit images on the LCD display.

To switch between *REC* mode and *PLAYBACK* mode

In *REC* mode, press **PLAYBACK** ① to switch to *PLAY* mode.

In *PLAY* mode, press **PLAYBACK** ① or **MODE** ② to switch to *REC* mode.

To select *REC* mode

- 1 Set the camera to *REC* mode.
- 2 Press **MODE** to display the scene mode palette.
- 3 Use the four-way control to select a mode and press **SET** to confirm the setting.



Using menus

Use the four-way control and **SET** to make menu selections.

 
To use the REC menu

- 1 Turn the power on and set the camera to *REC* mode.
- 2 Press **MENU** to display the *REC* menu.
- 3 Press ◀ or ▶ to select a menu item and ▲ or ▼ to change a setting.
- 4 Press **MENU** or **SET** to save settings and close the menu.



To use the setup menu

- 1 Turn the camera on and set the camera to *REC* or *PLAYBACK* mode.
- 2 Press **MENU** to display the *REC* or *PLAYBACK* menus.
- 3 Use the four-way control to select **SETUP**, then press **SET** to display the *SETUP* menu.
- 4 Press ▲ or ▼ to select a menu item, then press ▶ or **SET** to display it.
- 5 Press ▲ or ▼ to select an option, then press ◀ or **SET** to apply the setting.
- 6 Press **MENU** to close the menu.

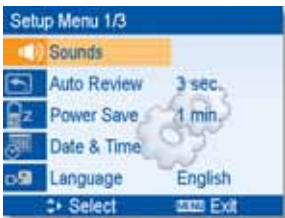

Taking pictures

 
- 1 Turn the power on and set the camera to *REC* mode.
- 2 Aim the focus area ① on the subject that you want to take a photo of.
- 3 Press the shutter button half-way down to focus the image.

The focus area turns green while in focus, the aperture value ②, shutter speed ③, and ISO value ④ are displayed.

If shutter speed is slow or picture may blur, the shake warning icon may appear on the display. To avoid this, use a tripod to stabilize the camera when recording images.

- 4 Press the shutter button fully to take the picture.

Note: Take care not to block the lens with your fingers or the wrist strap.

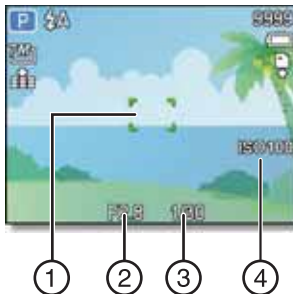

Recording video clips

- 1 Turn the power on.
- 2 Press the **SCN** button ① to display the mode screen, then select the *MOVIE* mode.
- 3 Center your subject in the focus area ⑤. Available recording time is displayed ④.
- 4 Press the shutter button ② to start recording. Use the zoom button ③ to adjust image size.
- 5 Press the shutter button ② again to stop recording.

Note: The camera will automatically stop recording when memory capacity has been reached.



Playing back images

- 1 Turn the power on and set the camera to *PLAYBACK* mode.
The last-recorded image appears on the display. If no images are stored, *[No image]* appears on the display.
- 2 Press ◀ to see the previous image or ▶ to see the next image.

Note: Hold the ◀ or ▶ buttons down to scroll through images quickly.

 
Connecting the camera to a computer

There are two ways to download files from the camera's internal memory or memory card to a computer:

- Insert the memory card into a card reader
 - OR -
- Connect the camera to a computer using the supplied USB cable

Using the card reader

- 1 Eject the memory card from the camera and insert it in a card reader connected to your computer.
- 2 Open **My Computer** or **Windows Explorer** and double-click the icon for the memory card. On Macintosh computers, the card will appear on the desktop. Double-click the icon to access images.
- 3 Copy images from the card to a folder on your computer.

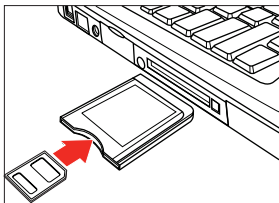


Connecting the camera to a computer with the USB cable

- 1 Connect the supplied USB cable to the computer's USB port and turn on the camera.

The LCD screen turns off when connection has been made.

- 2 Open **My Computer** or **Windows Explorer**. *Removable Disk* appears in the drive list. On Macintosh computers, the card will appear on the desktop. Double-click the icon to access images.

 - 3 Double-click the *Removable Disk* icon to view its contents. Pictures and video clips stored on the camera are located in the *DCIM* folder.

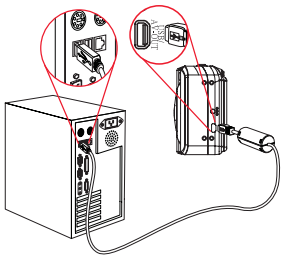

Accessing the User Guide

- Insert the enclosed mini-CD into your computer, then open the *User Guide* file.
- OR -
- Visit the Insignia website at www.Insigniaproducts.com and click on the **Digital Camera** link under *Products*.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>