

 
 
 
## ■ HAND BLENDER



GB  
IE  
CY

**HAND BLENDER**  
Operating instructions

KOMPERNASS GMBH · BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompernass.com  
ID-Nr.: KH498-03/08-V1

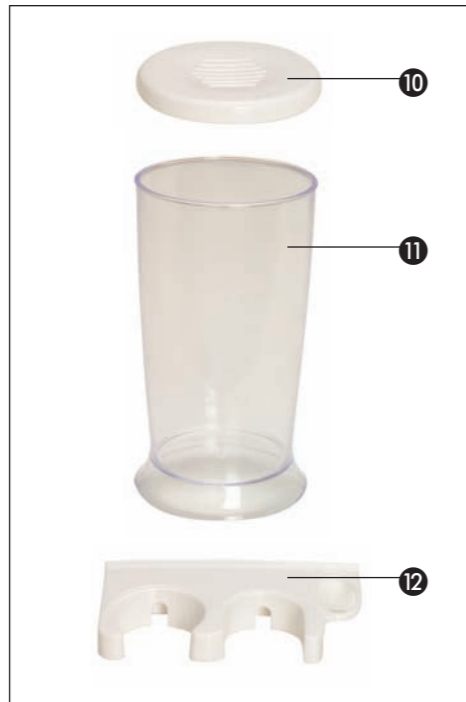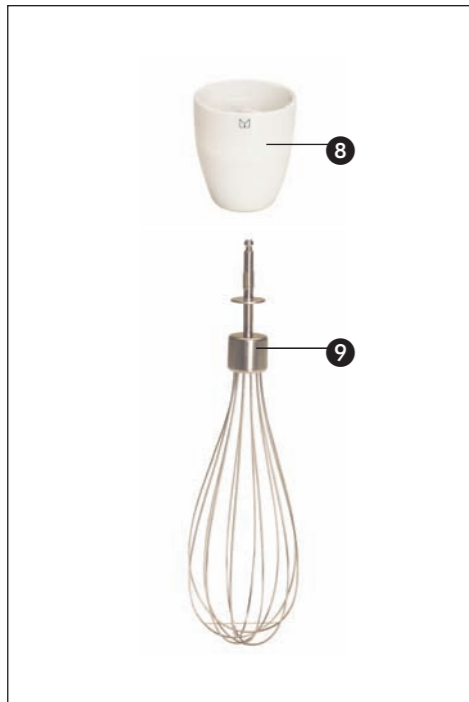


<b>CONTENT</b>	<b>PAGE</b>
<b>Technical data</b>	<b>2</b>
<b>Description of appliance/attachments</b>	<b>2</b>
<b>Safety instructions</b>	<b>2</b>
<b>Proper Use</b>	<b>3</b>
<b>Utilisation</b>	<b>3</b>
<b>Assembling</b>	<b>3</b>
To assemble the hand blender	3
Assembling the wire whisk	3
Assembling the liquidiser	4
<b>Operation</b>	<b>4</b>
<b>Wall mounting</b>	<b>4</b>
<b>Cleaning</b>	<b>4</b>
<b>Disposal</b>	<b>5</b>
<b>Warranty &amp; Service</b>	<b>5</b>
<b>Importer</b>	<b>5</b>

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass the manual on to whomsoever might acquire the scale at a later date.

# HAND BLENDER KH 498

## Safety instructions

### Technical data

Mains voltage:	220 - 240V ~ 50/60 Hz
Rated output:	300 W
Protection class:	II 
CO Time:	1 Minute

### CO Time

The CO Time (Continuous Operation Time) details how long an appliance can be operated without the motor overheating and becoming damaged.

After the appliance has run for this period it must be switched off until the motor has cooled itself down.

### Capacity

Measuring cup:	500 ml
Max. capacity:	300 ml

### Description of appliance/ attachments

- ① Switch (Standard Speed)
- ② Turbo-Switch (High Speed)
- ③ Motor unit
- ④ Hand blender
- ⑤ Bowl lid
- ⑥ Knife
- ⑦ Bowl
- ⑧ Whisk holder
- ⑨ Whisk
- ⑩ Measuring cup lid
- ⑪ Measuring cup (Capacity - max. 500 ml)
- ⑫ Wall bracket incl. screws & plugs

### **Danger of electric shock!**

- Only connect the hand blender to correctly installed wall sockets having a mains current of 220 - 240 V at 50/60 Hz.
- Unplug the hand blender from the socket if you notice any faulty operation and when you decide to clean it.



Under no circumstances may the motor unit be immersed in liquids, or liquids be permitted to permeate into the motor unit housing.

- Do not expose the appliance to humidity and do not use it outdoors.
- Should liquids nonetheless gain entry into the appliance housing, immediately unplug the appliance from the mains and arrange for it to be repaired by qualified specialists.
- Never touch the hand blender, power cable or plug with wet hands.
- To unplug the appliance, always pull the plug from the socket, do not pull the cord itself.
- Do not crease or crimp the power cable and place it in such a way as to prevent anyone from stepping on or tripping over it.
- Arrange for defective power plugs and/or cables to be replaced as soon as possible by a qualified technician or by our Customer Service Department to avoid the risk of injury.
- You may not open the motor unit housing of the hand blender. In such an event, safety is not guaranteed and the warranty shall become void.

- Do not allow individuals (including children) to use the appliance whose physical, sensorial or mental abilities or lack of experience and knowledge hinder their safe usage of it if they have not previously been supervised or instructed in its correct usage.
- Tell children about the appliance and its potential dangers so that they do not play with it.

## Proper Use

The hand blender is intended exclusively for the processing of foodstuffs in small quantities. It is intended exclusively for private domestic use only. The hand blender is not intended for commercial use.

## Utilisation

### **Note:**

With the measuring cup **11** you can measure amounts of fluids up to 500 ml. For food processing, fill it to a maximum of 300 ml, otherwise fluids could overflow from the measuring cup **11**.

- With the hand blender **4**, you can prepare dips, sauces, soups or baby food.

### **Note:**

Do not use the hand blender for the preparation of solid foods. This would cause irreparable to damage the appliance!

- With the whisk **9**, you can whip cream, beat egg whites and mix pastry, desserts or mayonnaise.
- With the liquidiser, comprising of the knife **6** and bowl **7**, you can liquidise solid foods.

### **Note:**

Do not use the liquidiser for processing liquids. This would cause irreparable to damage the appliance!

## Assembling


### **Injury hazard:**

Only insert the plug into the power socket after you have assembled the appliance for use.

### To assemble the hand blender

- ⇒ Place the hand blender **4** on the motor unit **3**, ensuring that it clicks in audibly.


### **Note:**

The arrows on the motor unit and the accessory must stand one above the other .

### Assembling the wire whisk

- ⇒ Insert the whisk **9** into the whisk holder **8**.
- ⇒ Place the assembled whisk on the motor unit **3**, ensuring that it clicks in audibly.

### **Note:**

The arrows on the motor unit and the accessory must stand one above the other .


## Assembling the liquidiser

### **⚠ Warning:**

The blade is extremely sharp.  
Handle it with great care. Risk of injury!

- ⇒ Place the blade **6** carefully on its retainer in the bowl **7**.
- ⇒ Fill the bowl with the foodstuffs you wish to liquidise.
- ⇒ Place the lid **5** over the vessel and turn it until tight. Ensure that the lid lugs are guided into the grooves of the vessel on the edge.
- ⇒ Place the motor unit **3** on the lid **5**, ensuring that it clicks in audibly.

### **i Note:**

The arrows on the motor unit and the accessory must stand one above the other .

## Operation

### **⚠ Warning:**

Foodstuffs should not be too hot.  
Squirted-out contents may cause scalding.

### **⚠ Fire Danger:**

Never exceed the maximum operating duration of 1 minute for soft foodstuffs, respectively, 15 seconds for solid foodstuffs. Allow the appliance to cool down for 2 minutes before switching it on again.

When you have assembled the hand blender for your particular purpose, place ...

- ⇒ the plug in the mains socket.
- ⇒ Hold down the switch **1** to process the foodstuffs at the standard speed.
- ⇒ Hold down the turbo-switch **2** to process the foodstuffs at the higher speed.
- ⇒ When you have completed processing the foodstuffs, simply release the switch.

## Wall mounting

Included are 2 plugs and 2 screws to enable the wall bracket **12** to be assembled. We recommend mounting the appliance close to a power point

- ⇒ Mark the position of drill holes using the appliance holder **12**.
- ⇒ Bore the holes with a 6 mm drill.
- ⇒ Insert the dowels into the drill holes.
- ⇒ Position the openings of the wall bracket over the bored holes, then fix it using both screws.

## Cleaning

### **⚠ Danger of electrical shock!**

Before you clean the hand blender, unplug the appliance from the power socket. Under no circumstances may the motor unit **3** be cleaned by immersing it in water or holding it under running water.

### **⚠ Danger of injuries!**

To prevent injuries, exercise caution when handling the extremely sharp blade **6**. Reassemble the liquidiser after use and cleaning to prevent injuries from exposed knife blades. Keep the blade out of the reach of children.

### **⚠ Attention!**

The attachments of the hand blender may not be cleaned in a dishwashing machine, this would damage them.

- ⇒ Unplug the power cord from the wall socket.
- ⇒ Clean the motor unit **3**, the handblender **4**, the lid **5** and the whisk holder **8** with a well squeezed out sponge.
- ⇒ Ensure that no water can enter the openings of **4** the hand mixer.
- ⇒ Clean the rest of the attachment components under running water and dry them off well with a dish-towel.

## Disposal



**Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC.**

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally friendly manner.

## Warranty & Service

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the case of a warranty claim, please make contact by telephone with our service department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, not for wearing parts or for damage to fragile components. This product is for private use only and is not intended for commercial use.

The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

### **GB** DES Ltd

Units 14-15  
Bilston Industrial Estate  
Oxford Street  
Bilston  
WV14 7EG  
Tel.: 0870 787 6177  
Fax: 0870 787 6168  
e-mail: support.uk@kompernass.com

 
 
### **IE** Kompernass Service Ireland

c/o Irish Connection  
41 Harbour view  
Howth Co. Dublin  
Tel: 087-99 62 077  
Fax: 18398056  
e-mail: support.ie@kompernass.com

## Importer

KOMPERNASS GMBH  
BURGSTRASSE 21  
D-44867 BOCHUM

[www.kompernass.com](http://www.kompernass.com)





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>