

LED Camera Lamp KH 3350

Please read these operating instructions carefully before the first use of the appliance and keep them in a safe place for later reference. Pass these operating instructions on to whoever might acquire the appliance at a future date.

Intended use

This LED Camera Lamp is intended exclusively for non-commercial use as extra illumination in photo and video recordings.

Any other, or an additional, usage is considered as improper and can lead to damage. No liability/warranty will be granted for damages resulting from improper use or from unauthorized modifications of the appliance.

Safety Instructions


For safe handling of the device observe the following safety information:



This LED Camera Lamp uses Class 1 LEDs. Do not look directly, unprotected or for a longer period in the light beam.

- Do not direct the beam of light directly into the eyes of other people or animals.
- Before use check the device for visible external damage. Do not take into use an appliance that is damaged or has been dropped.
- Arrange for a damaged unit to be replaced by Customer Services.
- Do not make any unauthorised modifications or changes to the unit.
- Protect the device from moisture and liquid penetration.
- Do not use the appliance adjacent to open flames.

Interaction with batteries

 Danger exists from uses other than those intended!

- Do not throw batteries into a fire.
- Never short-circuit batteries.
- Do not attempt to recharge batteries.
- Regularly check the condition of the batteries. Leaking battery acid can cause permanent damage to the appliance. Special care should be taken when handling a damaged or leaking battery. Risk of acid burns! Wear protective gloves.
- Store batteries in a place inaccessible to children. If swallowed seek immediate medical attention.
- If you do not intend to use the appliance for an extended period, remove the batteries.

Items supplied

LED Camera Lamp
2 x 1.5 V Batteries Type AAA/Micro/LR03
This operating manual

Check that all of the listed items supplied are present and do not show signs of damage. In the event of an incomplete delivery or damage due to defective packaging or transport, contact the Service Hotline (see "Warranty and Service").

Inserting the batteries

To operate the LED Camera Lamp, 2 x 1.5V Batteries of the type AAA/Micro (supplied) are required.

- Open the battery compartment cover on the rear panel.
- Insert 2 AAA/Micro batteries into the battery compartment. Pay heed to the polarity markings shown in the battery compartment.
- Then close the battery compartment by replacing the cover and letting it snap into place.

Mounting the LED Lamp

The LED Camera Lamp can be screwed to a tripod with the 1/4" thread or mounted with the knurled screw onto the camera accessory shoe.

Mounting onto a camera

Push the LED Camera Lamp to the stop in the camera accessory shoe and then secure it with the knurled screw.

Switching the LED lamp on and off

With the slide switch on the appliance top panel, you can turn the LED Camera Lamp on and off. Slide the switch to the "ON" position to turn the LED Camera Lamp on. Slide the switch to the "OFF" position to turn the LED Camera Lamp off.

Cleaning

Important!

Ensure that no liquids can permeate into the interior of the LED Camera Lamp. It could cause irreparable damage to the appliance. Clean the housing with a lightly moistened cloth. Do not use abrasive or aggressive cleaning materials.

Storage

If you do not intend to use the appliance for a long time, remove the batteries and store it in a clean, dry place.

Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.

Disposing of batteries

Do not dispose of batteries with household waste.

Every consumer is statutorily obliged to dispose of batteries at a collection site of his community/city district or at a retail store. This obligation is intended to ensure that batteries are disposed of in an environmentally safe fashion. Only dispose of batteries when they are fully discharged.



Dispose of the packaging materials in an environmentally responsible manner.

Technical Data

Operating voltage:	3 V DC (2 x 1.5 V Batteries Type AAA/Micro/LR03)
Operating duration:	approx. 2 h
Dimensions (W x D x H):	approx. 4 x 7 x 4.7 cm
Weight:	approx. 40 g (without batteries)
Operating temperature:	5°C - 40°C
Colour temperature:	white (approx. 5500 Kelvin)

Notes on the EC Declaration of Conformity



This appliance fulfills, with regard to compliance with the essential requirements and other relevant regulations, the European Directive for Electromagnetic Compatibility 2004/108/EC. The complete original declaration of conformity can be obtained from the importer.

Warranty and Service

You receive a 3-year warranty for this appliance as of the purchase date. This appliance has been manufactured with care and meticulously examined before delivery.

Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured. The warranty covers only claims for material and manufacturing defects, not for transport damage, wearing parts or for damage to fragile components, e.g. buttons or batteries.

This appliance is intended solely for private, not commercial, use. If this product has been subjected to improper or inappropriate handling, abuse, or modifications not carried out by one of our authorised sales and service outlets, the warranty will be considered void. Your statutory rights are not restricted in any way by this warranty. The warranty period is not extended by repairs effected under warranty. This applies also to replaced and repaired parts.

Damages or defects discovered after purchase are to be reported directly after unpacking, at the latest two days after the purchase date.

Repairs carried out after lapse of the warranty period are subject to charge.

DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)
e-mail: support.uk@kompennass.com

Kompennass Service Ireland

Tel: 1850 930 412 (0,082 EUR/Min.)
Standard call rates apply. Mobile operators may vary.
e-mail: support.ie@kompennass.com

Importer

KOMPENASS GMBH
BURGSTRASSE 21
44867 BOCHUM, GERMANY

www.kompennass.com

ID no.: KH3350-04/10-V2

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>