


## ■ ELECTRIC HOT TRAY



KH 1610

GB **Electric hot tray**  
IE **Operating instructions**  
CY

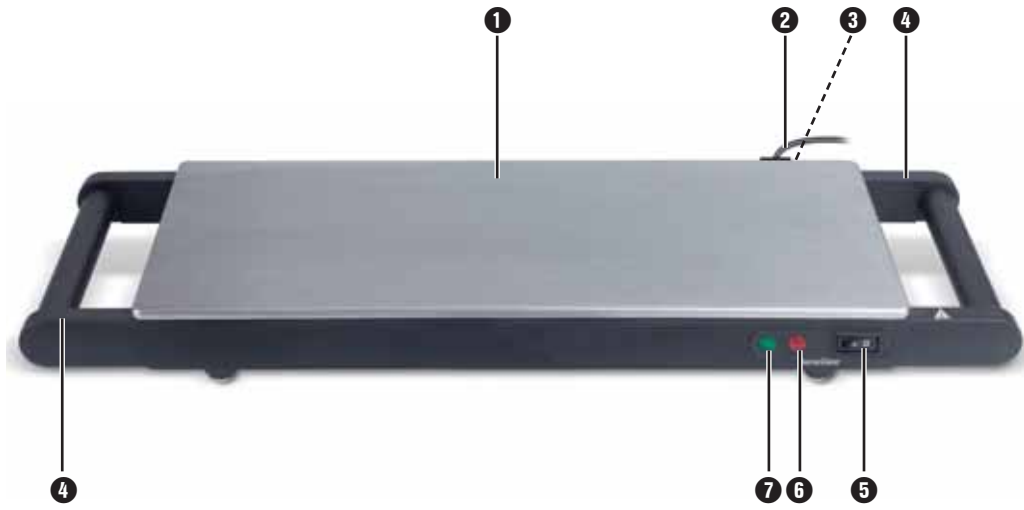

# ELECTRIC HOT TRAY

## KH1610

---

### Intended use

---

This appliance is designed for keeping food warm in domestic households and is only to be utilised in dry rooms.


This appliance is not intended for the warming or heating up of foodstuffs or other materials directly on the hotplate.

This appliance is NOT intended for use in commercial or industrial applications or for use outdoors.

### Safety information

---

#### **To avoid potentially fatal electric shocks:**

 Ensure that the appliance, the power cable and the power plug are NEVER submersed in water or other fluids.

- Connect the appliance only to electrical sockets supplying a level of energy that complies with the details on the rating plate.
- Ensure that the power cable never becomes wet or damp during operation. Lay the cable so that it cannot be clamped or damaged in any way.
- Always remove the power plug from the wall socket after use.

Simply switching the appliance off is not sufficient, as the appliance is under power for as long as the plug is connected to the socket.


- Protect the food warmer from damages: The appliance may not be taken into use if the food warmer is damaged in any way.

In this case, immediately remove the plug from the wall socket and arrange for the appliance to be repaired.

- To avoid unnecessary risks, in the event of damage to the plug and/or the power cable arrange for it/them to be exchanged as soon as possible.

#### **To avoid the risks of fire or injury:**

- NEVER touch the hotplate when the appliance is in use. It can get very hot.
- Overheated foodstuffs could begin to burn! Never let the appliance work without supervision.
- Additionally, NEVER position the appliance below inflammable objects, especially not below curtains, drapes or hanging cupboards.
- NEVER attempt to warm-up tightly sealed containers. Due to heat expansion the container could explode.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the appliance.
- When it is in use, take hold of the appliance ONLY with the grips.
- Do not use an external timing switch or a separate remote control system to operate the appliance.

 Attention! Hot surfaces!

### Items supplied

---

Electric hot tray  
Power cable  
Operating instructions

### Technical data

---

Voltage : 230V~50Hz  
Power consumption : 1100 W

## Appliance description

---

- ❶ Hotplate
- ❷ Power cable
- ❸ Connection socket
- ❹ Grip
- ❺ On/Off switch
- ❻ Control lamp "Mains power connected"
- ❼ Control lamp "Ready for use"

## First implementation

---

- Remove all packaging materials from the appliance and then clean it as described in the chapter "Cleaning and Care".
- Place the appliance on a dry, flat and heat-resistant surface.
- Warm the appliance up as described in the chapter "Utilisation".

### **ⓘ Note:**

On the first usage, a slight odour can occur (minimal smoke development is also possible). This is normal and stops after a short time. Provide for sufficient ventilation. For example, open a window.

- Remove the plug from the wall power socket.

## Utilisation

---

- Place the appliance on a dry, flat and heat-resistant surface.
- First insert the plug of the power cable ❷ into the connection socket ❸ and then connect the power cable ❷ with a wall power socket. The control lamp "Mains power connected" ❻ glows.

- Position the On/Off switch ❺ at "On" (-). As soon as the appliance has reached its highest temperature the control lamp "Ready for use" ❼ glows.
- Position the On/Off switch ❺ at "O".
- First remove the plug from the wall power socket and then the plug from the connection socket ❸ on the appliance. The appliance is now independent from mains power and retains its heat for approx. one hour.

### **⚠ Risk of Burns!**

Take hold of the food warmer ONLY by means of the grips ❹ provided on it. The other appliance parts will be very hot!

- Place the food warmer at the place where you wish to use it.

### **ⓘ Note:**

You can also leave the appliance connected to mains power after it has been warmed up.

It could then happen that, during use, the control lamp "Ready for use" ❼ briefly extinguishes itself and then glows once again. This indicates that the set temperature had fallen and the appliance had warmed itself back up.

## Cleaning and Care


---

### **⚠ Attention!**

Before cleaning, ALWAYS remove the plug from the wall power socket! There is a risk of receiving an electric shock!

Allow the appliance to cool down completely before cleaning it. There is a danger of being burnt!

Do not use abrasive, aggressive or chemical cleaning agents. These could damage the upper surfaces of the appliance.

 NEVER submerge the appliance in water or other liquids.

- Wipe the appliance with a damp cloth. For stubborn soiling use a mild detergent on the cloth.
- The hotplate **1** can, if required, be cleaned with a special stainless steel cleaning agent.
- Wipe off any possibly remaining cleaning agent residues with a damp cloth.
- Dry the appliance thoroughly before reusing it or putting it into storage.

## Storage

---


Store the appliance at a clean and dry location.

### **Attention!**


To avoid potential damage to the appliance, do not place any heavy objects on the hotplate **1** when it is in storage.

## Disposal

---

 **Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.**

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.

 Dispose of the packaging materials in an environmentally responsible manner.

## Warranty and Service

---

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the case of a warranty claim, please make contact by telephone with our service department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, not for wearing parts or for damage to fragile components, e.g. buttons or batteries. The appliance is intended for domestic use only, NOT for commercial purposes.

If this product has been subjected to improper or inappropriate handling, abuse, or modifications not carried out by one of our authorised sales and service outlets, the warranty will be considered void. Your statutory rights are not restricted in any way by this warranty.

### **DES Ltd**

Tel.: 0870/787-6177

Fax: 0870/787-6168

e-mail: support.uk@kompernass.com

### **Kompernass Service Ireland**

Tel.: 1850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: support.ie@kompernass.com

## Importer

---

KOMPERNASS GMBH

BURGSTRASSE 21

44867 BOCHUM, GERMANY

[www.kompernass.com](http://www.kompernass.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>