


■ HAIR STRAIGHTENER



GB HAIR STRAIGHTENER
IE Operating instructions
CY

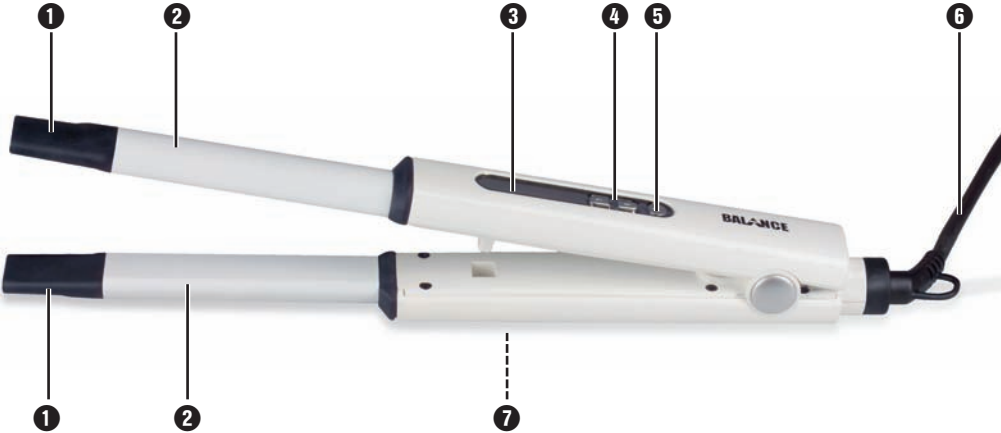

CONTENT	PAGE
Safety information	2
Intended use	3
Items supplied	3
Technical data	3
Appliance description	3
Before smoothing / curling	3
Operation	3
Preparation	3
Straightening hair	4
Curling hair	4
Cleaning	5
Storage	5
Disposal	5
Warranty and Service	6
Importer	6

Read these operating instructions carefully before using the appliance for the first time and preserve this manual for later reference. Pass this manual on to whoever might acquire the appliance at a future date.

HAIR STRAIGHTENER

KH 5527

Safety information

Risk of electrocution!

- Connect the appliance only to wall sockets supplying the current strength detailed on the model plate.



Under no circumstances may the appliance be submersed in fluids or fluids be allowed to permeate the housing. Do not expose the appliance to humidity and do not use it outdoors. Should liquids enter the housing, unplug the appliance from the power source immediately and arrange for it to be repaired by a qualified technician.

- Do not use the appliance outdoors.



Never use the appliance near water, particularly not near sinks, baths or other vessels. The proximity of moisture presents a risk, even when the appliance is switched off. After use, always remove the plug from the power socket. As additional protection, the installation of a faulty-current protection unit with an activation power rating of not more than 30 mA is recommended for the power circuit in the bathroom. Ask your electrician for advice.

- In the event of operating malfunctions and before cleaning the appliance, remove the power plug from the wall socket.
- Always remove the power cable from the socket by pulling on the plug, NOT on the power cable.
- Do not wrap the power cable around the appliance and protect it from being damaged.

- To avoid risks, arrange for defective power cables and/or plugs to be replaced immediately by qualified technicians or our Customer Service Department.
- Do not pinch or squeeze the power cable and lay it in such a way that no one can tread on or trip over it.
- In order that you can disconnect the appliance quickly in an emergency, do not use extension cables.
- NEVER grasp the appliance, the power cable or the power plug with wet hands.
- Unplug the appliance immediately after use. Only when you unplug the appliance from the mains supply is it completely free from electricity.

Risk of burns and physical injuries

- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance.
- NEVER leave a switched on appliance unsupervised.
- Do not place the appliance close to sources of heat and protect the power cable from damage.
- Do not operate the appliance if it has fallen or is damaged. Arrange for the appliance to be checked and, if necessary, repaired by qualified technicians.
- Do not open the housing or attempt to repair the appliance yourself. Should you do so, the safety concept of the appliance may be compromised and the warranty becomes void. Permit only authorised technicians to repair a defective appliance if repairs should be necessary.
- The appliance becomes hot during use. Hold it only by the grip when it is hot.

Intended use

This Hair Straightener / Hair Curler is intended for the smoothing and shaping of human hair, under no circumstances may it be used for wigs and hairpieces made of synthetic material. The Hair Straightener is intended for domestic use only. Pay heed to all of the information in this operating manual, especially the safety instructions.

Items supplied

- Combi Hair Styler KH 5527
- Operating Instructions

Technical data

Mains voltage: 220–240 V ~ 50 Hz

Power consumption, max.: 65 W

Protection class: II / 

Appliance description

- ❶ Cool tips
- ❷ Hotplates
- ❸ LED Indicator
- ❹ Buttons "+" and "-" for temperature level selection
- ❺ On/Off button (Button lock)
- ❻ Power cable
- ❼ Locking device

Before smoothing / curling


- The hair should be clean, dry and free of styling products. Excepted are the special products that support a straightening of the hair.
- Comb the hair thoroughly before straightening so that there are no knots in it.
- To achieve an especially good straightening result, spread special products for hair straightening through the hair.
- Divide the hair into manageable portions and secure the upper portions to the head with grips so that they do not get in the way.

Operation

Preparation

Note:

The hotplates ❷ must be free from contamination of all kinds. If necessary, clean them before taking the appliance into use (see chapter "Cleaning").

1. Slide the locking device ❷ into the position .
2. Insert the plug into a mains power socket.
3. Press the On/Off button ❺. The red running light of the LED Indicator ❸ glows. The hotplates ❷ are being warmed up.
4. The appliance heats up automatically to the highest heat level. The running light travels through to the last LED.
If a lower temperature is sufficient for the hair, press the button "-" ❹ repeatedly until the running light reaches the desired heating level.

The running light progresses up to...

- ...the 6th red LED, highest heat level, for very robust and difficult to shape hair.
- ...the 5th red LED, high heat level, for very robust hair.

- ...the 4th red LED, medium heat level, for robust hair.
 - ...the 3rd red LED, lower heat level, for normal hair.
 - ...the 2nd red LED, very low heat level, for fine hair.
 - One red LED blinks, minimal heat level, for very fine hair.
5. When the running light progresses to the selected heat level, double press the On/Off **5** button. The green LED glows. The buttons are now locked, the temperature cannot be changed by an unintentional pressing of the buttons "+" **4** or "-" **4**.

i Note:

When you want to release the temperature lock, once again double press on the On/Off **5** button. The green LED goes out, the button lock is released.

6. Wait until the running light in the LED Indicator **3** glows permanently up to the programmed temperature. The desired temperature has now been reached.


Straightening hair

- Prepare the hair as described in "Before straightening/ Before curling"..
- Start with the lower hair sections at the back of the head. Work over the sides to the front.

1. Separate a ca. 2 cm wide hair strand.

⚠ Attention!

Ensure that the hotplates **2** do not make contact with the skin of the head. Risk of Burns! Only the tips **1** are cool.

2. Clamp the hair strands between the hotplates **2** and close to the skin, then press them together.
3. Pull the whole of the hair strand through the hotplates **2**, in that you pull the hair straightener downwards.
4. Repeat the process with each individual strand.
5. When you have smoothed all of the strands, double press the On/Off **5** button to release the temperature lock. The green LED goes out.
6. Press the On/Off **5** button until the LED Indicator **3** goes out.
7. Remove the plug from the wall power socket.
8. Press the hotplates **2** together and slide the locking device **7** to the position .

Curling hair

- Prepare the hair as described in "Before straightening/ Before curling".
- Start with the lower hair sections at the back of the head. Work over the sides to the front.

1. Separate a ca. 2 - 3 cm wide hair strand.

⚠ Attention!

Ensure that the hotplates **2** do not make contact with the skin of the head. Risk of Burns! Only the tips **1** are cool.

2. Clamp the end of hair strand between the hotplates **2** and press them together.
3. Turn the combi hair styler to wrap the hair strand around the hotplate.
4. Dependant on hair type and adjustment, wait a few seconds.


⚠ Attention!

Dependant on the hair type and the heat level, it can take a differing length of time until a curl is shaped. Try out various adjustments. To avoid damaging your hair, ALWAYS start with a lower heat level and a short waiting time in the hair. Gradually raise these levels until you discover the optimal adjustment for you.

Attention!

Ensure that the hotplates **2** do not make contact with your hand. Risk of Burns!

Only the tips **1** are cool.

5. Open the hotplates **2** a little and now withdraw the combi hair styler from your hair.
6. Repeat the process with each individual strand.
7. When you have worked all of the strands, double press the On/Off **5** button to release the temperature lock. The green LED goes out.
8. Press the On/Off **5** button until the LED Indicator **3** goes out.
9. Remove the plug from the wall power socket.
10. Press the hotplates **2** together and slide the locking device **7** to the position .
11. Wait until the hair has cooled down before continuing with the styling.

Cleaning

Attention!

Remove the power plug from the wall socket. Risk of electric shock!

Always allow the appliance to cool down completely before cleaning it. Risk of Burns!

- Wipe the housing and the hotplates **2** with a soft and slightly moistened cloth.
- In cases of stubborn soiling, apply some mild detergent to the moistened cloth.

Note:

Do not use aggressive or abrasive cleaning agents. These could attack the upper surfaces and irreparably damage the appliance.

Note:

Do not use the appliance again until it has completely dried out.


Storage

Attention!

NEVER wrap the power cable **6** with plug around the appliance. This would cause irreparable damage to the appliance.

Attention!

To avoid an unintentional switch on of the appliance, ALWAYS remove the plug from the mains power socket if the appliance is not in use.

- ALWAYS lay the appliance on a heat-resistant surface to cool down.
- Press the hotplates **2** together and slide the locking device **7** to the position .
- Store the combi hair styler at a clean and dry location.

Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally friendly manner.

Warranty and Service

The warranty for this appliance is for 3 years from the date of purchase. This appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the case of a warranty claim, please make contact by telephone with our service department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, not for parts subject to wear and tear or for damage to fragile components, e.g. buttons or batteries. The appliance is intended for domestic use only, NOT for commercial purposes. If this product has been subjected to improper or inappropriate handling, abuse, or modifications not carried out by one of our authorised sales and service outlets, the warranty will be considered void. Your statutory rights are not restricted in any way by this warranty.

Importer

KOMPERNASS GMBH
BURGSTRASSE 21
D-44867 BOCHUM

www.kompernass.com

DES Ltd

Units 14-15
Bilston Industrial Estate
Oxford Street
Bilston
WV14 7EG
Tel.: 0870/787-6177
Fax: 0870/787-6168
e-mail: support.uk@kompernass.com

Irish Connectio

Harbour view
Howth
Co. Dublin
Tel: 00353 (0) 87 99 62 077
Fax: 00353 18398056
e-mail: support.ie@kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>