

■ Electric Kettle



KH 1023

GB
IE
CY

Electric Kettle
Operating instructions



INDEX	PAGE
Intended Use	2
Technical Data	2
Safety instructions	2
Items supplied	2
Operating Elements	3
Start-up	3
Boiling water	3
Cleaning and Care	4
Storage	4
Disposal	4
Warranty and Service	5
Importer	5

Read these operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass this booklet on to whoever might acquire the appliance at a future date.

ELECTRIC KETTLE

KH 1023

Intended Use

This appliance is intended for the boiling-up of water in domestic households. It is not intended for use with other liquids or for commercial applications.

Technical Data

Voltage : 230 V ~ / 50 Hz

Power consumption: 2200 W

ⓘ In older electrical installations, the building fuse (12A) may be activated due to the high power consumption.

Safety instructions

To avoid potentially fatal injury through electric shock:

- Ensure that the base with the electrical connections does not come into contact with water! Ensure that the base is completely dry before use, especially if it has been accidentally moistened.
- Use the water boiler only with the supplied base.
- Ensure that the power cable never becomes wet or damp during operation. Lay the cable such that it cannot get clamped or otherwise damaged.
- Arrange for defective plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.

- Always remove the plug from the mains power socket after use. Switching the appliance off is not sufficient, because the appliance is under power for as long as the plug is connected to the mains power socket.

⚠ To avoid burns and other injuries:

- Always heat water with the lid on, otherwise the automatic switch-off does not function correctly. Boiling water could then spray out over the rim.
- Hot steam clouds may be released. Additionally, the kettle becomes very hot during use.
- Ensure that the appliance is standing securely and vertically before switching it on. Boiling water can cause an unstable kettle to fall over.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the appliance.
- Never place the kettle on hotplates or similar to heat water up. Use the kettle only with the supplied base!
- Do not use an external timing switch or a separate remote control system to operate the appliance.

Items supplied

Electric Kettle

Base

Operating instructions

Operating Elements

- ❶ Handle
- ❷ Lid with knob
- ❸ Scale
- ❹ ON/OFF switch with integrated pilot light
- ❺ Base
- ❻ Pourer sieve

Start-up

Important

Always and only use freshly drawn mains water in the kettle! Do not consume any water that is not certified as potable. If you do, you are taking a risk with your health!

- Before taking the appliance into use, ensure that ...
- the appliance, the plug and the power cable are in good working order and...
 - the power cable been completely unwound from the holder on the bottom of the appliance, and that...
 - all packaging materials have been removed from the appliance.
- Fill the appliance with water up to the MAX mark and let it come to a full boil once - as described in the next section.
- Pour this water away after the water has been boiled.
- Rinse the water boiler out with clear water.
- Fill the appliance with water once again up to the MAX marking on the scale ❸ and then bring it to the boil. When done, pour this water away also.

The appliance is now ready for use.

Boiling water

Danger

Never place the electrical base ❺ adjacent to water - a potentially fatal risk!

- Lift the kettle off of the base when filling it!
- Remove the lid ❷ in that you pull it upwards.
- Hold the kettle upright while filling it. Only in this way can you correctly read the markings on the scale ❸.
 - Fill the kettle ...
 - at least to the MIN mark, so that the device does not overheat,
 - no higher than the MAX mark, so that no boiling water spills out.
- First close the lid ❷...
- and then place the kettle on the base ❺ such that it is standing absolutely upright on the base ❺.
- Now insert the plug into the mains power socket ...
- and press the ON/OFF switch ❹ downwards until it engages.
- The pilot lamp integrated into the ON/OFF switch ❹ indicates that the appliance is now heating the water up.
- The appliance switches itself off and the pilot lamp goes out as soon as the water is on the boil. The ON/OFF switch ❹ springs upwards.

Warning

Remove the plug from the mains power socket before you lift the kettle from its base ❺. This prevents causing a potential short circuit by water possibly spilling out of the carafe and falling onto live electrical connections in the base ❺.


Injury hazard

For safety reasons, the lid ❷ should not be opened while the water is boiling or is very hot. There is a risk of receiving severe scalds.

Cleaning and Care

Danger

Do not open any part of the housing. There are no user-serviceable elements inside. An open housing can create the risk of a lethal electrical shock.

 Never submerge any parts of the appliance in water or other liquids! You run the risk of a potentially fatal electrical shock should liquids come into contact with powered components.

Before cleaning the appliance,

- first, remove the plug from the mains power socket and allow the appliance to cool down completely.
- Clean the exterior surfaces and the power cable with a slightly damp cloth. Be sure to dry the appliance well before taking it back into use.
- Never use detergents, abrasive cleaners or solvents. These can damage the appliance.

In the event of scale deposits:

- Obtain any decalcifying agent suitable for kitchen utensils (e.g. decalcifiers for coffee machines) from a hardware shop. Proceed as detailed in the instructions provided for the use of the decalcifying agent.

Removing/replacing the pouring sieve

- Take the lid **2** off.
- Pull the pourer sieve **6** inwards. Remove it from the kettle.
- Clean the pourer sieve **6** with a lightly moistened dish cloth.
- After cleaning, replace the pourer sieve **6** so that it is firmly seated.

Note

Should the scale deposits on the pourer sieve **6** be firmly settled, lay it in a water-vinegar solution, with a ratio of 6:1, for a few hours. The scale deposits will dissolve themselves. Rinse the pourer sieve **6** with copious amounts of clear water.

Storage

Allow the appliance to cool down completely before putting it into storage.

- Wind the power cable around the holder on the bottom of the device.
- Store the appliance in a dry place.

Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC.

Dispose of the appliance through an approved waste disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally friendly manner.

Warranty and Service

This appliance comes with a 3 year warranty. Purchase date. This appliance has been manufactured with care and meticulously examined before delivery.

Please retain your receipt as proof of purchase. In the case of a warranty claim, please make contact by telephone with our service department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, not for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial applications.

In the event of misuse and improper handling, use of force and interference not carried out by our authorized service branch, the warranty will become void. Your statutory rights are not restricted in any way by this warranty.

Importer

KOMPERNASS GMBH
BURGSTRASSE 21
44867 BOCHUM / DEUTSCHLAND

www.kompernass.com

DES Ltd

Units 14-15
Bilston Industrial Estate
Oxford Street
Bilston
WV14 7EG
Tel.: 0870/787-6177
Fax: 0870/787-6168
e-mail: support.uk@kompernass.com

Kompernass Service Ireland

Tel: 1850 930 412 (0,082 EUR/Min.)
Standard call rates apply. Mobile operators may vary.
e-mail: support.ie@kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>