


TRAVELKETTLE



TRAVEL KETTLE
Operating instructions

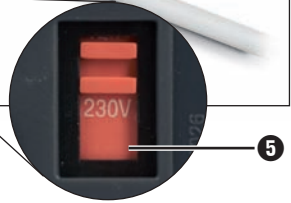

TRAVEL KETTLE KH 1026

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass the manual on to whomsoever might acquire the appliance at a later date.

Intended use

This appliance is intended for the boiling-up of water in domestic households. It is not intended for use with other liquids or for commercial applications.

Technical Data

Voltage : 120 V ~ / 60 Hz
 230 V ~ / 50 Hz
Power consumption : 1000 W
Volume: max. 0.5 l

Safety information

To avoid potentially fatal injury through electric shock:

- Ensure that the base with the external electrical connections NEVER comes into contact with water! Should they unintentionally become wet, first allow them to dry out completely before taking the appliance back into use.
- Ensure that the power cable never becomes wet or damp during operation. Lay the cable so that it cannot be trapped or otherwise damaged.
- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.
- Always remove the plug from the power socket after use.

- ALWAYS remove the plug from the mains power socket before pouring water from the appliance.
- ALWAYS set the voltage selector on the appliance to the rating of the local power supply. UNDER NO CIRCUMSTANCES should you operate the appliance on a 230 V mains supply when the voltage selector switch is set at 120 V (or vice-versa). It would destroy the appliance and the guarantee would be void. Make enquiries about the rating of the local electrical mains supply from the energy supplier or the hotel personnel. First when this has been done insert the plug into a power socket and then switch the appliance on.
- Connect the appliance only to correctly installed power sockets with a current rating of 120 V ~ 60 Hz / 230 V ~ 50 Hz.

⚠ To avoid burns and other injuries:

- Always heat water with the lid closed, otherwise the automatic cut-out may not function. Boiling water could then spray out over the rim.
- Hot steam clouds may be released. The boiler also becomes very hot during operation. Wear oven mitts.
- Ensure that the appliance is standing securely and vertically before switching it on. Boiling water can cause an unstable kettle to fall over.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the appliance..

Items supplied

Water boiler
2 Beakers
2 Teaspoons
Operating instructions

Operating Elements

- ❶ Lid
- ❷ On switch
- ❸ Cable storage
- ❹ Power cable
- ❺ Voltage selector switch
- ❻ Control lamp

Commissioning

- Before taking the appliance into use, ensure that ...
 - the appliance itself, the power cable and the plug ❹ are in a serviceable condition, and,....
 - all packaging materials have been removed from the appliance, and...
 - the correct power rating has been selected at the voltage selector switch ❺.

⚠ Risk of electric shock!

ALWAYS remove the plug from the mains socket before pouring water from the appliance!

- Fill the appliance with water up to the MAX marking and let it come to a full boil once - as described in the next section.
- After it has boiled, pour this water away.

- Rinse the water boiler out with clear water.
- Fill the appliance with water once again, up to the MAX marking, and then bring it to boil. When done, pour this water away also.

The appliance is now ready for use.

Boiling water

⚠ Danger

NEVER take the water boiler into use if the electrical connections are wet resp. moist - there is a risk of you receiving an electric shock!

⚠ Injury hazard




For safety reasons, the lid ❶ should not be opened while the water is boiling or is very hot. There is a risk of receiving severe scalds.




ⓘ Notice

Always use freshly drawn water. Do not consume any water that has already stood in the water boiler for longer than one hour. Do not reboil water that has cooled down. Always pour old water away. Microbes could have formed in it!

- Check to ensure that the setting of the voltage selector switch ❺ corresponds to that of the local power supply. If necessary, adjust the voltage selector switch ❺ to the correct setting.
- Open the lid ❶.
- Hold the water boiler upright while filling it. Only in this way can you correctly read the interior markings in the water boiler. Fill the water boiler to no further than the MAX marking, to ensure that no boiling water splashes out.
- First close the appliance lid ❶.
- Now insert the plug into the mains power socket.

Notice

It can happen that the control lamp  glows immediately, as soon as you connect the appliance with the mains power source. This means that the On switch  was already pressed down when the connection was made. In this case, the boiling process starts immediately. Therefore, always check that the control lamp  is glowing, this shows that it is heating up.

- Press the ON switch .
- The control lamp  indicates that the appliance is now heating the water up.
- The appliance switches itself off and the control lamp  goes out as soon as the water is on the boil.

Notice

You cannot stop the boiling process manually. Should you wish to stop the boiling process you must disconnect the plug from the power socket.


Warning

ALWAYS remove the plug from the mains power socket before pouring water from the appliance. Otherwise, water could possibly land on the electrical contacts and cause an electric shock!

Cleaning and Care


Danger!

Do not open any part of the housing. There are no user-servicable elements inside. An open housing can create the risk of a lethal electrical shock.

 Never submerge any parts of the appliance in water or other liquids! This can create the risk of a life-threatening electrical shock if residual liquid comes into contact with powered components.

Injury hazard

Remove the power cable from the wall socket before cleaning. Risk of electric shock! Allow the appliance to cool down. Risk of Burns!




- Clean the outside surfaces and the power cable  with a slightly damp dish cloth. Be sure to dry the appliance well before taking it back into use.
- Never use detergents, abrasive cleaners or solvents. These can damage the appliance.

In the event of scale deposits:

- Obtain any decalcifying agent suitable for kitchen utensils (e.g. decalcifiers for coffee machines) from a hardware shop. Proceed as detailed in the instructions provided for the use of the decalcifying agent.

Storage

Allow the appliance to cool off completely before putting it into storage.

- Wind the power cable  around the power cable retainer , as shown on the fold-out side (Fig. ).
- Store the appliance in a dry place.

Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility.

Observe the currently applicable regulations.

In case of doubt, please contact your waste disposal centre.



Dispose of the packaging materials in an environmentally responsible manner.

Warranty and Service

You receive a 3-year warranty for this appliance as of the purchase date. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the case of a warranty claim, please make contact by telephone with our service department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, not for worn parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use.

If this product has been subjected to improper or inappropriate handling, abuse, or modifications not carried out by one of our authorised sales and service outlets, the warranty will be considered void. Your statutory rights are not restricted in any way by this warranty.

DES Ltd

Units 14-15
Bilston Industrial Estate
Oxford Street
Bilston
WV14 7EG
Tel.: 0870/787-6177
Fax: 0870/787-6168
e-mail: support.uk@kompernass.com

Irish Connection

Harbour view
Howth
Co. Dublin
Tel: 00353 (0) 87 99 62 077
Fax: 00353 1 8398056
e-mail: support.ie@kompernass.com

Importer

KOMPERNASS GMBH
BURGSTRASSE 21
D-44867 BOCHUM, GERMANY

www.kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>